

Event Source : ESMFSService

This provider monitors configuration and free space of file system.
 In case alert about this provider occurred, confirm the free space of file system.
 All reports of this provider to manager (SNMP) are off by default.
 When you turned on a report to manager (SNMP) , Enterprise ID of All SNMP Trap is ".1.3.6.1.4.1.119.2.2.4.4.18.3", and Specific ID is "1".

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMFSService version
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~
1000	C00403E8	Error	The free capacity of this file system is less than "Fatal" level. File System : %1 (Index %2) Free Space / Capacity : %3 / %4 MB Threshold(Fatal) : %5 MB	File system free capacity:Fatal	The free capacity of this file system is less than "Fatal" level. File System : %1 (Index %2) Free Space / Capacity : %3 / %4 MB Threshold(Fatal) : %5 MB	You should remove unnecessary directories and files on this drive. If there are no unnecessary files then you should add a new drive and move several files to it. If the threshold value was not appropriate, please change it.	Red	File System	✓	-	-	Make free space by deleting unnecessary file and others or by moving file to another file system. In case the threshold is not suitable for free space monitoring of file system, change the threshold to the value most suitable to the used system.	✓
1001	800403E9	Warning	The free capacity of this file system is less than "Warning" level. File System : %1 (Index %2) Free Space / Capacity : %3 / %4 MB Threshold(Warning) : %5 MB	File system free capacity:Warning	The free capacity of this file system is less than "Warning" level. File System : %1 (Index %2) Free Space / Capacity : %3 / %4 MB Threshold(Warning) : %5 MB	This drive's free block amount may be at a fatal level. You should delete unnecessary directories and files on this drive. If threshold value was not appropriate, please change it.	Yellow	File System	✓	-	-	Make free space by deleting unnecessary file and others or by moving file to another file system. In case the threshold is not suitable for free space monitoring of file system, change the threshold to the value most suitable to the used system.	✓
1002	400403EA	Information	The free capacity comes back "Normal" level. File System : %1 (Index %2) Free Space / Capacity : %3 / %4 MB	File system free capacity:Normal	The free capacity comes back "Normal" level. File System : %1 (Index %2) Free Space / Capacity : %3 / %4 MB	-	Green	File System	✓	-	-	-	✓
2000	400407D0	Information	Configuration of the file system has changed.	File system configuration change	Configuration of the file system has changed.	-	Green	File System	✓	-	-	-	✓

Event Source : ESMStorageService

This provider monitors configuration and status of storage-related devices.
 In case alert about this service occurred, confirm the storage-related device.
 All reports of this provider to manager (SNMP) are off by default.
 When you turned on a report to manager (SNMP) , Enterprise ID of All SNMP Trap is ".1.3.6.1.4.1.119.2.2.4.4.18.3", and Specific ID is "1".

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version	
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.25	1.26 ~
1001	800403E9	Warning	S.M.A.R.T. predicts that your hard disk is going to fail. %1 %2	Hard Disk Failure Prediction:S.M.A.R.T. Error	S.M.A.R.T. predicts that your hard disk is going to fail. %1 %2	S.M.A.R.T. predicts that your hard disk is going to fail. Contact your hardware vendor for a replacement.	Yellow	Storage HD Unit	✓	-	✓	Error was detected by hard disk pre-failure prediction using S.M.A.R.T. function of hard disk. As continuous use of this hard disk is risky from the viewpoint of preventive maintenance, contact maintenance staff to replace the hard disk.	✓	✓
1100	4004044C	Information	HDD(SSD) Endurance Remaining is Safe(100-51%). %1 %2	HDD(SSD) Endurance Remaining Information	HDD(SSD) Endurance Remaining is Safe(100-51%). %1 %2	-	Green	Storage HD Unit	-	-	-	-	-	✓
1101	4004044D	Information	HDD(SSD) Endurance Remaining is Reducing(50-21%). %1 %2	HDD(SSD) Endurance Remaining Information	HDD(SSD) Endurance Remaining is Reducing(50-21%). %1 %2	-	Green	Storage HD Unit	-	-	-	-	-	✓
1102	8004044E	Warning	HDD(SSD) Endurance Remaining is Running out(20-11%). %1 %2	HDD(SSD) Endurance Remaining Warning	HDD(SSD) Endurance Remaining is Running out(20-11%). %1 %2	-	Yellow	Storage HD Unit	-	-	-	-	-	✓
1103	8004044F	Warning	HDD(SSD) Endurance Remaining is Need to replace(10 percent or less). %1	HDD(SSD) Endurance Remaining Warning	HDD(SSD) Endurance Remaining is Need to replace(10 percent or less). %1	Please replace the HDD(SSD).	Yellow	Storage HD Unit	✓	-	✓	Please replace the HDD(SSD).	-	✓
1104	C0040450	Error	HDD(SSD) Endurance Remaining is End of Life. %1 %2	HDD(SSD) Endurance Remaining Error	HDD(SSD) Endurance Remaining is End of Life. %1 %2	Please replace the HDD(SSD).	Red	Storage HD Unit	✓	-	✓	Please replace the HDD(SSD).	-	✓
2000	400407D0	Information	Configuration of the file system has changed.	File system configuration change	Configuration of the file system has changed.	-	Green	Storage HD Unit	✓	-	-	-	✓	✓

Event Source : ESMNVMeMonitor

This service monitors configuration information and lifespan state of the PCIe SSD device type and implement the report of lifespan state.
 In case alert about this service occurred, confirm the PCIe-SSD devices.
 Source name of Eventlog at the time of alert is registered as "ESMNVMeMonitor".
 All reports of this service to manager (SNMP) are off by default.
 When you turned on a report to manager (SNMP) , Enterprise ID of All SNMP Trap is ".1.3.6.1.4.1.119.2.2.4.4.18.3", and Specific ID is "1".

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version	
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.1	1.2 ~
1000	800403E8	Warning	PCIe SSD(%1) Endurance Remaining is Need to replace(10% or less).	PCIe SSD Endurance Remaining warning	PCIe SSD(%1) Endurance Remaining is Need to replace(10% or less).	Please replace the PCIe SSD.	Yellow	PCIe SSD	-	-	✓	Please replace the PCIe SSD.	-	✓
1001	C00403E9	Error	PCIe SSD(%1) Endurance Remaining is End of Life.	PCIe SSD Endurance Remaining error	PCIe SSD(%1) Endurance Remaining is End of Life.	Please replace the PCIe SSD.	Red	PCIe SSD	-	-	✓	Please replace the PCIe SSD.	-	✓
2000	C00407D0	Error	PCI e SSD(%1) Available Reserved Space is Running out(10% or less).	Available Reserved Space Running out	PCI e SSD(%1) Available Reserved Space is Running out(10% or less).	Please replace the PCIe SSD.	Red	PCIe SSD	-	-	✓	Please replace the PCIe SSD.	-	✓
2001	C00407D1	Error	PCIe SSD(%1) Available Reserved Space is Exhausted.	Available Reserved Space Exhausted	PCIe SSD(%1) Available Reserved Space is Exhausted.	Please replace the PCIe SSD.	Red	PCIe SSD	-	-	✓	Please replace the PCIe SSD.	-	✓

Event Source : ESMCommonService

This service monitors various information of server chassis such as temperature/FAN/power voltage/power supply in collaboration with OS/firmware/hardware/expansion board, etc. and rapidly detects failure information and alerts.

In addition, it supports function of collecting error log at the time of detection of failure and automatic shut down of server and others in accordance with degree of failure.

Source name of Eventlog at the time of alert is registered as "ESMCommonService".

All reports of this service to manager (SNMP) are off by default.

When you turned on a report to manager (SNMP) , Enterprise ID of All SNMP Trap is ".1.3.6.1.4.1.119.2.2.4.4.18.3", and Specific ID is "1".

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
100	C0000064	Error	The temperature has exceeded the upper threshold (Error). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Temp Upper Error	The temperature has exceeded the upper threshold (Error). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Fatal: The system will be shut down due to abnormal temperature. Check that the air inlet is not clogged and the air conditioner is running, and contact the maintenance personnel.	Red	Temperature	-	-	✓	Shuts down because operation at this temperature is risky. Confirm whether duct does not stop up or conditioning is working.	✓	✓	✓	✓	✓	✓
101	80000065	Warning	The temperature has exceeded the upper threshold (Warning). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Temp Upper Warning	The temperature has exceeded the upper threshold (Warning). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Warning: If the temperature rises any higher, it will affect the proper operation of the system. Check that the air inlet is not clogged and the air conditioner is running.	Yellow	Temperature	-	-	✓	If temperature rises more than this, operation is disturbed. Confirm whether duct does not stop up or conditioning is working.	✓	✓	✓	✓	✓	✓
102	C0000066	Error	The temperature has fallen below the lower threshold (Error). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Temp Lower Error	The temperature has fallen below the lower threshold (Error). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Fatal: The system will be shut down due to abnormal temperature. Check that the air conditioner is running, and contact the maintenance personnel.	Red	Temperature	-	-	✓	Shuts down because operation at this temperature is risky. Confirm rapidly whether duct does not stop up or conditioning is working.	✓	✓	✓	✓	✓	✓
103	80000067	Warning	The temperature has fallen below the lower threshold (Warning). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Temp Lower Warning	The temperature has fallen below the lower threshold (Warning). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Warning: If the temperature drops any lower, it will affect the proper operation of the system. Check that the air conditioner is running.	Yellow	Temperature	-	-	-	If temperature falls be lower than this, operation is disturbed. Confirm operation of conditioning.	✓	✓	✓	✓	✓	-
103	80000067	Warning	The temperature has fallen below the lower threshold (Warning). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Temp Lower Warning	The temperature has fallen below the lower threshold (Warning). Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Warning: If the temperature drops any lower, it will affect the proper operation of the system. Check that the air conditioner is running.	Yellow	Temperature	-	-	✓	If temperature falls be lower than this, operation is disturbed. Confirm operation of conditioning.	-	-	-	-	-	✓
104	40000068	Information	The temperature has recovered from its upper warning state. Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Temp Upper Recovered	The temperature has recovered from its upper warning state. Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	-	Green	Temperature	-	-	-	-	✓	✓	✓	✓	✓	✓
105	40000069	Information	The temperature has recovered from its lower warning state. Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Temp Lower Recovered	The temperature has recovered from its lower warning state. Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	-	Green	Temperature	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
106	8000006A	Warning	The temperature has recovered from a high temperature fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Temp Upper Error Recovered	The temperature has recovered from a high temperature fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	-	Yellow	Temperature	-	-	-	-	✓	✓	✓	✓	✓	✓
107	8000006B	Warning	The temperature has recovered from a lower temperature fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	Temp Lower Error Recovered	The temperature has recovered from a lower temperature fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Temperature: %1 Threshold: %4	-	Yellow	Temperature	-	-	-	-	✓	✓	✓	✓	✓	✓
114	C0000072	Error	Temperature has exceeded the upper threshold (Non recoverable). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Temp Upper Limit Error	Temperature has exceeded the upper threshold (Non recoverable). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	The system can not be operated with the current temperature. It may shut down. Please check if the vent is not closed and the air conditioner is normally operating.	Red	Temperature	-	-	✓	You can not operate at this temperature. There is a risk that system goes down. Confirm whether duct does not stop up or conditioning is working.	✓	✓	✓	✓	✓	✓
115	C0000073	Error	Temperature has recovered from a non-recoverable state and gone into a fatal state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Temp Upper Limit Error Recovered	Temperature has recovered from a non-recoverable state and gone into a fatal state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Red	Temperature	-	-	-	-	✓	✓	✓	✓	✓	✓
200	C00000C8	Error	Fan Unit is malfunctioning. Location: %3 Sensor Number: %2 Date: %1	Fan Unit Error	Fan Unit is malfunctioning. Location: %3 Sensor Number: %2 Date: %1	Fatal: The system will be shut down due to the fan in the abnormal condition. Please contact the maintenance personnel.	Red	Fan	-	-	✓	Confirm connection of device and others. If there is no problem with connection, failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
201	800000C9	Warning	Fan Unit is in warning status. Location: %3 Sensor Number: %2 Date: %1	Fan Unit Warning	Fan Unit is in warning status. Location: %3 Sensor Number: %2 Date: %1	Warning: Further use of the fan in this condition may affect the proper operation of the system. Collect the failure information by the collection tool if possible, and contact the maintenance personnel.	Yellow	Fan	-	-	✓	Confirm connection of device and others. If there is no problem with connection, failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	✓	✓	✓	✓	✓
202	400000CA	Information	Fan Unit has recovered from its warning state. Location: %3 Sensor Number: %2 Date: %1	Fan Unit Recovered	Fan Unit has recovered from its warning state. Location: %3 Sensor Number: %2 Date: %1	-	Green	Fan	-	-	-	-	-	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
206	800000CE	Warning	Fan(Speed) has fallen below the lower limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Fan Lower Limit Warning	Fan(Speed) has fallen below the lower limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Yellow	Fan	-	-	✓	If you continue to operate, there is a risk that operation may be disturbed because temperature in chassis becomes high.	✓	✓	✓	✓	✓	✓
207	400000CF	Information	Fan(Speed) has recovered from its lower warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Fan Lower Limit Warning Recovered	Fan(Speed) has recovered from its lower warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Green	Fan	-	-	-	-	✓	✓	✓	✓	✓	✓
212	800000D4	Warning	Fan(Speed) has exceeded the upper limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Fan Upper Limit Warning	Fan(Speed) has exceeded the upper limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Yellow	Fan	-	-	-	If you continue to operate, there is a risk that fan will be broken.	✓	✓	✓	✓	✓	-
212	800000D4	Warning	Fan(Speed) has exceeded the upper limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Fan Upper Limit Warning	Fan(Speed) has exceeded the upper limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Warning: Further use of the fan in this condition may affect the proper operation of the system. Collect the failure information by the collection tool if possible, and contact the maintenance personnel.	Yellow	Fan	-	-	✓	If you continue to operate, there is a risk that fan will be broken.	-	-	-	-	-	✓
213	400000D5	Information	Fan(Speed) has recovered from its upper warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Fan Upper Limit Warning Recovered	Fan(Speed) has recovered from its upper warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Green	Fan	-	-	-	-	✓	✓	✓	✓	✓	✓
302	4000012E	Information	Power Supply has recovered from its warning status. Unit Number: %2 Date: %1	Power Supply Recovered	Power Supply has recovered from its warning status. Unit Number: %2 Date: %1	-	Green	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
306	80000132	Warning	Power Supply has lost the AC supply. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4,	Power Supply Error	Power Supply has lost the AC supply. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4,	-	Yellow	RPS	-	-	-	Confirm connection of device and others. If there is no problem with connection, failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
306	C0000132	Error	Power Supply has lost the AC supply. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Supply Error	Power Supply has lost the AC supply. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member.	Red	RPS	-	-	✓	-	✓	✓	✓	✓	✓	✓
309	C0000135	Error	Power supply to the system has been stopped because Power Unit error occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	PowerUnit Error	Power supply to the system has been stopped because Power Unit error occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Red	RPS	-	-	✓	Confirm connection of device and others. If there is no problem with connection, failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
310	C0000136	Error	The system has been forced to be power down, because the side cover was opened. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	PowerUnit Error	The system has been forced to be power down, because the side cover was opened. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Red	RPS	-	-	✓	Confirm that side cover is closed. If there is no problem with cover, failure of device is considered. From the viewpoint of preventive maintenance, collect information by collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
311	80000137	Warning	Power Unit has lost the AC supply. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	PowerUnit Error	Power Unit has lost the AC supply. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	RPS	-	-	-	Confirm connection of device and others. If there is no problem with connection, failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
313	80000139	Warning	Power Unit error has been found. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	PowerUnit Error	Power Unit error has been found. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	RPS	-	-	✓	Confirm connection of device and others. If there is no problem with connection, failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
314	8000013A	Warning	PowerSupply is in fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Supply Error	PowerSupply is in fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	RPS	-	-	✓	Confirm connection of device and others. If there is no problem with connection, failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
315	8000013B	Warning	PowerSupply is in warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Supply Warning	PowerSupply is in warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	The system is now operating with spare Power Supply. Please check out malfunctioning power supply.	Yellow	RPS	-	-	✓	Confirm connection of device and others. If there is no problem with connection, failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
500	C00001F4	Error	The %2 voltage exceeds the upper limit (Error). Present Voltage Level: %3 Threshold: %4 Date: %1	Voltage Error	The %2 voltage exceeds the upper limit (Error). Present Voltage Level: %3 Threshold: %4 Date: %1	Fatal: The system will be shut down due to abnormal voltage. Please contact the maintenance personnel.	Red	Voltage	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
501	C00001F5	Error	The %2 voltage is below the lower limit (Error). Present Voltage Level: %3 Threshold: %4 Date: %1	Voltage Error	The %2 voltage is below the lower limit (Error). Present Voltage Level: %3 Threshold: %4 Date: %1	Fatal: The system will be shut down due to abnormal voltage. Please contact the maintenance personnel.	Red	Voltage	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	✓	✓	✓	✓	✓
506	400001FA	Information	Voltage has recovered from a fatal state Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Voltage Error Recovered	Voltage has recovered from a fatal state Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Voltage	-	-	-	-	-	✓	✓	✓	✓	✓
507	800001FB	Warning	Voltage has fallen below the lower limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Lower Limit Warning	Voltage has fallen below the lower limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Yellow	Voltage	-	-	-	-	✓	✓	✓	✓	✓	-
507	800001FB	Warning	Voltage has fallen below the lower limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Lower Limit Warning	Voltage has fallen below the lower limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Warning: Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Voltage	-	-	✓	-	-	-	-	-	-	✓
508	400001FC	Information	Voltage has recovered from its lower warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Lower Limit Warning Recovered	Voltage has recovered from its lower warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Green	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓
509	C00001FD	Error	Voltage has fallen below the lower limit (Error). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Lower Limit Error	Voltage has fallen below the lower limit (Error). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	It is dangerous to operate the system with the current voltage. It may shut down.	Red	Voltage	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
510	800001FE	Warning	Voltage has recovered from a fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Lower Limit Error Recovered	Voltage has recovered from a fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Yellow	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
511	C00001FF	Error	Voltage has fallen below the lower limit (Non recoverable). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Lower Limit Error	Voltage has fallen below the lower limit (Non recoverable). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	The system can not be operated with the current voltage. It may shut down.	Red	Voltage	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
512	C0000200	Error	Voltage has recovered from a non-recoverable state and gone into a fatal state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Lower Limit Error Recovered	Voltage has recovered from a non-recoverable state and gone into a fatal state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Red	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓
513	80000201	Warning	Voltage has exceeded the upper limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Upper Limit Warning	Voltage has exceeded the upper limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Yellow	Voltage	-	-	-	-	✓	✓	✓	✓	✓	-
513	80000201	Warning	Voltage has exceeded the upper limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Upper Limit Warning	Voltage has exceeded the upper limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Warning: Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Voltage	-	-	✓	-	-	-	-	-	-	✓
514	40000202	Information	Voltage has recovered from its upper warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Upper Limit Warning Recovered	Voltage has recovered from its upper warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Green	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓
515	C0000203	Error	Voltage has exceeded the upper limit (Error). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Upper Limit Error	Voltage has exceeded the upper limit (Error). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	It is dangerous to operate the system with the current voltage. It may shut down.	Red	Voltage	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
516	80000204	Warning	Voltage has recovered from a fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Upper Limit Error Recovered	Voltage has recovered from a fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Yellow	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓
517	C0000205	Error	Voltage has exceeded the upper limit (Non recoverable). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Upper Limit Error	Voltage has exceeded the upper limit (Non recoverable). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	The system can not be operated with the current voltage state. It may shut down.	Red	Voltage	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
518	C0000206	Error	Voltage has recovered from a non-recoverable state and gone into a fatal state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Upper Limit Error Recovered	Voltage has recovered from a non-recoverable state and gone into a fatal state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Red	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓
703	800002BF	Warning	Physical CPU%1 was degraded and is in no use.	CPU Reduce	Physical CPU%1 was degraded and is in no use.	A part of Processor has stopped. Please report to the maintenance member and exchange Processor.	Yellow	CPU	-	-	✓	Failure of CPU is considered. From the viewpoint of preventive maintenance, as continuous use is risky, after contact with system administrator, replace CPU.	-	-	✓	✓	✓	✓
704	400002C0	Information	Power Unit has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Reduction Recovered	Power Unit has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
705	800002C1	Warning	Power Unit is in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Reduction	Power Unit is in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	The system is now operating with spare Power Supply. Please check out malfunctioning power supply.	Yellow	RPS	-	-	✓	Failure of power supply is considered. From the viewpoint of preventive maintenance, as continuous use is risky, after contact with system administrator, replace power supply.	✓	✓	✓	✓	✓	✓
710	800002C6	Warning	A memory is a degenerate state. Bank ID: %1 Memory ID: %2	Memory Reduce	A memory is a degenerate state. Bank ID: %1 Memory ID: %2	A part of memory is a degenerate state. Please report to the maintenance member and exchange memory.	Yellow	Memory	-	-	✓	-	-	-	✓	✓	✓	✓
800	C0000320	Error	System Error Information Time:%1 Dump Switch:%2 Message: %3	STOP Error occurred	System Error Information Time:%1 Dump Switch:%2 Message: %3	The system is down because a STOP error occurred. Contact your customer support.	Red	System Error	-	-	✓	System went down due to system error. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
1002	400003EA	Information	Chassis Intrusion. %3 was opened Date: %1	-	-	-	-	-	-	-	-	-	✓	✓	-	-	-	-
1002	800003EA	Warning	Chassis Intrusion. %3 was opened Date: %1	-	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓
1003	400003EB	Information	%3 was closed Date: %1	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1101	C000044D	Error	EISA Bus Timeout(8us) caused by one of the Bus Masters. Date: %1 Master ID: %2	EISA Bus Timeout	EISA Bus Timeout(8us) caused by one of the Bus Masters. Date: %1 Master ID: %2	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1102	C000044E	Error	EISA I/O channel check error occurred. Date: %1 Master ID: %2	EISA I/O CH Error	EISA I/O channel check error occurred. Date: %1 Master ID: %2	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1103	C000044F	Error	Parity error occurred in the PCI subsystem. Date: %1 PCI Bus ID: %2	PCI Parity error	Parity error occurred in the PCI subsystem. Date: %1 PCI Bus ID: %2	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1104	C0000450	Error	System error occurred on the PCI buses. Date: %1 PCI Bus ID: %2	PCI System error	System error occurred on the PCI buses. Date: %1 PCI Bus ID: %2	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1105	C0000451	Error	CPU internal error occurred. Date: %1 Sensor Number:%2	CPU Internal error	CPU internal error occurred. Date: %1 Sensor Number:%2	-	Red	CPU	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1106	C0000452	Error	Timeout of failsafe-timer(watchdog timer). Date: %1	Failsafe-timer	Timeout of failsafe-timer(watchdog timer). Date: %1	-	Red	Server Recovery	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1107	C0000453	Error	System error on the system buses. Date: %1 Bus ID: %2	System bus error	System error on the system buses. Date: %1 Bus ID: %2	-	Red	CPU	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1108	C0000454	Error	CPU thermal trip occurred. Date: %1 Sensor Number:%2	CPU thermal trip event	CPU thermal trip occurred. Date: %1 Sensor Number:%2	-	Red	CPU	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1300	C0000514	Error	NMI generated by software. Date: %1	Software NMI	NMI generated by software. Date: %1	-	Red	OS	-	-	-	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1301	80000515	Warning	Adjusted memory size. Date: %1 Bank ID: %2 Bank Original Size: %3 Bank Current Size: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	-

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
1301	80000515	Warning	Adjusted memory size. Date: %1 Bank ID: %2 Bank Original Size: %3 Bank Current Size: %4	POST memory resize	Adjusted memory size. Date: %1 Bank ID: %2 Bank Original Size: %3 Bank Current Size: %4	Warning: Failure of memory is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Memory	-	-	✓	-	-	-	-	-	-	✓
1302	C0000516	Error	Error was detected during the POST phase of system initialization. Date: %1 Error Code: %2	POST Error	Error was detected during the POST phase of system initialization. Date: %1 Error Code: %2	-	Red	Server Recovery	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1304	80000518	Warning	Reset event caused by the watchdog timer. (%4) Date: %1 Timeout Value: %2	WDT Reset	Reset event caused by the watchdog timer. (%4) Date: %1 Timeout Value: %2	-	Yellow	Server Recovery	-	-	-	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	-
1304	80000518	Warning	Reset event caused by the watchdog timer. (%4) Date: %1 Timeout Value: %2	WDT Reset	Reset event caused by the watchdog timer. (%4) Date: %1 Timeout Value: %2	Warning: Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Server Recovery	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	-	-	-	-	✓
1305	40000519	Information	The system configuration was altered by the configuration utility. Date: %1	System reconfig	The system configuration was altered by the configuration utility. Date: %1	-	Green	Server Recovery	-	-	-	-	✓	✓	✓	✓	✓	✓
1306	8000051A	Warning	Cache is running at a reduced capacity. Date: %1 DIMM ID: %2 Site Original Size: %3 Site Current Size: %4	POST cache Reduce	Cache is running at a reduced capacity. Date: %1 DIMM ID: %2 Site Original Size: %3 Site Current Size: %4	A cache is a degenerate state. Please report to the maintenance member and exchange cache.	Yellow	CPU	-	-	✓	-	✓	✓	✓	✓	✓	✓
1307	8000051B	Warning	Level 3 cache ECC single bit error occurred. Date: %1 DIMM ID: %2	Cache ECC Single	Level 3 cache ECC single bit error occurred. Date: %1 DIMM ID: %2	-	Yellow	CPU	-	-	-	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1308	C000051C	Error	Level 3 cache ECC multiple bit error occurred. Date: %1 DIMM ID: %2	Cache ECC multi	Level 3 cache ECC multiple bit error occurred. Date: %1 DIMM ID: %2	-	Red	CPU	-	-	-	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1309	8000051D	Warning	System bus ECC single bit error occurred. Date: %1 SYSTEM BUS ID: %2	BUS ECC single	System bus ECC single bit error occurred. Date: %1 SYSTEM BUS ID: %2	-	Yellow	CPU	-	-	-	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1315	40000523	Information	Processor has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1315	C0000523	Error	Processor has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	Failure of CPU is considered. From the viewpoint of preventive maintenance, as continuous use is risky, after contact with system administrator, replace CPU.	✓	✓	✓	✓	✓	-

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
1315	C0000523	Error	Processor has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Processor Disabled	Processor has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Failure of CPU is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Red	CPU	-	-	✓	Failure of CPU is considered. From the viewpoint of preventive maintenance, as continuous use is risky, after contact with system administrator, replace CPU.	-	-	-	-	-	✓
1317	40000525	Information	System Event Log has been cleared. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1321	C0000529	Error	ECC Multi bit error of system bus has occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	BUS ECC multi	ECC Multi bit error of system bus has occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member.	Red	Bus	-	-	✓ (Ver 1.1 ~ : report Ver 1.01 ~ 1.06: not report)	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1322	C000052A	Error	NMI has occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	NMI	NMI has occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Red	CPU	-	-	-	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1323	4000052B	Information	System watch program started. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1400	C0000578	Error	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5	HW eventlog	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5	-	Red	Server Recovery	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1401	80000579	Warning	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5	HW eventlog	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5	-	Yellow	Server Recovery	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
1402	4000057A	Information	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5	HW eventlog	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5	-	Green	Server Recovery	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
1407	C000057F	Error	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5,	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1408	80000580	Warning	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5,	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1409	40000581	Information	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5,	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1500	400005DC	Information	Power button was pushed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1501	400005DD	Information	Sleep button was pushed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1502	400005DE	Information	Reset button was pushed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1602	40000642	Information	New device has been connected to the slot or the connector device. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	New device has been connected to the slot or the connector device. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Hardware component has been changed. Please reconstruct tree if you already have DataViewer opened for this server.	Green	Security	-	-	-	Hardware configuration was changed. In case you open DataViewer, execute rebuild of tree.	✓	✓	✓	✓	✓	✓
1605	40000645	Information	Either the slot or connector power has been off, or device has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	Either the slot or connector power has been off, or device has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Hardware component has been changed. Please reconstruct tree if you already have DataViewer opened for this server.	Green	Security	-	-	-	Hardware configuration was changed. In case you open DataViewer, execute rebuild of tree.	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
1700	400006A4	Information	The system is now in active state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1705	400006A9	Information	The system is now in software-off state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1707	400006AB	Information	The system is now in hardware-off state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1709	400006AD	Information	The system is now in sleep state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
1800	80000708	Warning	Time out of Watch Dog Timer has occurred. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	WDT Reset	Time out of Watch Dog Timer has occurred. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Server Recovery	-	-	-	Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	-
1800	80000708	Warning	Time out of Watch Dog Timer has occurred. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	WDT Reset	Time out of Watch Dog Timer has occurred. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Server Recovery	-	-	✓	Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	-	-	-	-	✓
1802	8000070A	Warning	Power Down occurred as time out of Watch Dog Timer has occurred. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	WDT Reset	Power Down occurred as time out of Watch Dog Timer has occurred. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Server Recovery	-	-	-	Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	-
1802	8000070A	Warning	Power Down occurred as time out of Watch Dog Timer has occurred. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	WDT Reset	Power Down occurred as time out of Watch Dog Timer has occurred. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Server Recovery	-	-	✓	Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	-	-	-	-	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
1803	8000070B	Warning	Power Cycle has occurred due to time out of Watch Dog Timer. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	WDT Reset	Power Cycle has occurred due to time out of Watch Dog Timer. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Server Recovery	-	-	-	Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	-
1803	8000070B	Warning	Power Cycle has occurred due to time out of Watch Dog Timer. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	WDT Reset	Power Cycle has occurred due to time out of Watch Dog Timer. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Server Recovery	-	-	✓	Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	-	-	-	-	✓
1808	80000710	Warning	Interruption has occurred by time out of Watch Dog Timer. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	WDT Reset	Interruption has occurred by time out of Watch Dog Timer. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Server Recovery	-	-	-	Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	-
1808	80000710	Warning	Interruption has occurred by time out of Watch Dog Timer. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	WDT Reset	Interruption has occurred by time out of Watch Dog Timer. (%5) Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Server Recovery	-	-	✓	Failure of system is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	-	-	-	-	✓
1900	C000076C	Error	The system might have broken down. There is no response from the sensor. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Sensor Failure	The system might have broken down. There is no response from the sensor. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	-	-	-
1900	C000076C	Error	The system might have broken down. There is no response from the sensor. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4 SEL Dump: %6	Sensor Failure	The system might have broken down. There is no response from the sensor. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4 SEL Dump: %6	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	-	-	✓	✓	✓
1901	C000076D	Error	Sensor Error has been detected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Sensor Failure	Sensor Error has been detected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	-	-	-
1901	C000076D	Error	Sensor Error has been detected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4 SEL Dump: %6	Sensor Failure	Sensor Error has been detected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4 SEL Dump: %6	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	-	-	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
1902	C000076E	Error	The system might have broken down. Time out occurred in the access process to the sensor. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Sensor Failure	The system might have broken down. Time out occurred in the access process to the sensor. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	✓	✓	✓	-	-	-
1902	C000076E	Error	The system might have broken down. Time out occurred in the access process to the sensor. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4 SEL Dump: %6	Sensor Failure	The system might have broken down. Time out occurred in the access process to the sensor. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4 SEL Dump: %6	-	Red	Bus	-	-	✓	Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	-	-	-	✓	✓	✓
2303	800008FF	Warning	The slot or connector device is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	The slot or connector device is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Security	-	-	-	-	✓	✓	✓	✓	✓	-
2303	800008FF	Warning	The slot or connector device is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	The slot or connector device is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Security	-	-	✓	-	-	-	-	-	-	✓
2303	C00008FF	Error	The slot or connector device is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot or Connector State	The slot or connector device is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member.	Red	Security	-	-	✓	-	✓	✓	✓	✓	✓	✓
2304	80000900	Warning	Too many ECC Correctable Errors. Please confirm the IPMI log and specify the DIMM number. Latest ECC correctable error log generation memory number:%5	ECC Correctable Errors	Too many ECC Correctable Errors. Please confirm the IPMI log and specify the DIMM number. Latest ECC correctable error log generation memory number:%5	Exchange the memory.	Yellow	Memory	-	-	✓	Failure of memory is considered. From the viewpoint of preventive maintenance, as continuous use is risky, after contact with system administrator, replace memory.	✓	✓	✓	✓	✓	✓
2305	80000901	Warning	Voltage has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Voltage Warning	Voltage has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓
2306	40000902	Information	Voltage has recovered from a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Voltage Recover	Voltage has recovered from a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2307	C0000903	Error	ECC uncorrectable error occurred. Date: %1 Syndrome Byte: %2 Row Number: %5 Memory Card Number: %3 Memory Number: %4	ECC Uncorrectable Error	ECC uncorrectable error occurred. Date: %1 Syndrome Byte: %2 Row Number: %5 Memory Card Number: %3 Memory Number: %4	Please report to the System Administrator or Support Center and then exchange the system memory.	Red	Memory	-	-	✓	Failure of memory is considered. From the viewpoint of preventive maintenance, as continuous use is risky, after contact with system administrator, replace memory.	✓	✓	✓	✓	✓	✓
2310	40000906	Information	The device has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	The device has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Hardware component has been changed. Please reconstruct tree if you already have DataViewer opened for this server.	Green	Security	-	-	-	-	✓	✓	✓	✓	✓	✓
2313	40000909	Information	A part of DIMM is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Release	A part of DIMM is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	-
2313	40000909	Information	A part of DIMM is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Disabled	A part of DIMM is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	-	-	-	-	-	✓
2313	80000909	Warning	The memory error occurred. A part of DIMM is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Release	The memory error occurred. A part of DIMM is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member and exchange memory.	Yellow	Memory	-	-	✓	Failure of memory is considered. From the viewpoint of preventive maintenance, as continuous use is risky, after contact with system administrator, replace memory.	✓	✓	✓	✓	✓	-
2313	80000909	Warning	A part of DIMM is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Fault	A part of DIMM is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Please report to the maintenance member and exchange memory.	Yellow	Memory	-	-	✓	Failure of memory is considered. From the viewpoint of preventive maintenance, as continuous use is risky, after contact with system administrator, replace memory.	-	-	-	-	-	✓
2313	C0000909	Error	The memory error occurred. A part of DIMM is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Release	The memory error occurred. A part of DIMM is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member and exchange memory.	Red	Memory	-	-	✓	-	✓	✓	✓	✓	✓	-
2313	C0000909	Error	A part of DIMM is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Fault	A part of DIMM is in fault state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member and exchange memory.	Red	Memory	-	-	✓	-	-	-	-	-	-	✓
2318	C000090E	Error	Voltage is in a fatal state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Error	Voltage is in a fatal state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Fatal: The system may be malfunctioning. Please contact the maintenance personnel.	Red	Voltage	-	-	✓	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2319	8000090F	Warning	Voltage has recovered from a fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Voltage Error Recovered	Voltage has recovered from a fatal state and gone into a warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Yellow	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓
2320	80000910	Warning	Fan has fallen below the lower limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Fan Unit Warning	Fan has fallen below the lower limit (Warning). Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Yellow	Fan	-	-	✓	-	✓	✓	✓	✓	✓	✓
2321	40000911	Information	Fan has recovered from its lower warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Fan Unit Recovered	Fan has recovered from its lower warning state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Green	Fan	-	-	-	-	✓	✓	✓	✓	✓	✓
2322	80000912	Warning	Power Unit Redundancy Degraded. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Reduction	Power Unit Redundancy Degraded. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
2323	80000913	Warning	Power Unit Non-redundant : Sufficient Resources from Redundant Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Reduction	Power Unit Non-redundant : Sufficient Resources from Redundant Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
2323	C0000913	Error	Power Unit Non-redundant : Sufficient Resources from Redundant. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Reduction	Power Unit Non-redundant : Sufficient Resources from Redundant. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member.	Red	RPS	-	-	✓	-	✓	✓	✓	✓	✓	✓
2324	40000914	Information	Power Unit Non-redundant : Sufficient Resources from Insufficient Resources Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Reduction Recovered	Power Unit Non-redundant : Sufficient Resources from Insufficient Resources Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2324	80000914	Warning	%5 Non-redundant : Sufficient Resources from Insufficient Resources. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Lack Recovered	%5 Non-redundant : Sufficient Resources from Insufficient Resources. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
2325	C0000915	Error	Power Unit Non-redundant : Insufficient Resources Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Reduction	Power Unit Non-redundant : Insufficient Resources Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Red	RPS	-	-	✓	-	✓	✓	✓	✓	✓	✓
2326	80000916	Warning	Power Unit Redundancy Degraded from Fully Redundant Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Reduction	Power Unit Redundancy Degraded from Fully Redundant Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
2327	40000917	Information	Power Unit Redundancy Degraded from Non-Redundant Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Reduction Recovered	Power Unit Redundancy Degraded from Non-Redundant Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
2328	40000918	Information	The slot or connector device has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	The slot or connector device has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Security	-	-	-	-	✓	✓	✓	✓	✓	✓
2329	40000919	Information	The DIMM has recovered. Sensor Number: %2 Date: %1	DIMM Recover	The DIMM has recovered. Sensor Number: %2 Date: %1	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2354	C0000932	Error	Voltage has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Voltage Error	Voltage has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Red	Voltage	-	-	✓	-	✓	✓	✓	✓	✓	✓
2366	C000093E	Error	Temperature has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Temperature Error	Temperature has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: The system may be malfunctioning. Please contact the maintenance personnel.	Red	Temperature	-	-	✓	-	✓	✓	✓	✓	✓	✓
2367	8000093F	Warning	Temperature has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Temperature Error Recovered	Temperature has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Temperature	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2368	80000940	Warning	Temperature has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Temperature Warning	Temperature has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Check the ambient temperature. If the temperature is normal, the system may be malfunctioning. Please contact the maintenance personnel.	Yellow	Temperature	-	-	✓	-	✓	✓	✓	✓	✓	✓
2369	40000941	Information	Temperature has recovered from a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Temperature Warning Recovered	Temperature has recovered from a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Temperature	-	-	-	-	✓	✓	✓	✓	✓	✓
2373	40000945	Information	Fan has recovered from a reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fan Unit Reduction Recovered	Fan has recovered from a reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Fan	-	-	-	-	✓	✓	✓	✓	✓	✓
2374	80000946	Warning	Fan is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fan Unit Reduction	Fan is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Yellow	Fan	-	-	-	-	✓	✓	✓	✓	✓	✓
2374	C0000946	Error	Fan is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fan Unit Reduction	Fan is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member.	Red	Fan	-	-	✓	-	✓	✓	✓	✓	✓	✓
2375	C0000947	Error	CPU has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Processor Error	CPU has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the System Administrator or Support Center.	Red	CPU	-	-	✓	-	✓	✓	✓	✓	✓	✓
2376	40000948	Information	Recovered from internal CPU error. Date: %1 Sensor Number:%2	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2377	40000949	Information	Recovered from CPU thermal trip. Date: %1 Sensor Number:%2	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2378	C000094A	Error	CPU configuration error occurred. Date: %1 Sensor Number:%2	CPU Configuration Error	CPU configuration error occurred. Date: %1 Sensor Number:%2	Please report to the System Administrator or Support Center.	Red	CPU	-	-	-	-	✓	✓	✓	✓	✓	-
2378	C000094A	Error	CPU configuration error occurred. Date: %1 Sensor Number:%2	CPU Configuration Error	CPU configuration error occurred. Date: %1 Sensor Number:%2	Fatal: Please report to the System Administrator or Support Center.	Red	CPU	-	-	✓	-	-	-	-	-	-	✓
2379	4000094B	Information	Recovered from CPU configuration error. Date: %1 Sensor Number:%2	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2380	4000094C	Information	Processor automatic throttle occurred. Date: %1 Sensor Number:%2	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2381	4000094D	Information	Recovered from processor automatic throttle. Date: %1 Sensor Number:%2	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2382	8000094E	Warning	Power supply has lost the AC supply or out-of-range. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Supply Error	Power supply has lost the AC supply or out-of-range. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Yellow	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
2383	8000094F	Warning	Memory has been non-redundant. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Reduction	Memory has been non-redundant. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Yellow	Memory	-	-	✓	-	✓	✓	✓	✓	✓	✓
2384	C0000950	Error	Unspecified system hardware failure occurred. Date: %1	Hardware Error	Unspecified system hardware failure occurred. Date: %1	Please report to the maintenance member.	Red	Server Recovery	-	-	✓	-	✓	✓	✓	✓	✓	✓
2385	C0000951	Error	Bus fatal error occurred. Date: %1	Bus Fatal Error	Bus fatal error occurred. Date: %1	Please report to the maintenance member.	Red	Bus	-	-	✓	-	✓	✓	✓	✓	✓	✓
2386	40000952	Information	Module/Board has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2387	40000953	Information	Module/Board has been inserted. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2388	40000954	Information	Cable/Interconnect has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2389	40000955	Information	Cable/Interconnect has been inserted. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2391	40000957	Information	Memory has recovered from a reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Reduction Recovered	Memory has recovered from a reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2392	80000958	Warning	Memory has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Warning	Memory has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Yellow	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2393	C0000959	Error	Memory has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Error	Memory has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Red	Memory	-	-	✓	-	✓	✓	✓	✓	✓	✓
2394	8000095A	Warning	Memory configuration error occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Configuration Error	Memory configuration error occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the System Administrator or Support Center.	Yellow	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2397	4000095D	Information	Cable/interconnect has been connected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2398	4000095E	Information	Cable/interconnect has been disconnected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2409	C0000969	Error	Device has a drive fault. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Drive Fault	Device has a drive fault. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Red	Notify	-	-	-	-	✓	✓	✓	✓	✓	-
2409	C0000969	Error	Device has a drive fault. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Drive Fault	Device has a drive fault. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member.	Red	Notify	-	-	✓	-	-	-	-	-	-	✓
2410	4000096A	Information	Device has recovered from drive fault. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Drive Fault Recovered	Device has recovered from drive fault. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2417	80000971	Warning	Battery has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Battery Warning	Battery has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Yellow	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
2418	40000972	Information	Battery has recovered from a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Battery Warning Recovered	Battery has recovered from a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
2419	C0000973	Error	Battery has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Battery Error	Battery has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
2420	40000974	Information	Battery has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Battery Error Recovered	Battery has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
2421	40000975	Information	Recovered from timeout of watch dog timer. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2422	40000976	Information	Recovered from reset event caused by the watchdog timer. Date: %1 Timeout Value: %2	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2423	40000977	Information	Recovered from power down that occurred as time out of watch dog timer. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2424	40000978	Information	Recovered from power cycle that occurred due to time out of watch dog timer. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2602	C0000A2A	Error	MCA has occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	MCA	MCA has occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Machine Check Abort error has occurred. Please check the System Event Log and HW log for details, and replace the doubtful components.	Red	System Error	-	-	✓	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2700	C0000A8C	Error	Liquid Leak has happened. Location: %3 Sensor Number: %2 Date: %1	Liquid Leak Error	Liquid Leak has happened. Location: %3 Sensor Number: %2 Date: %1	Fatal: The system may be malfunctioning. Please contact the maintenance personnel.	Red	LiquidLeak	-	-	✓	-	✓	✓	✓	✓	✓	✓
2701	40000A8D	Information	Liquid Leak has recovered. Location: %3 Sensor Number: %2 Date: %1	Liquid Leak Recovered	Liquid Leak has recovered. Location: %3 Sensor Number: %2 Date: %1	-	Green	LiquidLeak	-	-	-	-	✓	✓	✓	✓	✓	✓
2760	C0000AC8	Error	The Memory Board has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Board Error	The Memory Board has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member and exchange memoryboard.	Red	Memory	-	-	✓	-	✓	✓	✓	✓	✓	✓
2761	40000AC9	Information	The Memory Board has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Board Recovered	The Memory Board has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2818	40000B02	Information	CPU has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Processor Recovery	CPU has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	CPU	-	-	-	-	✓	✓	✓	✓	✓	✓
2819	80000B03	Warning	CPU has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Processor Warning	CPU has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the System Administrator or Support Center.	Yellow	CPU	-	-	-	-	✓	✓	✓	✓	✓	✓
2820	C0000B04	Error	CPU self-test error occurred. Date: %1 Sensor Number:%2	CPU Self-Test Error	CPU self-test error occurred. Date: %1 Sensor Number:%2	Please report to the System Administrator or Support Center.	Red	CPU	-	-	✓	-	✓	✓	✓	✓	✓	✓
2821	40000B05	Information	Recovered from CPU self-test error. Date: %1 Sensor Number:%2	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2822	40000B06	Information	Recovered from Power On Self Test (POST) process stalled. Date: %1	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2823	C0000B07	Error	CPU initialization error occurred. Date: %1 Sensor Number: %2	CPU Initialize Error	CPU initialization error occurred. Date: %1 Sensor Number: %2	Please report to the System Administrator or Support Center.	Red	CPU	-	-	-	-	✓	✓	✓	✓	✓	-
2823	C0000B07	Error	CPU initialization error occurred. Date: %1 Sensor Number: %2	CPU Initialize Error	CPU initialization error occurred. Date: %1 Sensor Number: %2	Fatal: Please report to the System Administrator or Support Center.	Red	CPU	-	-	✓	-	-	-	-	-	-	✓
2824	40000B08	Information	Recovered from CPU initialization error. Date: %1 Sensor Number: %2	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2825	40000B09	Information	Recovered from system error on the system buses. Date: %1 Bus ID: %2	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2828	40000B0C	Information	Processor has been enabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2837	40000B15	Information	Power unit has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Error Recovered	Power unit has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
2839	40000B17	Information	Recovered from ECC uncorrectable error. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	ECC Uncorrectable Error Recovered	Recovered from ECC uncorrectable error. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2840	C0000B18	Error	Memory parity error occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Parity Error	Memory parity error occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the System Administrator or Support Center.	Red	Memory	-	-	✓	-	✓	✓	✓	✓	✓	✓
2841	80000B19	Warning	Memory scrub failed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Error	Memory scrub failed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the System Administrator or Support Center.	Yellow	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2842	40000B1A	Information	Memory has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2843	40000B1B	Information	Memory has been enabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2844	80000B1C	Warning	The limit on ECC correctable errors has been reached. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	ECC Correctable Errors	The limit on ECC correctable errors has been reached. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the System Administrator or Support Center.	Yellow	Memory	-	-	✓	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2845	40000B1D	Information	Recovered from ECC correctable errors. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	ECC Correctable Errors Recovered	Recovered from ECC correctable errors. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2850	40000B22	Information	Memory automatic throttle occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2851	40000B23	Information	Recovered from Memory automatic throttle. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2852	C0000B24	Error	Memory temperature has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Temperature Error	Memory temperature has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the System Administrator or Support Center.	Red	Memory	-	-	✓	-	✓	✓	✓	✓	✓	-
2852	C0000B24	Error	Memory temperature has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Temperature Error	Memory temperature has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the System Administrator or Support Center.	Red	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2853	40000B25	Information	Memory temperature has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Temperature Error Recovered	Memory temperature has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2854	40000B26	Information	Module/Board has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Module Recovered	Module/Board has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
2855	80000B27	Warning	Module/Board has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Module Warning	Module/Board has gone into a warning state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the System Administrator or Support Center.	Yellow	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
2856	C0000B28	Error	Module/Board has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Module Error	Module/Board has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please collect the trouble information with the collection tool and report to the System Administrator or Support Center.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2936	C0000B78	Error	Power On Self Test (POST) process stalled. Date: %1 Post Code: %2	POST Process Stall	Power On Self Test (POST) process stalled. Date: %1 Post Code: %2	Please report to the System Administrator or Support Center.	Red	CPU	-	-	✓	-	✓	✓	✓	✓	✓	✓
2938	40000B7A	Information	The abnormal power unit signal has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Error Recovered	The abnormal power unit signal has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
2940	C0000B7C	Error	Power supply is in fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Supply Error	Power supply is in fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	The system is now operating with the spare power supply. Please inspect the primary power supply, which is malfunctioning.	Red	RPS	-	-	✓	-	✓	✓	✓	✓	✓	✓
2947	80000B83	Warning	An abnormal power unit signal was detected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Unit Error	An abnormal power unit signal was detected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please collect the trouble information with the collection tool and report to the System Administrator or Support Center.	Yellow	RPS	-	-	✓	-	✓	✓	✓	✓	✓	✓
2948	40000B84	Information	Recovered from memory parity error. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Parity Error Recovered	Recovered from memory parity error. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2949	40000B85	Information	Recovered from memory scrub error. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Error Recovered	Recovered from memory scrub error. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2950	40000B86	Information	Recovered from memory configuration error. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Configuration Error Recovered	Recovered from memory configuration error. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
2951	40000B87	Information	Device has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
2952	40000B88	Information	Device has been enabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
2954	80000B8A	Warning	Power control has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Control Error	Power control has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	RPS	-	-	-	-	✓	✓	✓	✓	✓	-
2954	80000B8A	Warning	Power control has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Control Error	Power control has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Failure of device is considered. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	RPS	-	-	✓	-	-	-	-	-	-	✓
2955	40000B8B	Information	Power control has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Control Error Recovered	Power control has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
2989	40000BAD	Information	Voltage has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Voltage Recovery	Voltage has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓
2990	C0000BAE	Error	Voltage has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Voltage Error	Voltage has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the System Administrator or Support Center.	Red	Voltage	-	-	✓	-	✓	✓	✓	✓	✓	✓
2991	C0000BAF	Error	Chipset thermal trip occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Chipset Thermal Trip Event	Chipset thermal trip occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
2993	40000BB1	Information	The slot or connector device is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot or Connector State	The slot or connector device is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Security	-	-	-	-	✓	✓	✓	✓	✓	-
2993	40000BB1	Information	The slot or connector device is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot or Connector State	The slot or connector device is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Security	-	-	-	-	-	-	-	-	-	✓
2993	80000BB1	Warning	The slot or connector device is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	The slot or connector device is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Security	-	-	-	-	✓	✓	✓	✓	✓	-

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version						
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~	
2993	80000BB1	Warning	The slot or connector device is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	The slot or connector device is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Security	-	-	-	-	-	-	-	-	-	-	✓
2994	C0000BB2	Error	SMI Timeout occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	SMI Timeout	SMI Timeout occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please collect the trouble information with the collection tool and report to the System Administrator or Support Center.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓	✓
2995	80000BB3	Warning	Power Consumption has not recovered from Limit%5. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Domain	Power Consumption has not recovered from Limit%5. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	It is necessary to change the upper threshold of Power Consumption or reduce the system load.	Yellow	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓	✓
2996	40000BB4	Information	Either the slot or connector power has been on, or device has been connected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	Either the slot or connector power has been on, or device has been connected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Hardware component has been changed. Please reconstruct tree if you already have DataViewer opened for this server.	Green	Security	-	-	-	-	✓	✓	✓	✓	✓	✓	✓
2997	C0000BB5	Error	Operational Firmware image error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	Operational Firmware image error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓	✓
2998	C0000BB6	Error	Flash ROM erase error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	Flash ROM erase error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓	✓
2999	C0000BB7	Error	Flash ROM error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	Flash ROM error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓	✓
3000	C0000BB8	Error	Firmware internal error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	Firmware internal error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
3001	C0000BB9	Error	BMC did not respond to cold reset request. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	BMC did not respond to cold reset request. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
3002	C0000BBA	Error	Manufacturing configuration is wrong. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	Manufacturing configuration is wrong. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
3003	C0000BBB	Error	Flash ROM File System error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	Flash ROM File System error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
3004	80000BBC	Warning	The value of Filter Replacement Sensor has changed unusually. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Filter Replacement Sensor Warning	The value of Filter Replacement Sensor has changed unusually. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Please check whether the front cover is open. Please check whether the environment of the server setting place or the configuration of the server has been changed after calibrating the Filter Replacement Sensor. If they have been changed, please replace the filter to new one and calibrate the Filter Replacement Sensor again.	Yellow	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
3005	40000BBD	Information	The value of Filter Replacement Sensor has recovered. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Filter Replacement Sensor Recovered	The value of Filter Replacement Sensor has recovered. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3006	C0000BBE	Error	Filter Replacement Sensor has been clogged up with dust. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Filter Replacement Sensor Error	Filter Replacement Sensor has been clogged up with dust. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	The filter is clogged up with dust. Please replace the filter to new one and calibrate the Filter Replacement Sensor.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
3007	40000BBF	Information	Filter Replacement Sensor has recovered from the clogged up state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	Filter Replacement Sensor Recovered	Filter Replacement Sensor has recovered from the clogged up state. Sensor Number: %2 Location: %3 Current Value: %6 Threshold: %7 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
3016	8000BC8	Warning	Voltage has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Voltage Error Recovered	Voltage has recovered from a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Yellow	Voltage	-	-	-	-	✓	✓	✓	✓	✓	✓
3017	4000BC9	Information	Power button was pushed in secure mode. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Secure Mode	Power button was pushed in secure mode. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3018	4000BCA	Information	The login password to BMC is violation. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Password violation	The login password to BMC is violation. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Information: Check the inputted password.	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3019	4000BCB	Information	Processor is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Processor Reduction	Processor is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3020	4000BCC	Information	Processor has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Processor Reduction Recovered	Processor has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3021	4000BCD	Information	Drive has been inserted. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Drive Inserted	Drive has been inserted. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3022	4000BCE	Information	Drive has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Drive Removed	Drive has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3023	4000BCF	Information	Drive slot is in rebuild progress. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Drive Rebuild	Drive slot is in rebuild progress. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3024	4000BD0	Information	Drive slot has been stopped rebuilding or rebuilding has been completed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Drive Rebuild	Drive slot has been stopped rebuilding or rebuilding has been completed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	This event is information level. If an error occurs, other events (Event ID[C0000969] or [C0000BE4]) will be reported.	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
3025	40000BD1	Information	Cold Reset or Warm Reset has been executed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
3026	40000BD2	Information	BMCFW's Timestamp Clock was updated. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
3027	40000BD3	Information	Module/Board has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Module Disabled	Module/Board has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3028	40000BD4	Information	Module/Board has been enabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Module Enabled	Module/Board has been enabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3029	40000BD5	Information	Module/Board is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Module Reduction	Module/Board is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3030	40000BD6	Information	Module/Board has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Module Reduction Recovered	Module/Board has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3031	40000BD7	Information	Initiated by power up. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	System Boot	Initiated by power up. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3032	40000BD8	Information	User Requested PXE Boot. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	System Boot	User Requested PXE Boot. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3033	40000BD9	Information	It has started automatically by the Maintenance Utility. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	System Boot	It has started automatically by the Maintenance Utility. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
3034	80000BDA	Warning	Bootable media not found. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Boot Error	Bootable media not found. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Bootable media not found.	Yellow	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3035	80000BDB	Warning	PXE Server not found. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Boot Error	PXE Server not found. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: PXE Server not found.	Yellow	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3036	40000BDC	Information	At least one Spare Rank exists in DIMM. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Spare Rank State	At least one Spare Rank exists in DIMM. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	-
3036	40000BDC	Information	The slot or connector holds spare device. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	The slot or connector holds spare device. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	-	-	-	-	-	✓
3037	40000BDD	Information	None Spare Rank exists in the DIMM. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Spare Rank State	None Spare Rank exists in the DIMM. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	-
3037	40000BDD	Information	The slot or connector doesn't hold spare device. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot State	The slot or connector doesn't hold spare device. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	-	-	-	-	-	✓
3038	40000BDE	Information	The slot or connector device has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot or Connector Disabled	The slot or connector device has been disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3039	40000BDF	Information	The slot or connector device has been enabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot or Connector Enabled	The slot or connector device has been enabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3040	40000BE0	Information	The slot or connector device is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot or Connector Reduction	The slot or connector device is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
3041	40000BE1	Information	The slot or connector device has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Slot or Connector Reduction Recovered	The slot or connector device has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3042	80000BE2	Warning	BMC Access failure occurred on the route between BMC and the host. Date: %1	BMC Access failure	BMC Access failure occurred on the route between BMC and the host. Date: %1	Warning: Server monitoring may have stopped. From the viewpoint of preventive maintenance, collect information by Collect.exe and contact system administrator.	Yellow	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
3043	40000BE3	Information	Recovered from BMC Access failure. Date: %1	BMC Access failure Recovered	Recovered from BMC Access failure. Date: %1	-	Green	Notify	-	-	-	-	✓	✓	✓	✓	✓	✓
3044	C0000BE4	Error	Device has a drive fault. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Drive Fault	Device has a drive fault. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member.	Red	Notify	-	-	✓	-	✓	✓	✓	✓	✓	✓
3045	40000BE5	Information	Power Supply has been inserted. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Supply State	Power Supply has been inserted. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
3046	40000BE6	Information	Power Supply has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Power Supply State	Power Supply has been removed. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	RPS	-	-	-	-	✓	✓	✓	✓	✓	✓
3047	40000BE7	Information	The Memory Board is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Board Release	The Memory Board is released. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	-
3047	40000BE7	Information	The Memory Board is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Board Disabled	The Memory Board is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	-	-	-	-	-	✓
3048	40000BE8	Information	The Memory Board is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Board Reduction	The Memory Board is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
3049	40000BE9	Information	The DIMM is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Reduction	The DIMM is now in reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
3050	40000BEA	Information	The DIMM has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Reduction Recovered	The DIMM has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
3051	40000BEB	Information	The Memory Board has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Memory Board Reduction Recovered	The Memory Board has recovered from reduced capacity state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Memory	-	-	-	-	✓	✓	✓	✓	✓	✓
3052	C0000BEC	Error	Firmware Exception occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	Firmware Exception occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	-	-	✓	✓	✓	✓
3053	80000BED	Warning	Flash ROM Wear-Out Protection Warning occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	Flash ROM Wear-Out Protection Warning occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Please report to the maintenance member.	Yellow	Notify	-	-	-	-	-	-	✓	✓	✓	✓
3054	C0000BEE	Error	PECI over DMI Interface Error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	PECI over DMI Interface Error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	-	-	✓	✓	✓	✓
3055	C0000BEF	Error	MCTP Interface Error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	MCTP Interface Error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member and exchange motherboard.	Red	Notify	-	-	✓	-	-	-	✓	✓	✓	✓
3056	40000BF0	Information	Firmware auto configuration finished. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Management Engine Status Change	Firmware auto configuration finished. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	-	Green	Notify	-	-	-	-	-	-	✓	✓	✓	✓
3057	C0000BF1	Error	Machine Check Exception (Uncorrectable) occurred. Date: %1 Sensor Number: %2	Processor Error	Machine Check Exception (Uncorrectable) occurred. Date: %1 Sensor Number: %2	Fatal: Please report to the maintenance member.	Red	CPU	-	-	✓	-	-	-	✓	✓	✓	✓
3058	40000BF2	Information	Correctable Machine Check Error occurred. Date: %1 Sensor Number: %2	Processor Information	Correctable Machine Check Error occurred. Date: %1 Sensor Number: %2	-	Green	CPU	-	-	-	-	-	-	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
3059	8000BF3	Warning	Correctable Machine Check error logging of processor has been disabled. Date: %1 Sensor Number: %2	Event Logging Disabled	Correctable Machine Check error logging of processor has been disabled. Date: %1 Sensor Number: %2	Warning: Further use of this condition may affect the proper operation of the system. Collect the failure information by the collection tool if possible, and contact the maintenance personnel.	Yellow	CPU	-	-	✓	-	-	-	✓	✓	✓	✓
3060	4000BF4	Information	OS Graceful Shutdown. Date: %1 Sensor Number: %2	OS Shutdown	OS Graceful Shutdown. Date: %1 Sensor Number: %2	-	Green	Server Recovery	-	-	-	-	-	-	✓	✓	✓	✓
3061	4000BF5	Information	Secure Boot Authentication Failed. Date: %1 Sensor Number: %2	-	-	-	-	-	-	-	-	-	-	-	-	-	✓	✓
3073	8000C01	Warning	A part of DIMM is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	DIMM Disabled	A part of DIMM is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: Please report to the maintenance member and exchange memory.	Yellow	Memory	-	-	✓	-	-	-	-	-	-	✓
3074	4000C02	Information	Base OS/Hypervisor Installation started. Date: %1 Sensor Number: %2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	✓
3075	4000C03	Information	Base OS/Hypervisor Installation completed. Date: %1 Sensor Number: %2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	✓
3076	4000C04	Information	Base OS/Hypervisor Installation aborted. Date: %1 Sensor Number: %2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	✓
3077	4000C05	Information	Base OS/Hypervisor Installation failed. Date: %1 Sensor Number: %2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	✓
9105	80002391	Warning	The monitoring of the provider (%1) stopped. It will be restarted.	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
9106	C0002392	Error	The monitoring of the provider (%1) will be stopped for error.	-	-	-	-	-	-	-	-	Because some error happened in WMI provider, there is a possibility that some monitored items can not be monitored. Please, reboot service. Collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
9107	C0002393	Error	Fallback monitoring failed.	-	-	-	-	-	-	-	-	Because some error happened in ESMCommonService, fallback monitoring didn't work right. Please, reboot service. In case same message is displayed, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version					
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.05	1.06	1.1 ~ 1.21	1.22 ~ 1.23	1.24 ~ 1.26	1.3 ~
9108	C0002394	Error	An unexpected exception occurred during the provider operation. The monitoring will be stopped. Provider (%1)	-	-	-	-	-	-	-	-	Because some error happened in WMI provider, there is a possibility that some monitored items can not be monitored. Please, reboot service. Collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
9109	C0002395	Error	An exception occurred during WMI operation. Provider (%1)	-	-	-	-	-	-	-	-	Because some error happened in WMI provider, there is a possibility that some monitored items can not be monitored. Please, reboot service. Collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
9110	C0002396	Error	A file reading failed. Service will be stopped.	-	-	-	-	-	-	-	-	Because some error happened in ESMCommonService, ESMCommonService failed to start. Please, reboot service. In case same message is displayed, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓
9111	C0002397	Error	An error occurred when stopping the provider. Provider (%1)	-	-	-	-	-	-	-	-	During stopping ESMCommonService, some error has happened in WMI provider. Please, collect information by Collect.exe and contact system administrator.	✓	✓	✓	✓	✓	✓

Event Source : ESMCpuPerf

This provider collects performance information of system on a regular basis and sends alert about CPU loading factor.

Source name of Eventlog at the time of alert is registered as "ESMCpuPerf".

All reports of this provider to manager (SNMP) are off by default.

When you turned on a report to manager (SNMP) , Enterprise ID of All SNMP Trap is ".1.3.6.1.4.1.119.2.2.4.4.18.3", and Specific ID is "1".

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~
100	C0000064	Error	CPU total load factor has exceeded the upper threshold(Error).	CPU Load Error	CPU total load factor has exceeded the upper threshold(Error).	-	Red	CPU	✓	-	-	System load becomes extremely high. Confirm whether it is appropriate.	✓
101	80000065	Warning	CPU total load factor has recovered from its error state.	CPU Error Recovered	CPU total load factor has recovered from its error state.	-	Yellow	CPU	✓	-	-	-	✓
102	80000066	Warning	CPU total load factor has exceeded the upper threshold(Warning).	CPU Load Warning	CPU total load factor has exceeded the upper threshold(Warning).	-	Yellow	CPU	✓	-	-	System load becomes extremely high. Confirm whether it is appropriate.	✓
103	40000067	Information	CPU total load factor has recovered from its warning state.	CPU Warning Recovered	CPU total load factor has recovered from its warning state.	-	Green	CPU	✓	-	-	-	✓
104	C0000068	Error	CPU %1 load factor has exceeded the upper threshold(Error).	CPU Load Error	CPU %1 load factor has exceeded the upper threshold(Error).	-	Red	CPU	✓	-	-	System load becomes extremely high. Confirm whether it is appropriate.	✓
105	80000069	Warning	CPU %1 load factor has recovered from its error state.	CPU Error Recovered	CPU %1 load factor has recovered from its error state.	-	Yellow	CPU	✓	-	-	-	✓
106	8000006A	Warning	CPU %1 load factor has exceeded the upper threshold(Warning).	CPU Load Warning	CPU %1 load factor has exceeded the upper threshold(Warning).	-	Yellow	CPU	✓	-	-	System load becomes extremely high. Confirm whether it is appropriate.	✓
107	4000006B	Information	CPU %1 load factor has recovered from its warning state.	CPU Warning Recovered	CPU %1 load factor has recovered from its warning state.	-	Green	CPU	✓	-	-	-	✓
9000	C0002328	Error	ESMCpuPerf Internal Error [%1]	-	-	-	-	-	-	-	-	Because some error happened in CPU load monitoring provider, there is a possibility that some monitored items can not be monitored. Please, collect information by Collect.exe and contact system administrator.	✓

Event Source : ESMMemoryUsage

This provider monitors and reports the physical memory / virtual memory / page file usage.

Source name of Eventlog at the time of alert is registered as "ESMMemoryUsage".

All reports of this provider to manager (SNMP) are off by default.

When you turned on a report to manager (SNMP) , Enterprise ID of All SNMP Trap is ".1.3.6.1.4.1.119.2.2.4.4.18.3", and Specific ID is "1".

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version	
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.06	1.1 ~
100	C0000064	Error	Physical Memory usage exceeds the upper threshold(Error). Upper Threshold(Error) %1KB Current Memory Usage %2KB	Physical Memory Usage Error	Physical Memory usage exceeds the upper threshold(Error). Upper Threshold(Error) %1KB Current Memory Usage %2KB	Fatal: Identify the process which occupy the physical memory by using task manager and remove the cause.	Red	Memory	✓	-	-	-	-	✓
101	80000065	Warning	Physical Memory usage has recovered from its error state. Upper Threshold Recovered(Error) %1KB Current Memory Usage %2KB	Physical Memory Usage Error Recovered	Physical Memory usage has recovered from its error state. Upper Threshold Recovered(Error) %1KB Current Memory Usage %2KB	-	Yellow	Memory	✓	-	-	-	-	✓
102	80000066	Warning	Physical Memory usage exceeds the upper threshold(Warning). Upper Threshold(Warning) %1KB Current Memory Usage %2KB	Physical Memory Usage Warning	Physical Memory usage exceeds the upper threshold(Warning). Upper Threshold(Warning) %1KB Current Memory Usage %2KB	-	Yellow	Memory	✓	-	-	-	-	✓
103	40000067	Information	Physical Memory usage has recovered from its warning state. Upper Threshold Recovered(Warning) %1KB Current Memory Usage %2KB	Physical Memory Usage Recovery	Physical Memory usage has recovered from its warning state. Upper Threshold Recovered(Warning) %1KB Current Memory Usage %2KB	-	Green	Memory	✓	-	-	-	-	✓
104	C0000068	Error	Virtual Memory usage exceeds the upper threshold(Error). Upper Threshold(Error) %1KB Current Memory Usage %2KB	Virtual Memory Usage Error	Virtual Memory usage exceeds the upper threshold(Error). Upper Threshold(Error) %1KB Current Memory Usage %2KB	Fatal: Identify the process which occupy the virtual memory by using task manager and remove the cause.	Red	Memory	✓	-	-	-	-	✓
105	80000069	Warning	Virtual Memory usage has recovered from its error state. Upper Threshold Recovered(Error) %1KB Current Memory Usage %2KB	Virtual Memory Usage Error Recovered	Virtual Memory usage has recovered from its error state. Upper Threshold Recovered(Error) %1KB Current Memory Usage %2KB	-	Yellow	Memory	✓	-	-	-	-	✓
106	8000006A	Warning	Virtual Memory usage exceeds the upper threshold(Warning). Upper Threshold(Warning) %1KB Current Memory Usage %2KB	Virtual Memory Usage Warning	Virtual Memory usage exceeds the upper threshold(Warning). Upper Threshold(Warning) %1KB Current Memory Usage %2KB	-	Yellow	Memory	✓	-	-	-	-	✓
107	4000006B	Information	Virtual Memory usage has recovered from its warning state. Upper Threshold Recovered(Warning) %1KB Current Memory Usage %2KB	Virtual Memory Usage Recovery	Virtual Memory usage has recovered from its warning state. Upper Threshold Recovered(Warning) %1KB Current Memory Usage %2KB	-	Green	Memory	✓	-	-	-	-	✓
108	C000006C	Error	Page File usage exceeds the upper threshold(Error). Upper Threshold(Error) %1KB Current Memory Usage %2KB	Page File Usage Error	Page File usage exceeds the upper threshold(Error). Upper Threshold(Error) %1KB Current Memory Usage %2KB	Fatal: Identify the process which occupy the page file by using task manager and remove the cause.	Red	Memory	✓	-	-	-	-	✓
109	8000006D	Warning	Page File usage has recovered from its error state. Upper Threshold Recovered(Error) %1KB Current Memory Usage %2KB	Page File Usage Recovered	Page File usage has recovered from its error state. Upper Threshold Recovered(Error) %1KB Current Memory Usage %2KB	-	Yellow	Memory	✓	-	-	-	-	✓

Event Viewer				AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version	
Event ID	Event ID(Hex)	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~ 1.06	1.1 ~
110	8000006E	Warning	Page File usage exceeds the upper threshold(Warning). Upper Threshold(Warning) %1KB Current Memory Usage %2KB	Page File Usage Warning	Page File usage exceeds the upper threshold(Warning). Upper Threshold(Warning) %1KB Current Memory Usage %2KB	-	Yellow	Memory	✓	-	-	-	-	✓
111	4000006F	Information	Page File usage has recovered from its warning state. Upper Threshold Recovered(Warning) %1KB Current Memory Usage %2KB	Page File Usage Recovery	Page File usage has recovered from its warning state. Upper Threshold Recovered(Warning) %1KB Current Memory Usage %2KB	-	Green	Memory	✓	-	-	-	-	✓
9000	C0002328	Error	Physical Memory usage Internal Error. [%1]	-	-	-	-	-	-	-	-	Because some error happened in Physical Memory usage monitoring provider, there is a possibility that some monitored items can not be monitored. Please, collect information by Collect.exe and contact system administrator.	-	✓
9001	C0002329	Error	Virtual Memory usage Internal Error. [%1]	-	-	-	-	-	-	-	-	Because some error happened in Virtual Memory usage monitoring provider, there is a possibility that some monitored items can not be monitored. Please, collect information by Collect.exe and contact system administrator.	-	✓
9002	C000232A	Error	Page File usage Internal Error. [%1]	-	-	-	-	-	-	-	-	Because some error happened in Page File usage monitoring provider, there is a possibility that some monitored items can not be monitored. Please, collect information by Collect.exe and contact system administrator.	-	✓

Event Source : ESMSysManagementService

This service is the one for monitoring of ESRAS-related failure.

In case alert about this service occurred, confirm whether selection of models for NEC ESMPRO ServerAgentService is not mistaken.

Event Viewer			AlertViewer					Destination(Default)		Others	NEC ESMPRO ServerAgentService version
Event ID	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager	Express	Remarks	1.01 ~
9101	Error	Internal Error (System Management Service) [%1 %2]	-	-	-	-	-	-	-	Because some error in ESMSysManagementService happened, service could not be started. In case the same message is displayed, collect information by Collect.exe and contact system administrator.	✓
9104	Error	Internal Error (Report Function DLL) Error Code = %1 EventLog Type = %2 Source Name = %3 Event ID = %4	-	-	-	-	-	-	-	Because some error in ESMSysManagementService happened, alert could not be processed. Reboot service. In case the same message is displayed, collect information by Collect.exe and contact system administrator.	✓

Event Source : AlertManagerMainService

This service is to alert failure.

In case event about this service occurred, confirm around alert.

Enterprise ID of All SNMP Trap is ".1.3.6.1.4.1.119.2.2.4.4.18.3", and Specific ID is "1".

Event Viewer			AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version
Event ID	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~
100	Information	Event Source Name: %3%n Event ID:(%4) %5%n Time: %6 %n %n AlertManager succeeded in reporting with the method of "%1".%n %2%n	-	-	-	-	-	-	-	-	The alert that failed to report has been reported again and the reporting succeeded at last.	✓
101	Information	Event Source Name: %3%n Event ID:(%4) %5%n Time: %6 %n %n AlertManager failed in reporting with the method of "%1".%n %2%n	-	-	-	-	-	-	-	-	There is a possibility that there is a problem in the setting of the reporting method. Please check the "Base Setting" and the "Destination Setting" of the reporting method.	✓
102	Information	Event Source Name: %3%n Event ID:(%4) %5%n Time: %6 %n %n AlertManager failed in reporting with the method of "%1". It will retry.%n %2%n	-	-	-	-	-	-	-	-	The alert reporting failed and will be tried to send again and again until success. You can click the "Schedule" button on the reporting "Destination ID" dialog to change the "Retry Interval" .	✓
103	Warning	Event Source Name: %3%n Event ID:(%4) %5%n Time: %6 %n %n The alert request was removed because it couldn't be sent successfully within the retry time limit.%n %2%n	-	-	-	-	-	-	-	-	The alert reporting failed repeatedly, and the "Whole Retry Time" has elapsed. This alert reporting was abandoned. There is a possibility that there is a problem in the setting of the reporting method. Please check the "Base Setting" and the "Destination Setting" of the reporting method.	✓
104	Error	Summary: %1%n Time: %2 %n %n The alert request was removed because it couldn't be sent successfully within the retry time limit.%n %3%n	-	-	-	-	-	-	-	-	Error happened in service. Collect information by Collect(m).exe.	✓
800	Error	Fatal error occurred at watching %1 eventlog.%n %2%n	-	-	-	-	-	-	-	-	Error happened in service. Collect information by Collect(m).exe.	✓
801	Error	Error occurred at watching %1 eventlog.%n %2%n	-	-	-	-	-	-	-	-	Error happened in service. Collect information by Collect(m).exe.	✓

Event Viewer			AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version
Event ID	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~
900	Error	Fatal error occurred.%n %1%n	-	-	-	-	-	-	-	-	Error happened in service. Collect information by Collect(m).exe.	✓
901	Warning	AlertManager failed to execute the following module.%n Module name: %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
802	Informational	The past event was detected. There is the possibility of the following cause.%n - System time was changed into the past time from the time of the future.%n - A shutdown was not normal.%n - Event log was corrupt.%n	Warning Event log Watched	The past event was detected. There is the possibility of the following cause.%n - System time was changed into the past time from the time of the future.%n - A shutdown was not normal.%n - Event log was corrupt.%n	1.When System Time is changed, Please set 0 as all value of '{log name }Time' key shown below. HKEY_LOCAL_MACHINE\SOFTWARE\NEC\ESMAlertMan\AMMNEV 2. When a shutdown is automatic, you need to increase the value of a timer. 3. Please clear the corrupted log and reboot AlertManagerMainService.	Green	Service	-	✓	-		✓
803	Error	Failure of read of event log. It stops watching %1 log. The following code is error information.(%2)%n	Error Event log Watched	Failure of read of event log. It stops watching %1 log. The following code is error information.(%2)%n	-	Red	Service	-	✓	-	Error happened in service. Collect information by Collect(m).exe.	✓
1000	Informational	This server is shutting down or rebooting in %1 second(s).%n	Shut down or reboot	This server is shutting down or rebooting in %1 second(s).%n	-	Green	Server Recovery	-	✓	-	shutting down or rebooting has happened.	✓
1001	Informational	The request of shutting down or rebooting was canceled by user.%n	Canceled shutting down or rebooting	The request of shutting down or rebooting was canceled by user.%n	-	Green	Server Recovery	-	✓	-	shutting down or rebooting has happened,but it was canceled by user.	✓
1100	Error	Critical error occurred while subscribing to channel %1. It stops watching the channel.%nErrorCode = %2%n	Error Event log Watched	Critical error occurred while subscribing to channel %1. It stops watching the channel.%nErrorCode = %2%n	-	-	Service	-	-	-	Error happened in service. Collect information by Collect(m).exe.	✓
1101	Warning	Error occurred while subscribing to channel %1. It stops watching the channel temporarily.%nErrorCode = %2%n	Warning Event log Watched	Error occurred while subscribing to channel %1. It stops watching the channel temporarily.%nErrorCode = %2%n	-	-	Service	-	-	-	Error happened in service. Collect information by Collect(m).exe.	✓
1102	Informational	Subscribing to channel %1 succeeded. It starts watching the channel.%n	Information Event log Watched	Subscribing to channel %1 succeeded. It starts watching the channel.%n	-	-	Service	-	-	-		✓

Event Source : AlertManagerALIVESendService

This service is to send ALIVE alert.
 In case alert about this service occurred, confirm around modem and SMB.

Event Viewer			AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version
Event ID	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~
401	Information	Service started.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
402	Information	Service stopped.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
403	Information	Service paused.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
404	Information	ALIVE Service continued.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
405	Error	Alert Manager failed to send the following event with the SMB Board.%n%n To : %6 %n [report] %n DATE : %1 Time : %2 Computer : %3 %n Source : %4 EventID : %5 %n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
406	Informational	It reported successfully.%n%n To : %6 %n [report] %n DATE : %1 Time : %2 Computer : %3 %n Source : %4 EventID : %5 %n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
407	Error	Serial port is busy.%n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
408	Error	Telephone line is busy. %n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
409	Error	The message transmitted by SMB has not been acknowledged by the receiver of the message.%n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
410	Error	Telephone line was cut off.%n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
411	Error	It couldn't communicate with the modem.%n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓

Event Viewer			AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version
Event ID	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~
412	Error	An error occurred in the registry access.%n%n%1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
413	Error	An error occurred in the service control.%n%n%1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
414	Information	Remote Access Service was started.%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
415	Information	Remote Access Service was stopped.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
416	Error	Specified DLL wasn't found.%n%n%1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
417	Error	Alert Manager failed to report.%n%n%1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
418	Error	Alert Manager failed to send an alert because the Socket Send Service has not started.%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
419	Warning	It failed to acquire the data inside the queue.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
420	Warning	Could not set the device control block.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
421	Warning	Could not initialize the modem.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
422	Warning	An error occurred during the message communication.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
423	Warning	A retry error occurred while trying to get the result of test report.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
424	Warning	An error occurred while trying to get the result of test report.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
425	Warning	It wasn't connected with the destination of the test report.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
426	Warning	A line error occurred during test report and then it could not connect with the destination again.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
427	Warning	The setting of the automatic report is wrong in the report test.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
428	Warning	A time out or a line cutting was detected in the report test.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
429	Warning	he parity error occurred in the report test.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓

Event Viewer			AlertViewer					Destination(Default)			Others	NEC ESMPRO ServerAgentService version
Event ID	Type	Description	Summary(TrapName)	Detail	Action	Status Color	Type	Manager (CIM-Indication)	Manager (SNMP)	Express	Remarks	1.01 ~
430	Warning	The overrun error occurred in the report test.	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
501	Error	The following event couldn't be transmitted with the Socket Send Service.%n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
502	Information	It failed to control of Remote Access Server.%n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
503	Error	A WinSock error occurred in the service.%n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
9401	Error	A fatal error occurred in the service specified with the event source name.%n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓
9403	Error	An error occurred in the service specified with the event source name.%n%n %1%n	-	-	-	-	-	-	-	-	Collect information by Collect(m).exe.	✓