

C0000C17	Error	3095	Notify	SMBus link failure	SMLINK2 error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: It is considered a device malfunction. If the log collection tool can start, please collect the log data with it and report to the maintenance member.	○	×	○	×	×	○	×	×	×	×	×	×	×	×	×
C0000C18	Error	3096	Notify	SMBus link failure	SMLINK3 error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: It is considered a device malfunction. If the log collection tool can start, please collect the log data with it and report to the maintenance member.	○	×	○	×	×	○	×	×	×	×	×	×	×	×	×
C0000C19	Error	3097	Notify	SMBus link failure	SMLINK4 error occurred. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: It is considered a device malfunction. If the log collection tool can start, please collect the log data with it and report to the maintenance member.	○	×	○	×	×	○	×	×	×	×	×	×	×	×	×
C0000C1A	Error	3098	Voltage	Voltage Error	Voltage has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: The system will be shut down due to abnormal voltage. Please contact the maintenance personnel.	○	×	○	×	×	○	×	×	×	×	×	×	×	×	×

Source Name<SRC>: ESMCommonService (iLO support model)

This event detect in information of Integrated Management Log(IML), it is a message to register. Therefore there is the event that is not detected by a server of the use. Manager Report(CIM-Indication) is not support.

Event ID (Hex digit)	Error Type	Event ID	Type	Trap Name	Message<MSG>	Deal Meathod	Write to syslog	Manager Report (CIM -)	Version													
									2.0.9-0	2.0.8-0	2.0.7-0	2.0.6-0	2.0.5-0	2.0.3-0 ~2.0.4-0	2.0.1-0 ~2.0.2-1	2.0.0-0	1.3.0-0 ~1.3.1-0	1.1.3-0	1.1.1-0 ~1.1.2-0	1.1.0-0	1.0.0-0	
4000585	Information	1413	Server Recovery	HW eventlog	This is the event which occurred between this system start-up and the last system stop or system shutdown. %2 %3 %4 %5	Information: It is considered a device malfunction. If the log collection tool can start, please collect the log data with it and report to the maintenance member.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
40008101	Information	33025	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x01 Event Code : 0x001 Status : Information Description : Test IML Event: %1	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
40008213	Information	33299	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x013 Status : Repaired Description : System Overheating (Temperature Sensor %1, Location %2, Temperature %3)	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80008213	Warning	33299	Temperature	System Overheating	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x013 Status : Warning Description : System Overheating (Temperature Sensor %1, Location %2, Temperature %3)	Warning: If the temperature rises any higher, it will affect the proper operation of the system. Check that the air inlet is not clogged and the air conditioner is running.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
40008214	Information	33300	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x014 Status : Repaired Description : External Chassis Overheating (Chassis %1, Temperature Sensor %2, Location %3, Temperature %4)	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80008214	Warning	33300	Temperature	External Chassis Overheating	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x014 Status : Warning Description : External Chassis Overheating (Chassis %1, Temperature Sensor %2, Location %3, Temperature %4)	Warning: If the temperature rises any higher, it will affect the proper operation of the system. Check that the air inlet is not clogged and the air conditioner is running.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
40008215	Information	33301	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x015 Status : Repaired Description : %1 Storage System Overheating (%2Slot %3, Temperature Sensor %4, Location %5, Temperature %6)	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80008215	Warning	33301	Temperature	Storage System Overheating	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x015 Status : Warning Description : %1 Storage System Overheating (%2Slot %3, Temperature Sensor %4, Location %5, Temperature %6)	Warning: If the temperature rises any higher, it will affect the proper operation of the system. Check that the air inlet is not clogged and the air conditioner is running.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
40008216	Information	33302	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x016 Status : Repaired Description : %1 Overheating (Temperature Sensor %2, Location %3, Temperature %4, %5)	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×

80008216	Warning	33302	Temperature	Overheating	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x016 Status : Warning Description : %1 Overheating (Temperature Sensor %2, Location %3, Temperature %4, %5)	Warning: If the temperature rises any higher, it will affect the proper operation of the system. Check that the air inlet is not clogged and the air conditioner is running.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	
40008217	Information	33303	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x017 Status : Repaired Description : Fan Failure (Fan %1, Location %2)	-	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008217	Warning	33303	Fan	Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x017 Status : Warning Description : Fan Failure (Fan %1, Location %2)	Warning: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008217	Error	33303	Fan	Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x017 Status : Error Description : Fan Failure (Fan %1, Location %2)	Fatal: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008218	Information	33304	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x018 Status : Repaired Description : External Chassis Fan Failure (Chassis %1, Fan %2, Location %3)	-	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008218	Warning	33304	Fan	External Chassis Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x018 Status : Warning Description : External Chassis Fan Failure (Chassis %1, Fan %2, Location %3)	Warning: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008218	Error	33304	Fan	External Chassis Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x018 Status : Error Description : External Chassis Fan Failure (Chassis %1, Fan %2, Location %3)	Fatal: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008219	Information	33305	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x019 Status : Repaired Description : %1 Storage System Fan Failure (%2 Slot %3, Fan %4, Location %5)	-	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008219	Warning	33305	Fan	Storage System Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x019 Status : Warning Description : %1 Storage System Fan Failure (%2 Slot %3, Fan %4, Location %5)	Warning: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008219	Error	33305	Fan	Storage System Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x019 Status : Error Description : %1 Storage System Fan Failure (%2 Slot %3, Fan %4, Location %5)	Fatal: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000821A	Information	33306	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01A Status : Repaired Description : %1 Fan Failure (Fan %2, Location %3, %4)	-	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8000821A	Warning	33306	Fan	Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01A Status : Warning Description : %1 Fan Failure (Fan %2, Location %3, %4)	Warning: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C000821A	Error	33306	Fan	Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01A Status : Error Description : %1 Fan Failure (Fan %2, Location %3, %4)	Fatal: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

4000821B	Information	33307	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01B Status : Information Description : System Fan Removed (Fan %1, Location %2)		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	
8000821B	Warning	33307	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01B Status : Warning Description : System Fan Removed (Fan %1, Location %2)		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C000821B	Error	33307	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01B Status : Error Description : System Fan Removed (Fan %1, Location %2)		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
4000821C	Information	33308	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01C Status : Information Description : External Chassis Fan Removed (Chassis %1, Fan %2, Location %3)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000821D	Information	33309	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01D Status : Information Description : %1 Storage System Fan Removed (%2Slot %3, Fan %4, Location %5)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000821E	Information	33310	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01E Status : Information Description : %1 Fan Removed (Fan %2, Location %3, %4)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000821F	Information	33311	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x01F Status : Information Description : System Fan Inserted (Fan %1, Location %2)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008220	Information	33312	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x020 Status : Information Description : External Chassis Fan Inserted (Chassis %1, Fan %2, Location %3)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008221	Information	33313	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x021 Status : Information Description : %1 Storage System Fan Inserted (%2Slot %3, Fan %4, Location %5)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008222	Information	33314	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x022 Status : Information Description : %1 Fan Inserted (Fan %2, Location %3, %4)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008223	Information	33315	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x023 Status : Repaired Description : System Fans Not Redundant (Location %1)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008223	Warning	33315	Fan	System Fans Not Redundant	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x023 Status : Warning Description : System Fans Not Redundant (Location %1)	Warning: Check the FAN Connection. If there is no problem with the connection, the FAN may be faulty. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	
40008224	Information	33316	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x024 Status : Repaired Description : External Chassis Fans Not Redundant (Chassis %1, Location %2)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80008224	Warning	33316	Fan	External Chassis Fans Not Redundant	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x024 Status : Warning Description : External Chassis Fans Not Redundant (Chassis %1, Location %2)	Warning: Check the FAN Connection. If there is no problem with the connection, the FAN may be faulty. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008225	Information	33317	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x025 Status : Repaired Description : %1 Storage System Fans Not Redundant (%2Slot %3, Location %4)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008225	Warning	33317	Fan	Storage System Fans Not Redundant	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x025 Status : Warning Description : %1 Storage System Fans Not Redundant (%2Slot %3, Location %4)	Warning: Check the FAN Connection. If there is no problem with the connection, the FAN may be faulty. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008226	Information	33318	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x026 Status : Repaired Description : %1 Fans Not Redundant (Location %2, %3)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008226	Warning	33318	Fan	Fans Not Redundant	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x026 Status : Warning Description : %1 Fans Not Redundant (Location %2, %3)	Warning: Check the FAN Connection. If there is no problem with the connection, the FAN may be faulty. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008227	Information	33319	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x027 Status : Repaired Description : Critical Temperature Threshold Exceeded	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008227	Error	33319	Temperature	Critical Temperature Threshold Exceeded	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x027 Status : Error Description : Critical Temperature Threshold Exceeded	Fatal: Abnormal temperature detected. Check that the air inlet is not clogged and the air conditioner is running. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008228	Information	33320	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x028 Status : Repaired Description : Critical Temperature Threshold Exceeded (Temperature Sensor %1, Location %2, Temperature %3C %4)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008228	Error	33320	Temperature	Critical Temperature Threshold Exceeded	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x028 Status : Error Description : Critical Temperature Threshold Exceeded (Temperature Sensor %1, Location %2, Temperature %3C %4)	Fatal: Abnormal temperature detected. Check that the air inlet is not clogged and the air conditioner is running. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008229	Information	33321	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x029 Status : Repaired Description : External Chassis Overheating (Chassis %1, Temperature Sensor %2, Location %3, Temperature %4)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008229	Error	33321	Temperature	External Chassis Overheating	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x029 Status : Error Description : External Chassis Overheating (Chassis %1, Temperature Sensor %2, Location %3, Temperature %4)	Fatal: Abnormal temperature detected. Check that the air inlet is not clogged and the air conditioner is running. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000822A	Information	33322	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x02A Status : Repaired Description : %1 Storage System Overheating (%2Slot %3, Temperature Sensor %4, Location %5, Temperature %6)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C000822A	Error	33322	Temperature	Storage System Overheating	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x02A Status : Error Description : %1 Storage System Overheating (%2Slot %3, Temperature Sensor %4, Location %5, Temperature %6)	Fatal: Abnormal temperature detected. Check that the air inlet is not clogged and the air conditioner is running. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×

4000822B	Information	33323	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x02B Status : Repaired Description : %1 Overheating (Temperature Sensor %2, Location %3, Temperature %4, %5)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C000822B	Error	33323	Temperature	Overheating	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x02B Status : Error Description : %1 Overheating (Temperature Sensor %2, Location %3, Temperature %4, %5)	Fatal: Abnormal temperature detected. Check that the air inlet is not clogged and the air conditioner is running. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000822C	Information	33324	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x02C Status : Repaired Description : Temperature exceeded on PCIe disk %1.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C000822C	Error	33324	Temperature	Temperature Exceeded	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x02C Status : Error Description : Temperature exceeded on PCIe disk %1.	Fatal: Abnormal temperature detected. Check that the air inlet is not clogged and the air conditioner is running. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000822D	Information	33325	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x02D Status : Information Description : Intrusion Alert Hardware installed.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8000822E	Warning	33326	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x02E Status : Warning Description : #ILO had detected the removal of the Intrusion Alert		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8000822F	Warning	33327	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x02F Status : Warning Description : Intrusion Alert Detection - The server chassis hood is currently not installed.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008230	Information	33328	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x030 Status : Information Description : The chassis hood has been replaced.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008231	Information	33329	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x031 Status : Repaired Description : %1 Storage Enclosure Fan Failure (Fan %2, Location %3, Box %4, %5)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008231	Warning	33329	Fan	Storage Enclosure Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x031 Status : Warning Description : %1 Storage Enclosure Fan Failure (Fan %2, Location %3, Box %4, %5)	Warning: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	
C0008231	Error	33329	Fan	Storage Enclosure Fan Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x031 Status : Error Description : %1 Storage Enclosure Fan Failure (Fan %2, Location %3, Box %4, %5)	Fatal: FAN fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008232	Information	33330	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x032 Status : Repaired Description : %1 Storage Enclosure Overheating (Temperature Sensor %2, Location %3, Box %4, %5)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008232	Warning	33330	Temperature	Storage Enclosure Overheating	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x032 Status : Warning Description : %1 Storage Enclosure Overheating (Temperature Sensor %2, Location %3, Box %4, %5)	Warning: If the temperature rises any higher, it will affect the proper operation of the system. Check that the air inlet is not clogged and the air conditioner is running.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80028A24	Warning	35364	Server Recovery	Power Fault Detected	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x224 Status : Warning Description : Power Fault Detected - FlexLOM %1	Warning: Power fault detected on FlexLOM. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80028A25	Warning	35365	Server Recovery	Power Fault Detected- Mezzanine	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x225 Status : Warning Description : Power Fault Detected- Mezzanine %1.	Warning: Power fault detected on Mezzanine Card. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80028A26	Warning	35366	Server Recovery	Power Fault Detected	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x226 Status : Warning Description : Power Fault Detected - Embedded Storage Controller %1.	Warning: Power fault detected on Storage Controller. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80028A27	Warning	35367	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x227 Status : Warning Description : Power Fault Detected - M.2 riser	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80028A44	Warning	35396	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x244 Status : Warning Description : IMPORTANT: The device in PCIe Slot %1 is SRIOV capable but is installed in a slot that does NOT support SRIOV.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80028A51	Warning	35409	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x251 Status : Warning Description : IMPORTANT: Switches SW1 and SW3 are ON. This is only used to recover %1 functionality.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40028A53	Information	35411	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x253 Status : Information Description : IMPORTANT: One or more embedded PCIe Device(s) are attached to a non-installed processor and will not function.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40028A54	Information	35412	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x254 Status : Information Description : IMPORTANT: The PCIe Device installed in Slot %1 has no corresponding processor installed and will not function.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0028A59	Error	35417	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x259 Status : Error Description : Unsupported Processor Configuration Detected. All installed	-	○	×	×	×	×	×	×	×	×	○	○	×	×	×	×	×	
80028A61	Warning	35425	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x261 Status : Warning Description : Server Platform Services Firmware requires update.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80028A64	Warning	35428	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x264 Status : Warning Description : Server Platform Services Firmware in Recovery Mode. SPS Firmware Update Switch 12 of the Maintenance Switch is in the ON	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	
C0028A66	Error	35430	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x266 Status : Error Description : Non-Volatile Memory Corruption Detected. Configuration settings restored to defaults. If enabled, Secure Boot security settings may be lost.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40028A67	Information	35431	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x267 Status : Information Description : IMPORTANT: Default configuration settings have been restored at the request of the user.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

C0028A67	Error	35431	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x267 Status : Error Description : IMPORTANT: Default configuration settings have been	-	○	×	×	×	×	×	×	×	×	○	×	×	×	×	×
80028A68	Warning	35432	Server Recovery	UEFI Non-Volatile Variable Store Corruption Detected	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x268 Status : Warning Description : UEFI Non-Volatile Variable Store Corruption Detected. If enabled, Secure Boot security settings may be lost.	Warning: UEFI error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	×	×	×	×	×	×
C0028A68	Error	35432	Server Recovery	UEFI Non-Volatile Variable Store Corruption Detected	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x268 Status : Error Description : UEFI Non-Volatile Variable Store Corruption Detected. If	Fatal: The system cannot communicate with the iLO firmware. Collect information by Server information collection tool and contact your sales representative.	○	×	×	×	×	×	×	×	×	○	×	×	×	×	×
40028A69	Information	35433	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x269 Status : Information Description : IMPORTANT: Default configuration settings have been restored per user request. If Secure Boot was enabled, related security settings may have been lost.	-	○	×	○	○	○	○	○	○	○	×	×	×	×	×	×
C0028A69	Error	35433	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x269 Status : Error Description : IMPORTANT: Default configuration settings have been	-	○	×	×	×	×	×	×	×	×	○	×	×	×	×	×
C0028A70	Error	35440	Server Recovery	FW Communication Issue	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x270 Status : Error Description : %1 FW Communication Issue - Unable to communicate with %2 FW. Certain management functionality is not available.	Fatal: The system cannot communicate with the iLO firmware. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×
40028A71	Information	35441	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x271 Status : Information Description : %1 %2, DIMM %3 could not be authenticated as genuine %4. Enhanced and extended %5 features will not be active.	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×
80028A72	Warning	35442	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x272 Status : Warning Description : IMPORTANT: %1 %2, DIMM %3 may not be a Genuine %4 DIMM.	-	○	×	○	○	○	○	○	○	○	×	×	×	×	×	×
40028A76	Information	35446	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x276 Status : Information Description : Option Card Configuration Error. An option card is requesting more memory mapped I/O than is	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×
40028A77	Information	35447	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x277 Status : Information Description : Secure Boot Authentication Failure - The image on %1 failed authentication and was not executed.	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×
40028A78	Information	35448	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x278 Status : Information Description : Secure Boot Authentication Failure - The image on %1 was not authorized due to revoked certificate(s) and was not executed.	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×
40028A81	Information	35457	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x281 Status : Information Description : IMPORTANT: SW12 is ON indicating physical presence. This switch should only be ON to override certain security protections.	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×

40028A82	Information	35458	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x282 Status : Information Description : Invalid Server Serial Number and Product ID - The Serial Number and/or Product ID have been corrupted or lost.		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
C0028A84	Error	35460	Server Recovery	Uncorrectable Memory Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x284 Status : Error Description : DIMM Failure - Uncorrectable Memory Error - %1 %2 Dimm %3	Fatal: Memory Uncorrectable Error detected. Collect information by Server information collection tool and contact your sales representative.	o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
40028A86	Information	35462	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x286 Status : Information Description : IMPORTANT: The removal of a storage device has been detected. The device has been removed from the Boot Controller Order.		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
40028A87	Information	35463	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x287 Status : Information Description : IMPORTANT: The removal of a network device has been detected. The device has been removed from the Standard Boot Order (IPL)		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
40028A88	Information	35464	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x288 Status : Information Description : IMPORTANT: A new storage device has been detected and has been added to the end of the Boot Controller Order.		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
40028A89	Information	35465	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x289 Status : Information Description : A new network or storage device has been detected. This device will not be shown in the Legacy BIOS Boot Order options in RBSU until the system has booted once.		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
80028A91	Warning	35473	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x291 Status : Warning Description : IMPORTANT: The Standard Boot Order (IPL) has been detected as corrupted and has been restored to default values.		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
80028A92	Warning	35474	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x292 Status : Warning Description : Invalid %1 Software RAID Configuration. %2 SW RAID Mode is NOT supported when the Boot Mode is configured for legacy BIOS Mode.		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
80028A97	Warning	35479	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x297 Status : Warning Description : IMPORTANT: %1 Security is disabled by the associated switch being set to the ON position. Platform security is DISABLED.		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
C0038A06	Error	35334	Server Recovery	Redundant ROM Error	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x306 Status : Error Description : Redundant ROM Error: %1 FW did not set the Primary System ROM.	Fatal: An error prevented the setting of the primary system ROM. Collect information by Server information collection tool and contact your sales representative.	o	x	x	x	x	x	x	x	x	o	x	x	x	x	x
80038A11	Warning	35345	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x311 Status : Warning Description : %1 Configuration Error - The system has exceeded the installed battery capacity.		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
80038A12	Warning	35346	Server Recovery	Battery Communication Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x312 Status : Warning Description : %1 %2 Failure - Communication with the battery failed. Its output may not be enabled.	Warning: The Smart Storage battery is not installed correctly, degraded or has failed. Collect information by Server information collection tool and contact your sales representative.	o	x	o	o	o	o	o	o	o	o	x	x	x	x	x

80038A13	Warning	35347	Server Recovery	Battery Shutdown	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x313 Status : Warning Description : %1 %2 Failure - Battery Shutdown Event Code: 0x%3.	Warning: The Smart Storage battery is degraded or has failed. The iLO firmware is not the latest version. Contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A15	Error	35349	Server Recovery	Uncorrectable Memory Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x315 Status : Error Description : An uncorrectable memory error was detected prior to this system boot.	Fatal: An uncorrectable memory error occurred. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A19	Warning	35353	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x319 Status : Warning Description : An Unexpected Shutdown was detected prior to this boot.		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A20	Warning	35360	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x320 Status : Warning Description : Enclosure Power Event detected. Boot delayed until condition is resolved.		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A21	Warning	35361	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x321 Status : Warning Description : %1 Dual microSD Device Unsupported Configuration - A microSD card is not installed in Slot %2		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A22	Error	35362	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x322 Status : Error Description : %1 Dual microSD Device Unsupported Configuration - No microSD cards are installed.		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A23	Warning	35363	Server Recovery	Dual microSD Device Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x323 Status : Warning Description : %1 Dual microSD Device Error - The microSD card in Slot %2 has failed.	Warning: The microSD card has failed. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A24	Error	35364	Server Recovery	Dual microSD Device Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x324 Status : Error Description : %1 Dual microSD Device Error - Both microSD cards have failed.	Fatal: The microSD card has failed. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A25	Error	35365	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x325 Status : Error Description : %1 Dual microSD Device Error - microSD cards have conflicting metadata. Configuration required.		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A26	Error	35366	Server Recovery	Dual microSD Device Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x326 Status : Error Description : %1 Dual microSD Device Error - The microSD card in Slot %2 has failed. A microSD card is not installed in Slot %3.	Fatal: The microSD card has failed. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A27	Warning	35367	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x327 Status : Warning Description : AMP Configuration Error - An installed processor does NOT support the configured AMP Mode. System will operate in Advanced ECC Mode.		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40038A28	Information	35368	Server Recovery	Power Management Controller Firmware Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x328 Status : Information Description : Power Management Controller Firmware Error - The firmware is in Recovery Mode.	Information: Power Management Controller Firmware Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40038A29	Information	35369	Server Recovery	Power Management Controller FW Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x329 Status : Information Description : Power Management Controller FW Error - Unable to communicate with the FW.	Information: Power Management Controller Firmware Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80038A33	Warning	35379	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x333 Status : Warning Description : %1 RESTful API Error - Unable to communicate with %2 FW. BIOS configuration resources may not be up-to-date.		○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A34	Warning	35380	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x334 Status : Warning Description : %1 RESTful API Error - RESTful API GET request failed (HTTP Status Code = %2). BIOS configuration resources were not consumed.		○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A35	Warning	35381	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x335 Status : Warning Description : %1 RESTful API Error - RESTful API PUT request failed (HTTP Status Code = %2). BIOS configuration resources may not be up-to-date.		○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A36	Warning	35382	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x336 Status : Warning Description : %1 RESTful API Error - One or more configuration settings could not be applied.		○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A37	Warning	35383	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x337 Status : Warning Description : %1 RESTful API Error - Unable to communicate with %2 FW due to Datacenter Configuration Lock being enabled. BIOS configuration resources may not be up-to-date.		○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A38	Warning	35384	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x338 Status : Warning Description : %1 RESTful API Error - Unable to communicate with %2 FW. BIOS configuration resources may not be up-to-date.		○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A40	Error	35392	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x340 Status : Error Description : NVDIMM Error - Backup Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). Persistent data backup failed and data is irrecoverably lost.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A41	Error	35393	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x341 Status : Error Description : NVDIMM Error - Restore Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). Persistent data restore failed and data is not available. Data is not lost unless the issue persists.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A42	Error	35394	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x342 Status : Error Description : NVDIMM Error - Uncorrectable Memory Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). This NVDIMM will not be available to the operating system and data may have been lost.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A43	Error	35395	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x343 Status : Error Description : IMPORTANT: NVDIMM backup power has been lost and a future backup is not possible. Data from the last successful backup is intact, but data modified after the last successful backup will be lost if power cannot be restored.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

C0038A44	Error	35396	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x344 Status : Error Description : NVDIMM Error - NVDIMM Controller Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). An error was found with the NVDIMM controller. The OS will not use the NVDIMM. Data from last successful backup is still available, but will be lost if controller error persists.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	
C0038A45	Error	35397	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x345 Status : Error Description : NVDIMM Error - Erase Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). NVDIMM could not be erased by the NVDIMM controller FW and future backups are not possible.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	
C0038A46	Error	35398	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x346 Status : Error Description : NVDIMM Error - Arming Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). NVDIMM could not be armed and future backups are not possible.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	
40038A51	Information	35409	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x351 Status : Information Description : IMPORTANT: %1 is not charged sufficiently to support the energy-backed persistent memory installed in the system. The system will wait for the battery to charge sufficiently before continuing boot.		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A51	Warning	35409	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x351 Status : Warning Description : IMPORTANT: %1 is not charged sufficiently to support the		○	×	×	×	×	×	×	×	×	×	○	×	×	×	×	×	
40038A52	Information	35410	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x352 Status : Information Description : IMPORTANT: %1 is not charged sufficiently to support the energy-backed persistent memory installed in the system. System configured to not wait for battery to charge. Persistent memory regions may not be available in the OS.		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A52	Warning	35410	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x352 Status : Warning Description : IMPORTANT: %1 is not charged sufficiently to support the		○	×	×	×	×	×	×	×	×	×	○	×	×	×	×	×	
C0038A53	Error	35411	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x353 Status : Error Description : IMPORTANT: Possible Password Corruption. The PW authentication algorithm detected an issue which has been corrected.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A54	Warning	35412	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x354 Status : Warning Description : Unsupported NVDIMM-N Configuration Detected - Processor %1 DIMM %2. The installed NVDIMM-N is not supported.		○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
40038A55	Information	35413	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x355 Status : Information Description : IMPORTANT: Processor %1, DIMM %2 - This NVDIMM-N was selected for Sanitizing/Erasing. All data saved in the NVDIMM has been erased.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

C0038A56	Error	35414	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x356 Status : Error Description : NVDIMM Error - Sanitization Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6) - This NVDIMM-N was selected for Sanitizing/Erasing, but this process was not successful.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A57	Error	35415	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x357 Status : Error Description : IMPORTANT: Processor %1, DIMM %2 - This NVDIMM is NOT a %3 NVDIMM. Only %4 NVDIMMs are supported. NVDIMM will be used as a standard DIMM.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A60	Warning	35424	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x360 Status : Warning Description : IMPORTANT: The System Programmable Logic Device revision in this system does not meet minimum requirements for operation with NVDIMMs. All NVDIMM functionality has been disabled.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A61	Warning	35425	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x361 Status : Warning Description : IMPORTANT: The Processor RAPL wattage value is configured to an invalid value. User provided value was %1, but %2 has been assigned since it is closest to %3.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A62	Warning	35426	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x362 Status : Warning Description : IMPORTANT: The DRAM RAPL wattage value is configured to an invalid value. User provided value was %1, but %2 has been assigned since it is closest to %3.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A63	Warning	35427	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x363 Status : Warning Description : IMPORTANT: New NVDIMM(s) detected on Processor %1. All NVDIMMs on Processor %2 have been disabled.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A64	Error	35428	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x364 Status : Error Description : NVDIMM Error - NVDIMM Controller Error - Processor %1, DIMM %2. The controller firmware has been corrupted. The OS will not use the NVDIMM.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A71	Warning	35441	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x371 Status : Warning Description : IMPORTANT: Processor %1, DIMM %2. New NVDIMM detected and has been disabled.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A72	Warning	35442	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x372 Status : Warning Description : IMPORTANT: Processor %1, DIMM %2. New NVDIMM detected and has been disabled.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A73	Warning	35443	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x373 Status : Warning Description : IMPORTANT: NVDIMM(s) have been removed from Processor %1. All NVDIMMs on Processor %2 have been disabled.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A74	Warning	35444	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x374 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2 (Serial no. %3-%4-%5-%6)	Warning: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	×	×	×	×	×	×	×	○	○	×	×	×	×	×	

C0038A74	Error	35444	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x374 Status : Error Description : NVDIMM Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6) received a memory initialization or uncorrectable error. All NVDIMMs on Proc %7 are disabled. Data on NVDIMM may have been lost.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A75	Warning	35445	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x375 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2 (Serial no. %3-%4-%5-%6).	Warning: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	×	×	×	×	×	×	×	○	×	×	×	×	×	×	
C0038A75	Error	35445	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x375 Status : Error Description : NVDIMM Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6) received a memory initialization or uncorrectable error. All NVDIMMs on Proc %7 are disabled. Data on NVDIMM may have been lost.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A76	Warning	35446	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x376 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM set for interleaving disabled but system configured for interleaving enabled. All NVDIMMs on Processor %3 are disabled.	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A77	Warning	35447	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x377 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM set for interleaving enabled but system configured for interleaving disabled. NVDIMM has been disabled.	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A78	Warning	35448	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x378 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM is configured for a different processor type. All NVDIMMs on Processor %3 are disabled.	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A79	Warning	35449	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x379 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM is configured for a different processor type. NVDIMM has been disabled.	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A80	Warning	35456	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x380 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM location changed. All NVDIMMs on Processor %3 are disabled.	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A81	Warning	35457	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x381 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM location changed. NVDIMM has been disabled.	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80038A82	Warning	35458	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x382 Status : Warning Description : NVDIMM Error - Proc %1, DIMM %2 is NOT configured for Sub-NUMA Clustering but system is configured for Sub-NUMA Clustering. All NVDIMMs on Proc %3 are disabled.	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×

80038A83	Warning	35459	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x383 Status : Warning Description : NVDIMM Error - Proc %1, DIMM %2 is configured for Sub-NUMA Clustering but system is NOT configured for Sub-NUMA Clustering. All NVDIMMs on Proc %3 are disabled.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A84	Warning	35460	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x384 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM set for Channel Interleaving disabled but system configured for enabled. All NVDIMMs on Processor %3 are disabled.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A85	Warning	35461	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x385 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM set for Channel Interleaving enabled but system configured for disabled. All NVDIMMs on Processor %3 are disabled.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A86	Warning	35462	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x386 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM Metadata is corrupted. All NVDIMMs on Processor %3 are disabled.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A87	Warning	35463	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x387 Status : Warning Description : NVDIMM Error - Processor %1, DIMM %2. NVDIMM Metadata is corrupted. NVDIMM is disabled.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A88	Warning	35464	Server Recovery	Uncorrectable Memory Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x388 Status : Warning Description : Uncorrectable Memory Error - The failed memory module could not be determined.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A91	Warning	35473	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x391 Status : Warning Description : NVDIMM Configuration Error - Node Interleaving is Enabled. This is NOT supported with NVDIMMs installed. All NVDIMMs are disabled.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A92	Warning	35474	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x392 Status : Warning Description : NVDIMM Configuration Error - The Advanced Memory Protection mode is not Advanced ECC. Only Advanced ECC is supported with NVDIMMs. All NVDIMMs are disabled.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80038A93	Warning	35475	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x393 Status : Warning Description : IMPORTANT: New NVDIMM(s) detected and all NVDIMMs have been disabled.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A94	Error	35476	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x394 Status : Error Description : NVDIMM Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). Unable to set event notification for this NVDIMM to generate alerts for health changes, including a loss of data persistency.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0038A95	Error	35477	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x395 Status : Error Description : NVDIMM Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). NVDIMM Persistency is lost and future data backup is not available.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

40038A96	Information	35478	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x396 Status : Information Description : IMPORTANT: Processor %1, DIMM %2 - NVDIMM Persistency is restored and future data backup is available.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80038A97	Warning	35479	Server Recovery	NVDIMM Lifetime Reached	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x397 Status : Warning Description : WARNING: Processor %1, DIMM %2 (SN:%3-%4-%5-%6). NVDIMM lifetime has reached.	Warning: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80038A98	Warning	35480	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x398 Status : Warning Description : NVDIMM Configuration Error - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). Backup power is not available to this DIMM slot. NVDIMM is disabled.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
40038A99	Information	35481	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x399 Status : Information Description : INFORMATION: Processor %1, DIMM %2 (SN:%3-%4-%5-%6). Extended Diagnostic Information (Data1 = 0x%7, Data2 = 0x%8, Data3 = 0x%9, Data4 = 0x%10).	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80048A00	Warning	35328	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x400 Status : Warning Description : Intrusion Alert Detection - The server chassis hood is currently not installed.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80048A01	Warning	35329	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x401 Status : Warning Description : Intrusion Alert Detection - The server chassis hood was removed prior to this power on.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80048A02	Warning	35330	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x402 Status : Warning Description : Intrusion Alert Detection - The required intrusion detection cable is missing.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
40048A03	Information	35331	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x403 Status : Information Description : Intrusion Alert Configuration Error - Intrusion Alert Detection cable is installed but the feature is not enabled.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80048A10	Warning	35344	Server Recovery	Innovation Engine Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x410 Status : Warning Description : Innovation Engine Error - The Innovation Engine is not operating properly. (Error Code %1).	Warning: Innovation Engine Error detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
00048A11	Error	35345	Server Recovery	Innovation Engine Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x411 Status : Error Description : Innovation Engine Error - The Innovation Engine is operating in recovery mode.	Fatal: Innovation Engine Error detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
00048A12	Error	35346	Server Recovery	Server Platform Services Firmware Error	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x412 Status : Error Description : Server Platform Services Firmware Error - The Server Platform	Fatal: Server Platform Services Firmware Error detected. Collect information by Server information collection tool and contact your sales representative.	0	x	x	x	x	x	x	x	x	x	0	x	x	x	x	x
80048A14	Warning	35348	Server Recovery	Server Platform Services Firmware Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x414 Status : Warning Description : Server Platform Services Firmware Error - The SPS Firmware is not operating properly. (Error Code	Warning: The Server Platform Services firmware detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x

C0048A20	Error	35360	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x420 Status : Error Description : TLS certificate verification error 0x%1 while downloading from %2:%3.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
C0048A21	Error	35361	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x421 Status : Error Description : TLS certificate verification failed due to hostname mismatch.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
C0048A22	Error	35362	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x422 Status : Error Description : TLS certificate verification failed. The passed certificate is self-signed and the same certificate cannot be found in the list of trusted certificates.	-	0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
C0048A23	Error	35363	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x423 Status : Error Description : TLS certificate verification failed. The issuer certificate of a looked up certificate could not be found. This normally means the list of trusted certificates is not complete.	-	0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
40048A24	Information	35364	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x424 Status : Information Description : No TLS certificate enrolled. At least one certificate authority must be enrolled when TLS verification mode is set to PEER.	-	0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
C0048A30	Error	35376	Server Recovery	Logical NVDIMM-N Uncorrectable Memory Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x430 Status : Error Description : Scalable Persistent Memory uncorrectable memory error on %1 Logical NVDIMM %2. The memory region will not be available to the OS and data may have been lost.	Fatal: NVDIMM-N Error detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
C0048A31	Error	35377	Server Recovery	Logical NVDIMM-N Backup Failed	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x431 Status : Error Description : Scalable Persistent Memory backup failed on %1 Logical NVDIMM %2. Persistent data has been lost.	Fatal: NVDIMM-N Error detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
C0048A32	Error	35378	Server Recovery	Logical NVDIMM-N Restore Failed	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x432 Status : Error Description : Scalable Persistent Memory restore failed for %1 Logical NVDIMM %2. Persistent data may have been lost.	Fatal: NVDIMM-N Error detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
C0048A33	Error	35379	Server Recovery	Logical NVDIMM-N Backup Device Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x433 Status : Error Description : Scalable Persistent Memory backup device failure on Box %1 Bay %2. Persistent data may have been lost.	Fatal: NVDIMM-N Error detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
C0048A34	Error	35380	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x434 Status : Error Description : Scalable Persistent Memory configuration data on backup device Box %1 Bay %2 is invalid. Persistent data may be lost.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
C0048A35	Error	35381	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x435 Status : Error Description : Scalable Persistent Memory backup device on Box %1 Bay %2 is missing.	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x

80048A37	Warning	35383	Server Recovery	Logical NVDIMM-N Backup Media Write Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x437 Status : Warning Description : Scalable Persistent Memory backup media write error on %1 Logical NVDIMM %2. Persistent data may have been lost.	Warning: NVDIMM-N Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80048A38	Warning	35384	Server Recovery	Logical NVDIMM-N Backup Media Read Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x438 Status : Warning Description : Scalable Persistent Memory backup media read error on %1 Logical NVDIMM %2. Persistent data may have been lost.	Warning: NVDIMM-N Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80048A39	Warning	35385	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x439 Status : Warning Description : New Scalable Persistent Memory configuration rejected. System has reverted to the previous configuration.	-	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0048A40	Error	35392	Server Recovery	Persistent Memory Address Range Scrub Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x440 Status : Error Description : Persistent Memory Address Range Scrub has detected an error at 0x%1 %2.	Fatal: Persistent Memory Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80048A41	Warning	35393	-	-	(after 2.0.8-0) Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x441 Status : Warning Description : NVDIMM Configuration Error - Scalable Persistent Memory functionality is not supported when an NVDIMM-N is present in the system. Scalable Persistent Memory functionality has been disabled. Recommended Action : Remove NVDIMM-N to use Scalable Persistent Memory functionality. (before 2.0.8-0) Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x441 Status : Warning Description : NVDIMM Configuration Error - Scalable Persistent Memory functionality is not supported when NVDIMM-N is present in the system. Scalable Persistent Memory functionality has been disabled.	-	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80048A42	Warning	35394	Server Recovery	Scalable Persistent Memory Backup Media Write Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x442 Status : Warning Description : Scalable Persistent Memory backup media write error on Box %1 Bay %2. Persistent data may have been lost.	Warning: Scalable Persistent Memory backup media write error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80048A43	Warning	35395	Server Recovery	Scalable Persistent Memory Backup Media Read Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x443 Status : Warning Description : Scalable Persistent Memory backup media read error on Box %1 Bay %2. Persistent data may have been lost.	Warning: Scalable Persistent Memory backup media read error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0048A44	Error	35396	Server Recovery	Scalable Persistent Memory Arming Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x444 Status : Error Description : Scalable Persistent Memory arming error on %1. Logical NVDIMM %2. The Logical NVDIMM could not be armed and future backups are not possible.	Fatal: NVDIMM Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80048A45	Warning	35397	Server Recovery	Scalable Persistent Memory Backup Device Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x445 Status : Warning Description : Scalable Persistent Memory backup device error on Box %1 Bay %2.	Warning: Scalable Persistent Memory backup device error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80048A82	Warning	35458			Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x482 Status : Warning Description : NVDIMM Error - Invalid Firmware Image Detected - Processor %1, DIMM %2 (SN:%3-%4-%5-%6). NVDIMM-N switching to backup image. Current version is %7.			○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80048A83	Warning	35459	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x483 Status : Warning Description : NVDIMM Error - NVDIMM(s) cannot be initialized due to internal error (Code = %1). NVDIMM functionality might be impacted	Warning: NVDIMM initialization error detected. Collect information by Server information collection tool and contact your sales representative.			○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C0048A90	Error	35472	Server Recovery	System Health Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x490 Status : Error Description : System Health Error. A critical system health error requires the system to be shutdown.	Fatal: Collect information by Server information collection tool and contact your sales representative.			○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C0048A91	Error	35473	Server Recovery	System Health Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x491 Status : Error Description : System Health Error. A critical system health error has kept the system from booting. -System	Fatal: Collect information by Server information collection tool and contact your sales representative.			○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C0058A00	Error	35328	Server Recovery	ASR NMI	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x500 Status : Error Description : ASR NMI Detected - The Automatic Server Recovery (ASR) NMI has been signaled (per the system configuration policy).	Fatal: ASR NMI Occurred. Examine the OS logs for the cause of the system hang. Collect information by Server information collection tool and contact your sales representative.			○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C0058A01	Error	35329	Server Recovery	IPMI Watchdog NMI	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x501 Status : Error Description : IPMI Watchdog NMI Detected - The IPMI Watchdog NMI has been signaled (per the system configuration policy).	Fatal: IPMI NMI Occurred. Examine the OS logs for the cause of the system hang. Collect information by Server information collection tool and contact your sales representative.			○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C0058A02	Error	35330	Server Recovery	Application Watchdog NMI	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x502 Status : Error Description : Application Watchdog NMI Detected - The Application Watchdog NMI has been signaled (per the system configuration policy).	Fatal: Application Watchdog NMI Detected. Examine the OS logs for the cause of the system hang. Collect information by Server information collection tool and contact your sales representative.			○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80168A26	Warning	35366			Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1626 Status : Warning Description : Unsupported Power Supply Configuration - Unsupported Power Supply detected.					○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×
80168A36	Warning	35382	Server Recovery	Trusted Platform Module Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1636 Status : Warning Description : %1 Trusted Platform Module Error.	Warning: The TPM has failed. Collect information by Server information collection tool and contact your sales representative.			○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
40178A00	Information	35328			Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1700 Status : Information Description : %1					○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×
80178A00	Warning	35328			Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1700 Status : Warning Description : %1					○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0178A00	Error	35328			Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1700 Status : Error Description : %1					○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80178A20	Warning	35360			Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1720 Status : Warning Description : %1					○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40178A24	Information	35364			Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1724 Status : Information Description : %1					○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80178A27	Warning	35367	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1727 Status : Warning Description : %1	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80178A36	Warning	35382	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x1736 Status : Warning Description : %1 Trusted Platform Module Error.	○	×	×	×	×	×	×	×	×	○	×	×	×	×	×	×
40178A38	Information	35384	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1738 Status : Information Description : %1	○	×	○	○	○	○	○	○	○	×	×	×	×	×	×	×
80188A09	Warning	35337	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1809 Status : Warning Description : Slot %1 Encryption Failure - Communication issue prevents drive keys from being retrieved. Encrypted logical drives are offline. System may not boot.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80188A10	Warning	35344	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1810 Status : Warning Description : Slot %1 Encryption Failure - Master Key is incorrect on or not retrieved from Remote Key Manager. Encrypted logical drives may be offline. System may not boot.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80188A11	Warning	35345	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1811 Status : Warning Description : Slot %1 Encryption Failure - Drive Keys not retrieved from the Remote Key Manager. Dependent encrypted logical drives are offline. System may not boot.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80188A12	Warning	35346	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1812 Status : Warning Description : Slot %1 Encryption Failure - Invalid Drive Keys on Remote Key Manager. Encrypted logical drives may be offline. System may not boot.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80188A14	Warning	35348	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1814 Status : Warning Description : Slot %1 Encryption Failure - Communication issue prevents keys from being retrieved. Dependent encrypted logical drives are offline. System may not boot.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80188A22	Warning	35362	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1822 Status : Warning Description : Slot %1 Encryption Failure - Imported encrypted logical drives are offline. Matching Local Master Key required. System may not boot.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80218A00	Warning	35328	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2100 Status : Warning Description : %1	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80218A01	Warning	35329	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2101 Status : Warning Description : %1	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80218A02	Warning	35330	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2102 Status : Warning Description : %1	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80218A03	Warning	35331	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2103 Status : Warning Description : %1	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×

80218A04	Warning	35332	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2104 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A05	Warning	35333	Server Recovery	Slot Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2105 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A06	Warning	35334	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2106 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A07	Warning	35335	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2107 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A08	Warning	35336	Server Recovery	Slot Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2108 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A09	Warning	35337	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2109 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A10	Warning	35344	Server Recovery	Slot Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2110 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A11	Warning	35345	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2111 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A12	Warning	35346	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2112 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A13	Warning	35347	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2113 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A14	Warning	35348	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2114 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A15	Warning	35349	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2115 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A16	Warning	35350	Server Recovery	Slot Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2116 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A17	Warning	35351	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x2117 Status : Warning Description : iSCSI Error. Failed to acquire DHCP client network address.	-	0	x	x	x	x	x	x	x	x	0	0	x	x	x	x	x
80218A19	Warning	35353	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2119 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80218A20	Warning	35360	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2120 Status : Warning Description : %1	-	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x

80218A18	Warning	35352	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x2118 Status : Warning Description : iSCSI Error. Failed to acquire DHCP target network address.	-	○	×	×	×	×	×	×	×	×	×	○	×	×	×	×	×	
80218A21	Warning	35361	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2121 Status : Warning Description : %1	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80218A22	Warning	35362	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2122 Status : Warning Description : %1	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80218A50	Warning	35408	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x0A Event Code : 0x2150 Status : Warning Description : Corrected Memory Error (%1 %2 DIMM %3 Address 0x%4' %5.	-	○	×	×	×	×	×	×	×	×	×	○	×	×	×	×	×	
40228A00	Information	35328	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2200 Status : Information Description : Secure Boot - Secure Boot has been enabled.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A01	Warning	35329	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2201 Status : Warning Description : Secure Boot - Secure Boot has been disabled.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A02	Information	35330	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2202 Status : Information Description : Secure Boot - A new Platform Key (PK) has been enrolled.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A03	Information	35331	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2203 Status : Information Description : Secure Boot - A new entry in the Key Exchange Key (KEK) security database has been enrolled.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A04	Information	35332	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2204 Status : Information Description : Secure Boot - A new entry in the db security database has been enrolled.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A05	Information	35333	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2205 Status : Information Description : Secure Boot - A new entry in the dbx security database has been enrolled.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A06	Information	35334	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2206 Status : Information Description : Secure Boot - A new entry in the dbt security database has been enrolled.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A07	Information	35335	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2207 Status : Information Description : Secure Boot - All of the keys have been reset to defaults.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A08	Information	35336	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2208 Status : Information Description : Secure Boot - Key Exchange Keys (KEK) have been reset to the platform defaults.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A09	Information	35337	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2209 Status : Information Description : Secure Boot - Platform Keys (PK) have been reset to the platform defaults.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A10	Information	35344	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2210 Status : Information Description : Secure Boot - db keys have been reset to the platform	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

40228A11	Information	35345	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2211 Status : Information Description : Secure Boot - dbx keys have been reset to the platform defaults.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40228A12	Information	35346	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2212 Status : Information Description : Secure Boot - dbt keys have been reset to the platform defaults.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A13	Warning	35347	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2213 Status : Warning Description : Secure Boot - All of the keys in the platform have been deleted.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A14	Warning	35348	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2214 Status : Warning Description : Secure Boot - The Platform Key (PK) Secure Boot variable has been deleted.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A15	Warning	35349	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2215 Status : Warning Description : Secure Boot - The Key Exchange Key (KEK) Secure Boot variable has been deleted.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A16	Warning	35350	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2216 Status : Warning Description : Secure Boot - The db Secure Boot variable has been deleted.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A17	Warning	35351	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2217 Status : Warning Description : Secure Boot - The dbx Secure Boot variable has been deleted.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A18	Warning	35352	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2218 Status : Warning Description : Secure Boot - The dbt Secure Boot variable has been deleted.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A19	Warning	35353	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2219 Status : Warning Description : Secure Boot - A Key Exchange Key (KEK) entry has been deleted from KEK database.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A20	Warning	35360	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2220 Status : Warning Description : Secure Boot - A db entry has been deleted from db database.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A21	Warning	35361	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2221 Status : Warning Description : Secure Boot - A dbx entry has been deleted from dbx database.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A22	Warning	35362	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2222 Status : Warning Description : Secure Boot - A dbt entry has been deleted from dbt database.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A23	Warning	35363	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2223 Status : Warning Description : Secure Boot - Unable to enable/disable secure boot. Only a physically present user can enable/disable Secure Boot.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A24	Warning	35364	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2224 Status : Warning Description : Secure Boot - Unable to enroll a new entry.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A25	Warning	35365	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2225 Status : Warning Description : Secure Boot - Unable to reset one or more keys.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80228A26	Warning	35366	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2226 Status : Warning Description : Secure Boot - Unable to delete one or more variables.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80228A27	Warning	35367	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2227 Status : Warning Description : Secure Boot - Unable to delete one or more variables.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40238A19	Information	35353	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2319 Status : Information Description : Test event. This is only a test.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A00	Warning	35328	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2400 Status : Warning Description : Slot %1 SAN Error - SAN link is down. SAN connection not possible.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A01	Warning	35329	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2401 Status : Warning Description : Slot %1 SAN Error - Fabric Login (FLOGI) failed. SAN connection not possible.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A02	Warning	35330	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2402 Status : Warning Description : Slot %1 SAN Error - Name Server login failed. Boot from SAN not possible.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A03	Warning	35331	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2403 Status : Warning Description : Slot %1 SAN Error - No targets found. Boot from SAN not possible.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A04	Warning	35332	Server Recovery	SAN Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2404 Status : Warning Description : Slot %1 SAN Error - Adapter restart failed. Firmware not ready. Boot from SAN not possible.	Warning: SAN Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A05	Warning	35333	Server Recovery	PCI Slot Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2405 Status : Warning Description : Slot %1 Error - Vital Product Data (VPD) is not available.	Warning: PCI SLOT Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A06	Warning	35334	Server Recovery	NIC Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2406 Status : Warning Description : Slot %1 NIC Error - NIC personality (Ethernet, iSCSI, or FCoE) could not be changed. FW may require update.	Warning: PCI SLOT Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A07	Warning	35335	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2407 Status : Warning Description : Slot %1 Error - The firmware update did not complete successfully.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A08	Warning	35336	Server Recovery	PCI Slot Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2408 Status : Warning Description : Slot %1 Error - Firmware image recovery not successful.	Warning: PCI SLOT Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80248A09	Warning	35337	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2409 Status : Warning Description : Slot %1 Error - Failure to apply Virtual Connect (VC) settings.	-	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80248A10	Warning	35344	Server Recovery	PCI Slot Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2410 Status : Warning Description : Slot %1 Error - Controller I/O timeout failure.	Warning: PCI SLOT Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×	
80248A11	Warning	35345	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2411 Status : Warning Description : %1: iSCSI Error - Failed to acquire DHCP client network address.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80248A12	Warning	35346	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2412 Status : Warning Description : %1: iSCSI Error - Failed to acquire DHCP target network address.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80248A13	Warning	35347	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2413 Status : Warning Description : %1: iSCSI Error - Failed to acquire DHCP iSNS Server IP address.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80248A14	Warning	35348	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2414 Status : Warning Description : %1: iSCSI Error - iSCSI login failed.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80248A15	Warning	35349	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2415 Status : Warning Description : %1: iSCSI Error - Boot LUN not available.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80248A16	Warning	35350	Server Recovery	Controller firmware Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2416 Status : Warning Description : %1: Error - Controller firmware not ready.	Warning: Controller firmware is not ready. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80248A19	Warning	35353	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2419 Status : Warning Description : %1 %2 Error - Rx/Tx is disabled on this device because an unsupported SFP+ or QSFP module type was detected.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80248A20	Warning	35360	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2420 Status : Warning Description : %1 %2 Error - The UEFI driver for the device detected an older version of the NVM image than expected.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80248A21	Warning	35361	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2421 Status : Warning Description : %1 %2 Error - The UEFI driver for the device detected a newer version of the NVM image than expected.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
80248A22	Warning	35362	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x2422 Status : Warning Description : %1 %2 Error - The UEFI driver for the device stopped because the NVM image is newer than expected.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
40318A00	Information	35328	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x3100 Status : Information Description : Trusted Platform Module (TPM) was successfully bound to system.		○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40318A01	Information	35329	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x3101 Status : Information Description : Unbound Trusted Platform Module (TPM) detected.		○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80008B15	Warning	35605	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x015 Status : Warning Description : Mismatched Power Supply Installed	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008B1B	Error	35611	Power Supply	System Board Power Protection Fault	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x01B Status : Error Description : System Board Power Protection Fault	Fatal: Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B1C	Information	35612	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x01C Status : Repaired Description : Power Supply or Power Backplane Detection Error	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008B1C	Error	35612	Power Supply	Power Supply Detection Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x01C Status : Error Description : Power Supply or Power Backplane Detection Error	Fatal: Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B1E	Warning	35614	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x01E Status : Warning Description : Smart Storage Battery Removed (Battery %1)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008B24	Error	35620	Power Supply	Power On Denied	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x024 Status : Error Description : Power On Denied (Service Information: %1)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B28	Information	35624	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x028 Status : Repaired Description : System Power Supply: %1 (Power Supply %2)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B28	Warning	35624	Power Supply	System Power Supply	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x028 Status : Warning Description : System Power Supply: %1 (Power Supply %2)	Warning: Power Supply Unit fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008B28	Error	35624	Power Supply	System Power Supply	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x028 Status : Error Description : System Power Supply: %1 (Power Supply %2)	Fatal: Power Supply Unit fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B29	Information	35625	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x029 Status : Repaired Description : External Chassis Power Supply: %1 (Chassis %2, Power Supply %3)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B29	Warning	35625	Power Supply	External Chassis Power Supply	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x029 Status : Warning Description : External Chassis Power Supply: %1 (Chassis %2, Power Supply %3)	Warning: Power Supply Unit fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B2A	Information	35626	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x02A Status : Repaired Description : %1 Storage System Power Supply: %2 (%3Slot %4, Power Supply %5)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B2A	Warning	35626	Power Supply	Storage System Power Supply	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x02A Status : Warning Description : %1 Storage System Power Supply: %2 (%3Slot %4, Power Supply %5)	Warning: Power Supply Unit fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B2B	Information	35627	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x02B Status : Repaired Description : %1 Power Supply: %2 (Power Supply %3, %4)	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80008B2B	Warning	35627	Power Supply	Power Supply	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x02B Status : Warning Description : %1 Power Supply: %2 (Power Supply %3, %4)	Warning: Power Supply Unit fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008B2B	Error	35627	Power Supply	Power Supply	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x02B Status : Error Description : %1 Power Supply: %2 (Power Supply %3, %4)	Fatal: Power Supply Unit fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B2C	Information	35628	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x02C Status : Information Description : System Power Supply Removed (Power Supply %1)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B2D	Information	35629	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x02D Status : Information Description : External Chassis Power Supply Removed (Chassis %1, Power Supply %2)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B2E	Information	35630	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x02E Status : Information Description : %1 Storage System Power Supply Removed (Chassis %2 Slot %3, Power Supply %4)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B2F	Information	35631	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x02F Status : Information Description : %1 Power Supply Removed (Power Supply %2, Enclosure Address %3)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B30	Information	35632	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x030 Status : Information Description : %1 Power Supply Removed (Power Supply %2, Enclosure Serial Number %3)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B31	Information	35633	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x031 Status : Information Description : System Power Supply Inserted (Power Supply %1)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B32	Information	35634	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x032 Status : Information Description : External Chassis Power Supply Inserted (Chassis %1, Power Supply %2)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B33	Information	35635	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x033 Status : Information Description : %1 Storage System Power Supply Inserted (Chassis %2 Slot %3, Power Supply %4)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B34	Information	35636	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x034 Status : Information Description : %1 Power Supply Inserted (Power Supply %2, Enclosure Address %3)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B35	Information	35637	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x035 Status : Information Description : %1 Power Supply Inserted (Power Supply %2, Enclosure Serial Number %3)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B36	Information	35638	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x036 Status : Repaired Description : System Power Supplies Not Redundant		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

80008B36	Warning	35638	Power Supply	System Power Supplies Not Redundant	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x036 Status : Warning Description : System Power Supplies Not Redundant	Warning: Check the Power Supply Unit Connection. If there is no problem with the connection, the Power Supply Unit may be faulty. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	
40008B37	Information	35639	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x037 Status : Repaired Description : External Chassis Power Supplies Not Redundant (Chassis %1)	-	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B37	Warning	35639	Power Supply	External Chassis Power Supplies Not Redundant	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x037 Status : Warning Description : External Chassis Power Supplies Not Redundant (Chassis %1)	Warning: Check the Power Supply Unit Connection. If there is no problem with the connection, the Power Supply Unit may be faulty. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B38	Information	35640	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x038 Status : Repaired Description : %1 Storage System Power Supplies Not Redundant (Chassis %2 Slot %3)	-	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B38	Warning	35640	Power Supply	Storage System Power Supplies Not Redundant	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x038 Status : Warning Description : %1 Storage System Power Supplies Not Redundant (Chassis %2 Slot %3)	Warning: Check the Power Supply Unit Connection. If there is no problem with the connection, the Power Supply Unit may be faulty. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B3A	Information	35642	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x03A Status : Repaired Description : %1 Power Supplies Not Redundant (Enclosure Serial Number %2)	-	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B3A	Warning	35642	Power Supply	Power Supplies Not Redundant	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x03A Status : Warning Description : %1 Power Supplies Not Redundant (Enclosure Serial Number %2)	Warning: Check the Power Supply Unit Connection. If there is no problem with the connection, the Power Supply Unit may be faulty. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40008B3B	Information	35643	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x03B Status : Repaired Description : %1 Power Supplies Not Redundant (Enclosure Address %2)	-	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B3B	Warning	35643	Power Supply	Power Supplies Not Redundant	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x03B Status : Warning Description : %1 Power Supplies Not Redundant (Enclosure Address %2)	Warning: Check the Power Supply Unit Connection. If there is no problem with the connection, the Power Supply Unit may be faulty. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008B3C	Error	35644	Power Supply	System Power Fault Detected	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x03C Status : Error Description : System Power Fault Detected (XR: %1 %2 MID: %3)	Fatal: Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0008B3D	Error	35645	Power Supply	System Power Fault Detected	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x03D Status : Error Description : System Power Fault Detected (XR: %1 %2 MID: %3)	Fatal: Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B3E	Warning	35646	Power Supply	Smart Storage Battery Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x03E Status : Warning Description : Smart Storage Battery failure (Battery %1, service information: %2).	Warning: Smart Storage Battery fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80008B3F	Warning	35647	Power Supply	Smart Storage Battery Not Charged	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x03F Status : Warning Description : Smart Storage Battery did not charge at the expected rate, indicating a faulty battery (Battery %1, service information: 0x03)	Warning: Smart Storage Battery fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

40008B40	Information	35648	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x040 Status : Information Description : Smart Storage Battery disabled due to high ambient temperature, will be re-enabled when temp is lowered (Battery %1, service information: 0x04)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x	
80008B40	Warning	35648	Power Supply	Smart Storage Battery Disabled	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x040 Status : Warning Description : Smart Storage Battery disabled due to high ambient temperature, will be re-enabled when temp is lowered (Battery %1, service information: 0x04)	Warning: Smart Storage Battery is disabled due to high temperature. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x	
80008B41	Warning	35649	Power Supply	Smart Storage Battery Discharged	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x041 Status : Warning Description : Smart Storage Battery discharged to below minimum voltage, resulting in the inability of the battery to recharge properly (Battery %1, service information: 0x05)	Warning: Smart Storage Battery fault detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x	
80008B42	Warning	35650	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x042 Status : Warning Description : Smart Storage Battery has exceeded the maximum amount of devices supported (Battery %1, service information: 0x07)		0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x	
80008B43	Warning	35651	Power Supply	Smart Storage Battery Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x043 Status : Warning Description : Smart Storage Battery failure (Battery %1)	Warning: Smart Storage Battery fault detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x	
40008B44	Information	35652	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x044 Status : Repaired Description : %1 Storage Enclosure Power Supply Failure (Power Supply %2, Box %3, %4)		0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x	
80008B44	Warning	35652	Power Supply	Storage Enclosure Power Supply Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x044 Status : Warning Description : %1 Storage Enclosure Power Supply Failure (Power Supply %2, Box %3, %4)	Warning: Storage Enclosure Power Supply Failure detected. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x	
40008B52	Information	35666	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x052 Status : Repaired Description : System Power Supply: %1 (Power Supply %2)		0	x	0	0	0	0	0	0	0	0	0	0	x	x	x	x	x
80008B52	Warning	35666	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x052 Status : Warning Description : System Power Supply: %1 (Power Supply %2)		0	x	0	0	0	0	0	0	0	0	0	0	x	x	x	x	x
40008B53	Information	35667	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x053 Status : Repaired Description : Power redundancy loss warning: server power: %1W exceeded the redundant power threshold: %2W		0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x	x
80008B53	Warning	35667	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x053 Status : Warning Description : Power redundancy loss warning: server power: %1W exceeded the redundant power threshold: %2W		0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x	x
40008B54	Information	35668	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x054 Status : Repaired Description : System Power Supply: %1 (Power Supply %2)		0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x	x

80008B54	Warning	35668	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x054 Status : Warning Description : System Power Supply: %1 (Power Supply %2)		o	x	o	o	o	o	o	o	o	x	x	x	x	x	x
40008B55	Information	35669	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x055 Status : Repaired Description : Battery Backup Unit: %1 (Power Supply %2)		o	x	o	o	o	o	o	o	o	x	x	x	x	x	x
80008B55	Warning	35669	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x055 Status : Warning Description : Battery Backup Unit: %1 (Power Supply %2) Recommended Action : Reinstall and/or		o	x	o	o	o	x	x	x	x	x	x	x	x	x	x
C0008B55	Error	35669	Power Supply	Battery Backup Unit	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0B Event Code : 0x055 Status : Error Description : Battery Backup Unit: %1 (Power Supply %2)	Fatal: Battery Backup Unit Error detected. Collect information by Server information collection tool and contact your sales representative.	o	x	o	o	o	o	o	o	o	x	x	x	x	x	x
80008D01	Warning	36097	Server Recovery	ASR Detected	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0D Event Code : 0x001 Status : Warning Description : ASR Detected by System	Warning: ASR detected. Refer to the Integrated Management Log and contact your sales representative if necessary.	o	x	o	o	o	o	o	o	o	x	x	x	x	x	x
80008D03	Warning	36099	Server Recovery	ASR Reset Limit Detected	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0D Event Code : 0x003 Status : Warning Description : ASR Reset Limit Detected by System ROM		o	x	o	o	o	o	o	o	o	x	x	x	x	x	x
C0008E02	Error	36354	OS	Automatic OS Shutdown	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0E Event Code : 0x002 Status : Error Description : Automatic Operating System Shutdown %1		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
40008E04	Information	36356	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0E Event Code : 0x004 Status : Information Description : A User initiated NMI Switch event detected		o	x	o	o	o	o	o	o	o	x	x	x	x	x	x
40008E06	Information	36358	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0E Event Code : 0x006 Status : Information Description : A User initiated remote NMI Switch event detected		o	x	o	o	o	o	o	o	o	x	x	x	x	x	x
C0008E06	Error	36358	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0E Event Code : 0x006 Status : Error Description : A User initiated remote NMI Switch event detected Recommended Action : No action required		o	x	o	o	o	x	x	x	x	x	x	x	x	x	x
40009108	Information	37128	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x11 Event Code : 0x008 Status : Repaired Description : Network Adapter Link Down (Slot %1, Port %2)		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
C0009108	Error	37128	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x11 Event Code : 0x008 Status : Error Description : Network Adapter Link Down (Slot %1, Port %2)		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
40009109	Information	37129	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x11 Event Code : 0x009 Status : Repaired Description : Network Adapter Link Down (Chassis %1, Slot %2, Port %3)		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x
C0009109	Error	37129	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x11 Event Code : 0x009 Status : Error Description : Network Adapter Link Down (Chassis %1, Slot %2, Port %3)		o	x	o	o	o	o	o	o	o	o	x	x	x	x	x

40009312	Information	37650	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x13 Event Code : 0x012 Status : Repaired Description : %1 Smart Array - Controller Failure (Status: %2)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80009312	Warning	37650	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x13 Event Code : 0x012 Status : Warning Description : %1 Smart Array - Controller Failure (Status: %2)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0009312	Error	37650	Storage Device	Drive Array Controller Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x13 Event Code : 0x012 Status : Error Description : %1 Smart Array - Controller Failure (Status: %2)	Fatal: Drive Array Controller fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
40009313	Information	37651	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x13 Event Code : 0x013 Status : Repaired Description : Drive Array Controller Failure (Chassis %1, Slot %2)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80009313	Warning	37651	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x13 Event Code : 0x013 Status : Warning Description : Drive Array Controller Failure (Chassis %1, Slot %2)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0009313	Error	37651	Storage Device	Drive Array Controller Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x13 Event Code : 0x013 Status : Error Description : Drive Array Controller Failure (Chassis %1, Slot %2)	Fatal: Drive Array Controller fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0009405	Error	37893	System Error	Unrecoverable I/O Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x14 Event Code : 0x005 Status : Error Description : Unrecoverable I/O Error has occurred. System Firmware will log additional details in a separate IML message entry if possible.	Fatal: Server fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80009407	Warning	37895	System Error	Server Critical Fault	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x14 Event Code : 0x007 Status : Warning Description : Server Critical Fault (Service Information: %1)	Warning: Server fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0009407	Error	37895	System Error	Server Critical Fault	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x14 Event Code : 0x007 Status : Error Description : Server Critical Fault (Service Information: %1)	Fatal: Server fault detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
80009408	Warning	37896	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x14 Event Code : 0x008 Status : Warning Description : Enclosure Induced Event (Service Information: Enclosure Power Loss, %1)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C0009408	Error	37896	System Error	Enclosure Induced Event	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x14 Event Code : 0x008 Status : Error Description : Enclosure Induced Event (Service Information: Enclosure Power Loss, %1)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A002	Information	40962	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x20 Event Code : 0x002 Status : Information Description : Firmware flashed (%1)		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A003	Information	40963	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x20 Event Code : 0x003 Status : Repaired Description : #ILO detected invalid %1 firmware.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

C000A003	Error	40963	Notify	Invalid Firmware	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x20 Event Code : 0x003 Status : Error Description : #ILO detected invalid %1 firmware.	Fatal: Invalid Firmware detected. If configured for automatic recovery, the repair attempt will happen automatically. If automatic recovery is not configured or if the automatic recovery does not succeed, then manual recovery will be required. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
8000A004	Warning	40964	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x20 Event Code : 0x004 Status : Warning Description : #ILO was unable to automatically repair the %1 firmware.		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A101	Information	41217	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x21 Event Code : 0x001 Status : Information Description : IML Cleared (%1 user: %2)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A102	Information	41218	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x21 Event Code : 0x002 Status : Information Description : Maintenance note: %1		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
8000A102	Warning	41218	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x21 Event Code : 0x002 Status : Warning Description : Maintenance note: %1		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
C000A21B	Error	41499	Notify	Inadequate Power To Power On:	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x01B Status : Error Description : %1 Inadequate Power To Power On: %2 (Enclosure Serial Number %3, Slot %4)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
C000A21C	Error	41500	Notify	Inadequate Power To Power On:	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x01C Status : Error Description : %1 Inadequate Power To Power On: %2 (Enclosure Address %3, Slot %4)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A21D	Information	41501	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x01D Status : Information Description : %1 Rack Name Changed (Enclosure Serial Number %2)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A21E	Information	41502	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x01E Status : Information Description : %1 Rack Name Changed (Enclosure Address %2)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A21F	Information	41503	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x01F Status : Information Description : %1 Name Changed (Enclosure Serial Number %2)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A220	Information	41504	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x020 Status : Information Description : %1 Name Changed (Enclosure Address %2)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A221	Information	41505	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x021 Status : Information Description : %1 Service Change (Enclosure Serial Number %2)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A222	Information	41506	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x022 Status : Information Description : %1 Service Change (Enclosure Address %2)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x

4000A223	Information	41507	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x023 Status : Information Description : %1 Rack Name Conflict (Enclosure Serial Number %2)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A224	Information	41508	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x024 Status : Information Description : %1 Rack Name Conflict (Enclosure Address %2)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A225	Information	41509	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x025 Status : Information Description : %1 Rack Unique ID Changed (Enclosure Serial Number %2)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A226	Information	41510	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x026 Status : Information Description : %1 Rack Unique ID Changed (Enclosure Address %2)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A227	Information	41511	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x027 Status : Information Description : %1 LAN Settings Changed (Enclosure Serial Number %2)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A228	Information	41512	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x028 Status : Information Description : %1 LAN Settings Changed (Enclosure Address %2)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A229	Information	41513	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x029 Status : Information Description : %1 UID LED State Changed (Enclosure Serial Number %2)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A22A	Information	41514	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x02A Status : Information Description : %1 UID LED State Changed (Enclosure Address %2)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A22B	Information	41515	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x02B Status : Information Description : %1 Rack Infrastructure Changed (Enclosure Serial Number %2, Type %3)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
4000A22C	Information	41516	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x02C Status : Information Description : %1 Rack Infrastructure Changed (Enclosure Address %2, Type %3)	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8000A22D	Warning	41517	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x02D Status : Warning Description : Chassis Enclosure Serial Number %1 requires minimum firmware revision 0x%2.0x%3. It is currently 0x%4.0x%5.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C000A22D	Error	41517	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x02D Status : Error Description : Chassis Enclosure Serial Number %1 requires minimum firmware revision 0x%2.0x%3. It is currently 0x%4.0x%5.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8000A22E	Warning	41518	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x02E Status : Warning Description : Chassis Enclosure Address %1 requires minimum firmware revision 0x%2.0x%3. It is currently 0x%4.0x%5.	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×

C000A22E	Error	41518	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x02E Status : Error Description : Chassis Enclosure Address %1 requires minimum firmware revision 0x%2.0x%3. It is currently 0x%4.0x%5.		0	x	0	0	0	0	0	0	0	0	0	x	x	x	x	x
4000A22F	Information	41519	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x22 Event Code : 0x02F Status : Information Description : %1 Power Request Denied: %2 (Enclosure Serial Number %3, Slot %4)		0	x	x	x	x	x	x	x	x	0	x	x	x	x	x	x
8000A22F	Warning	41519	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x22 Event Code : 0x02F Status : Warning Description : %1 Power Request Denied: %2 (Enclosure Serial Number %3, Slot %4)		0	x	x	x	x	x	x	x	x	0	x	x	x	x	x	x
C000A22F	Error	41519	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x02F Status : Error Description : %1 Power Request Denied: %2 %3 (Enclosure Serial Number %4, Slot %5)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
C000A230	Error	41520	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x22 Event Code : 0x030 Status : Error Description : %1 Power Request Denied: %2 (Enclosure Address %3, Slot %4)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A701	Information	42753	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x27 Event Code : 0x001 Status : Repaired Description : Processor(s) Operating at Reduced Performance Level Due to a Low Power Cap		0	x	x	x	x	x	x	x	x	0	x	x	x	x	x	x
8000A701	Warning	42753	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x27 Event Code : 0x001 Status : Warning Description : Processor(s) Operating at Reduced Performance Level Due to a Low Power Cap		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A703	Information	42755	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x27 Event Code : 0x003 Status : Repaired Description : Power Cap Cannot Be Reached With Current System Configuration (Power Cap %1W)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
8000A703	Warning	42755	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x27 Event Code : 0x003 Status : Warning Description : Power Cap Cannot Be Reached With Current System Configuration (Power Cap %1W)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A704	Information	42756	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x27 Event Code : 0x004 Status : Repaired Description : Power allocation not optimized. Increased power allocation requested. Server performance is not degraded.		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
8000A704	Warning	42756	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x27 Event Code : 0x004 Status : Warning Description : Power allocation not optimized. Increased power allocation requested. Server performance is not degraded.		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
4000A801	Information	43009	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x28 Event Code : 0x001 Status : Repaired Description : Boot From Flash Error (%1)		0	x	0	0	0	0	0	0	0	x	x	x	x	x	x	x
8000A801	Warning	43009	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x28 Event Code : 0x001 Status : Warning Description : Boot From Flash Error (%1)		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x	x
8000A901	Warning	43265	System Error	Improperly Seated Or Missing Device	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x29 Event Code : 0x001 Status : Warning Description : Improperly seated or missing device (%1, %2)	Warning: Some device may improperly seated or missing. Collect information by Server information collection tool and contact your sales representative.	0	x	0	0	0	0	0	0	0	x	x	x	x	x	x	x

C000A901	Error	43265	System Error	Improperly Seated Or Missing Device	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x29 Event Code : 0x001 Status : Error Description : Improperly seated or missing device (%1, %2)	Fatal: Some device may improperly seated or missing. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C001B220	Error	45600	Server Recovery	System Halted	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x120 Status : Error Description : A Critical Error Event that has kept the system from booting. -System Halted!	Fatal: Critical Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
8001B263	Warning	45667	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x163 Status : Warning Description : Time & Date Not Set.	-	○	×	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8002B209	Warning	45577	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x209 Status : Warning Description : Unsupported DIMM Configuration Detected - Installed DIMM configuration does NOT support configured AMP Mode. System will operate in Advanced ECC Mode. (Major Code:%1 Minor Code:%2).	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
8002B210	Warning	45584	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x210 Status : Warning Description : Unsupported DIMM Configuration Detected - Installed DIMMs could not support the currently configured interleave mode. (Major Code:%1, Minor Code:%2).	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
8002B211	Warning	45585	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x211 Status : Warning Description : Unsupported DIMM Configuration Detected - Processor %1 DIMM %2. The DIMM does not support ECC. (Major Code:%3, Minor Code:%4).	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C002B212	Error	45586	Server Recovery	Processor UPI Initialization Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x212 Status : Error Description : Processor UPI Initialization Error. A processor UPI initialization error was detected. %1 (Major Code:%2, Minor Code:%3).	Fatal: Processor UPI Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
8002B213	Warning	45587	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x213 Status : Warning Description : Unsupported DIMM Configuration Detected - Processor %1 DIMM %2. The DIMM has more ranks than is supported by this system. (Major Code:%3, Minor Code:%4).	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
8002B214	Warning	45588	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x214 Status : Warning Description : Unsupported DIMM Configuration Detected - Processor %1 DIMM %2. The DIMM requires a frequency not supported by the system. (Major Code:%3, Minor Code:%4).	-	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C002B215	Error	45589	Server Recovery	DIMM Initialization Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x215 Status : Error Description : DIMM Initialization Error - Processor %1 DIMM %2. The identified processor and memory failed to initialize properly. %3 (Major Code:%4, Minor Code:%5).	Fatal: DIMM initialization Error. Collect information by Server information collection tool and contact your sales representative. <Deal Meathod is blank before Ver. 2.0.7-0>	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C002B216	Error	45590	Server Recovery	DIMM Initialization Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x216 Status : Error Description : DIMM Initialization Error. A fatal error was detected while initializing memory. %1 (Major Code:%2, Minor Code:%3).	Fatal: DIMM Initialization Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	×	×	×	×	×	×

C002B217	Error	45591	Server Recovery	DIMM Initialization Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x217 Status : Error Description : DIMM Initialization Error - Processor %1 DIMM %2. The identified processor and memory are operating at an incorrect voltage. %3 (Major Code:%4, Minor Code:%5).	Fatal: DIMM initialization Error. Collect information by Server information collection tool and contact your sales representative. <Deal Meathod is blank before Ver.2.0.7-0>	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C002B219	Error	45593	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x219 Status : Error Description : Memory Configuration Error - One or more of the installed processors has a total amount of memory installed which exceeds the amount supported by that processor. %1 (Major Code:%2, Minor Code:%3).		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C002B220	Error	45600	Server Recovery	KTI Initialization Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x220 Status : Error Description : KTI Initialization Error - A fatal KTI initialization error has been detected. %1 (Major Code: %2, Minor Code: %3)	Fatal: KTI Initialization Error detected. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C002B221	Error	45601	Server Recovery	Unknown Initialization Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x221 Status : Error Description : Unknown Initialization Error. The system has experienced a fatal initialization error. %1 (Major Code: %2, Minor Code: %3).	Fatal: The system has experienced a fatal initialization error. If the issue still persists contact your sales representative if necessary.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
8002B228	Warning	45608	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x228 Status : Warning Description : Unsupported DIMM Configuration Detected - Processor %1 Channel %2. DIMM population rule violation. The Memory channel has been mapped out. (Major Code:%3, Minor Code:%4).		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
8002B229	Warning	45609	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x229 Status : Warning Description : Unsupported DIMM Configuration Detected - Processor %1 DIMM %2. The identified DIMM is not supported in the system. (Major Code:%3, Minor Code:%4).		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
8002B230	Warning	45616	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x230 Status : Warning Description : Unsupported DIMM Configuration Detected - Processor %1 Channel %2. The number of installed DIMM ranks exceeds the number supported by the channel. (Major Code:%3, Minor Code:%4).		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C002B231	Error	45617	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x231 Status : Error Description : Memory Configuration Error - No memory is available. If DIMMs are installed, verify that the corresponding processor is installed. %1 (Major Code:%2, Minor Code:%3).		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
C002B232	Error	45618	Server Recovery	DIMM Initialization Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x232 Status : Error Description : DIMM Initialization Error - A memory initialization error was detected. %1 (Major Code:%2, Minor Code:%3).	Fatal: DIMM Initialization Error. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×
8002B233	Warning	45619	Server Recovery	DIMM Initialization Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x233 Status : Warning Description : DIMM Initialization Error - Processor %1 Channel %2. The identified memory channel could not be properly trained and has been mapped out. (Major Code:%3, Minor Code:%4).	Warning: DIMM Initialization Error. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×	×

4002B299	Information	45721	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x299 Status : Information Description : The Boot Mode has been changed to UEFI Boot Mode for this boot only. On the next reboot, the Boot Mode will return to Legacy Boot Mode.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8003B205	Warning	45573	Server Recovery	Redundant ROM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x305 Status : Warning Description : Redundant ROM Error: Both the Primary and Backup System ROMs are invalid.	Warning: The primary and backup system ROMs are invalid or corrupted. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8003B218	Warning	45592	Server Recovery	TPM Self-Test Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x318 Status : Warning Description : Trusted Platform Module (TPM) Self-Test Error.	Warning: The TPM has failed. Collect information by Server information collection tool and contact your sales representative.	○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C003B230	Error	45616	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x330 Status : Error Description : Unsupported Processor Configuration Detected - Processors are installed in the incorrect order.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C003B247	Error	45639	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x347 Status : Error Description : NVDIMM Population Error - %1 NVDIMMs are present in the system. Only %2 NVDIMMs are supported.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8003B248	Warning	45640	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x348 Status : Warning Description : Unsupported DIMM Configuration Detected - Processor %1 DIMM %2. Registered DIMMs are only supported when an NVDIMM is present in the system. (Major Code:%3, Minor Code:%4).		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C003B249	Error	45641	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x349 Status : Error Description : NVDIMM Population Error - NVDIMMs and LRDIMMs are installed in this system. NVDIMMs are only supported with RDIMMs on this system.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C003B250	Error	45648	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x350 Status : Error Description : NVDIMM Population Error - Processor %1, DIMM %2, NVDIMMs and RDIMMs are in the incorrect order on Channel %3. NVDIMMs on the channel should be closest to the CPU.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8003B254	Warning	45652	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x32 Event Code : 0x354 Status : Warning Description : Unsupported NVDIMM-N Configuration Detected - Processor %1		○	×	×	×	×	×	×	×	×	×	○	×	×	×	×	×	
C003B258	Error	45656	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x358 Status : Error Description : IMPORTANT: Processor %1, DIMM %2 - The installed NVDIMM has a Supercap attached. This is not supported.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
C003B259	Error	45657	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x359 Status : Error Description : NVDIMM Population Error - Processor 1 must have at least one RDIMM installed when NVDIMMs are present in the system.		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×
8003B265	Warning	45669	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x365 Status : Warning Description : Unsupported NVDIMM-N Configuration Detected - The installed NVDIMM-Ns are not compatible with each other. (Major Code:%1, Minor Code:%2).		○	×	○	○	○	○	○	○	○	○	○	○	×	×	×	×	×

4030B210	Information	45584	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3010 Status : Information Description : MemBIST RMT: %1 margin out of range at CPU %2 DIMM %3 - Count %4	-		0	x	0	0	0	0	0	0	0	x	x	x	x	x	x
C030B210	Error	45584	Server Recovery	MemBIST RMT	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3010 Status : Error Description : MemBIST RMT: %1 margin out of range at CPU %2 DIMM %3 - Count %4	-		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x
C030B211	Error	45585	Server Recovery	MemBIST MEMTEST	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3011 Status : Error Description : MemBIST MEMTEST: UnCorrectable Memory Error found at CPU %1 DIMM %2 Rank %3 - UC Count %4	Fatal: Memory Build in Self Test Error detected. Collect information by Server information collection tool and contact your sales representative.		0	x	0	0	0	0	0	0	0	0	x	x	x	x	x
C030B212	Error	45586	-	-	Date : YYYY-MM-DD HH:MM:SS Event Class : 0x32 Event Code : 0x3012 Status : Error Description : HPE MemBIST MEMTEST: Correctable Memory Error found at CPU %1 DIMM %2 Rank %3 - UC Count %4	-		0	x	x	x	x	x	x	x	x	0	x	x	x	x	x
C030B213	Error	45587	Server Recovery	BIST Failure	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3013 Status : Error Description : Processor Built-In Self-Test (BIST) Failure. Processor %1.	Fatal: Processor Build in Self Test Error detected. Collect information by Server information collection tool and contact your sales representative.		0	x	0	0	0	0	0	0	0	x	x	x	x	x	x
40188A05	Information	35333	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1805 Status : Information Description : %1"	-		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
C0188A13	Error	35347	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x1813 Status : Error Description : %1"	-		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
80008253	Warning	33363	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x02 Event Code : 0x53 Status : Warning Description : Insufficient power supply configuration.	-		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
80048A46	Warning	35398	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x446 Status : Warning Description : IMPORTANT: The Scalable Persistent Memory backup power	-		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
40048A47	Information	35399	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x447 Status : Information Description : IMPORTANT: %1 is not charged sufficiently to support the	-		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
40048A48	Information	35400	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x448 Status : Information Description : IMPORTANT: %1 is not charged sufficiently to support the	-		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
80048A49	Warning	35401	Server Recovery	Persistent Memory Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x449 Status : Warning Description : Scalable Persistent Memory Address Range Scrub error	Warning: Persistent Memory error detected. Collect information by Server information collection tool and contact your sales representative.		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
80048A54	Warning	35412	Server Recovery	NVDIMM Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x454 Status : Warning Description : NVDIMM Error - Persistent Memory Address Range Scrub error	Warning: NVDIMM error detected. Collect information by Server information collection tool and contact your sales representative.		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
80048A55	Warning	35413	Server Recovery	Persistent Memory Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x455 Status : Warning Description : IMPORTANT: The %1 in Bay %2 will soon be incapable of supporting	Warning: Persistent Memory error detected. Collect information by Server information collection tool and contact your sales representative.		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
C0048A56	Error	35414	Server Recovery	Persistent Memory Error	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x456 Status : Error Description : IMPORTANT: The %1 in Bay %2 cannot support the Scalable	Fatal: Persistent Memory error detected. Collect information by Server information collection tool and contact your sales representative.		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x
40058A10	Information	35344	-	-	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x510 Status : Information Description : The installed number of DIMMs on one or more processors results	-		0	x	0	0	0	x	x	0	x	x	x	x	x	x	x

