

































80000BA6	Warning	2982	RPS	Power Unit State	ESMCommonService	80000BA6	CPU2 thermal alert has occurred, thermal throttling has not yet been invoked. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
80000BA7	Warning	2983	RPS	Power Unit State	ESMCommonService	80000BA7	CPU3 thermal alert has occurred, thermal throttling has not yet been invoked. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
80000BA8	Warning	2984	Notify	PCI Card State	ESMCommonService	80000BA8	PCI bus number or memory-mapped space resource allocation has been exceeded. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
80000BA9	Warning	2985	Notify	PCI Card State	ESMCommonService	80000BA9	IO space resource allocation has been exceeded. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
80000BAA	Warning	2986	Notify	PCI Card State	ESMCommonService	80000BAA	PCI resource has been changed to a different type. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
80000BAB	Warning	2987	Notify	PCI Card State	ESMCommonService	80000BAB	Unable to execute OPRM. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
40000BAC	Information	2988	RPS	Power Unit Error Recovered	ESMCommonService	40000BAC	Power unit has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
40000BAD	Information	2989	Voltage	Voltage Recovery	ESMCommonService	40000BAD	%5 has recovered. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
00000BAE	Error	2990	Voltage	Voltage Error	ESMCommonService	00000BAE	%5 has gone into a fatal state. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: It is considered a device malfunction. Please report to the maintenance member.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
00000BAF	Error	2991	Notify	Chipset Thermal Trip Event	ESMCommonService	00000BAF	Chipset thermal trip occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: It is considered a device malfunction. Please report to the maintenance member.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
40000BB1	Information	2993	Security	Slot or Connector State	ESMCommonService	40000BB1	The slot or connector device is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
80000BB1	Warning	2993	Security	Slot State	ESMCommonService	80000BB1	The slot or connector device is disabled. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
00000BB2	Error	2994	Notify	SMI Timeout	ESMCommonService	00000BB2	SMI Timeout occurred. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: It is considered a device malfunction. If the log collection tool can start, please collect the log data with it. Then please send the investigation request.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
80000BB3	Warning	2995	Notify	Power Domain	ESMCommonService	80000BB3	Power Consumption has not recovered from Limit%5. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Warning: It is necessary to change the upper threshold of power consumption or reduce the system load.	NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
40000BB4	Information	2996	Security	Slot State	ESMCommonService	40000BB4	Either the slot or connector power has been on, or device has been connected. Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Information: Hardware component has been changed. Please reconstruct tree if you already have DataViewer opened for this server or have the information of this server's status and component.	NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	○	○	○	○	○	○	○	○	○
00000BB5	Error	2997	Notify	Management Engine Status Change	ESMCommonService	00000BB5	Operational Firmware image error corrupted. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: It is considered a motherboard malfunction. Please report to the maintenance member.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	×	○	○	×	○	○	○	○	○	○	○	○
00000BB5	Error	2997	Notify	Management Engine Status Change	ESMCommonService	00000BB5	Operational Firmware image error corrupted. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member and exchange motherboard or management board.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	×	×	○	×	×	×	×	×	×	×	×
00000BB6	Error	2998	Notify	Management Engine Status Change	ESMCommonService	00000BB6	Flash ROM erase error corrupted. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: It is considered a motherboard malfunction. Please report to the maintenance member.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	×	○	○	×	○	○	○	○	○	○	○	○
00000BB6	Error	2998	Notify	Management Engine Status Change	ESMCommonService	00000BB6	Flash ROM erase error corrupted. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member and exchange motherboard or management board.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	×	×	○	×	×	×	×	×	×	×	×
00000BB7	Error	2999	Notify	Management Engine Status Change	ESMCommonService	00000BB7	Flash ROM error corrupted. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: It is considered a motherboard malfunction. Please report to the maintenance member.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	×	○	○	×	○	○	○	○	○	○	○	○
00000BB7	Error	2999	Notify	Management Engine Status Change	ESMCommonService	00000BB7	Flash ROM error corrupted. Extended Error Code: %5 Sensor Number: %2 Location: %3 Date: %1 ID Strings: %4	Fatal: Please report to the maintenance member and exchange motherboard or management board.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	×	×	○	×	×	×	×	×	×	×	×



































C000A21B	Error	41499	Notify	Inadequate Power To Power On:	ESMCommonService	C000A21B	Event Class : 0x22 Event Code : 0x01B Status : Error Description : %1 Inadequate Power To Power On: %2 (Enclosure Serial Number %3, Slot %4)		NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	x	x	x	x	x	x	x	o	x	x	x	x	
C000A21B	Error	41499	Notify	Inadequate Power To Power On:	ESMCommonService	C000A21B	Event Class : 0x22 Event Code : 0x01B Status : Error Description : %1 Inadequate Power To Power On: %2 (Enclosure Serial Number %3, Slot %4)		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	o	x	x	x	x	x
C000A21C	Error	41500	Notify	Inadequate Power To Power On:	ESMCommonService	C000A21C	Event Class : 0x22 Event Code : 0x01C Status : Error Description : %1 Inadequate Power To Power On: %2 (Enclosure Address %3, Slot %4)		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	x	x	x	x	x	x	x	x	o	x	x	x	x
C000A21C	Error	41500	Notify	Inadequate Power To Power On:	ESMCommonService	C000A21C	Event Class : 0x22 Event Code : 0x01C Status : Error Description : %1 Inadequate Power To Power On: %2 (Enclosure Address %3, Slot %4)		NONE	OFF	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	o	x	x	x	x	x
8000A901	Warning	43265	System Error	Improperly Seated Or Missing Device	ESMCommonService	8000A901	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x29 Event Code : 0x001 Status : Warning Description : Improperly seated or missing device (%1, %2)	Warning: Some device may improperly seated or missing. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
C000A901	Error	43265	System Error	Improperly Seated Or Missing Device	ESMCommonService	C000A901	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x29 Event Code : 0x001 Status : Error Description : Improperly seated or missing device (%1, %2)	Fatal: Some device may improperly seated or missing. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	o	x	x	x	x	x
C001B220	Error	45600	Server Recovery	System Halted	ESMCommonService	C001B220	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x120 Status : Error Description : A Critical Error Event that has kept the system from booting. System halted.	Fatal: Critical Error detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
C002B212	Error	45586	Server Recovery	Processor UPI Initialization Error	ESMCommonService	C002B212	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x212 Status : Error Description : Processor UPI Initialization Error. A processor UPI initialization error was detected. %1	Fatal: Processor UPI Error detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
C002B215	Error	45589	Server Recovery	DIMM Initialization Error	ESMCommonService	C002B215	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x215 Status : Error Description : DIMM Initialization Error - Processor %1 DIMM %2. The identified processor and memory failed to	Fatal: DIMM Initialization Error detected. Collect information by Server information collection tool and contact your sales representative. (Deal Meathod is blank before Ver. 2.0.7-0)	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
C002B216	Error	45590	Server Recovery	DIMM Initialization Error	ESMCommonService	C002B216	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x216 Status : Error Description : DIMM Initialization Error. A fatal error was detected while initializing memory. %1 (Major	Fatal: DIMM Initialization Error detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
C002B217	Error	45591	Server Recovery	DIMM Initialization Error	ESMCommonService	C002B217	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x217 Status : Error Description : DIMM Initialization Error - Processor %1 DIMM %2. The identified processor and memory are operating at	Fatal: DIMM Initialization Error. Collect information by Server information collection tool and contact your sales representative. (Deal Meathod is blank before Ver. 2.0.7-0)	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
C002B220	Error	45600	Server Recovery	KTI Initialization Error	ESMCommonService	C002B220	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x220 Status : Error Description : KTI Initialization Error - A fatal KTI initialization error has been detected. %1 (Major Code: %2	Fatal: KTI Initialization Error detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
C002B221	Error	45601	Server Recovery	Unknown Initialization Error	ESMCommonService	C002B221	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x221 Status : Error Description : Unknown Initialization Error. The system has experienced a fatal initialization error. %1 (Major	Fatal: The system has experienced a fatal initialization error. If the issue still persists contact your sales representative if necessary.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
C002B232	Error	45618	Server Recovery	DIMM Initialization Error	ESMCommonService	C002B232	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x232 Status : Error Description : DIMM Initialization Error - A memory initialization error was detected. %1 (Major Code: %2 Minor	Fatal: DIMM Initialization Error. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
8002B233	Warning	45619	Server Recovery	DIMM Initialization Error	ESMCommonService	8002B233	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x233 Status : Warning Description : DIMM Initialization Error - Processor %1 Channel %2. The identified memory channel could not be	Warning: DIMM Initialization Error. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
8002B234	Warning	45620	Server Recovery	DIMM Initialization Error	ESMCommonService	8002B234	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x234 Status : Warning Description : DIMM Initialization Error - Processor %1 DIMM %2. The identified DIMM could not be properly trained and	Warning: DIMM Initialization Error detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
8003B205	Warning	45573	Server Recovery	Redundant ROM Error	ESMCommonService	8003B205	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x305 Status : Warning Description : Redundant ROM Error: Both the Primary and Backup System ROMs are	Warning: The primary and backup system ROMs are invalid or corrupted. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
8003B218	Warning	45592	Server Recovery	TPM Self-Test Error	ESMCommonService	8003B218	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x318 Status : Warning Description : Trusted Platform Module (TPM) Self-Test Error.	Warning: The TPM has failed. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	x	x	x	x	x	
8003B289	Warning	45705	Server Recovery	Unexpected Shutdown and Restart	ESMCommonService	8003B289	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x389 Status : Warning Description : Unexpected Shutdown and Restart - An undetermined error type resulted in a reboot of the server.	Warning: The server shut down unexpectedly. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	o	o	o	o	o	o	o	o	x	x	x	x	





0004B252	Error	45650	Server Recovery	FW Communication Issue	ESMCommonService	0004B252	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x452 Status : Error Description : %1 FW Communication Issue - Unable to communicate with %2 FW. One or more configuration settings may be incorrect. Fatal: The iLO Firmware cannot communicate with the another firmware. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	×	×	×	×	×	×	×	×	×
0004B257	Error	45655	Server Recovery	FW Communication Issue	ESMCommonService	0004B257	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x457 Status : Error Description : %1 FW Communication Issue - Unable to communicate with %2 FW. One or more configuration settings may be incorrect. Fatal: The iLO Firmware cannot communicate with the another firmware. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	×	×	×	×	×	×	×	×	×
0030B217	Error	45591	Server Recovery	Server Platform Services Authentication Failure	ESMCommonService	0030B217	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3017 Status : Error Description : Server Platform Services Authentication Failure - The Server Platform Services (SPS) firmware image is corrupted. Fatal: The Server Platform Services firmware detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	×	×	×	×	×	×	×	×	×
0030B219	Error	45593	Server Recovery	Server Platform Services Firmware Error	ESMCommonService	0030B219	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3019 Status : Error Description : Server Platform Services Firmware in Recovery Mode. SPS firmware image is corrupted -System Fatal: The Server Platform Services firmware is working under Recovery Mode. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	×	×	×	×	×	×	×	×	×
0000B301	Error	45825	Storage Device	Temperature Exceeded	ESMCommonService	0000B301	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x33 Event Code : 0x01 Status : Error Description : Temperature exceeded on PCIe disk %1. Fatal: If the temperature of PCIeSSD rises any higher, it will affect the proper operation of the system. Check that the air inlet is not clogged and the air conditioner is running.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	×	×	×	×	×	×	×	×	×
0000B302	Error	45826	Storage Device	Disk Drive Status Changed	ESMCommonService	0000B302	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x33 Event Code : 0x02 Status : Error Description : The status of the PCIe disk at location %1 is %1 Fatal: Status change was detected on PCIeSSD. Collect information by Server information collection tool and contact your sales representative if needed.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	×	×	×	×	×	×	×	×	×
0000B303	Error	45827	Storage Device	Disk Drive Status Changed	ESMCommonService	0000B303	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x33 Event Code : 0x03 Status : Error Description : The PCIe disk wear status for the disk at location %1 is %2 Fatal: PCIeSSD Wear Status Change was detected. Check IML and determine the necessity of maintenance. Collect information by Server information collection tool and contact your sales representative if needed.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	×	×	×	×	×	×	×	×	×
8004A68	Warning	35432	Server Recovery	Memory Channel Error	ESMCommonService	8004A68	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x468 Status : Warning Description : Memory Channel Error - Correctable Memory Error Threshold Exceeded (%1 %2 Channel %3) Warning: Correctable Memory Error Threshold Exceeded detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	×	×	×	×	×	×	×	×	×
8002B223	Warning	45603	Server Recovery	DIMM Initialization Error	ESMCommonService	8002B223	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x223 Status : Warning Description : DIMM Initialization Error - Processor %1 Channel %2. The identified memory channel could not be initialized. Warning: DIMM initialization Error. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	○	×	×	×	×	×	×	×	×	×
80058A22	Warning	35362	Server Recovery	PCIe Isolation Event	ESMCommonService	80058A22	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x522 Status : Warning Description : PCIe Isolation Event Detected - A PCIe device signaled an error and was disabled. Warning: PCIe device failure detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	×	×	×	×	×	×	×	×	×	×
00318A19	Error	35353	Server Recovery	NVDIMM Spare Blocks Alert	ESMCommonService	00318A19	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x319 Status : Error Description : NVDIMM Spare Blocks Alert - Processor %1 DIMM %2 - The NVDIMM has 1 percent of its spare blocks remaining. Fatal: The NVDIMM has 1 percent of its spare blocks remaining. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	×	×	×	×	×	×	×	×	×	×
00318A21	Error	35361	Server Recovery	Transaction Timeout Error	ESMCommonService	00318A21	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x3121 Status : Error Description : Transaction Timeout Error Detected. Slot %1 (Segment %2, Bus %3, Device %4, Function %5) Fatal: PCI Slot Transaction Timeout Error Detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	×	×	×	×	×	×	×	×	×	×
00318A27	Error	35367	Server Recovery	Transaction Timeout Error	ESMCommonService	00318A27	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x0A Event Code : 0x3127 Status : Error Description : Transaction Timeout Error Detected. Embedded %1 (Segment %2, Bus %3, Device %4, Function %5) Fatal: PCI Slot Transaction Timeout Error Detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	×	×	×	×	×	×	×	×	×	×
8030B220	Warning	45600	Server Recovery	PCIe Slot Error	ESMCommonService	8030B220	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3020 Status : Warning Description : PCIe Slot %1 failed to train at Gen %2 speed and %3 width. Warning: PCI Slot Error Detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	×	×	×	×	×	×	×	×	×	×
8030B221	Warning	45601	Server Recovery	PCIe Slot Error	ESMCommonService	8030B221	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3021 Status : Warning Description : PCIe Slot %1 failed to train. Warning: PCI Slot Error Detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	×	×	×	×	×	×	×	×	×	×
8030B223	Warning	45603	Server Recovery	FlexibleLOM Error	ESMCommonService	8030B223	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3023 Status : Warning Description : FlexibleLOM %1 failed to train. Warning: PCI Slot Error Detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	×	×	×	×	×	×	×	×	×	×
8030B224	Warning	45604	Server Recovery	FlexibleLOM Error	ESMCommonService	8030B224	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x32 Event Code : 0x3024 Status : Warning Description : FlexibleLOM %1 failed to train at Gen %2 speed and %3 width. Warning: FlexibleLOM Error Detected. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	×	×	×	×	×	×	×	×	×	×
0000B401	Error	46081	Power Supply	Power Supply Error	ESMCommonService	0000B401	Date : YYYY-MM-DD hh:mm:ss Event Class : 0x34 Event Code : 0x01 Status : Error Description : Power supply %1 has exceeded the current limit. Power Supply output will be disabled. Fatal: Power Supply has exceeded the current limit. Power Supply output will be disabled. Collect information by Server information collection tool and contact your sales representative.	NONE	OFF	ON(3)	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○	○	×	×	×	×	×	×	×	×	×	×

**Syslog Event list of software monitoring**

When Esmpo-Cmsrv package is installed, this event registers an event, this event becomes a target of the report.  
Source Name<SRC>: ESMCPUPERF  
When CPU load changed in "Fatal", "Warning", "Information", it is a message to register. Default of "Manager Report(SNMP)" is "OFF".



