

# Express5800/R320e-E4, R320e-M4 Precautions (Linux)

Thank you for choosing Express5800/ft series. When you use Express5800/ft series, some precautions should be taken. Read the following precautions before using and follow them. Keep this document in a safe place for quick reference when necessary.

## ○ Precaution for operating with the keyboard

If you continue to press a key while the CPU module is made duplex or PCI module is separated, the system keeps the key pressing. In that case, pressing another key releases the key pressing.

## ○ CPU 模块双工过程中的键盘操作

如果在CPU模块双工以及PCI模块分离时继续键盘操作，系统会保持在正按下键盘的状态。

如果已经发生了这一现象，您可以按其它键进行恢复。


## ○ Precaution for AC ON

Turn on the AC power of one CPU/IO module within 180 seconds after turning on the AC power of another CPU/IO module. If the time between turnings on the CPU/IO modules is 180 seconds or more, the HDD mirroring will be broken because the only one CPU/IO module tries to start OS. After OS Starts, the other CPU/IO module starts and the HDD mirroring starts automatically.



## ○ CPU/IO 模块的 AC ON 时间

请将CPU/IO模块#0和CPU/IO模块#1之间的AC ON时间设为小于180秒。若大于180秒，则由于启动单CPU/IO模块运行模式，将导致HDD镜像崩溃。

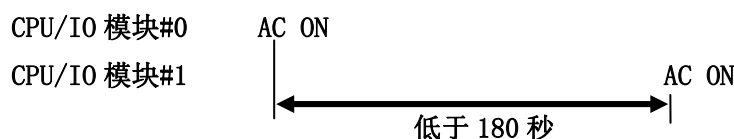

## ○ Precaution for instruction manuals

See “User’s Guide”, “Installation Guide”, “Maintenance Guide” and “Safety Precautions and Regulatory Notices” provided as book without using the EXPRESSBUILDER DVD.

## ○ 存储于 EXPRESSBUILDER DVD 的文档

EXPRESSBUILDER DVD 中包含电子手册：用户指南、安装指南以及维护指南。

但可能不是最新的手册。如果您正在使用 Express5800/ft series，请参考产品提供的纸面文档（用户指南、安装指南、维护指南以及“Safety Precautions and Regulatory Notices”）。

