

**Source Name**

It is displayed on "SOURCE" of the AlertViewer of NEC ESMPRO Manager.

**Event ID (Hex digit)**

The Event ID is a hexadecima number to identified for every event.

**Error Type**

The classification of the event notified is expressed. There are three kinds, it is "Information", "Warning" and "Error".

**Event ID**

The event ID is the event ID set as each event (decimal number). It is displayed on "Event ID" of the AlertViewer of NEC ESMPRO Manager.

**Type**

It is displayed on "Type" of the AlertViewer of NEC ESMPRO Manager.

**Trap Name**

It is displayed on "trapname" of the AlertViewer of NEC ESMPRO Manager.

**KeyWord**

When the special word is appeared in syslog, and it's message will be send

**Message**

It is displayed on "message" of the AlertViewer of NEC ESMPRO Manager.

**Deal Meathod**

It is displayed on "Deal Meathod" of the AlertViewer of NEC ESMPRO Manager.

**Recover Action**

It is processing to carry out after NEC ESMPRO Agent worked to report it.

**Manager Report**

When a display is "ON", Reporting is possibly to send NEC ESMPRO Manager .

**Express Report (Level)**

When Express Report is on and Level are 0-3, or 8, and the Express Report.

○	The alert is send
×	The alert is not send

**Syslog Event list of Syslog monitoring**

Source Name<SRC:>: ALERTMANAGER

When error occurred in a report file, it is a message to register.

Event ID (Hex digit)	Error Type	Event ID	Type	Trap Name	KeyWord	Message	Deal Meathod	Recover Action	Manager Report	Express Report (Level)	SNMP Trap OID (Enterprise ID.Specific ID)	NEC ESMPRO Agent Version 4.6.0-1 ~
8000001	Warning	1	AM	AM FILE ERROR	AM FILE ERROR	AM FILE ERROR. Temporary file has been broken.	Please report to the maintenance member.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○

**Syslog Event list of ft server monitoring**

Source Name<SRC:>: FTREPORT

\* About a report test of "FtReport"

As for the event of source name "FtReport", a report is performed than syslog monitor service (/opt/nec/esmpro\_sa/bin/ESMamvmain) and ftreport monitor service (/opt/nec/esmpro\_sa/bin/ESMftreport).

If there is log to fall under source name "FtReport" in a syslog by ftreport monitor service start completion from OS start time, syslog monitor service performs a report (monitor). ftreport monitor service performs a report (monitor) after it.

Because it has been already it with a monitor state by the ftreport monitor service from syslog monitor service by the timing to perform a test report, It do not report it experimentally.

In that purpose, ft server utility (/opt/nec/esmpro\_sa/bin/ESMftcutil) of the CPU module perform [stop] to [start], and it is necessary let change the state of the real module, and to confirm it.

Event ID (Hex digit)	Error Type	Event ID	Type	Trap Name	KeyWord	Message<MSG:>	Deal Meathod	Recover Action	Manager Report	Express Report (Level)	SNMP Trap OID (Enterprise ID.Specific ID)	NEC ESMPRO Agent Version 4.6.0-1 ~
40001001	Information	4097	FT Server	STRATUS_MSG_STATE_EMPTY	to EMPTY	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○
40001002	Information	4098	FT Server	STRATUS_MSG_STATE_REMOVED	to REMOVED	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○
40001005	Information	4101	FT Server	STRATUS_MSG_STATE_FIRMWARE_UPDATED	to FIRMWARE_UPDATE	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	×
40001006	Information	4102	FT Server	STRATUS_MSG_STATE_DEVICE_READY	to DEVICE_READY	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	×
40001007	Information	4103	FT Server	STRATUS_MSG_STATE_STOPPED	to STOPPED	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○
40001009	Information	4105	FT Server	STRATUS_MSG_STATE_SIMPLEX	to SIMPLEX	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○
4000100A	Information	4106	FT Server	STRATUS_MSG_STATE_SIMPLEX_PRIMARY	to SIMPLEX/REASON_PRIMARY	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○
4000100B	Information	4107	FT Server	STRATUS_MSG_STATE_DUPLEX	to DUPLEX	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○
4000100C	Information	4108	FT Server	STRATUS_MSG_STATE_DUPLEX_PRIMARY	to DUPLEX/REASON_PRIMARY	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○
4000100D	Information	4109	FT Server	STRATUS_MSG_STATE_DUPLEX_SECONDARY	to DUPLEX/REASON_SECONDARY	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○
4000100E	Information	4110	FT Server	STRATUS_MSG_STATE_TRIPLEX	to TRIPLEX	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	.1.3.6.1.4.1.119.2.2.4.4.18.3.1	○

40001018	Information	4120	FT Server	STRATUS_MSG_STATE_ONLINE	to ONLINE	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
40001019	Information	4121	FT Server	STRATUS_MSG_STATE_OFFLINE	to OFFLINE	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
4000101B	Information	4123	FT Server	STRATUS_MSG_STATE_FIRMWARE_UPDATE_COMPLETE	to FIRMWARE_UPDATE_COMPLETE	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
80001008	Warning	4104	FT Server	STRATUS_MSG_STATE_SURPRISE_REMOVAL	to SURPRISE_REMOVAL	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device changed.	NONE	ON	OFF	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	×
C0001003	Error	4099	FT Server	STRATUS_MSG_STATE_SHOT	to SHOT	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device is unusual. Please report to the maintenance member.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	×
C000100F	Error	4111	FT Server	STRATUS_MSG_STATE_BROKEN_NONE	to BROKEN	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device is unusual. Please report to the maintenance member.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C0001010	Error	4112	FT Server	STRATUS_MSG_STATE_BROKEN_BELOW_MTB	to BROKEN/REASON_BELOW_MTB	Device %1 (ID:%2) state is changed from %3 to %4.	Hardware change is needed.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C0001011	Error	4113	FT Server	STRATUS_MSG_STATE_BROKEN_DIAGNOSTICS_FAILED	to BROKEN/REASON_DIAGNOSTICS_FAILED	Device %1 (ID:%2) state is changed from %3 to %4.	Hardware change is needed.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C0001012	Error	4114	FT Server	STRATUS_MSG_STATE_BROKEN_HARDWARE_INCOMPATIBLE	to BROKEN/REASON_HARDWARE_INCOMPATIBLE	Device %1 (ID:%2) state is changed from %3 to %4.	Hardware change is needed.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C0001013	Error	4115	FT Server	STRATUS_MSG_STATE_BROKEN_HOLDING_DUMP	to BROKEN/REASON_HOLDING_DUMP	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device is unusual. Please report to the maintenance member.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C0001014	Error	4116	FT Server	STRATUS_MSG_STATE_BROKEN_BRINGUP_FAILED	operation BRINGUP failed	Device %1 (ID:%2) state is changed from %3 to %4.	Hardware change is needed.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C0001015	Error	4117	FT Server	STRATUS_MSG_STATE_BROKEN_MEDIA_DISCONNECT	to BROKEN/REASON_MEDIA_DISCONNECT	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device is unusual. Please report to the maintenance member.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C0001016	Error	4118	FT Server	STRATUS_MSG_STATE_BROKEN_FIRMWARE_BURN_FAIL	to BROKEN/REASON_FIRMWARE_BURN_FAIL	Device %1 (ID:%2) state is changed from %3 to %4.	Hardware change is needed.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C0001017	Error	4119	FT Server	STRATUS_MSG_STATE_BROKEN_AUTOBURN_DISABLED	to BROKEN/REASON_AUTOBURN_DISABLED	Device %1 (ID:%2) state is changed from %3 to %4.	The state of the device is unusual. Please report to the maintenance member.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C000101A	Error	4122	FT Server	STRATUS_MSG_STATE_BROKEN_IDPROM_READ_ERROR	to BROKEN/REASON_IDPROM_READ_ERROR	Device %1 (ID:%2) state is changed from %3 to %4.	Hardware change is needed.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C000101C	Error	4124	FT Server	STRATUS_MSG_STATE_BROKEN_FIRMWARE_FILE_NOT_FOUND	to BROKEN/REASON_FIRMWARE_FILE_NOT_FOUND	Device %1 (ID:%2) state is changed from %3 to %4.	F/W file not found. Please report to the maintenance member.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C000101D	Error	4125	FT Server	STRATUS_MSG_STATE_BROKEN_FIRMWARE_FILE_ERROR	to BROKEN/REASON_FIRMWARE_FILE_ERROR	Device %1 (ID:%2) state is changed from %3 to %4.	F/W file error. Please report to the maintenance member.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○
C000101E	Error	4126	FT Server	STRATUS_MSG_STATE_BROKEN_FIRMWARE_PROM_ERROR	to BROKEN/REASON_FIRMWARE_PROM_ERROR	Device %1 (ID:%2) state is changed from %3 to %4.	Hardware change is needed.	NONE	ON	ON (3)	. 1. 3. 6. 1. 4. 1. 119. 2. 2. 4. 4. 18. 3. 1	○