

---

## **Supplement of Using N8104-208/212 on Windows Server**

---

When using the N8104-208/212 on Windows Server, installing Starter Pack at the server, the event log below may be recorded.

This event does not affect system operation.

**Level : Warning**

**Source : icea**

**ID:101**

**Intel(R) Ethernet Network Adapter E810-XXV-2 xxxxx**

**PROBLEM:** Flow Control disabled on this interface. For RDMA traffic, it is recommended that flow control be enabled end to end on all network interfaces and switches to avoid performance degradation from dropped packets.

**ACTION:** Enable link level flow control or priority flow control for network direct port 445 on this interface.

\* "x" is a different display name depending on the LAN board.

**Level : Error**

**Source : icea**

**ID:272**

**Intel(R) Ethernet Network Adapter E810-XXV-2 xxxxx**

**PROBLEM:** A parallel fault was detected.

**Possible Solution:** Change link partner connection and configuration.

\* "x" is a different display name depending on the LAN board.