

# Notes on LAN Firmware Updating for N8104-177(ALOM), N8104-183/187(NIC)

If updating to the latest firmware included in this Starter Pack and the firmware version before application is 8.52.12 or earlier, apply version 8.55.12 once and then apply the latest firmware. If the firmware version of the target card is 8.55.12 or later, the following procedure is not necessary.

## [Target products]

<Option LAN(Network Interface Card;NIC)>

- N8104-177 Dual Port 25GBASE SFP28 LOM Card
- N8104-183 Dual Port 10GBASE-T Adapter
- N8104-187 Dual Port 25GBASE SFP28 Adapter

## [Procedue]

### 1. Applying firmware version 8.55.12

Refer to the "Steps to update firmware by Starter Pack DVD " in the Starter Pack S8.10-009.01 downloadable contents to update the firmware for the target product.

Use Starter Pack S8.10-009.01 and perform steps (2) to (10) in the above procedure. After that, **select only the following firmware (deselect everything else)** and carry out steps (12) to (13).

After applying, please turn off the server, plug out and in the AC cable, and then turn on the server again.

### [Express5800 Series Starter Pack Version S8.10-009.01]

<http://www.58support.nec.co.jp/global/download/starterpack/810/009/01/index.html>

### [Firmware Name]

HPE QLogic FastLinQ Online Firmware Upgrade Utility for Linux x86\_64(firmware-nic-qlogic-flq-1.10.10-1.1.x86\_64)

### [Inventory screen image]

Forced	HPE QLogic FastLinQ Online Firmware Upgrade Utility for Linux x86_64 (firmware-nic-qlogic-flq-1.10.10-1.1.x86_64)	Firmware	Optional	View Details	1.10.10	Required
--------	---	----------	----------	--------------	---------	----------

### 2. Applying the latest firmware

Please use this Starter Pack to update the firmware to the latest version. After updating, please make sure that the version is updated to the following version.

Target Products	Adapter display name (on System Utilities)	Updated version
N8104-177	HPE FlxFbr 10/25Gb 2p 622FLR-SFP28 Adptr – Multi	8.65.23
N8104-183	HPE Ethernet 10Gb 2-port 521T Adapter	
N8104-187	HPE Ethernet 10/25Gb 2-port 621SFP28 Adapter	

### [How to check the version]

1. At server startup, press the <F9> key to start the System Utilities menu.
2. Go to "System Information" from "System Utilities".
3. Check the firmware version of the target product. Please check the "Adapter display name (on System Utilities)" above for the display name of the applicable product.