

NEC Express Server
Express5800 Series

Express5800/R120e-1E

EXP480A

User's Guide

Model Number: R120e-1E: N8100-2142F/2143F/2144F/2145F

Chapter 1 General Description

Chapter 2 Preparations

Chapter 3 Setup

Chapter 4 Appendix

Documents for This Product

Documents for this product are provided as booklets (📖) and electronic manuals (📄) in the EXPRESSBUILDER disc (📀).



Precautions for Use

Describes points of caution to ensure the safe use of this server.
Read these cautions before using this server.



Getting Started

Describes how to use this server, from unpacking to operations.
See this guide at first and confirm an outline of this product.



EXPRESSBUILDER



User's Guide

Chapter 1: General Description	Overviews, names, and functions of the server's parts
Chapter 2: Preparations	Installation of additional options, connection of peripheral devices, and proper location for this server
Chapter 3: Setup	System BIOS configurations and summary of EXPRESSBUILDER
Chapter 4: Appendix	Specifications and other information



Installation Guide (Windows)

Chapter 1: Installing Windows	Installation of Windows and drivers, and important information for installation
Chapter 2: Installing Bundled Software	Installation of bundled software, such as NEC ESMPRO and Universal RAID Utility



Maintenance Guide




Chapter 1: Maintenance	Server maintenance and troubleshooting
Chapter 2: Useful Features	The detail of system BIOS settings, RAID Configuration Utility, and EXPRESSBUILDER
Chapter 3: Appendix	Error messages and Windows Event Logs








Other documents

Provides the detail of NEC ESMPRO, Universal RAID Utility, and the other features.

Contents

Documents for This Product	2
Contents	3
Notations Used in This Document	6
Notations used in the text.....	6
Optical disk drive.....	6
Hard disk drive	6
Removable media	6
Abbreviations of Operating Systems (Windows)	7
Trademarks	8
License Agreement Notice.....	9
Regulatory Notices	10
Warnings and Additions to This Document	12
Latest editions	12
 Precautions for Use (Be Sure to Read).....	13
Safety precautions	13
Symbols used in this document and on warning labels.....	14
Safety notes	15
Rack Installation	15
Multiple power sources	16
Rack mounted equipment marking – Slide/rail marking	16
General	17
Power supply and power cord use	18
Installation, relocation, storage, and connection	19
Cleaning and working with internal devices	20
During operation	21
Warning labels	22
External view	22
Handling precautions (for proper operations)	23
Handling precautions (Anti-static Measures).....	24
Chapter 1 General Description	26
1. Introduction	27
2. Accessories.....	28
3. Standard Features.....	29
3.1 Management Features.....	32
3.2 Firmware and Software Version Management	33
4. Names and Functions of Parts	34
4.1 Front View.....	34
4.2 Front View (with the Front Bezel Removed)	36
4.3 Rear View	38
4.4 External View.....	39
4.5 Internal View	40
4.6 Motherboard (MB).....	41
4.7 Status Indicators	42
4.7.1 POWER LED ()	42
4.7.2 STATUS LED ().....	42

4.7.3	LINK/ACT LED ( ,  ,  , )	43
4.7.4	Disk Access LED ()	43
4.7.5	Optical disk access LED	44
4.7.6	UID LED (ID).....	44
4.7.7	LED on a hard disk drive	44
4.7.8	LEDs for LAN connectors	45
4.7.9	AC POWER LED (POWER Supply Unit)	46
Chapter 2 Preparations		47
1.	Installing Internal Optional Devices	48
1.1	Safety Precautions.....	48
1.2	Anti-static Measures	49
1.3	Overview of Installation and Removal.....	50
1.4	Confirming Servers (UID Switch)	52
1.5	Removing Front Bezel	53
1.6	Removing Top Cover	54
1.7	Internal Flash Memory	55
1.7.1	Installation.....	55
1.7.2	Removal	55
1.8	TPM Kit.....	56
1.8.1	Installation.....	56
1.9	Processor (CPU).....	57
1.9.1	Maximum number of processor cores supported by this server	57
1.9.2	Installation.....	58
1.9.3	Replacement / Removal	62
1.10	DIMM	63
1.10.1	Maximum supported memory size	63
1.10.2	Memory clock.....	64
1.10.3	Memory RAS feature	64
1.10.4	DIMM installation order	65
1.10.5	Installation.....	66
1.10.6	Removal / Replacement	67
1.10.7	Using Memory RAS Feature	67
1.11	Extra Battery / Flash Backup Unit for RAID Controller	71
1.11.1	Handling precautions	71
1.11.2	Installing N8103-153 extra battery	71
1.11.3	Removal	78
1.11.4	Installing FBU	78
1.11.5	Removal	78
1.12	PCI Card.....	79
1.12.1	Notes	79
1.12.2	Supported cards and available slots	80
1.12.3	Installation.....	82
1.12.4	Removal	97
1.13	Additional HDD Cage.....	98
1.13.1	Installation.....	98
1.13.2	Removal	99
1.14	Optical Disk Drive	100
1.14.1	Installation.....	101
1.14.2	Removal	103
1.15	Use of Internal Hard Disk Drives in the RAID System	104
1.15.1	Connecting cables	105
1.15.2	Notes on setting up a RAID System	109
1.16	Installing Top Cover	110
1.16.1	Installation.....	110
1.17	2.5-inch Hard Disk Drive	111
1.17.1	Installation.....	112
1.17.2	Removal	114
1.17.3	Replacing a Hard Disk Drive in the RAID System (Auto Rebuild).....	114
1.18	3.5-inch Hard Disk Drive	115
1.18.1	Installation.....	116
1.18.2	Removal	118
1.18.3	Replacing a Hard Disk Drive in the RAID System (Auto Rebuild).....	119

1.19	Power Supply Unit	120
1.19.1	Cold Redundant Feature	120
1.19.2	Installation.....	121
1.19.3	Replacing a Failing Power Supply Unit.....	123
1.20	Installing Front Bezel	124
2.	Installation and Connection.....	125
2.1	Installation.....	125
2.1.1	Installing rack.....	125
2.1.2	Installing the server to the rack or removing it from the rack	127
2.2	Connection.....	133
2.2.1	Connecting to a uninterruptible power supply (UPS)	137
Chapter 3	Setup	138
1.	Turning on the Server.....	139
1.1	POST.....	140
1.1.1	POST sequence	140
1.1.2	POST error messages	141
2.	System BIOS Setup	142
2.1	Overview.....	142
2.2	Starting and Exiting SETUP Utility	142
2.3	Description on On-Screen Items and Key Usage	143
2.4	Cases that Require Configuration	145
3.	EXPRESSSCOPE ENGINE 3.....	146
3.1	Overview.....	146
3.2	EXPRESSSCOPE ENGINE 3 Network configuration	146
4.	EXPRESSBUILDER.....	149
4.1	Features of EXPRESSBUILDER	149
4.2	Usage of EXPRESSBUILDER	149
5.	Installing Software Components.....	150
6.	Turning Off the Server.....	151
Chapter 4	Appendix.....	152
1.	Specifications	153
2.	PCI Configuration.....	155

Notations Used in This Document

Notations used in the text

In addition to safety-related symbols urging caution, three other types of notations are used in this document. These notations have the following meanings.

Important	Indicates critical items that must be followed when handling the server or operating software. If the procedures described are not followed, <u>server failure, data loss, and other serious malfunctions could occur.</u>
Note	Indicates items that must be confirmed when handling the server or operating software.
Tips	Indicates information that is helpful to keep in mind when using this server.

Optical disk drive

This server is equipped with one of the following drives. These drives are referred to as *optical disk drive* in this document.

- DVD-ROM drive
- DVD Super MULTI drive

Hard disk drive

Unless otherwise stated, *hard disk drive* (HDD) described in this document refer to the following.

- Hard disk drive (HDD)
- Solid state drive (SSD)

Removable media

Unless otherwise stated, *removable media* described in this document refer to the following.

- USB flash drive
- Flash FDD

Abbreviations of Operating Systems (Windows)

Windows Operating Systems are referred to as follows.

See Chapter 1 (1.2 Supported Windows OS) in *Installation Guide (Windows)* for detailed information.

Notation in this document	Official Windows name
Windows Server 2012	Windows Server 2012 Standard
	Windows Server 2012 Datacenter
Windows Server 2008 R2	Windows Server 2008 R2 Standard
	Windows Server 2008 R2 Enterprise
Windows Server 2008 *	Windows Server 2008 Standard
	Windows Server 2008 Enterprise

* Includes 64-bit and 32-bit Editions unless otherwise stated.

The following appears on EXPRESSBUILDER.

- Windows Server 2008 64-bit Edition: Windows Server 2008 x64
- Windows Server 2008 32-bit Edition: Windows Server 2008 x86

Trademarks

EXPRESSSCOPE is registered trademarks of NEC Corporation.

Microsoft, Windows, Windows Server, Windows Vista, and MS-DOS are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries. Intel, Pentium, and Xeon are registered trademarks of Intel Corporation of the United States. AT is a registered trademark of International Business Machines Corporation of the United States and other countries. Adaptec, its logo, and SCSI Select are registered trademarks or trademarks of Adaptec, Inc. of the United States. LSI and the LSI logo design are trademarks or registered trademarks of LSI Corporation. Adobe, the Adobe logo, and Acrobat are trademarks of Adobe Systems Incorporated. DLT and DLTape are trademarks of Quantum Corporation of the United States. PCI Express is a trademark of Peripheral Component Interconnect Special Interest Group. Linux is a trademark or registered trademark of Linus Torvalds in Japan and other countries. Red Hat® and Red Hat Enterprise Linux are trademarks or registered trademarks of Red Hat, Inc. in the United States and other countries.

All other product, brand, or trade names used in this publication are the trademarks or registered trademarks of their respective trademark owners.

License Agreement Notice

Open source software of following license is included in the part of this product (system BIOS, Off-line tool).

EDK FROM TIANOCORE.ORG

BSD License from Intel

Copyright (c) 2004, Intel Corporation

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Intel Corporation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2004 - 2007, Intel Corporation

All rights reserved. This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License which accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

Regulatory Notices

FCC Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Industry Canada Class A Emission Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CE / Australia and New Zealand Statement

This is a Class A product. In domestic environment this product may cause radio interference in which case the user may be required to take adequate measures (EN55022).

BSMI Statement

警告使用者：

此為甲類資訊技術設備，於居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

Disposing of your used product



In the European Union

EU-wide legislation as implemented in each Member State requires that used electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes Information and Communication Technology (ICT) equipment or electrical accessories, such as cables or DVDs.

When disposing of used products, you should comply with applicable legislation or agreements you may have. The mark on the electrical and electronic products only applies to the current European Union Member States.

Outside the European Union

If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority and ask for the correct method of disposal.

Turkish RoHS information relevant for Turkish market

EEE Yönetmeliğine Uygundur

Vietnam RoHS information relevant for Vietnam market

Complying with “CIRCULAR, No.30/2011/TT-BCT (Hanoi, August 10 2011), Temporary regulations on content limit for certain hazardous substances in electrical products”

English	<p>Declaration of Conformity</p> <p>with the requirements of Technical Regulation on the Restriction Of the use of certain Hazardous Substances in Electrical and Electronic Equipment (adopted by Order №1057 of Cabinet of Ministers of Ukraine)</p> <p>The Product is in conformity with the requirements of Technical Regulation on the Restriction Of the use of certain Hazardous Substances in electrical and electronic equipment (TR on RoHS).</p> <p>The content of hazardous substance with the exemption of the applications listed in the Annex №2 of TR on RoHS:</p> <ol style="list-style-type: none"> 1. Lead (Pb) – not over 0,1wt % or 1000wt ppm; 2. Cadmium (Cd) – not over 0,01wt % or 100wt ppm; 3. Mercury (Hg) – not over 0,1wt % or 1000wt ppm; 4. Hexavalent chromium (Cr⁶⁺) – not over 0,1wt % or 1000wt ppm; 5. Polybrominated biphenyls (PBBs) – not over 0,1wt % or 1000wt ppm; 6. Polybrominated diphenyl ethers (PBDEs) – not over 0,1wt % or 1000wt ppm.
Ukrainian	<p>Декларація про Відповідність</p> <p>Вимогам Технічного Регламенту Обмеження Використання деяких Небезпечних Речовин в електричному та електронному обладнанні (затвердженого Постановою №1057 Кабінету Міністрів України)</p> <p>Виріб відповідає вимогам Технічного Регламенту Обмеження Використання деяких Небезпечних Речовин в електричному та електронному обладнанні (ТР ОБНР).</p> <p>Вміст небезпечних речовин у випадках, не обумовлених в Додатку №2 ТР ОБНР, :</p> <ol style="list-style-type: none"> 1. свинець(Pb) – не перевищує 0,1 % ваги речовини або в концентрації до 1000 частин на мільйон; 2. кадмій (Cd)– не перевищує 0,01 % ваги речовини або в концентрації до 100 частин на мільйон; 3. ртуть(Hg) – не перевищує 0,1 % ваги речовини або в концентрації до 1000 частин на мільйон; 4. шестивалентний хром (Cr⁶⁺) – не перевищує 0,1 % ваги речовини або в концентрації до 1000 частин на мільйон; 5. полібромбіфеноли (PBB) – не перевищує 0,1% ваги речовини або в концентрації до 1000 частин на мільйон; 6. полібромдефенілові ефіри (PBDE) – не перевищує 0,1 % ваги речовини або в концентрації до 1000 частин на мільйон.
Russian	<p>Декларация о Соответствии</p> <p>Требованиям Технического Регламента об Ограничении Использования некоторых Вредных Веществ в электрическом и электронном оборудовании (утверждённого Постановлением №1057 Кабинета Министров Украины)</p> <p>Изделие соответствует требованиям Технического Регламента об Ограничении Использования некоторых Вредных Веществ в электрическом и электронном оборудовании (ТР ОИВВ).</p> <p>Содержание вредных веществ в случаях, не предусмотренных Дополнением №2 ТР ОИВВ:</p> <ol style="list-style-type: none"> 1. свинец (Pb) – не превышает 0,1 % веса вещества или в концентрации до 1000 миллионных частей; 2. кадмий (Cd) – не превышает 0,01 % веса вещества или в концентрации до 100 миллионных частей; 3. ртуть (Hg) – не превышает 0,1 % веса вещества или в концентрации до 1000 миллионных частей; 4. шестивалентный хром (Cr⁶⁺)– не превышает 0,1 % веса вещества или в концентрации до 1000 миллионных частей; 5. полибромбифенолы (PBB) – не превышает 0,1 % веса вещества или в концентрации до 1000 миллионных частей; 6. полибромдифеноловые эфиры (PBDE) – не превышает 0,1 % веса вещества или в концентрации до 1000 миллионных частей.

Warnings and Additions to This Document

1. **Unauthorized reproduction of the contents of this document, in part or in its entirety, is prohibited.**
2. **This document is subject to change at any time without notice.**
3. **Do not make copies or alter the document content without permission from NEC Corporation.**
4. **If you have any concerns, or discover errors or omissions in this document, contact your sales representative.**
5. **Regardless of article 4, NEC Corporation assumes no responsibility for effects resulting from your operations.**
6. **The sample values used in this document are not actual values.**

Keep this document for future reference.

Latest editions

This document was created based on the information available at the time of its creation. The screen images, messages and procedures are subject to change without notice. Substitute as appropriate when content has been modified.

The most recent version of the guide, as well as other related documents, is also available for download from the following website.

<http://www.nec.com/>



Precautions for Use (Be Sure to Read)

The following provides information required to use your server safely and properly. For details of names in this section, refer to *Names and Functions of Parts* in this document.

Safety precautions

Follow the instructions in this document for the safe use of the NEC Express server.

This User's Guide describes hazardous parts of the server, possible hazards, and how to avoid them. Server components with possible danger are indicated with a warning label placed on or around them (or, in some cases, by printing the warnings on the server).

In User's Guide or on warning labels, **WARNING** or **CAUTION** is used to indicate a degree of danger. These terms are defined as follows:









Indicates there is a risk of death or serious personal injury




Indicates there is a risk of burns, other personal injury, or property damage

Precautions and notices against hazards are presented with one of the following three symbols. The individual symbols are defined as follows:

	Attention	This symbol indicates the presence of a hazard if the instruction is ignored. An image in the symbol illustrates the hazard type.	(Example)  (Electric shock risk)
	Prohibited Action	This symbol indicates prohibited actions. An image in the symbol illustrates a particular prohibited action.	(Example)  (Do not disassemble)
	Mandatory Action	This symbol indicates mandatory actions. An image in the symbol illustrates a mandatory action to avoid a particular hazard.	(Example)  (Disconnect a plug)

(A label example used in this User's Guide)

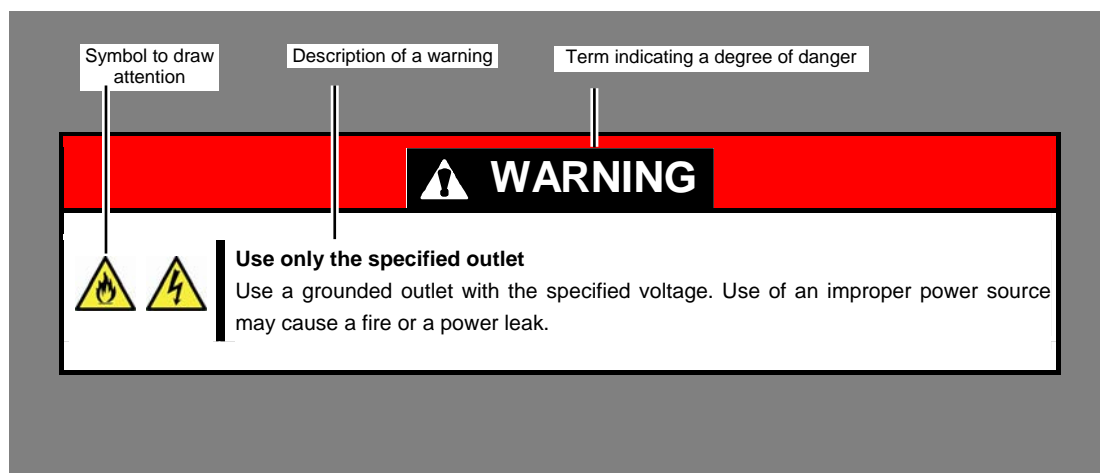

Symbols used in this document and on warning labels

Attentions

	Indicates the presence of electric shock hazards.		Indicates the presence of mechanical parts that can result in bodily injury.
	Indicates the presence of a hot surface or component. Touching this surface could result in bodily injury.		Indicates the presence of mechanical parts that can result in pinching or other bodily injury.
	Indicates there is a risk of explosion.		Indicates the presence of laser beam that cause blindness.
	Indicates there is a risk of fire or fumes.		Indicates a general notice or warning that cannot be specifically identified.

Prohibited Actions

	Do not disassemble, repair, or modify the server. Otherwise, an electric shock or fire may be caused.		Do not touch the server with wet hand. Otherwise, an electric shock may be caused.
	Do not touch the component specified by this symbol. Otherwise, an electric shock or burn may be caused.		Do not use the server in the place where water or liquid may pour. Otherwise, an electric shock or fire may be caused.
	Do not place the server near the fire. Otherwise, a fire may be caused.		Indicates a general prohibited action that cannot be specifically identified.

Mandatory Actions

	Unplug the power cord of the server. Otherwise, an electric shock or fire may be caused.		Indicates a mandatory action that cannot be specifically identified. Make sure to follow the instruction.
	Make sure equipment is properly grounded. Otherwise, an electric shock or fire may be caused.		

Safety notes

This section provides notes on using the server safely. Read this section carefully to ensure proper and safe use of the server. For symbols, refer to *Safety precautions*.

Rack Installation

CAUTION

**Elevated Operating Ambient**

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.

**Reduced Air Flow**

Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

**Mechanical Loading**

Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

**Circuit Overloading**

Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

**Reliable Earthing**

Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

⚠ CAUTION**Do not attempt to carry or install the server alone**

More than two people are required to carry or install the rack. Otherwise, the rack may fall, resulting in personal injury or damage to peripheral devices. In particular, tall racks such as a 44U rack become unstable unless steadied with a stabilizer. Make sure that two or more people hold the rack to carry or install the rack.

**Do not install with the load weight distributed unevenly**

To avoid unevenly distributing the load of the rack and server, install a stabilizer or connect multiple racks to distribute the weight. Otherwise, the rack may fall, resulting in personal injury.

**Do not install components alone, and check the door hinge pins of the rack**

Two or more people are required to install the rack components such as the door or rails. When installing the door, make sure that both upper and lower hinge pins are held in place. Incomplete attachment may cause components to fall off as well as personal injury.

**Do not extend any device from the rack that is not stabilized**

When extending a device from the rack, make sure that the rack is stable (by using a stabilizer or seismic reinforcement). Otherwise, the rack may fall, resulting in personal injury.

**Do not extend more than one device out of the rack**

Extending multiple devices from the rack may cause the rack to fall, resulting in personal injury. Extend only one device at one time.

**Do not exceed the rated capacity of the power supply when connecting devices**

To prevent burn injuries, fire, and damage to the server, make sure the load on the branch circuit that supplies power to the rack will not exceed the rated load. For inquiries regarding the installation or wiring of the power supply system, consult with the company that performed the installation or wiring, or the power company that services your area.










Multiple power sources**⚠ CAUTION**





Disconnect all power supply cords before servicing.

Rack mounted equipment marking – Slide/rail marking**⚠ CAUTION**




Slide/rail mounted equipment is not to be used as a shelf or a work space.






General

 WARNING	
	<p>Do not use the server for services where human life may be at stake or high reliability is required.</p> <p>This server is not intended for use in medical, nuclear, aerospace, mass transit or other applications where human life may be at stake or high reliability is required, nor is it intended for use in controlling such applications. We disclaim liability for any personal injury and property damages caused by such use of this server.</p>
 	<p>Do not use the server if any smoke, odor, or noise is present.</p> <p>If smoke, odor, or noise is present, immediately turn off the server and disconnect the power plug from the outlet, then contact the store where you purchased the product or your maintenance service company. Using the server in such conditions may cause a fire.</p>
 	<p>Do not insert needles or metal objects.</p> <p>Do not insert needles or metal objects into ventilation holes in the server or openings in the optical disk drive. Doing so may cause an electric shock.</p>
	<p>Use a rack that conforms to the designated standard</p> <p>This server can be mounted onto a 19-inch rack that conforms to EIA standards. Do not mount the server onto any rack that does not conform to EIA standards. Doing so may cause a server malfunction, personal injury, or damage to peripheral devices. For more information about racks that can be used with the server, consult with your maintenance service company.</p>
 	<p>Use the server only under the specified environment</p> <p>Do not install the server rack in any environment that is not suitable for installation.</p> <p>Installation in an unsuitable environment is harmful for the server and other systems installed in the rack and may cause fire or personal injury due to the rack falling. For a detailed explanation on installation environments or seismic reinforcement, consult with the instruction manual supplied with the rack or your maintenance service company.</p>

 CAUTION	
  	<p>Keep water or foreign matter away from the server.</p> <p>Do not let any liquid such as water or foreign materials including pins or paper clips enter the server. Failure to follow this warning may cause an electric shock, a fire, or failure of the server. When such things accidentally enter the server, immediately turn off the power and disconnect the power plug from the outlet. Do not disassemble the server, and contact the store where you purchased the product or your maintenance service company.</p>

Power supply and power cord use

 WARNING	
	<p>Do not hold the power plug with a wet hand.</p> <p>Do not disconnect/connect the plug while your hands are wet. Failure to follow this warning may cause an electric shock.</p>
	<p>Do not connect the ground wire to a gas pipe.</p> <p>Never connect the ground wire to a gas pipe. Failure to follow this warning may cause a gas explosion.</p>

 CAUTION	
	<p>Plug in to a proper power source.</p> <p>Use a grounded outlet with the specified voltage. Use of an outlet with a voltage other than that specified causes fire and electrical leakage. Do not install the server in any environment that requires an extension cord. Connecting to a cord that does not conform to the power supply specs of the server causes overheating, resulting in fire.</p> <p>If you want to use an AC cord set with a ground wire of class 0I, be sure to connect the ground wire before inserting the power plug into the outlet. Before disconnecting the ground wire, be sure to disconnect the power plug from the output.</p>
	<p>Do not connect many cords into a single outlet by using extension cords.</p> <p>The electric current exceeding the rated flow overheats the outlet, which may cause a fire.</p>
	<p>Insert the power plug into the outlet as far as it goes.</p> <p>Heat generation resulting from a halfway inserted power plug (imperfect contact) may cause a fire. Heat will also be generated if condensation is formed on dusty blades of the halfway inserted plug, increasing the possibility of fire.</p>
	<p>Do not use any unauthorized interface cable.</p> <p>Use only the interface cables provided with the server. Electric current that exceeds the amount allowed could cause fire. Also, observe the following precautions to prevent electrical shock or fire caused by a damaged power cord.</p> <div style="display: flex; justify-content: space-between;"> <ul style="list-style-type: none"> Do not stretch the cord harness Do not bend the power cord. Do not twist the power cord Do not step on the power cord. Uncoil the power cord before use Do not secure the power cord with staples or equivalents <ul style="list-style-type: none"> Do not pinch the power cord Keep chemicals away from the power cord Do not place any object on the power cord Do not alter, modify, or repair the power cord Do not use a damaged power cord (replace the damaged power cord with a power cord of the same standard. For information on replacing the power cord, contact the store where you purchased the product or a maintenance service company) </div>

⚠ CAUTION**Do not use the attached power cord for any other devices or usage.**

The power cord that comes with your server is designed aiming to connect with this server and to use with the server, and its safety has been tested. Do not use the attached power cord for any other purpose. Doing so may cause a fire or an electric shock.

**Do not unplug the power cord by holding the cable part.**

Pull the power cord straight out by holding the plug. Pulling the power cord by holding the cable part or applying extra pressure to the connector may damage the cable part, which may cause a fire or electric shock.

Installation, relocation, storage, and connection**⚠ CAUTION****Do not hold the front bezel to lift the server.**

Do not hold the front bezel to lift the server. The front bezel may be disengaged from the server, causing personal injury. Hold the server firmly by its bottom.

**Do not install the server in any place other than specified.**

Do not install the server in the following places or any place other than specified in this User's Guide. Failure to follow this instruction may cause a fire.

- A dusty place
- A humid place such as near a boiler
- A place exposed to direct sunlight
- An unstable place

**Do not use the server in an environment where corrosive gas is present**

Do not install the server in a place subject to corrosive gases including sodium chloride, sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia, or ozone. Do not install the server in an environment that contains dust, chemicals that accelerate corrosion such as NaCl or sulfur, or conductive materials. Failure to follow this warning may cause the wiring on the printed wiring board to short-circuit, leading to fire. If you have any questions, contact the store where you purchased the product or a maintenance service company.

**Do not install the server while the cover is removed**

Do not install the server to a rack while the cover or other relevant items removed. Not only will the cooling effect within the server decrease, causing the server to malfunction, but also may allow dust to enter the server, resulting in fire or electrical shock.

**Do not get your fingers caught in the rails**

When mounting/removing the server onto/from the rack, be careful to avoid getting your fingers caught in the rails or cutting your fingers on the rails.

⚠ CAUTION**Do not apply any weight on the server when it is extended from the rack**

Do not apply force on the server when it is extended from the rack. Doing so cause the frames to bend, which makes it impossible to be mounted on the rack. It also may cause the server to fall, resulting in personal injury.

**Do not attempt to connect or disconnect the interface cable while the power cord is plugged into an outlet**

Be sure to unplug the power cord from a power outlet before connecting/disconnecting any interface cable to/from the server. If the server is off-powered but its power cord is plugged to a power source, touching a cable or connector may cause an electric shock or a fire resulted from a short circuit.

Use only the specified interface cable.

Use only interface cables provided by NEC and locate a proper device and connector before connecting a cable. Using an authorized cable or connecting a cable to an improper destination may cause a short circuit, resulting in a fire.

Also, observe the following notes on using and connecting an interface cable.



- Do not use any damaged cable connector.
- Do not step on the cable.
- Do not place any object on the cable.
- Do not use the server with loose cable connections.
- Do not use any damaged cable.

Cleaning and working with internal devices

⚠ WARNING**Do not disassemble, repair, or alter the server.**

Never attempt to disassemble, repair, or alter the server on any occasion except as described in this document. Failure to follow this warning may cause not only malfunction of the server but also an electric shock or fire.

**Do not attempt to remove lithium, NiMH, or Li-ion batteries.**

The server contains the lithium, NiMH, or Li-ion battery (some optional devices have a lithium, NiMH, or Li-ion battery installed). Do not remove the battery. Placing a battery close to a fire or in the water may cause an explosion.



When the server does not operate appropriately due to the dead battery, contact the store you purchased the product or your maintenance service company. Do not attempt to disassemble the server to replace or recharge the battery by yourself.

**Disconnect the power plug before cleaning the server.**

Be to power off the server and disconnect the power plug from a power outlet before cleaning or installing/removing internal optional devices. Touching any internal device of the server with its power cord connected to a power source may cause an electric shock even of the server is off-powered.

Occasionally disconnect the power plug from the outlet and clean the plug with a dry cloth. Heat will be generated if condensation is formed on a dusty plug, which may cause a fire.

⚠ CAUTION**High temperature**

Components including internal Hard Disk Drives in the server are extremely hot just after the server is turned off. Allow the surface to cool before installing/removing.

**Secure cables or cards in place**

Be sure to secure the power cord, interface cables, and cards in place. Incomplete installation causes a loose connection, resulting in smoke or fire

**Electric shock**

The cooling fans, Hard Disk Drives, and power supply unit (only when two servers are installed) support hot swapping. If replacing a component when the electrical current is being supplied, use extreme caution not to get electric shock by touching terminal parts of the internal components.

During operation**⚠ CAUTION****Do not pull out or remove the server from the rack.**

Do not pull the server out of the rack or remove it from the rack. In addition to causing equipment to not function properly, separating the server from the rack may result in personal injury.

**Avoid contact with the server during thunderstorms.**

Do not touch any part of the server including the cables when a thunderstorm is approaching. Also, do not connect or disconnect any devices. There may be a risk of electric shock from lightning strike.

**Keep animals away from the server.**

Keep animals such as pets away from the server. Pet hair or other waste enters the server, which may cause a fire or electric shock.

**Do not leave the optical disk drive tray open.**

Dust may get in the server when the tray is open, which may result in a malfunction. In addition, bumping the open tray could cause personal injury.

**Do not remove the server from the rack while it is operating.**

Do not pull out or remove the server from the rack while the server is running. In addition to causing equipment to not function properly, separating the server from the rack may result in personal injury.

**Do not place any object on top of servers.**

Separating the server from the rack may result in personal injury and damage to nearby personal belongings.

**Do not get yourself caught in the fan**


Keep your hands and hair away from the cooling fan at the rear of the server during operation. Failure to observe this warning may cause your hands or hair to catch in the fan, resulting in personal injury.

Warning labels

Warning label are attached on or near the components with potential hazards (This label is either attached or printed on the component.) to draw attention from users to potential hazards involved in handling the server. (Do not remove or black out this label and keep it clean). If no label is attached or printed on the server, or if there is a label coming off or stained, contact the store where you purchased the product.

External view

ex. Express5800/R120e-1E (3.5-inch Drive Model)

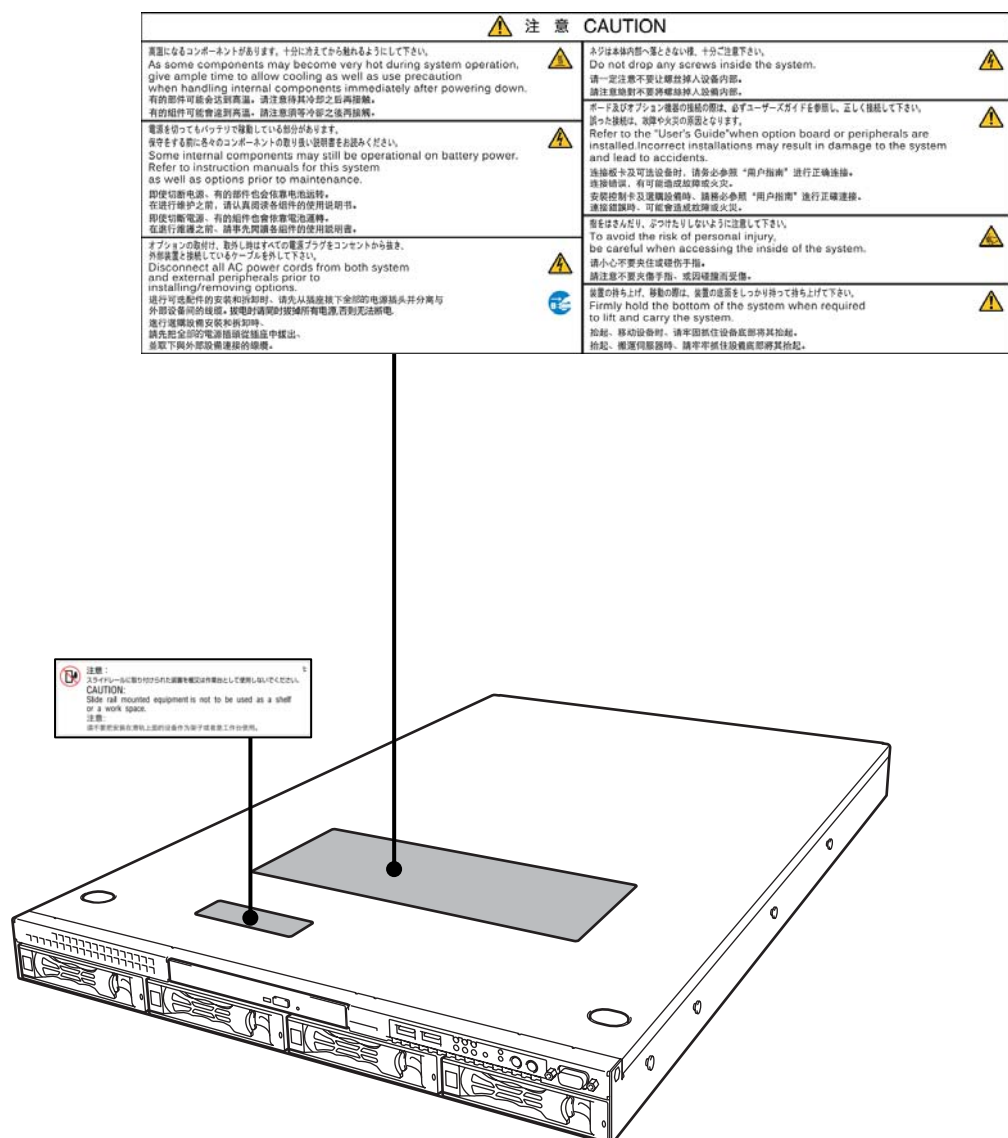

Handling precautions (for proper operations)

Be sure to observe the following precautions for the proper functioning of the server. Ignoring the precautions may cause server malfunction or failure.

- To avoid the influence of electric waves, switch off any cell phone or PHS near the server.
- Place the server in an appropriate location. For details, refer to *Chapter 2 (2. Installation and Connection)*.
- Before connecting/removing cables to/from peripheral devices, make sure that the server is off and unplug the power cord.
- Connect the provided power cord to a 100/200 V AC outlet.
- Make sure that the access LED on the server is off before turning off the power or ejecting an optical disk.
- Wait for at least 30 seconds before connecting power card to the server after unplugging the power card.
- If any Uninterruptible Power Supply unit is connected, set it to wait for at least 30 seconds before turning on the server after power off.
- After connecting power cord to the server, do not press the POWER switch/LED before the POWER LED (amber) is unlit.
- Wait for at least 30 seconds before connecting power cord to power outlet after disconnecting it.
- Turn off the server and unplug the power cord before moving it.
- Regularly clean the server to prevent various types of failure. (Refer to *Chapter 1 (2. Daily Maintenance)* in "*Maintenance Guide*" for details about cleaning.)
- Momentary voltage drop may occur due to lightning strike. To prevent this, use of UPS is recommended.
- We do not guarantee that any copy-protected CD that does not conform to standards will play on the CD player.
- In the following cases, check and adjust the system clock before operation.
 - After transportation
 - After storage
 - After the server is used following a period of disuse, in which storage conditions did not conform to those that guarantee server operations (temperature: 10°C to 40°C; humidity: 20% to 80%).
- Check the system clock approximately once per month. Use of a time server (NTP server) is recommended if high accuracy timing is required by the system.
- Observe the storage conditions (Temperature: -10°C to 55°C, Humidity: 20% to 80%, No condensation of moisture) to store the server.
- Do not power off or reset the server, nor disconnect the power cord before POST completes.
- If this server, internal optional devices, and media set for the backup devices (tape cartridges) are moved from a cold place to a warm place in a short time, condensation will occur and cause malfunctions and failures when these are used in such state. To protect important stored data and property, make sure to wait for a sufficient period to use the server and components in the operating environment.
 Reference: Time effective at avoiding condensation in winter (more than 10°C differences between the room temperature and atmospheric temperature)
 - Disk devices: Approximately 2 to 3 hours
 - Tape media: Approximately 1 day
- For optional devices, we recommend you use our NEC products. Even if they are successfully installed or connected, installation of unsupported devices can cause the server to malfunction or even failure. You will be charged to repair failure or damage caused by use of such products even within warranty period.

Handling precautions (Anti-static Measures)

The server contains electronic components sensitive to static electricity. Avoid failures caused by static electricity when installing or removing any optional devices.

- **Wear a wrist strap (an arm belt or anti-static glove)**

Wear a wrist strap on your wrist and provide earthing before starting work. If no wrist strap is available, discharge static electricity from your body by touching an unpainted metal part of the chassis which is grounded.

- **Select a suitable work space**

- Work with the server on the anti-static or concrete floor.
- When you work with the server on a carpet where static electricity is likely to be generated, be sure to take anti-static measures beforehand.

- **Use a work table**

Place the server on an anti-static mat to work with.

- **Clothing**

- Do not wear wool or synthetic clothes.
- Wear anti-static shoes.
- Take off any jewels (a ring, bracelet, or wrist watch) before working with the server.

- **Handling of components**

- Keep any component in an anti-static bag until you actually install it to the server.
- Hold any component by its edge to avoid touching any terminals or parts.
- To store or carry any component, place it in an anti-static bag.

- **Handling of cables**

When connecting a cable (e.g., LAN cable), static electricity may also be charged due to friction against floor.

Connecting a charged cable with an I/O device may cause damage to the device.

It is recommended to discharge static electricity before connecting a cable by using ionizer or the like.

Consult with your sales representative for apparatus to discharge static electricity.

- **Installing/removing optional devices**

- To avoid electric hazard and malfunction of the device, be sure to turn off the Power switch of the server and unplug the power cord from outlet before starting work, except for hot-swappable devices.
- Optional devices contain electronic components sensitive to static electricity. Avoid failures caused by static electricity when installing or removing any optional devices.

Tips for your health and safety

Using a computer extensively may affect different parts of your body. Here are tips you should follow while working on a computer to minimize strain on your body.

Keep proper posture


The basic body position for using a computer is sitting straight with your hands on the keyboard parallel with the floor, and your eyes directed slightly downward toward the monitor. With the proper posture described above, no unnecessary strain is applied on any part of your body, in other words when your muscles are most relaxed.

Working on the computer with bad posture such as hunching over or being too close to the monitor could cause fatigue or deteriorated eyesight.




Adjust the angle of your display

Most display units are designed for adjustment of the horizontal and vertical angles. This adjustment is important to prevent the screen from reflecting bright lights and to make the display contents easy to see. Working without adjusting the display to a comfortable angle makes it difficult for you to maintain a proper posture and you will get tired easily. Adjust the viewing angle before use.

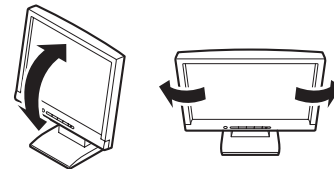


Adjust the brightness and contrast of the display

Display screens have functions to control brightness and contrast. The most suitable brightness/contrast depends on age, individuals, and environment, so adjust it to suit your preferences. A too bright or too dark display is bad for your eyes.

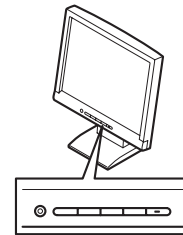

Adjust the angle of keyboard

Some keyboards are ergonomically designed, which allow the angle to be adjusted. Adjusting the angle of the keyboard is effective to reduce tension on your shoulders, arms, and fingers.

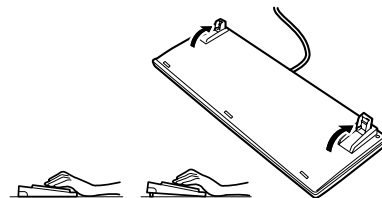

Clean your equipment


Keeping your equipment clean is important not only for the appearance but also for functional and safety reasons. A dusty monitor makes it difficult to see the display contents, so clean it regularly.

Take rest breaks

When you feel tired, take a break. Light exercise is also recommended.



NEC Express5800 Series Express5800/R120e-1E

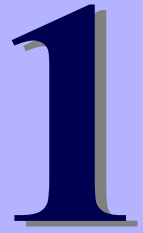

General Description

This chapter introduces the features of this server and the name of each part.

1. Introduction

2. Accessories

Verify the condition of your server's accessories.

3. Standard Features

Check and maintain the server system by using the functions explained in this section.

4. Names and Functions of Parts

This section describes the name of each part contained in this server.

1. Introduction

Thank you for purchasing this NEC Express5800 Series product.

This high performance server is powered by the latest microprocessor "Intel® Xeon® processor.

NEC's latest technology and architectures realize high-power and high-speed operation that cannot be matched by existing servers.

The server is designed with consideration of not only reliability but also expandability, which enables you to use it as a network server.

Read this document before using the server thoroughly to fully understand handling of Express5800 Series Server and appreciate its functions to the maximum extent.

2. Accessories

The carton box contains various accessories which are required for setup or maintenance. **Make sure you have them all** for future use.

- Express5800/R120e-1E Server
- Slide Rail set
 - Inner rail R × 1
 - Inner rail L × 1
 - Outer rail R × 1
 - Outer rail L × 1
- EXPRESSBUILDER^{*1}
- SAS/SATA cable (It'll be attachment items by server composition.)
- Getting Started
- Use notes (Traditional Chinese version)

^{*1} Documents are stored in EXPRESSBUILDER. Adobe Reader is required to read the documents so make sure you have it installed in your PC.

Make sure you have all accessories and inspect them. If an accessory is missing or damaged, contact your sales representative.

Important


The chassis serial number plate and maintenance label is located on the server. If the serial number does not match the number on the warranty, you may not be guaranteed against failure even within the warranty period. Contact your sales representative if they do not match.

3. Standard Features

The server has the following standard features:

High performance

- Intel® Xeon® processor
- Intel® Turbo Boost Technology *1
- Intel® Hyper-Threading Technology *1
- High-speed memory access (DDR3L 1600 supported) *2
- High-speed disk access (SATA/SAS 6 Gbps supported)
- High-speed 1000BASE-T/100BASE-TX/10BASE-T (4 ports) interface (1Gbps/100Mbps/10Mbps supported)

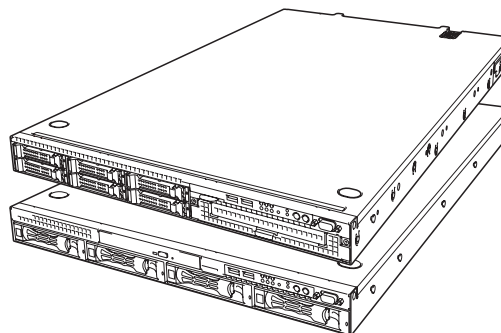

High reliability

- Processor throttle-ring feature
- Memory monitoring feature (error correction/error detection)
- Memory degeneracy feature (logical isolation of a failed device)
- Memory x4/x8 SDDC feature
- Memory mirroring, / Lockstep(x8 SDDC) / Sparing mode
- Memory throttle-ring feature
- Bus parity error detection
- Temperature detection
- Error detection
- Internal fan monitoring feature
- Internal voltage monitoring feature
- Power redundant feature (hot swapping supported)
- RAID system (disk array) (also available as an option)
- Auto rebuild function (hot swapping supported)
- BIOS password feature
- The security lock that comes with the front bezel

Management Utilities

- NEC ESM PRO
- ExpressUpdate
- Remote controlling feature (EXPRESSSCOPE Engine 3)
- RAID system management utility (Universal RAID Utility)
- Hard disk drive monitoring
- Power monitoring feature

Power saving and noiseless design

- Can select the best power supply unit according to system environment / load / configuration.
- Power monitoring feature
- Power control feature
- 80 PLUS® Platinum/Titanium certified high efficiency power supply
- Fan control appropriate to environment, work load, and configuration
- Silent sound design

- Enhanced Intel SpeedStep® Technology supported

Expandability

- PCI Express 3.0 (x16 lanes): 1 slot (low profile)
- PCI Express 2.0 (x4 lanes): 1 slot (low profile)
- PCI Express 3.0 (x8 lanes): 1 slot (dedicated to RAID Controller)
- Large capacity memory of up to 384 GB *3
- Can upgrade to multi-processor system with up to two processors
- 3.5-inch drive bay: 4 slots (3.5-inch Drive Model)
- 2.5-inch drive bay: 8 slots (2.5-inch Drive Model) *4
- Optical disk drive bay provided as standard *5
- USB2.0 interface
- Five LAN ports (one for management LAN)

Ready to use

- No cable connection is required to install a hard disk drive and additional power supply unit (hot swap supported).
- Sliding rails that allows easy installation.

Many built-in Features

- Redundant power supply system supported (valid when optional power supply unit is installed)
- El Torito Bootable CD-ROM (no emulation mode) format supported
- Software power-off
- Remote power-on feature
- AC-Link feature
- Remote console feature
- Power switch mask
- Connector for display unit provided on front panel
- Baseboard Management Controller (BMC) conforming to IPMI v2.0

Self-diagnosis

- Power On Self-Test (POST)
- Test and Diagnosis (T&D) utility

Easy setup

- EXPRESSBUILDER (setup utility)
- SETUP (BIOS setup utility)

Maintenance features

- Off-line Tools
- Memory dump feature using the DUMP switch
- Feature to back up and restore BIOS/BMC settings using the EXPRESSSCOPE profile key

- *1 May not be supported depending on the installed processor type.
- *2 Processor core speed depends on the number and type of CPU and DIMMs installed, and operating voltage (1.35/1.5 V).
- *3 In 2-CPU configuration. Up to 192 GB in 1-CPU configuration
- *4 With N8154-45 2.5-inch Hot Plug Drive Cage Kit installed. Six slots in standard configuration
- *5 Cannot be installed when N8154-45 2.5-inch Hot Plug Drive Cage Kit is installed

3.1 Management Features

The hardware components of the server provide operation control/reliability features as shown below. Additionally, *NEC ESMPRO Agent*, which is provided in EXPRESSBUILDER, enables you to collectively manage the state of your systems. You can also monitor the server states from a PC to manage the network where *NEC ESMPRO Manager* provided in EXPRESSBUILDER is installed.

The features available on this server are as shown in the table below.

Function		Availability	Description
Hardware			Shows physical hardware information.
	Memory bank	○	Shows physical memory information.
	Device info	○	Shows information specific to the server.
	CPU	○	Shows physical CPU information.
System		○	Shows logical CPU information and monitors the load factor. Shows logical memory information and monitors the status.
I/O device		○	Shows information on I/O devices (serial ports, keyboard, mouse, and video).
System environment			Monitors temperatures, fans, voltage, power supply, and others.
	Temperature	○	Monitors the temperature inside of the chassis.
	Fan	○	Monitors the fans.
	Voltage	○	Monitors the voltage inside of the chassis.
	Power supply	○	Monitors the power supply unit.
Software		○	Shows service, driver, and OS information.
Network		○	Shows network (LAN) information and monitors packets.
BIOS		○	Shows BIOS information.
Local polling		○	Monitors the values of MIB items obtained by NEC ESMPRO Agent.
Storage		○	Monitors controllers and storage devices including Hard Disk Drives.
File system		○	Shows the file system configuration and monitors the free space.
RAID System		○	Monitors the following RAID Controllers: • Optional RAID Controller (N8103-172/173/174/168)
Others*		○	Monitors OS stall using the Watch Dog Timer.
		○	Performs alert processing after an OS STOP error occurs.

○: Supported. △: Partially supported. ×: Unsupported.

*: Not displayed on the NEC ESMPRO Manager screen.

Tips

NEC ESMPRO Manager and NEC ESMPRO Agent are supplied with the server as standard. For how to install and use each software component, refer to the explanation of the component.

3.2 Firmware and Software Version Management

Use of NEC ESMPRO Manager and ExpressUpdate Agent allows you to manage versions of firmware and software as well as update them by applying update packages.


This function automatically updates multiple modules without stopping the system just by specifying the application of an update package from NEC ESMPRO Manager.

4. Names and Functions of Parts

This section describes the names of the server parts.

4.1 Front View

Express5800/R120e-1E (2.5-inch Drive Model)

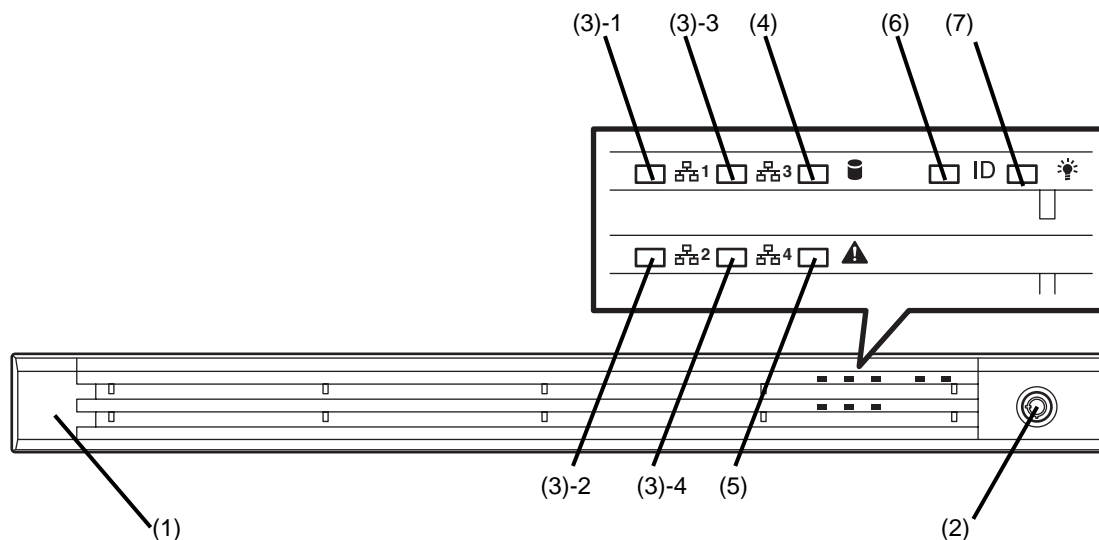

(1) Front Bezel

The cover to protect the front of the server. This cover can be locked with the provided Bezel Lock Key.

(2) Key slot

The key slot for Bezel Lock Key that is used to lock Front Bezel.

(3) LINK/ACT LED (green)

This LED turns on when the server is connected to the network.

Sequential numbers 1, 2, 3 and 4 indicate LAN connectors 1, 2, 3 and 4, respectively.

(4) Disk Access LED (green/amber)

This LED lights green when the internal hard disk drive is being accessed.

An amber light turns on if a hard disk drive is broken, and a light flashes green and amber alternately when a hard disk drive is being rebuilt. (RAID System only)

(5) STATUS LED (green/amber)


This LED indicates the server status. It lights green when the server is operating normally. If a failure is detected, it turns on or flashes amber.

(6) Unit ID (UID) LED (blue)

This LED turns on when the UID switch is pressed. Commands from the software also cause it to turn on or flash.

(7) POWER LED (green/Amber)

This LED lights green when the power is ON. This LED lights amber until the server becomes ready to power on after the power cord is connected.

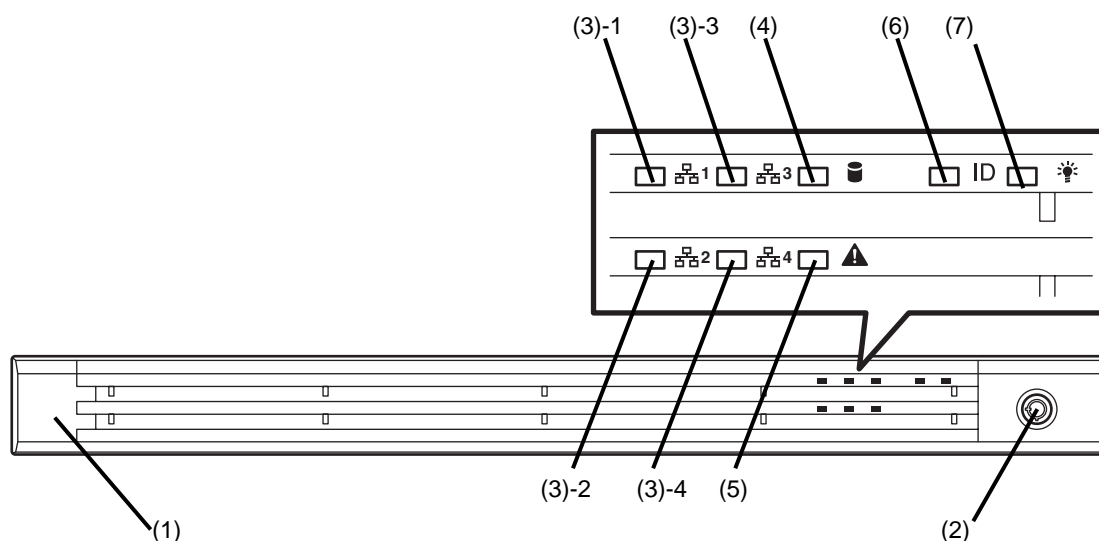Express5800/R120e-1E (3.5-inch Drive Model)**(1) Front Bezel**

The cover to protect the front of the server. This cover can be locked with the provided Bezel Lock Key.

(2) Key slot

The key slot for Bezel Lock Key that is used to lock Front Bezel.

(3) LINK/ACT LED (green)

This LED turns on when the server is connected to the network.

Sequential numbers 1, 2, 3 and 4 indicate LAN connectors 1, 2, 3 and 4, respectively.

(4) Disk Access LED (green/amber)

This LED lights green when the internal hard disk drive is being accessed.

An amber light turns on if a hard disk drive is broken, and a light flashes green and amber alternately when a hard disk drive is being rebuilt. (RAID System only)

(5) STATUS LED (green/amber)

This LED indicates the server status. It lights green when the server is operating normally. If a failure is detected, it turns on or flashes amber.

(6) Unit ID (UID) LED (blue)


This LED turns on when the UID switch is pressed. Commands from the software also cause it to turn on or flash.

(7) POWER LED (green/amber)

This LED lights green when the power is ON. **This LED lights amber until the server becomes ready to power on after the power cord is connected.**

4.2 Front View (with the Front Bezel Removed)

Express5800/R120e-1E (2.5-inch Drive Model)

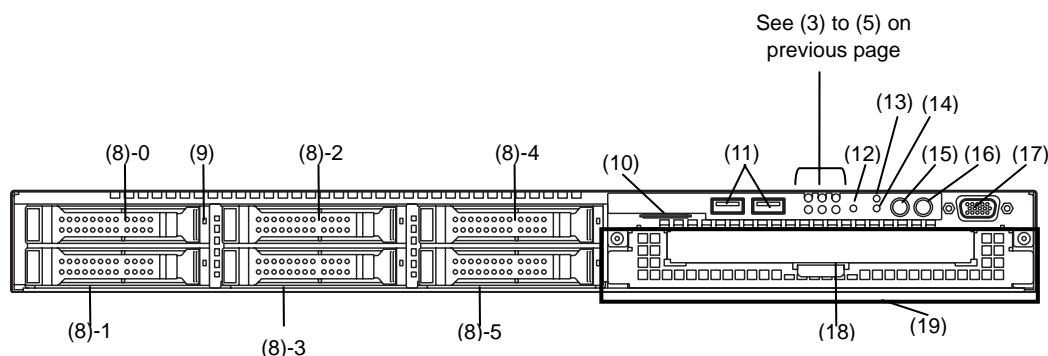

(8) 2.5-inch Drive Bay

The bay where hard disk drives are installed. The sequential numbers indicate the corresponding port numbers. All bays include dummy trays.

(9) DISK LED (green/amber)

The LED provided for each hard disk drive
This LED light turns green when a hard disk drive is being accessed. The light turns amber if a hard disk drive is broken and it flashes green and amber alternately when a hard disk drive is being rebuilt. (Only applied to RAID System)

(10) Pull-out Tab

A label indicating the part number and serial number of the server is located on the pull-out tab.

(11) USB connectors (front)

These connectors are used to connect devices that support the USB interface.

(12) BMC RESET Switch

The switch to reset BMC of this server. Use the switch only when there is something wrong with EXPRESSSCOPE Engine 3 (BMC).

To use this switch, press it at least five seconds.

(13) Reset Switch

When the Reset switch is pressed, the system is reset.

(14) DUMP Switch (NMI)

When the DUMP switch is pressed, memory dump is performed.

(15) Unit ID (UID) Switch/LED (blue)

The switch to turn on and off the UID LEDs provided at the front and rear of the server. Pressing the switch once turns on the UID LED and pressing once more turns off the LED. Commands from the software also cause it to turn on or flash.

(16) POWER Switch/LED (green/amber)

The switch to turn the server on and off. Press once to turn on the server. The Power LED lights green when it is on. Press it again to turn off the server. Hold down the switch for 4 seconds or more to forcibly turn off the server. This LED lights amber until the server becomes ready to power on after the power cord is connected.

(17) Display connector


Connect a display unit. This connector is exclusively used with the display connector on rear panel.

(18) Optical Disk Drive Bay (Option for R120e-1E)

The bay where the optical disk drive is installed.

(19) 2.5-inch HDD cage bay

The bay where N8154-45 2.5-inch HDD cage is installed.
Mutually exclusive with optical disk drive.

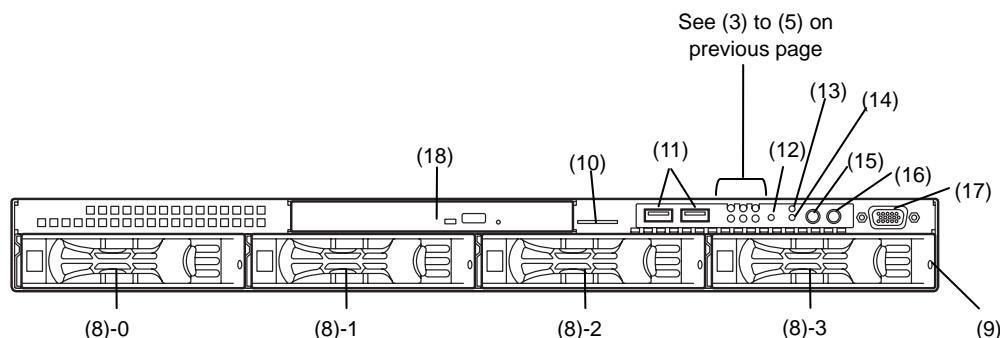Express5800/R120e-1E (3.5-inch Drive Model)**(8) 3.5-inch Drive Bay**

The bay where hard disk drives are installed. The sequential numbers indicate the corresponding port numbers. All bays include dummy trays.

(9) DISK LED (green/amber)

The LED provided for each hard disk drive
This LED light turns green when a hard disk drive is being accessed. The light turns amber if a hard disk drive is broken and it flashes green and amber alternately when a hard disk drive is being rebuilt. (Only applied to RAID System)

(10) Pull-out Tab

A label indicating the part number and serial number of the server is located on the pull-out tab.

(11) USB connectors (front)

These connectors are used to connect devices that support the USB interface.

(12) BMC RESET Switch

The switch to reset BMC of this server. Use the switch only when there is something wrong with EXPRESSSCOPE Engine 3 (BMC).

To use this switch, press it at least five seconds.

(13) Reset Switch

When the Reset switch is pressed, the system is reset.

(14) DUMP Switch (NMI)

When the DUMP switch is pressed, memory dump is performed.

(15) Unit ID (UID) Switch/LED (blue)

The switch to turn on and off the UID LEDs provided at the front and rear of the server. Pressing the switch once turns on the UID LED and pressing once more turns off the LED. Commands from the software also cause it to turn on or flash.

(16) POWER Switch/LED (green/amber)

The switch to turn the server on and off. Press once to turn on the server. The Power LED lights green when it is on. Press it again to turn off the server. Hold down the switch for 4 seconds or more to forcibly turn off, the server.

This LED lights amber until the server becomes ready to power on after the power cord is connected.


(17) Display connector

Connect a display unit. This connector is exclusively used with the display connector on rear panel.

(18) Optical Disk Drive Bay (Option for R120e-1E)

The bay where the optical disk drive is installed.

4.3 Rear View

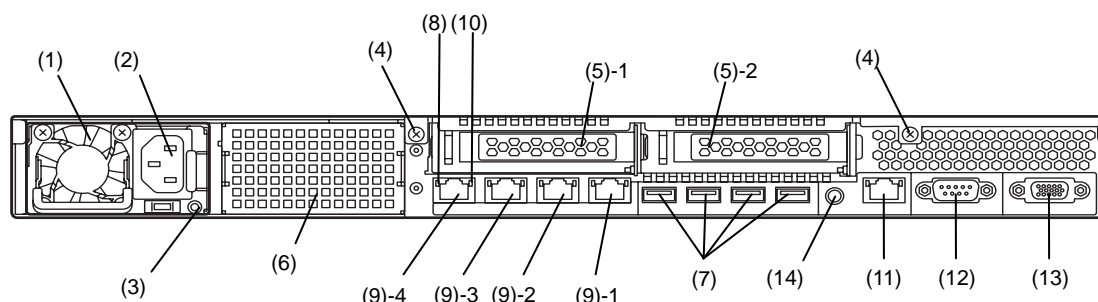

(1) Power Unit (Poser Supply Slot)

This unit supply DC power.

(2) AC Inlet

This socket is used to connect the power cord.

(3) AC POWER LED (green/amber)

This LED indicates status of Power unit.

(4) Screw of Top Cover

Used to secure the top cover.

(5) PCI slot

The slot is used to install the low profile type PCI board.
The sequential numbers indicate the corresponding slot numbers.

(5)-1: PCI Slot 1B

(5)-2: PCI Slot 1C

(6) Blank cover (for additional power supply unit)

Remove this cover to install an optional power supply unit.

(7) USB connectors

These connectors are used to connect devices that support the USB interface.

(8) LINK/ACT LED (green)

The LED indicates the access status of LAN.

(9) LAN connectors

1000BASE-T/100BASE-TX/10BASE-T supported Ethernet connectors.

(9)-1: LAN port connector 1 (9)-2: LAN port connector 2

(9)-3: LAN port connector 3 (9)-4: LAN port connector 4

If Shared BMC LAN feature is enabled in ROM Utility, LAN connector 1 can also be used as the management LAN port. However, sharing port is not recommended from the point of performance and security, because LAN port 1 may receive both data.

(10) SPEED LED (green/amber)

The LED indicates the transfer speed of LAN ports.

(11) Management LAN Port

Ethernet connector which supports 100BASE-TX/10BASE-T. This port cannot be used as a data transmission port. This port is used for connecting to EXPRESS SCOPR ENGINE 3.

(12) Serial port A (COM A) connector

This connector is used to connect devices that support a serial interface. Note that it is not possible to directly connect to a dedicated line.

(13) Display connector

The connector to connect the display.


This connector is exclusively used with the display connector on front panel.

(14) UID (Unit ID) Switch/LED (blue)

The switch to turn on and off the UID LEDs provided at the front and rear of the server. Pressing the switch once turns on the UID LED and pressing once more turns off the LED.

4.4 External View

ex. Express5800/R120e-1E (3.5-inch Drive Model)

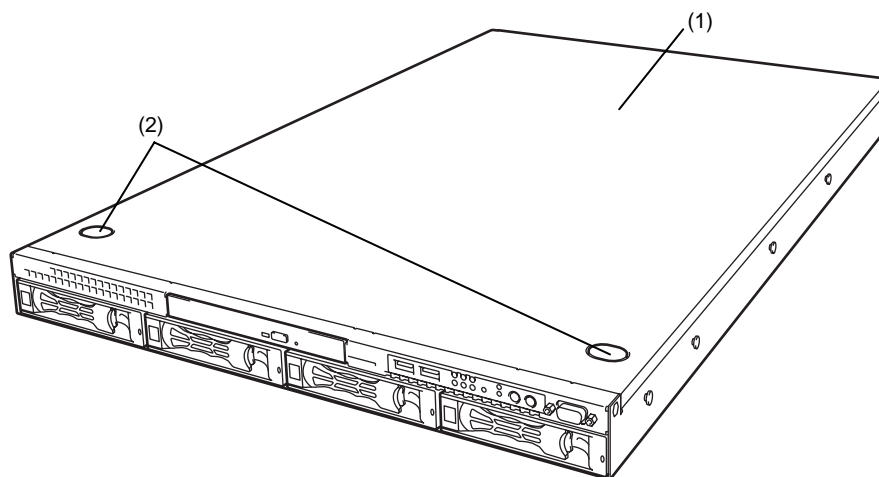


(1) Top Cover

(2) Release Button.

4.5 Internal View

The image below does not show the processor duct.

ex. Express5800/R120e-1E (2.5-inch Drive Model)

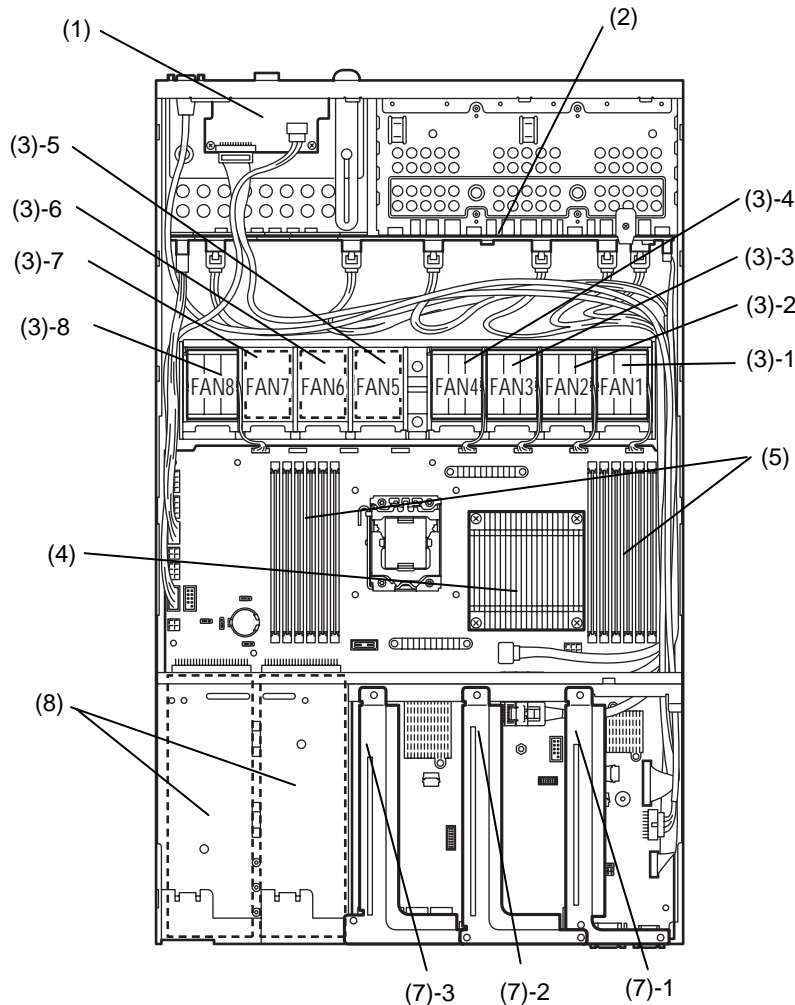


- | | |
|-------------------------|--|
| (1) Front Panel Board | (4) Processor (attached under the heat sink) |
| (2) HDD Backplane Board | (5) DIMM (optional) |
| (3) Cooling fan* | (6) Motherboard(MB) |
| -1 FAN1F/R | (7) PCI Riser Card |
| -2 FAN2F/R | -1 Riser A (Raid Controller Only) |
| -3 FAN3F/R | -2 Riser B |
| -4 FAN4F/R | -3 Riser C |
| -5 FAN5F/R (Option) | (8) Power Supply Unit |
| -6 FAN6F/R (Option) | |
| -7 FAN7F/R (Option) | |
| -8 FAN8F/R | |

FANs 1 to 4, and FAN8: Standard configuration
FANs 5 to 7: 2-CPU configuration

* The double inversion feature is used for cooling fan.
"F" indicates a fan installed at the front side of server,
and "R" at the rear side.

4.6 Motherboard (MB)

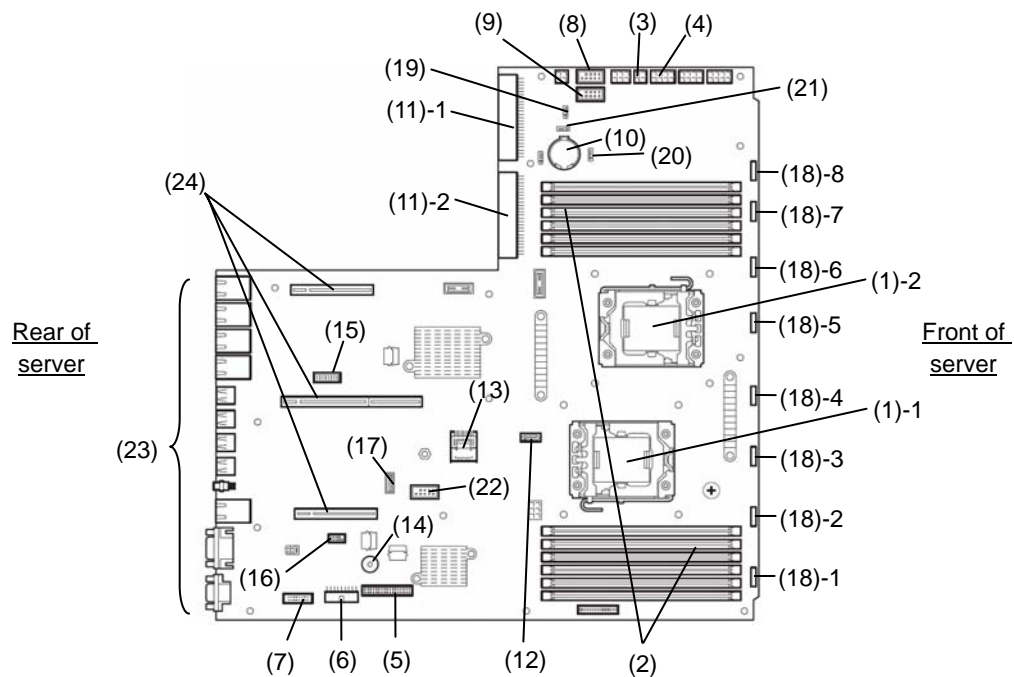

- | | |
|---|--|
| (1) Processor (CPU) socket | (17) TPM Kit connector |
| -1 Processor#1 (CPU#1) | (18) FAN connector |
| -2 Processor#2 (CPU#2) | -1 FAN1F/R |
| (2) DIMM slots | -2 FAN2F/R |
| (the number after hyphen indicates slot number) | -3 FAN3F/R |
| (3) SATA Optical Disk Drive power connector | -4 FAN4F/R |
| (4) HDD Backplane Board power connector | -5 FAN5F/R |
| (5) Front Panel connector | -6 FAN6F/R |
| (6) Front VGA connector | -7 FAN7F/R |
| (7) HDD Backplane Board Signal connector | -8 FAN8F/R |
| (8) USB connector (front) | (19) Clear Password Jumper |
| (9) USB memory module / USB Back Up Device connector | (20) RAID Configuration Jumper |
| (10) Lithium battery | (21) Clear CMOS Jumper |
| (11) PSU connector | (22) EXPRESSBUILDER Kit connector |
| -1 default (POW#1) | (23) External connector |
| -2 redundant (POW#2) | (24) PCI Riser connector |
| (12) SATA Optical Disk Drive signal connector | -1 Riser A |
| (13) SATA connector | -2 Riser B |
| (14) Buzzer | -3 Riser C |
| (15) COM connector (for Option N8117-01A) | Refer to Chapter 2 (1.13 PCI Card) for available card. |
| COM port B when N8117-01A is used. | |
| (16) SPI mezzanine card connector | |
| EXPRESSSCOPE Profile Key has been installed, where | |
| BIOS and BMC configuration data is stored. Move it when | |
| replacing MB to keep using the data | |

4.7 Status Indicators

This section explains the indication and meanings of the server LEDs.

4.7.1 POWER LED ()

POWER LED lights green when the server is on. The light turns off when power is not being supplied to the server. The POWER LED lights amber until the server becomes ready to power on after power cord is connected to the server.

POWER LED pattern	Explanation
On (green)	The server is normally powered on.
On (amber)	BMC is being initialized. When the power cord is connected, the LED goes on amber for approximately 40 seconds. <u>Do not power on the server while the LED is lit amber.</u>
Off	The server is off-powered. The server is in halt status.

4.7.2 STATUS LED ()

While hardware is operating normally, STATUS LED lights green. STATUS LED is off or lights/flashes amber if there is a problem with hardware.

The following table lists STATUS LED patterns, their explanation and solution.

Tips

You can reference error logs to check the causes of failures by using NEC ESMPRO.

STATUS LED pattern	Explanation	Solution
On (green)	Normal state	–
Flashing (green)	Memory is in a degraded state	Identify the device in degraded state by using the BIOS setup utility <i>SETUP</i> , and replace it as soon as possible.
	An uncorrectable memory error has often occurred.	
	Operating while CPU error is detected	
	In redundant power configuration, power is not supplied to either of power unit.	
Off	The power is off.	Turn on the server.
	POST is in progress.	Wait for a while. STATUS LED will turn green after POST completes.
	Watchdog timer expired.	Turn the power off and then turn it on. If the POST screen displays any error message, take notes of the message, and contact your sales representative.
	An uncorrectable error in memory is detected.	
	Memory dump is being requested. (e.g. when DUMP switch NMI is pressed) It remains green if the dump is caused by software.	Wait until the memory dump is completed.

STATUS LED pattern	Explanation	Solution
On (amber)	A temperature alarm was detected.	Check the internal fan for dusts. Also check if the fan unit is properly connected. If the LED indication does not change when the fans are normal, contact your sales representative.
	A CPU error occurred.	Turn the power off and then turn it on. If the POST screen displays any error message, take notes of the message, and contact your sales representative.
	Abnormal CPU temperature is detected.	
	A PCI system error occurred	
	A PCI parity error occurred	
	A PCI bus error occurred.	
	A voltage alarm was detected.	Contact your sales representative.
	Fan error was detected.	
	Sensor error was detected.	
	A CPU temperature alarm was detected.	
	An error occurred on Node Manager of EXPRESSSCOPE Engine 3.	
Flashing (amber)	The power supply unit is broken.	Connect the power cord to supply power. If the power supply unit is faulty, contact your sales representative.
	A fan alarm was detected.	Check if the internal fan cable is properly connected. If the LED indication does not change when the fans are normal, contact your sales representative.
	A temperature warning was detected.	Check the internal fan for dusts. Also check if the fan unit is properly connected. If the LED indication does not change when the fans are normal, contact your sales representative.
	A voltage warning was detected	Contact your sales representative.
	One or more hard disk drives are broken.	

4.7.3 LINK/ACT LED (1, 2, 3, 4)

The LED lights green when it is connecting to LAN and flashes when transmitting or receiving data on LAN. The number next to the icon indicates a network port number.

LINK/ACT LED pattern	Explanation
On (green)	The server and hub are powered and properly connected
Flashing (green)	The network port is transmitting or receiving data.
Off	Check the cable or connection

4.7.4 Disk Access LED ()

DISK Access LED on a hard disk drive to be installed in the drive bay indicates different states.

DISK Access LED pattern	Explanation
On (green)	This indicates a hard disk drive is being accessed
On (amber)	This indicates that the hard disk drive is failing.
Flashing (green and amber alternately)	This indicates that a hard disk drive is being rebuilt.
Off	Hard disk drive is halted.

4.7.5 **Optical disk access LED**

The access LED for optical disk drive at the front of the server flashes when a CD or DVD is being accessed.

4.7.6 **UID LED (ID)**

The UID LED is provided one each at the front and rear of the server. If you press the UID switch provided at the front or rear of the server, the light turns on. If you press it again, the light turns off. It flashes when commands from software are received. This LED is used to identify the target server among multiple servers installed in a rack. Especially when performing maintenance from behind the server, lighting the LED will help you to identify which server to work with.


UID LED pattern	Explanation
On (blue)	The UID switch is pressed (ON).
Off	The UID switch is not pressed (OFF).

Tips

You can turn on or flashing an LED using remote management software.

4.7.7 **LED on a hard disk drive**

DISK LED on a hard disk drive to be installed in the drive bay indicates different states.

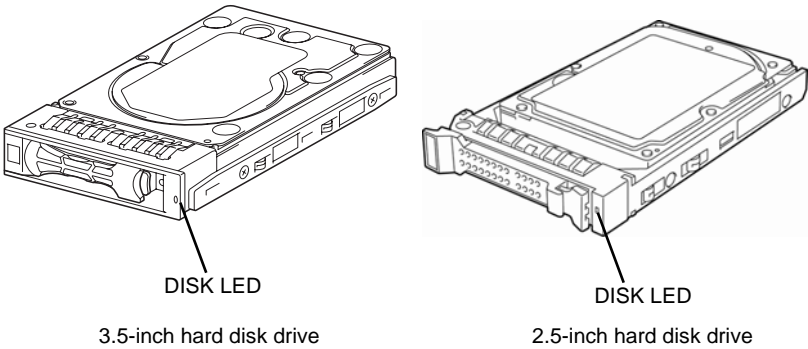

DISK Access LED pattern	Explanation
On (green)	This indicates the hard disk drive is being accessed.
Flashing (amber)	When logical drives are configured in the RAID system, this indicates the installed hard disk drive is broken. In RAID system having data redundancy (RAID1, RAID5, RAID6, RAID10, RAID50, or RAID60), the server can continue operation even if one (or two hard disk drives in RAID6 or RAID60) of the hard disk drives fails. However, replace the hard disk drive as soon as possible, and perform reconstruction (rebuild) processing. (The failing hard disk drive can be replaced in hot swap mode.)
Flashing (green and amber alternately)	This indicates that a hard disk drive is being rebuilt (not a defect). In a RAID system, the hard disk drive is automatically rebuilt upon replacing a broken hard disk drive (auto rebuild feature). The LED flashes green and amber alternately while the hard disk drive is being rebuilt. The LED goes off when rebuilding completes. If rebuilding fails, the LED flashes amber.
Off	Hard disk drive is halted.


Important

Observe the following precautions whenever you use the auto rebuild feature.

- Do not turn off or reboot the server while a hard disk drive is being rebuilt.
- Wait at least 90 seconds before installing a hard disk drive after removing one.
- Do not replace a hard disk drive while another hard disk drive is being rebuilt.

4.7.8 LEDs for LAN connectors

The five LAN connectors provided at the rear of the server have two LEDs each.

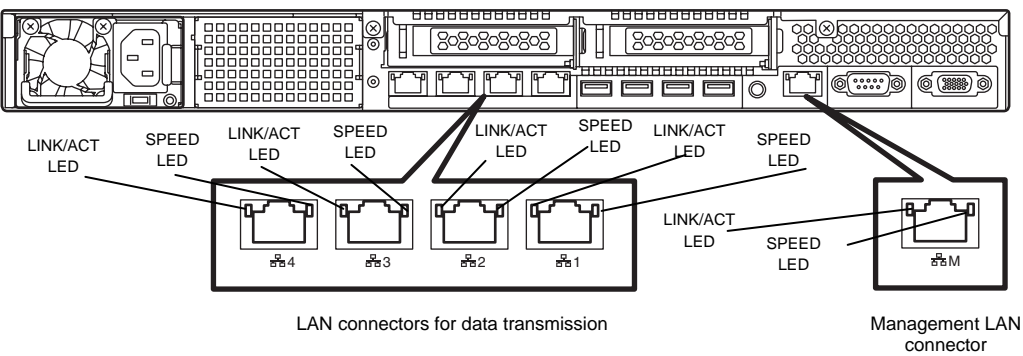

- LINK/ACT LED (1, 2, 3, 4, M)

This LED indicates the state of the LAN port.

LINK/ACT LED pattern	Explanation
On (green)	The server and hub are powered and properly connected
Flashing (green)	The network port is being accessed.
Off	Check the cable or connection


- SPEED LED (1, 2, 3, 4, M)

This LED indicates which network interface is used.

- The four LAN connectors for data transmission support 1000BASE-T, 100BASE-TX, and 10BASE-T.
- Management LAN port supports 100BASE-TX and 10BASE-T.

SPEED LED pattern	Explanation
On (amber)	Operating with 1000BASE-T
On (green)	Operating with 100BASE-TX
Off	Operating with 10BASE-T

4.7.9 AC POWER LED (POWER Supply Unit)

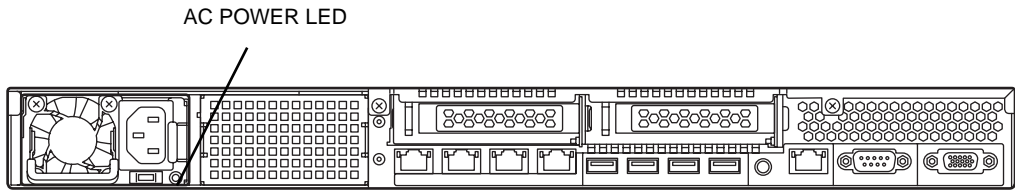

Standard power supply unit

AC POWER LED pattern	Explanation	Recommended action
On (green)	The server is powered on.	—
Flashing (green)	The power cable is connected and AC power is supplied.	—
	Cold Redundant feature is enabled.	
On (amber)	The power cable is not connected in redundant power configuration.	Connect the power cable.
	Power supply unit is failing.	Contact your sales representative.
Flashing (amber)	Power supply unit is failing.	

NEC Express5800 Series Express5800/R120e-1E

2

Preparations

This chapter describes preparations for using this server.

1. Installing Internal Optional Devices

You can skip this section if you did not purchase any optional devices.

2. Installation and Connection

You must place the server in an appropriate location and connect cables following this section.

1. Installing Internal Optional Devices



This section describes the instructions for installing supported optional devices and precautions. If you did not purchase any optional device requiring installation, you may skip this section.



Important

- We recommend that optional devices be installed by a maintenance service staff from your maintenance service company, who has specialized knowledge of this server.
- Use only the devices and cables specified by NEC. You will be charged to repair damages, malfunctions, and failures caused by the use of any devices or cables not specified for use with this server even within the warranty period.

1.1 Safety Precautions

Be sure to observe the following precautions to install and remove optional devices properly and safely.

 WARNING	
	<p>Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause death or serious injury. For details, refer to <i>Safety precautions</i> in <i>Precautions for Use</i>.</p> <ul style="list-style-type: none"> • Do not disassemble, repair, or modify the server. • Do not remove the lithium battery, NiMH battery, or Li-ion battery. • Disconnect the power plug when installing and removing devices.

 CAUTION	
	<p>Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause burns, injury, and property damage. For details, refer to <i>Safety precautions</i> in <i>Precautions for Use</i>.</p> <ul style="list-style-type: none"> • Do not drop • Do not leave the server being pulled out. • Make sure to complete installation. • Do not install with the cover removed. • Do not get your fingers caught. • High temperature • Electrical shock

1.2 Anti-static Measures

The server and Optional Devices contain electronic components sensitive to static electricity. Avoid failures caused by static electricity when installing or removing any optional devices.

Wear a wrist strap (an arm belt or anti-static glove)

Wear a wrist strap on your wrist and provide earthing before starting work. If no wrist strap is available, discharge static electricity from your body by touching an unpainted metal part of the chassis which is grounded.

Select a suitable work space

- Work with the server on the anti-static or concrete floor.
- When you work with the server on a carpet where static electricity is likely to be generated, be sure to take anti-static measures beforehand.

Use a work table

Place the server on an anti-static mat to work with.

Clothing

- Do not wear wool or synthetic clothes.
- Wear anti-static shoes.
- Take off any jewels (a ring, bracelet, or wrist watch) before working with the server.

Handling of components

- Keep any component in an anti-static bag until you actually install it to the server.
- Hold any component by its edge to avoid touching any terminals or parts.
- To store or carry any component, place it in an anti-static bag.

To avoid electric hazard and malfunction of the device, be sure to turn off the Power switch of the server and unplug the power cord from outlet before starting work, except for hot-swappable devices.

Handling of cables


When connecting a cable (e.g., LAN cable), static electricity may also be charged due to friction against floor. Connecting a charged cable with an I/O device may cause damage to the device.

It is recommended to discharge static electricity before connecting a cable by using ionizer or the like. Consult with your sales representative for apparatus to discharge static electricity.

1.3 Overview of Installation and Removal

Install/remove components by using the following procedure.

Installing/removing internal components except for Hard Disk Drives should be done after dismounting the server from the rack. It is recommended that more than one person removes the server from the rack.

⚠ CAUTION	
	<p>Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause burns, injury, and property damage. For details, refer to <i>Safety precautions in Precautions for Use</i>.</p> <ul style="list-style-type: none"> • Do not drop the server • Do not leave the server pulled out of the rack • Replace the cover after installing components • Beware of high temperatures • Do not get your fingers caught when installing components

1. If the server is mounted on a rack, use the UID switch to identify the target server.

Refer to *Chapter 2 (1.4 Confirming Servers (UID Switch))*.

2. Remove the front bezel if applicable.

Refer to *Chapter 2 (1.5 Removing Front Bezel)*.

3. If the server is ON, turn it off.

Refer to *Chapter 3 (6. Turning Off the Server)*.

4. Disconnect the power cord from the outlet and the server.

Important

After disconnecting the power cord from the server, wait for at least 5 seconds before continuing to work because the components on the motherboard might still be operating for 3 to 4 seconds even after the power cord was disconnected.

5. You need to pull out the server from rack when installing or removing the following component:

Internal flash memory, TPM Kit, processor, DIMM, extra battery for RAID controller, PCI card, additional HDD cage, optical disk drive

Important

Do not leave the server open on the rack.

If you are going to install a hard disk drive only, go to step 10.

6. Remove the top cover.

Refer to *Chapter 2 (1.6 Removing Top Cover)*.

7. Depending on the components to be installed or removed, follow the procedure in order.
Refer to *Chapter 2 (1.7 Internal Flash Memory to 1.15 Use of Internal Hard Disk Drives in the RAID System)*.
8. Attach the top cover.
Refer to *Chapter 2 (1.16 Installing Top Cover)*.
9. Mount the server onto the rack.
Refer to *Chapter 2 (2.1.2 Installing the server to the rack or removing it from the rack)*.
10. Install Hard Disk Drives
Refer to *Chapter 2 (1.17 2.5-inch Hard Disk Drive)* and *Chapter 2 (1.18 3.5-inch Hard Disk Drive)*.
11. Install Power Supply Unit
Refer to *Chapter 2 (1.19 Power Supply Unit)*.
12. Attach the front bezel.
Refer to *Chapter 2 (1.5 Removing Front Bezel)*.

This is the end of the installation or removal procedures for internal optional devices.

Continue the setup with reference to *Chapter 2 (2.2 Connection)*.

1.4 Confirming Servers (UID Switch)


Using the UID switch helps you to identify the target server.

When the server is working or before you turn the server off or disconnect a cable from the server, **be sure to identify the target server by using the UID switch first.**


If UID (Unit ID) switch is pressed, UID LED will be on. If it is pressed again, the LED will be off.

<Front View>


Express5800/R120e-1E (2.5-inch Drive Model)

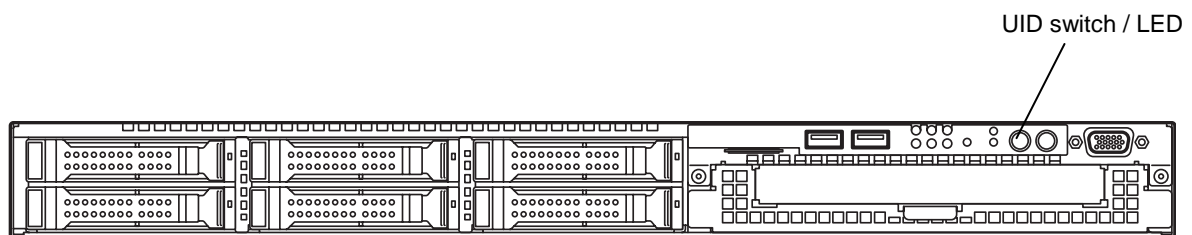

Express5800/R120e-1E (3.5-inch Drive Model)

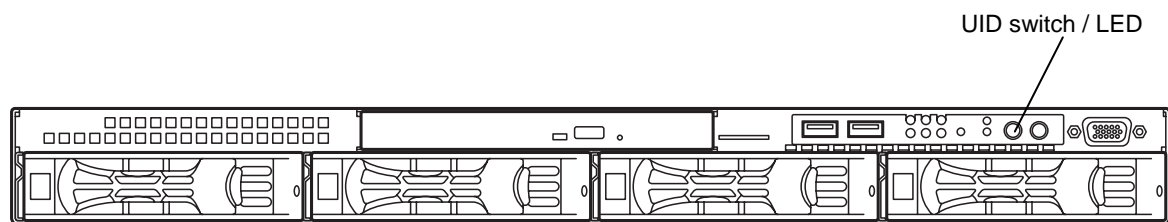


<Rear View>

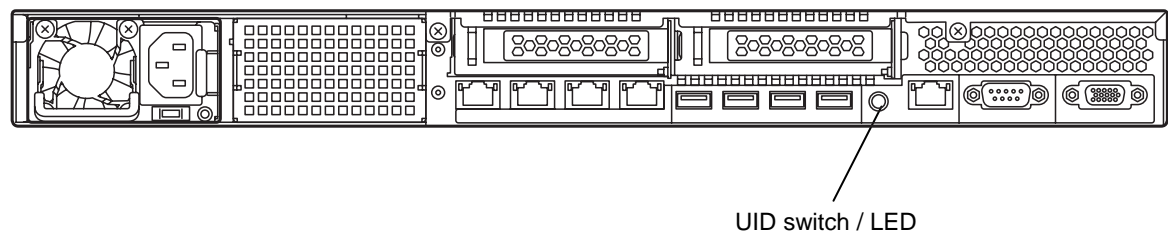


1.5 Removing Front Bezel

You need to remove the front bezel when manipulating POWER switch or removing the top cover.

1. Insert the attached security key into the key slot and turn the key to the front bezel side while pressing it lightly to release the lock.

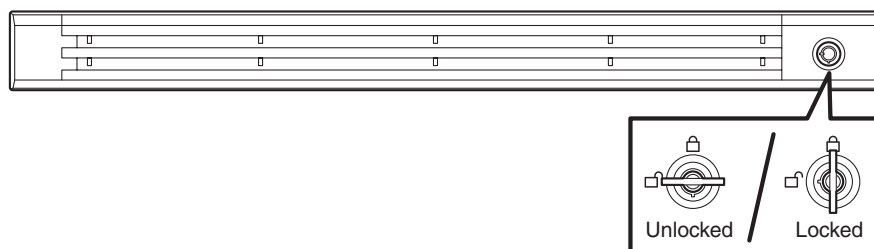

2. Pull the Front Bezel toward you to release the tab from the frame and then remove Front Bezel from the server.

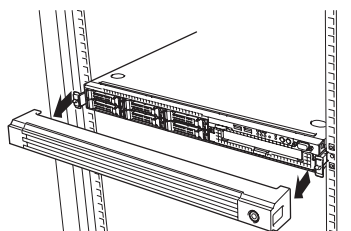**Note**

Be careful not to press POWER Switch.


1.6 Removing Top Cover

You need to remove top cover when installing or removing the following components or change internal cable connection:

Internal flash memory,	TPM Kit
Processor,	DIMM
Extra battery for RAID controller, PCI card	
Additional HDD cage,	Optical disk drive


Important Before removing the top cover, be sure to disconnect cables from PCI card such as LAN adapter. If not, cables may be damaged.

1. Refer to steps 1 to 5 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Remove two screws from rear of the server.
3. Slide the top cover toward the rear of the server.
4. Lift off the top cover from the server.

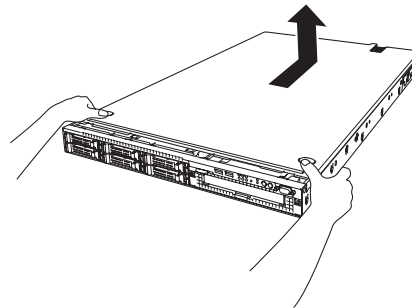

1.7 Internal Flash Memory


This section describes the procedure for installing the Internal Flash Memory.

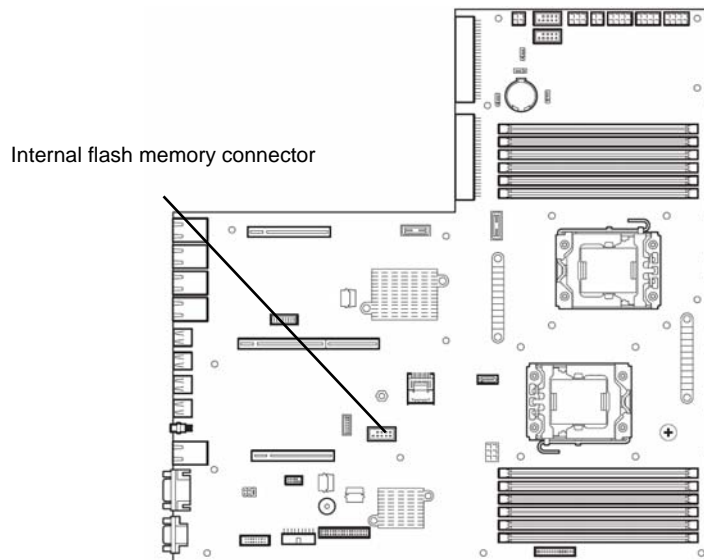


1.7.1 Installation

Install the Internal Flash Memory in the following procedure.

1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Lift the air duct and remove it.

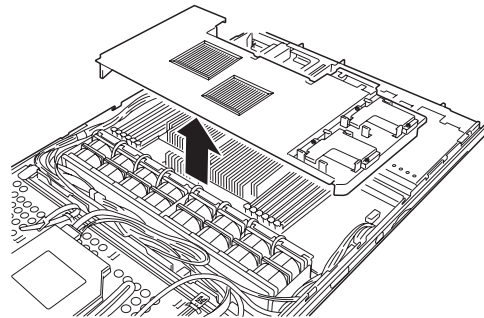

3. Attach the Internal Flash Memory and fix it with the screw provided with this product.

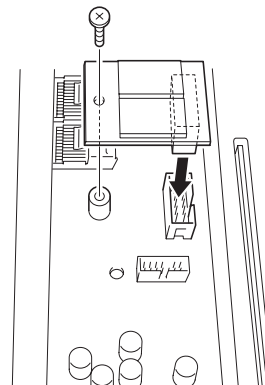


1.7.2 Removal

To remove the Internal Flash Memory, reverse the installation procedure.

1.8 TPM Kit

This section describes the procedure for installing optional TPM Kit.

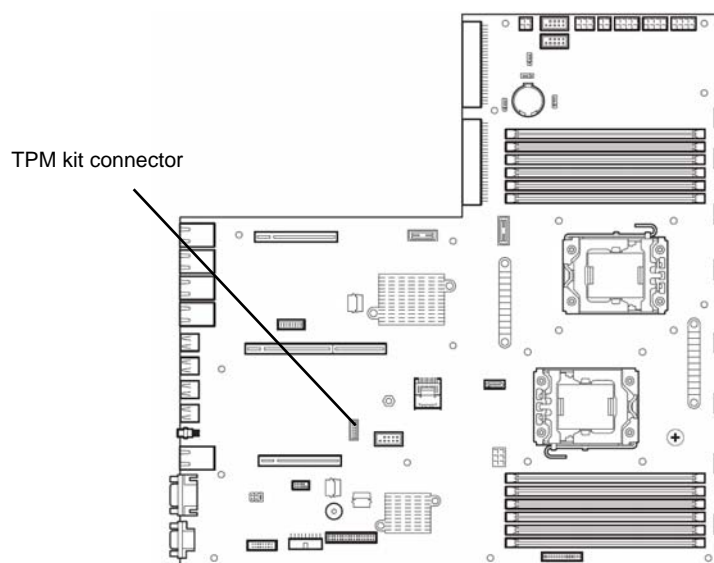


1.8.1 Installation

Install TPM Kit in the following procedure.


Note

The TPM kit once installed cannot be removed.

1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Lift the air duct and remove it.

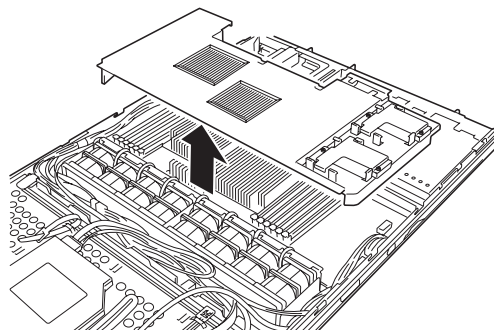

3. Install TPM Kit and secure it by pushing the nylon rivet provided with TPM Kit.

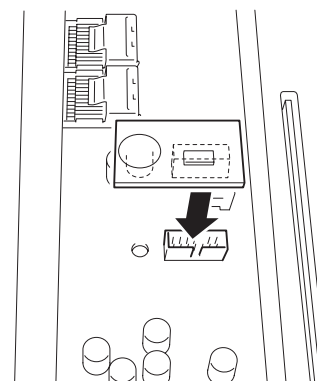

1.9 Processor (CPU)

The server may have another processor installed in addition to the standard processor, configuring multi-processor system.

Important

- You must avoid static electricity to work with the procedure below. For details, refer to *Chapter 2 (1.2 Anti-static Measures)*.
- Make sure to use the processor authorized by NEC. Installing a third-party processor may cause a failure of the processor as well as the motherboard. Repair of the server due to failures or damage resulted from installing such a processor will be charged.

Tips

If the different revision of the processor is installed in the multiprocessor system, Windows logs the following information and displays it on System Viewer. If this message is logged, it is no problem for operation.

1.9.1 Maximum number of processor cores supported by this server

The maximum number of processor cores (logical processors) available on the server depends on the architecture (x86 architecture) and OS specs.

Maximum number of processor cores

OS	The maximum number of logical processors supported by OS	The maximum number of logical processors supported by this server
Windows Server 2008 Standard Windows Server 2008 Enterprise	32	32
Windows Server 2008 Standard x64 Edition Windows Server 2008 Enterprise x64 Edition	64	40
Windows Server 2008 R2 Standard Windows Server 2008 R2 Enterprise	256 *1	40
Windows Server 2012 Standard Windows Server 2012 Datacenter	640 *1	40
RedHat Enterprise Linux 5 Server (x86) RedHat Enterprise Linux 6 Server (x86)	32	32
RedHat Enterprise Linux 5 Server (EM64T) RedHat Enterprise Linux 6 Server (x86_64)	160	40
VMware ESXi 5.0 / 5.1	160	40
VMware ESXi 5.5	320	40


*1 The maximum numbers of logical processors and virtual processors when using Hyper-V are below

- Windows Server 2008: 24 logical processors
- Windows Server 2008 R2: 64 logical processors
- Windows Server 2012: 320 logical processors


1.9.2 Installation

Follow steps below to install the processor.


1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Lift the air duct and remove it.

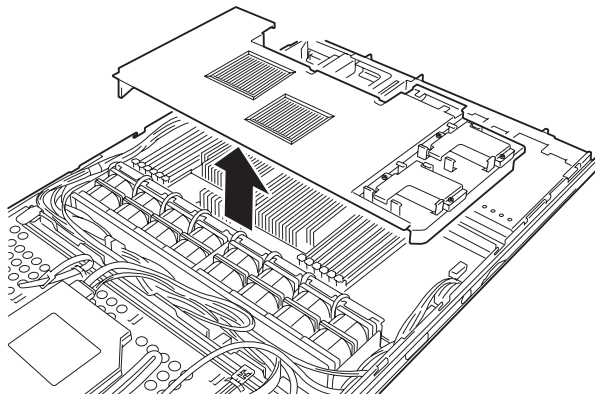


3. Remove dummy CPU from the duct.

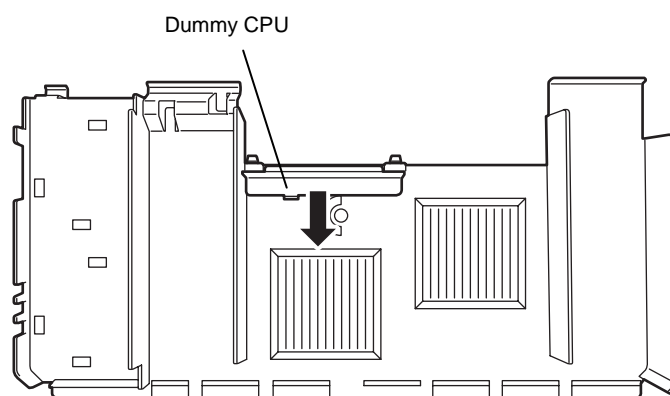


4. Locate the CPU socket to which you are going to install a processor.

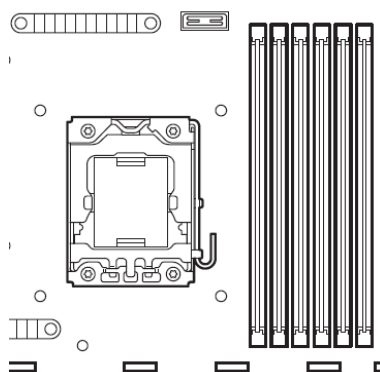

5. Push down the socket lever once to unlatch it from the hook, then slowly open the lever until it stops.

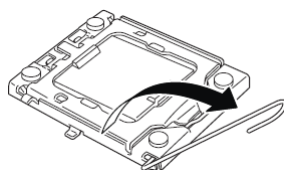


6. Lift the plate.

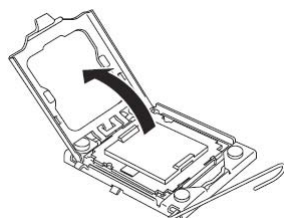

Important Do not touch the socket contacts.

7. Remove the protective cover from the CPU socket.

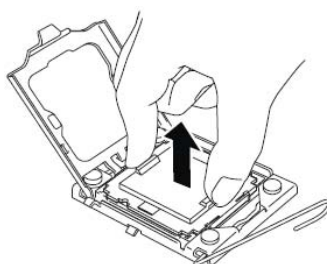


Tips Protective cover is sometimes installed on the plate of CPU socket.

Important Keep the protective cover for future use. Always attach the CPU protective cover if the processor is removed from the socket.

8. Put the additional processor on the CPU socket slowly and gently.

For easy installation, hold edges of processor with your thumb and index fingers so that the notch is aligned with the key on the CPU socket.

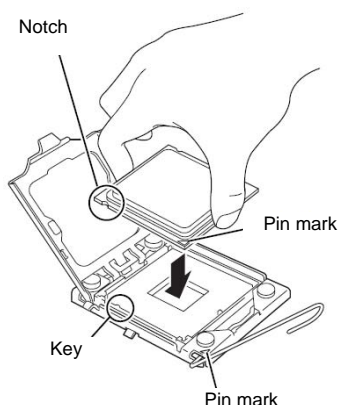


Important Be sure to hold the processor only at the edges. Pay attention not to touch the bottom of the processor (pin section).


Note

- Insert the processor while aligning the notch on the processor with the key section on the CPU socket.
- Bring down the processor straight without tilting or sliding it in the socket.

9. Lightly push the processor to the CPU socket, and close the plate.

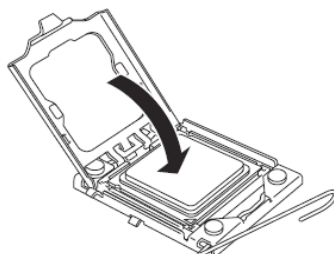


10. Close the socket lever to fix it.

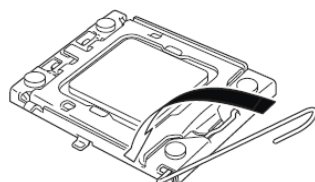

11. Put the heat sink on processor and fix the heat sink with four screws.

Temporarily tighten the four screws diagonally, then tighten them securely.

Make sure that the screw aligns with the screw hole. If not, the screw may damage the motherboard.

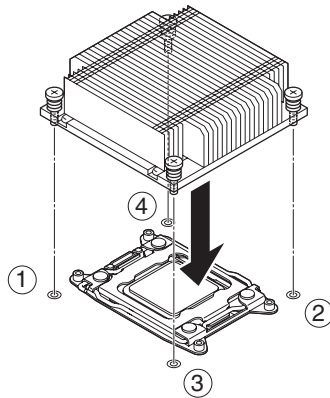


Note

Make sure that the heat sink is properly attached and properly direction

12. Make sure that the heat sink is installed on a level with the motherboard.

The server back side

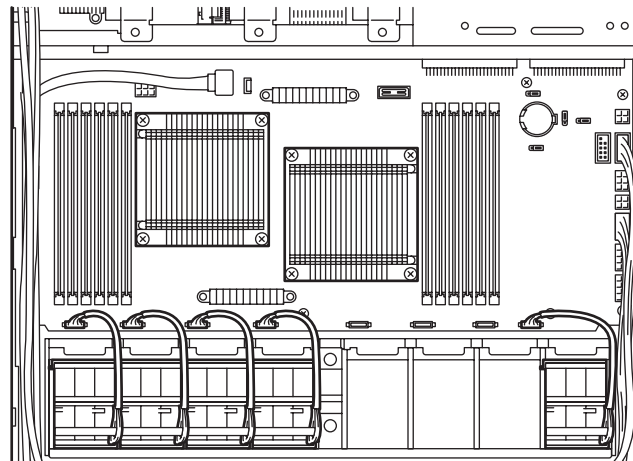


The server front side


Note

- If the heat sink is not level, remove it, and then install it again.
The following probably causes the heat sink not to be level:
 - The CPU is not positioned correctly.
 - All screws are not completely tightened.
- Do not move the secured heat sink.

13. Install the additional fan units provided with heat sink. Remove three dummy covers from the slots where you are going to install additional fan units.

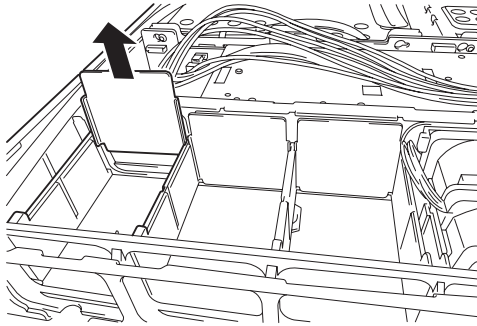

14. Install three fan units in fan cage, and connect the fan cable with connector on motherboard.

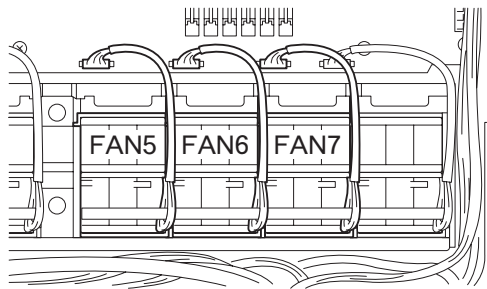

15. Continue to install or remove internal optional devices, mount and connect the server, and turn it on.
16. Run BIOS Setup Utility (SETUP) to confirm the following settings. Refer to *Chapter 2 (1. System BIOS)* in "Maintenance Guide".

Advanced → Processor Configuration → Processor Information

[CPU ID]
[L2 Cache RAM]
[L3 Cache RAM]

1.9.3 Replacement / Removal

To remove processor (CPU), reverse the installation procedure.

Important

- Do not remove any processor unless it is failed.
- To remove the heat sink from the processor, first turn the heat sink to the left and right lightly to make sure that the heat sink can be apart from the processor. Removing the heat sink with it adhering to the processor may cause the processor and/or CPU socket to be defected.

1.10 DIMM

Install a DIMM (Dual Inline Memory Module) to a DIMM socket on the motherboard in the server. The motherboard provides 12 sockets to install DIMMs.

Important

- You must avoid static electricity to work with the procedure below. For details, refer to *Chapter 2 (1.2 Anti-static Measures)*.
- Use only the specified DIMMs. Installing a DIMM from a third party may damage not only the DIMM but the motherboard. You will be charged to repair failures or damages caused by the use of such products even within the warranty period.

Tips

Up to 384 GB (32 GB x 12) can be installed in 2-CPU configuration. Up to 192 GB (32 GB x 6) can be installed in 1-CPU configuration.

1.10.1 Maximum supported memory size

The maximum available memory size on the server depends on the architecture (x86 architecture) and OS specs.

A list of maximum memory sizes

OS	The maximum memory size supported on each OS	The maximum memory size supported on the server
Windows Server 2008 Standard x86 Edition	4 GB	4 GB (HW-DEP enabled)
		App. 2 GB(HW-DEP disabled)
Windows Server 2008 Standard x64 Edition *1 Windows Server 2008 R2 Standard *1	32GB	32GB
Windows Server 2008 Enterprise x86 Edition	64GB	64GB
Windows Server 2008 Enterprise x64 Edition *1	1TB	384GB
Windows Server 2008 R2 Enterprise *1	2TB	384GB
Windows Server 2012 Standard *1 Windows Server 2012 Datacenter *1	4TB	384GB
RedHat Enterprise Linux 5 Server (x86) RedHat Enterprise Linux 6 Server (x86)	16GB	16GB
RedHat Enterprise Linux 5 Server (EM64T)	1TB	384GB
RedHat Enterprise Linux 6 Server (x86_64)	3TB	384GB
Vmware ESXi 5.0 / 5.1 *2	2TB	384GB
Vmware ESXi 5.5 *2	4TB	384GB

*1 The maximum available memory size of Hyper-V systems are below:

- Windows Server 2008 Standard (x64) and Windows Server 2008 R2 Standard: 32GB
- Windows Server 2008 Enterprise (x64) and Windows Server 2008 R2 Enterprise: 1TB
- Windows Server 2012: 4TB

*2 Up to 1TB of main memory is available to each virtual machine.

1.10.2 Memory clock

The server supports the memory clock speed of DDR3-1333/1600MHz. However, the actual memory clock speed depends on CPU model and memory configuration. (The all of DIMMs operate at the same clock speed.)

1.10.3 Memory RAS feature

The server supports the following RAS features. Some restrictions (e.g., DIMM installation location) are imposed on using the Memory Mirroring or Memory LockStep feature. Refer to *Chapter 2 (1.10.7 Using Memory RAS Feature)* for conditions appropriate to your requirements.


- Standard memory feature (x4 SDDC ECC memory)
- Memory Mirroring feature (restrictions imposed on DIMM configuration)
- Memory LockStep feature (x8 SDDC ECC memory) (restrictions imposed on DIMM configuration)
- Memory Sparing feature (restrictions imposed on DIMM configuration)

1.10.4 DIMM installation order

Note

- DIMM installation order in 1-CPU configuration differs from that in 2-CPU configuration.
- If CPU2 is not installed, CPU2_DIMM1 to CPU1_DIMM6 are disabled.

Installation order depends on features to be used. See the table below.

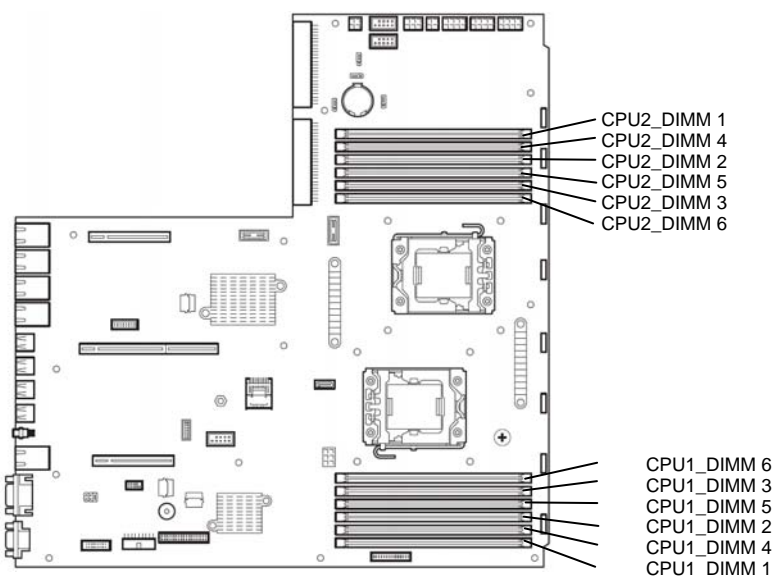


	DIMM number	Standard memory feature (Independent)		Lockstep feature/ Mirroring feature		Sparing feature	
		1-CPU configuration	2-CPU configuration	1-CPU configuration	2-CPU configuration	1-CPU configuration	2-CPU configuration
CPU#1	CPU1_DIMM1	1	1	N/S	N/S	1	1
	CPU1_DIMM4	4	7	N/S	N/S	1	1
	CPU1_DIMM2	2	3	1	1	2	3
	CPU1_DIMM5	5	9	2	3	2	3
	CPU1_DIMM3	3	5	1	1	3	5
	CPU1_DIMM6	6	11	2	3	3	5
CPU#2	CPU2_DIMM1	-	2	-	N/S	-	2
	CPU2_DIMM4	-	8	-	N/S	-	2
	CPU2_DIMM2	-	4	-	2	-	4
	CPU2_DIMM5	-	10	-	4	-	4
	CPU2_DIMM3	-	6	-	2	-	6
	CPU2_DIMM6	-	12	-	4	-	6

N/S: Not supported, the slot is unavailable for this feature.

1.10.5 Installation

Install a DIMM by using the following procedure.


1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Lift the processor duct and remove it.

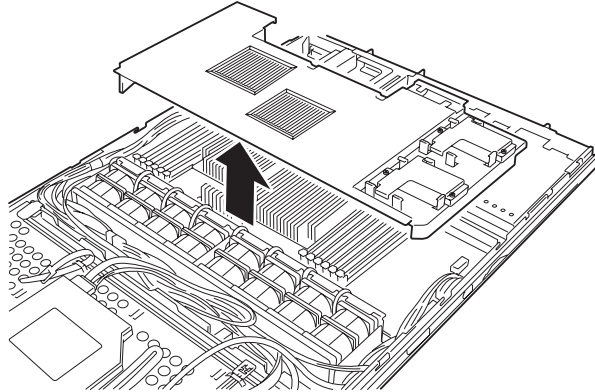

3. Open levers on left and right sides of DIMM slot.

4. Open levers on left and right sides of DIMM slot, and push the DIMM straight into the socket.

When a DIMM is inserted into the socket, the lever automatically closes.

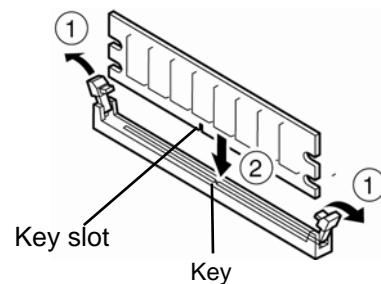

Important

- Make sure the orientation of the DIMM. The terminal side of a DIMM has a notch, preventing being wrongly inserted.
- Do not apply too much pressure when you push a DIMM into the socket. Doing so can damage the socket or terminal part.

5. Continue to install or remove internal optional devices, mount and connect the server, and turn it on.
6. Confirm that no error messages are displayed in POST screen.
If any error messages are displayed, refer to *Chapter 3 (1. Error Message)* in "Maintenance Guide".
7. Run the SETUP utility, and select **Memory Configuration** and then **Memory Information** from the **Advanced** menu. Make sure the capacity of added DIMM is displayed properly.
Refer to *Chapter 2 (1. System BIOS)* in "Maintenance Guide".
8. Select **Memory Configuration** from the **Advanced** menu, and then specify **Yes** for **Memory Retest**.
After that, select **Save Changes and Exit** to reboot.

9. Set the paging file size to the recommended value (Total memory size x 1.5) or more.

If using a Windows OS, refer to *Chapter 1 (6.1 Specifying Memory Dump Settings (Debug Information))* in "Installation Guide (Windows)".

For other OS, consult the manual provided with the operation system or contact the store where you purchased it or your maintenance service company.

1.10.6 Removal / Replacement

To remove DIMM, reverse the installation procedure.

Note

When removing a defective DIMM, check error messages displayed at POST or NEC ESM PRO and check the DIMM socket where the defective DIMM is installed.

Take the steps below after replacing or removing DIMMs.

1. Confirm that no error messages are displayed on POST. If any error message is displayed, refer to *Chapter 3 (1. Error Message)* in "Maintenance Guide".
2. Run BIOS Setup Utility, select **Memory Configuration** from the **Advanced** menu, and then specify **Yes** for **Memory Retest**. After that, select **Save Changes and Exit** to reboot.
3. Set the size of Paging File to the recommended value (Total memory size x 1.5) or more.
If using a Windows OS, refer to *Chapter 1 (6.1 Specifying Memory Dump Settings (Debug Information))* in "Installation Guide (Windows)".
For other OS, follow the manual of the OS.

1.10.7 Using Memory RAS Feature

The server has RAS feature including Standard (Independent) Memory feature (x4 SDDC ECC memory), Memory Mirroring feature, Memory LockStep (x8 SDDC ECC memory) feature and Memory Sparing feature. SDDC (Single Device Data Correction) allows automatic correction of memory error (multi-bit error).

Note

- To use the Memory Mirroring feature or Memory LockStep (x8 SDDC ECC memory) feature, additional memory board (N8102-577/578/5796) is required.
- To use Memory Sparing feature, additional memory board (N8102-581) is required.
- To use Standard (Independent) memory feature (x4 SDDC), additional memory board (N8102-573/574/575) is required.

The memory area on the motherboard of the server is divided into three memory channels.

The Memory Mirroring and Memory LockStep features keep memory redundancy between two memory channels by monitoring or altering memory active/inactive status, respectively.

(1) Memory Mirroring Feature

The memory mirroring feature writes the same data into two groups of DIMMs corresponding with each other between memory channels (channels 2 and 3) to provide data redundancy.

Important

- The Memory Mirroring feature uses channels 2 and 3. In memory mirroring configuration, the memory channel 1 of each CPU (CPU1-DIMM1/4, CPU2-DIMM1/4) is disabled.
- To use the Memory Mirroring feature, additional memory board (N8102-577/578/579), equipped with two DIMMs of same model, is required.

Tips

The operating system only recognizes a half of the total physical capacity.

The memory mirroring feature can be used under the following conditions:

- Install DIMMs in two DIMM sockets configuring a mirror set.
- All the installed DIMMs should have the same capacity.
- Run SETUP (refer to *Chapter 2 (1. System BIOS)* in "Maintenance Guide"), change parameters appropriately in the [Mirror] menu selected as shown below, save the settings and exit from SETUP.
[Advanced] – [Memory Configuration] – [Memory RAS Mode] – [Mirror]
Run SETUP again, and check if the status of additionally installed DIMMs shows "Mirror".
- Installation order depends on CPU configuration. See the figure below.

The mirroring cannot be configured in the following case:

- Memory mirroring within a specific memory channel

Notes on Configuring Memory Mirroring

If you install or remove DIMMs that unable to configure memory mirroring, parameter for [Memory RAS Mode] is changed from "Mirror" to "Independent".

(2) Memory LockStep Feature (x8 SDDC)

In Memory LockStep feature, the DIMMs in two groups corresponding to two memory channels (channels 2 and 3) is multiplexed and operated in parallel to enable x8 SDDC (x8 Single Device Data Correction). With this feature, a single device can detect and correct one to eight-bit error.

Important

- The Memory LockStep feature uses channels 2 and 3. In Memory LockStep configuration, the memory channel 1 of each CPU (CPU1-DIMM1/4, CPU2-DIMM1/4) is disabled.
- To use the Memory LockStep feature, additional memory board N8102-577/578/579 (equipped with two DIMMs of same model) is required.

The LockStep feature can be used under the following conditions:

- Install two DIMMs that operate in parallel in memory socket.
- All the installed DIMMs should have the same capacity.
- Run SETUP (refer to *Chapter 2 (1. System BIOS)* in "Maintenance Guide"), change parameters appropriately in the [LockStep] menu selected as shown below, save the settings.
[Advanced] – [Memory Configuration] – [Memory RAS Mode] – [Lock Step]
Run SETUP again, and check if the status of additionally installed DIMMs shows "LockStep".
- Installation order depends on CPU configuration. See the figure below.

The LockStep cannot be configured in the following cases:

- LockStep between memory channels of different memory controllers (CPU)
- LockStep within the same memory channel

Notes on Configuring LockStep

If you install or remove DIMMs that unable to configure Memory LockStep, parameter for [Memory RAS Mode] is changed from "LockStep" to "Independent".

(3) Memory Sparing Feature

The memory sparing feature puts a memory Rank of a memory controller in each CPU into standby status as spare devices. If a correctable error occurs in a Rank in the running memory controller, the feature automatically changes the running Rank from the failed one to a Rank in the standby state to continue the processing.

Important

- To use the Memory Sparing feature, additional memory board N8102-581 (equipped with two DIMMs of same model) is required.
- To use the Memory Sparing feature, DIMMs to be installed should have the same capacity.

Tips

The operating system recognizes the DIMMs as those with capacities less than the actual physical capacities. (The recognized capacities vary depending on the number of DIMMs and the physical capacity per DIMM.)

The Memory Sparing feature can be used under the following conditions:

- DIMMs to be installed should have the same capacity.
- Run SETUP (refer to Chapter 2 (1. System BIOS) in "Maintenance Guide"), change parameters appropriately in the [Sparing] menu selected as shown below, save the settings.
[Advanced] – [Memory Configuration] – [Memory RAS Mode] – [Sparing]
Run SETUP again, and check if the status of additionally installed DIMMs shows "Sparing".
- Installation order depends on CPU configuration. See the figure below.

The following Memory Sparing cannot be configured.

- A DIMM of different capacity is installed.

Notes on Configuring Memory Sparing

If you install or remove DIMMs that unable to configure Memory Sparing, parameter for [Memory RAS Mode] is changed from "Spared" to "Independent".

1.1.1 Extra Battery / Flash Backup Unit for RAID Controller

If a RAID Controller (N8103-161/168/172/173/174) is installed, use the extra battery or flash backup unit (FBU) to avoid data loss caused by accidents including temporary blackout during a Write Back operation. The model of the extra battery and flash backup unit to be used depends on RAID Controller.

- For N8103-172/173/174, use N8103-153.
- For N8103-161/168, use FBU.

1.1.1.1 Handling precautions

Below are the precautions to be observed whenever using the backup battery. Be sure to observe the following, otherwise property such as data or other devices might be destroyed.

- Use the extra battery that supports the RAID Controller used.
- The extra battery is a very delicate electronic device. Before installation, touch the metal frame part of the server to discharge the static electricity from your body.
- Do not drop or bump the backup battery.
- For recycling and disposing the backup battery, refer to the user's guide that comes with it.


1.1.1.2 Installing N8103-153 extra battery

This section describes the procedure of installing an extra battery for RAID Controller.

There are two types of battery bracket; made of metal and made of plastic.

Battery bracket made of metal:


1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Lift the processor duct and remove it from the server.

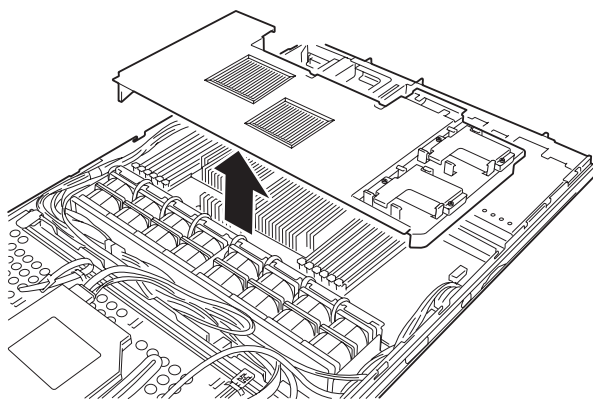


3. Remove the riser card from the slot in which you are going to install an extra battery.
Refer to *Chapter 2 (1.12 PCI Card)* for how to remove the riser card.

4. Connect the cable to the additional battery.

When connecting the cable, orient the cable so that its marking will fit the connector.

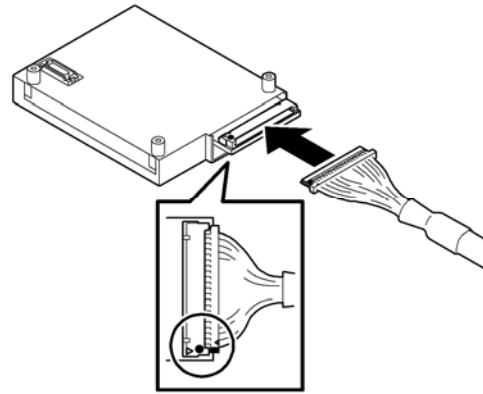


5. Remove the two screws, and remove cover of battery bracket.

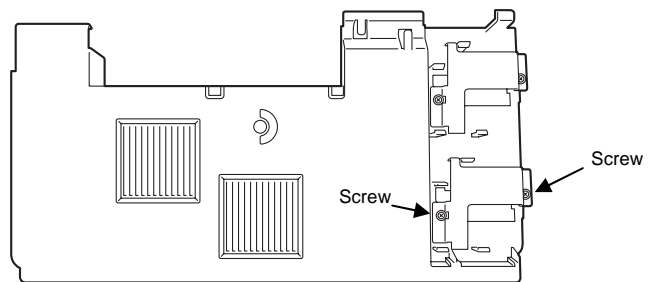


Note

For position to install an additional battery, see the figure to the right.
(The number indicates installation order.)

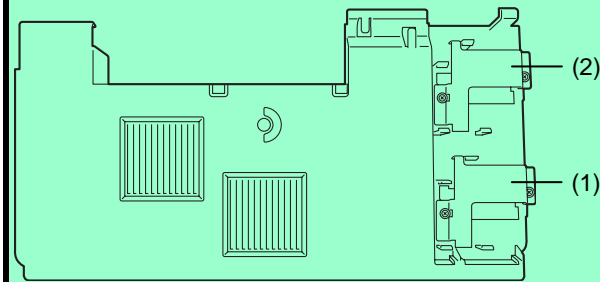

6. Install an extra battery to processor duct, and secure it with the cover of battery bracket you have removed in Step 5.

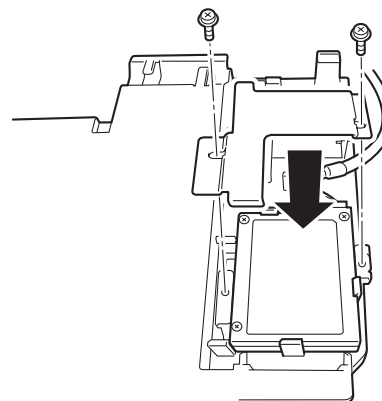


Note


Make sure that catches are surely engaged with extra battery.

7. Fix the cable at the holder on the duct.

When installing one extra battery

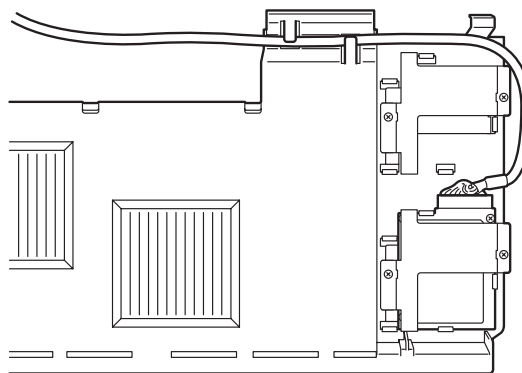


When installing two extra batteries

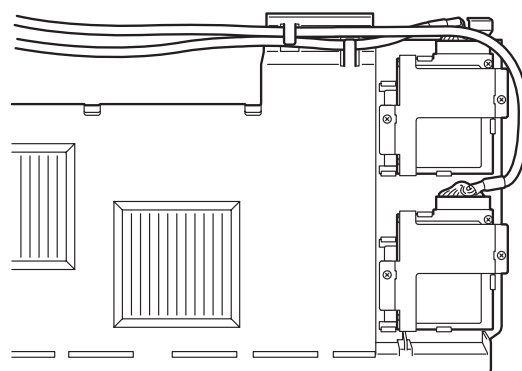


8. Connect the cable of extra battery to RAID Controller.

When connecting the cable, orient the cable so that its marking will fit the connector.

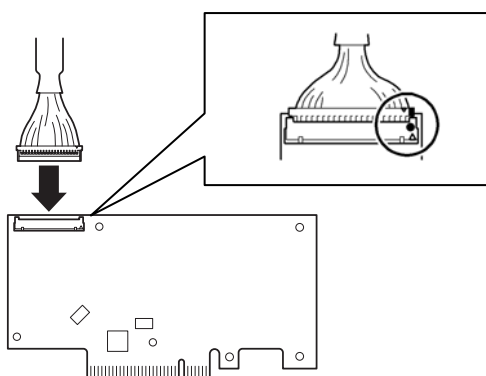

Important Support barRoute the cable so that it passes under the support bar.

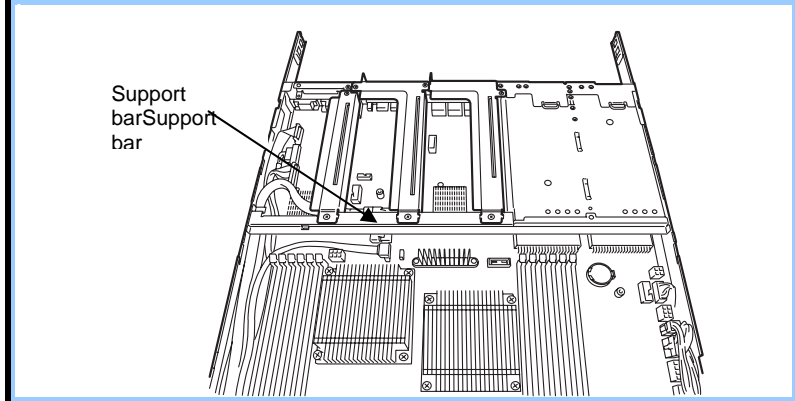

9. Attach the RAID Controller to the rise card.

For how to install RAID Controller, refer to *Chapter 2 (1.12 PCI Card)*.


10. Insert the riser card into the slot of the motherboard and fix the riser card with the screw which you removed in step 5.

For how to install the riser card, refer to *Chapter 2 (1.12 PCI Card)*.

11. Attach the duct which extra battery is installed.

Battery bracket made of metal:


1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Lift the processor duct and remove it from the server.

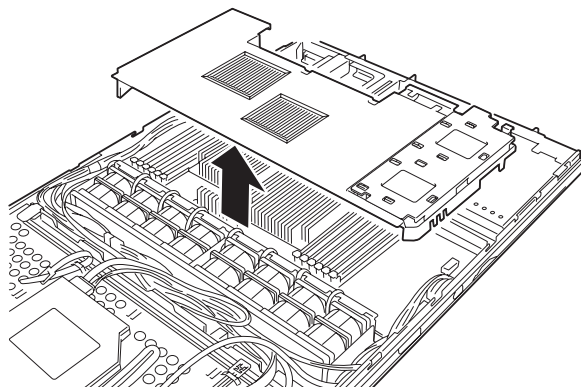


3. Remove the riser card from the slot in which you are going to install an extra battery.
Refer to *Chapter 2 (1.12 PCI Card)* for how to remove the riser card.

4. Connect the cable to the additional battery.

When connecting the cable, orient the cable so that its marking will fit the connector.

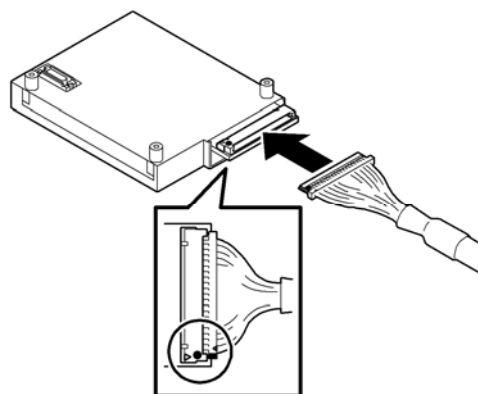


5. Remove the battery bracket from the duct.
6. Install the extra battery to the duct.

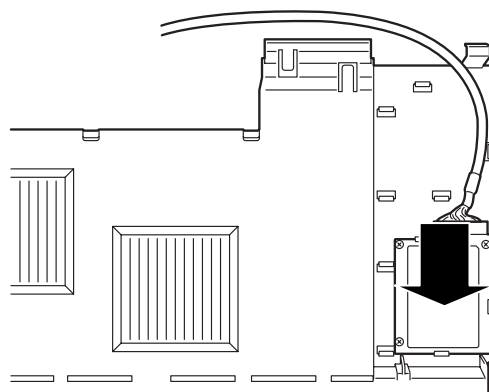

Note


- For position to install an additional battery, see the figure to the right. (The number indicates installation order.)

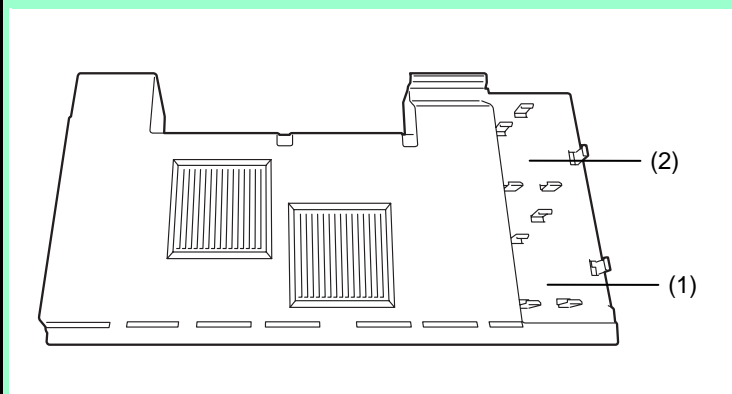


- Make sure that catches are surely engaged with extra battery.

7. Fix the cable at the holder on the duct.

When installing one extra battery

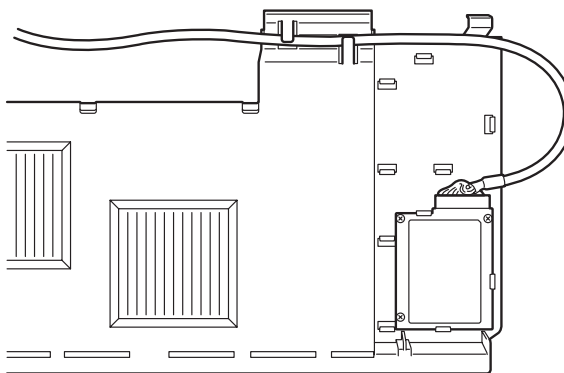


When installing two extra batteries

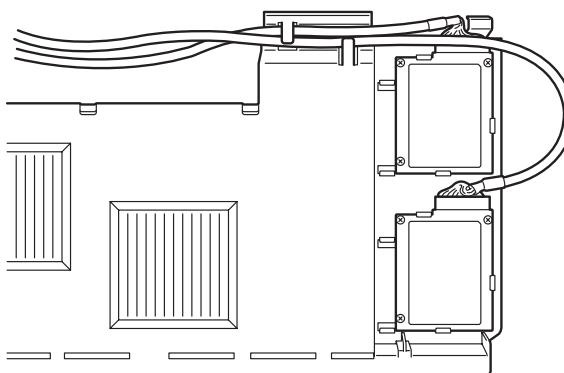


8. Install the battery bracket.

Insert the portion (1) into the duct, and fix the hook (2) to the duct.

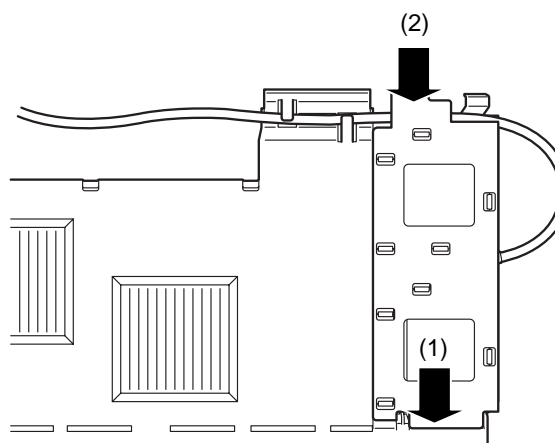


9. Connect the cable of extra battery to RAID Controller.

When connecting the cable, orient the cable so that its marking will fit the connector.

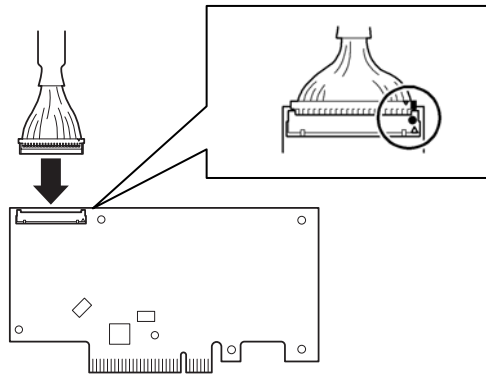**Important**

Support bar Route the cable so that it passes under the support bar.

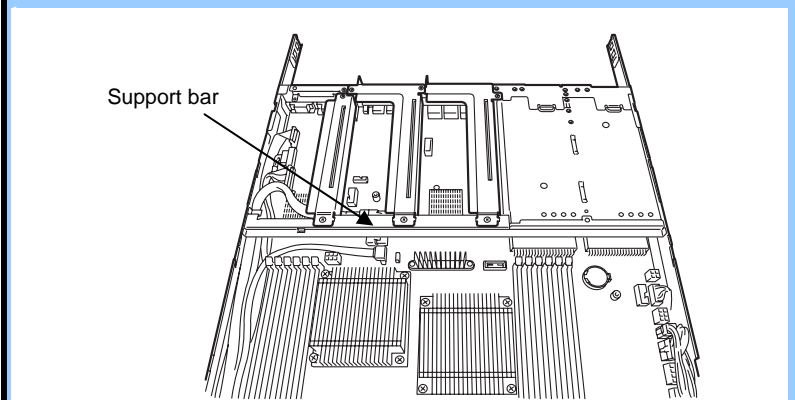

10. Attach the RAID Controller to the rise card.

For how to install RAID Controller, refer to *Chapter 2 (1.12 PCI Card)*.

11. Insert the riser card into the slot of the motherboard and fix the riser card with the screw which you removed in step 5.

For how to install the riser card, refer to *Chapter 2 (1.12 PCI Card)*.


12. Attach the duct which extra battery is installed.

1.11.3 Removal

To remove the extra battery for the RAID Controller, reverse the installation procedure.

Important

Support bar When removing RAID Controller and extra battery, be careful that the cables are not caught with the support bar. Otherwise, RAID Controller might be damaged.

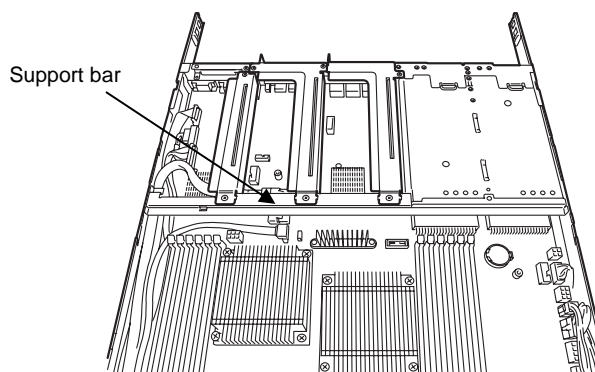

1.11.4 Installing FBU

For how to install the FBU, refer to *Chapter 2 (1.12.3 Installation)*.

1.11.5 Removal

For removing the FBU for the RAID Controller, reverse the installation procedure.

1.12 PCI Card

This server provides two types of riser cards for PCI card and a slot for RAID controller. The riser card can connect two Low Profile PCI cards and one RAID controller (total three PCI card can be mounted).

Important You must avoid static electricity to work with the procedure below. For details, refer to *Chapter 2 (1.2 Anti-static Measures)*.

1.12.1 Notes

Read the following notes when installing or removing a PCI card.

- Do not touch the terminals of the riser cards and the leads of electronic components with your bare hand. Fingerprints and dust left on them cause the server to malfunction due to a connection failure or damage to the leads.
- Available type of PCI card depends on riser card. Make sure the card type before connecting it to riser card.
- The server provides no connector to connect a LED connector which is supplied in RAID Controller used to indicate disk access.
- PCI slot number "1A" is assigned to the RAID controller-dedicated slot . "1B","1C" is assigned to the riser card for low-profile PCI cards.
- The PCI devices of the same type (including onboard PCI device) may be recognized in different order , depending on OS or RAID System BIOS utility. Check the slot location of PCI device by PCI bus number, device number and function number shown in Chapter 4 Appendix 2.PCI Configuration
- Before removing the top cover, be sure to disconnect cables from PCI card such as LAN adapter. If not, cables may be damaged.
- If an additional LAN card is installed, it is hard to push the catch of the cable connector with your finger that is connected to the LAN card. Disconnect the connector pushing the catch with a standard screwdriver. At this time, be very careful for the screwdriver not to damage the LAN card or other cards.
- If a bootable device such as a PCI card or USB device is added, the boot order may change. In the BIOS Setup utility, select **Hard Drive BBS Priorities** from the **Boot** menu, and then specify a higher priority for the boot device.

Boot → Hard Drive BBS Priorities → Check the display

If the boot device is an HDD under an optional RAID Controller, the display is (Bus xx Dev 00) PCI RAID Adapter. Note that the value for xx changes depending on the PCI slot where a RAID board is installed.

- For a SCSI Controller, RAID Controller, LAN card (network boot), or Fibre Channel controller, if no hard disk drive on which an OS is installed is connected, set the option ROM for that slot to **Disabled**. Refer to *Chapter 2 (1. System BIOS)* in "Maintenance Guide" for how to specify it.

1.12.2 Supported cards and available slots

The following tables list supported cards and slots available for them. For details of the functions of each board, refer to the manual supplied with the card.

Tips

- Different cards mounted on the same bus operate at the lower frequency.
- When the operation performance of a PCI card is higher than the PCI slot on the server, the PCI card operates with the performance of the PCI slot on the server.

Product number	Slot number	#1A	#1B	#1C	Remarks
	PCI Standard	PCIe 3.0		PCIe 2.0	
	PCI slot performance *1	X8 lane	X16 lane	X4 lane	
	Socket type *2	X8 sockett	X16 socket	X8 socket	
	Transfer bandwidth (per lane) *1	8Gb/s		5Gb/s	
	Slot size	Dedicated to RAID Controller	Low profile		
	Available card size		170mm max		
	Product name				
N8103-172	RAID Controller (512MB, RAID 0/1) [PCI Express 3.0(x8)]	○	—	—	Dedicated to connect with internal hard disk drive.
N8103-173	RAID Controller (512MB, RAID 0/1/5/6) [PCI Express 3.0(x8)]	○	—	—	Additional battery N8103-153 can be mounted. Up to two additional batteries can be mounted.
N8103-174	RAID Controller (1GB, RAID 0/1/5/6) [PCI Express 3.0(x8)]	○	—	—	
N8103-168	RAID Controller (1GB, RAID 0/1/5/6) [PCI Express 3.0(x8)]	○	—	—	N8103-168 is included flash cache protection modules.
N8103-161	RAID Controller (1GB, RAID 0/1/5/6) [PCI EXPRESS 3.0(x8)]	—	○	○	Dedicated to connect with external devices. N8103-161 incorporates a flash backup unit as the standard configuration. Up to two additional batteries can be mounted.
N8103-142	SAS Controller [PCI Express 2.0(x8)]	—	○	○	Dedicated to connect with external devices.
N8190-153	Fibre Channel Controller (8Gbps/Optical) [PCI Express 2.0(x8)]	—	○	○	Dedicated to connect with external Fibre Channel devices.
N8190-154	Fibre Channel Controller (2ch) (8Gbps/Optical) [PCI Express 2.0(x8)]	—	○	○	Dedicated to connect with external Fibre Channel devices.
N8190-157	Fibre Channel Controller (16Gbps/Optical) [PCI Express 3.0(x8)]	—	○	○	Dedicated to connect with external Fibre Channel devices.
N8190-158	Fibre Channel Controller (2ch)(16Gbps/Optical) [PCI Express 3.0(x8)]	—	○	○	Dedicated to connect with external Fibre Channel devices.

● Installed as standard ○ Can be installed — Cannot be installed

*1 Data transfer rate of PCI slot = Transfer bandwidth × Number of lanes

<Example> x8 lane = 64 Gbps (one-way)

*2 Connector size. Cards exceeding the number of sockets cannot be connected.

<Example> x4 socket can connect with x1 and x4 cards, but not x8 card.

* For details of functions of each card, refer to the technical guide.

* The card performance described in the parentheses after the Product name indicates the maximum operation performance of the card.

* When the operation performance of a PCI board is higher than the PCI slot on the server, the PCI board operates with the performance of the PCI slot on the server.

Product number	Slot number	#1A	#1B	#1C	Remarks
	PCI Standard	PCIe 3.0		PCIe 2.0	
	PCI slot performance *1	X8 lane	X16 lane	X4 lane	
	Socket type *2	X8 sockett	X16 socket	X8 socket	
	Transfer bandwidth (per lane) *1	8Gb/s		5Gb/s	
	Slot size	Dedicated to RAID Controller	Low profile		
	Available card size		170mm max		
	Product name				
N8104-138	1000BASE-T Adapter (1ch) [PCI Express 2.0(x1)]	—	○	○	For additional LAN port. The card shape is [PCI Express 2.0(x4)]
N8104-132	1000BASE-T Adapter (2ch) [PCI Express 2.0(x1)]	—	○	○	For additional LAN port. The card shape is [PCI Express 2.0(x4)]
N8104-133	1000BASE-T Adapter (4ch) [PCI Express 2.0(x4)]	—	○	○	For additional LAN port. Jumbo frames are supported on Windows Server 2008 R2 and Redhat Enterprise Linux operating systems. Network cables with RJ-45 plug covers cannot be used.
N8104-145	1000BASE-T Adapter (2ch) [PCI Express2.0(x4)]	—	○	○	For additional LAN port.
N8104-128	10GBASE Adapter (SFP+/2ch) [PCI Express 2.0(x8)]	—	○	○	For additional LAN port. N8104-129 SFP+ Module is required to connect with an optical cable. Up to 1 adapter is supported when RHEL6 is installed.
N8104-131	10G Converged Network Adapter (2ch) (10Gbps/Optical) [PCI Express 2.0(x8)]	—	○	○	For additional DCB/FcoE. SFP module is factory-installed. Pass redundancy of FC is supported on StoragePathSavior. Teaming/bonding with LAN is not available. Use as LAN of N8104-131 is only 1 port in 1 system.
N8104-146	Infiniband connector board (FDR 1ch) [PCI Express3.0 (x8)]	—	○	○	Infinibandcontroller
N8104-147	Infiniband connector board (FDR 2ch) [PCI Express3.0 (x8)]	—	○	○	Infiniband controller
N8117-01A	Additional RS-232C connector kit *3	—	○	○	For additional serial port B (RS-232C) Supports up to one adapter

● Installed as standard ○ Can be installed – Cannot be installed

*1 Data transfer rate of PCI slot = Transfer bandwidth × Number of lanes

<Example> x8 lane = 64 Gbps (one-way)

*2 Connector size. Cards exceeding the number of sockets cannot be connected.

<Example> x4 socket can connect with x1 and x4 cards, but not x8 card.

*3 Use RS-232C cable (B).

* For details of functions of each card, refer to the technical guide.

* The card performance described in the parentheses after the Product name indicates the maximum operation performance of the card.

* When the operation performance of a PCI board is higher than the PCI slot on the server, the PCI board operates with the performance of the PCI slot on the server.

1.12.3 Installation


Install a riser card to a PCI card in the following procedure.

Important When installing a PCI card, make sure the connector of the card fits the connector of the riser card.

Note

- Check the card type (low profile or full-height type) which respective riser card supports and the type of PCI card to be installed.
- If the battery for RAID controller is installed, refer to *Chapter 2 (1.11 Extra Battery / Flash Backup Unit for RAID Controller)*.


Important When installing PCI board, be careful that the cables are not caught with the support bar. Otherwise, PCI board might be damaged.

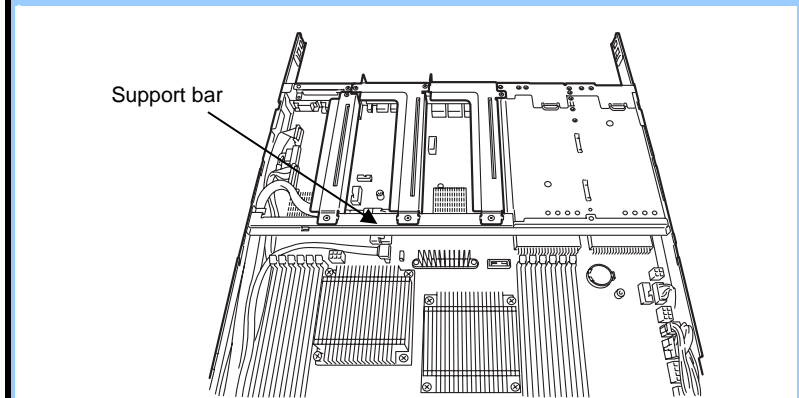

PCI #1A

1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.


2. Remove the screw securing the riser card.
Hold the both ends of the riser card and lift it off.

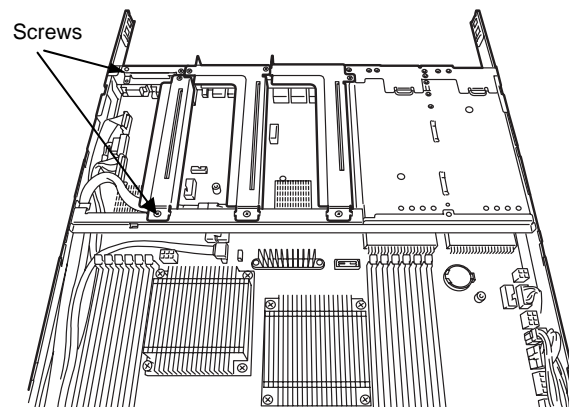


Note Be careful not to contact with other parts.

3. Confirm the installation position with the reference to the table in (1.12.2 *Supported cards and available slots*).


4. Remove the screw, and remove RAID Controller bracket.

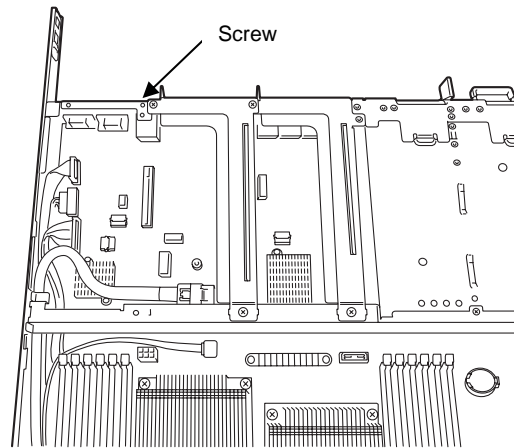


5. Remove the two screws from RAID Controller, and remove PCI bracket.

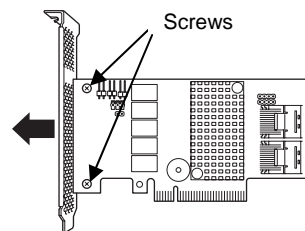

6. Install the controller bracket you have removed in Step 4 to RAID Controller with two screws you have removed in Step 5.

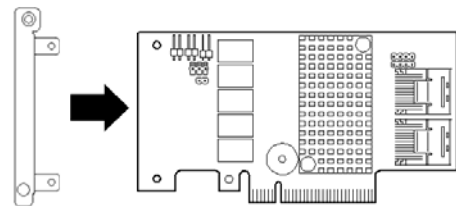

7. Install a RAID Controller to the riser card.
When installing the card, position the terminal part of the PCI card to the riser card slot and insert it.

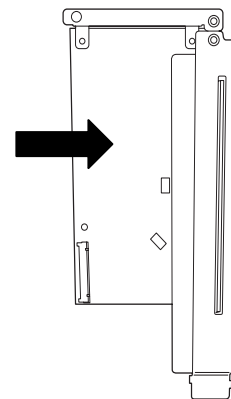

Important Do not touch the terminal part of riser cards or PCI cards and the signal pins of electric parts installed on the card. Installing cards with dirt or oil can cause malfunction.

Note


- Make sure that the head of a PCI card bracket is seated into the fixed slot.
- Depending on type of PCI cards, the terminal part of the PCI card may be too large to fit in the connector.
- If you have trouble installing the card, remove the card once and try again. If you apply excessive pressure on the card, a PCI card or riser card might break.

Tips

Connect a cable between connector on HDD backplane board and RAID card before installing the riser card to the server.

8. Insert the riser card into the slot on motherboard.

When connecting the card, position the terminal part of the card to the slot on the motherboard and insert it.

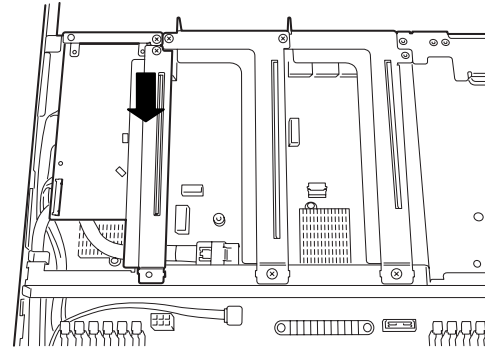

9. Secure the card with two screws you removed in Step 2. Secure the bracket with a single screw you have removed in Step 4.
10. Continue to install or remove internal optional devices, mount and connect the server, and turn it on.
11. Make sure that no error messages are displayed on POST screen.
For details on POST error messages, refer to *Chapter 3 (1. POST Error Message)* in "Maintenance Guide".
12. Start the BIOS Configuration utility on the mounted board to set up the board.

Availability or startup and operation procedure of the utility depends on board. For details, refer to the manual that comes with the board. **If a PCI card including RAID Controller and LAN card which connects to any bootable device is added, the boot priority might be changed to the default setting.** In that case, configure the boot priority in the **Boot** menu of the BIOS Setup utility. For details about the **Boot** menu, refer to *Chapter 2 (1.2.5 Boot)* in "Maintenance Guide".

(1) When using the optional RAID Controller (N8103-172/173/174/)

For details, refer to the manual that comes with optional RAID Controller (N8103-172/173/174).

Important

- You must avoid static electricity to work with the procedure below. For details, refer to *Chapter 2 (1.2 Anti-static Measures)*.
- Do not change the mode to hibernate when building a RAID System.

Note

- When installing an optional RAID Controller, start the BIOS Setup utility, select **PCI Configuration** from the **Advanced** menu, and then make sure that the parameter of **PCI Slot xx ROM** (xx is PCI slot number) is set to **Enabled**.
- When connecting a RAID Controller, set the boot priority to 8th or higher in the Boot menu of the BIOS Setup utility. If the setting is 9th or lower, the configuration menu for RAID Controllers cannot be launched.


(2) When using the optional RAID Controller (N8103-168)

Described below are procedures for installing optional RAID Controller (N8103-168).


There are two types of battery bracket; made of metal and made of plastic.

Battery bracket made of metal:


1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Lift the processor duct and remove it from the server.

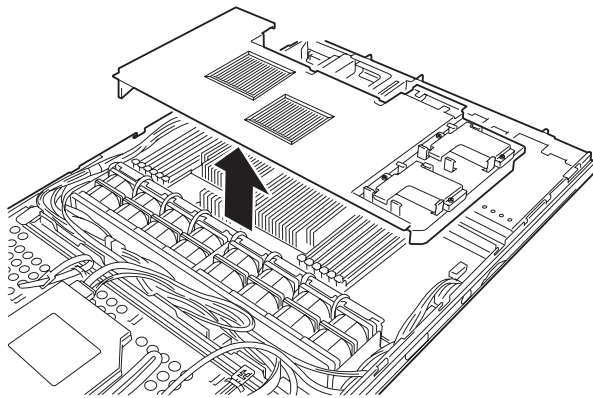


3. Connect the FBU control cable (600mm) to the FBU.

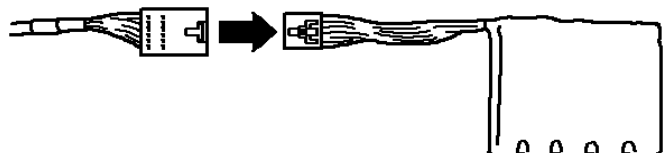


4. Remove the four screws and remove a cover of a battery bracket.

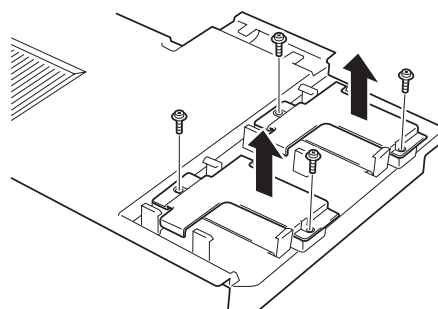

5. Slide and lift the battery bracket in accordance with the figure on the right, and remove the battery bracket from the duct.

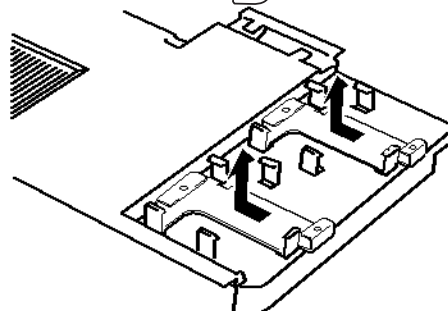


6. Install the FBU and fix the cable at the holder on the duct in accordance with the figure on the right.

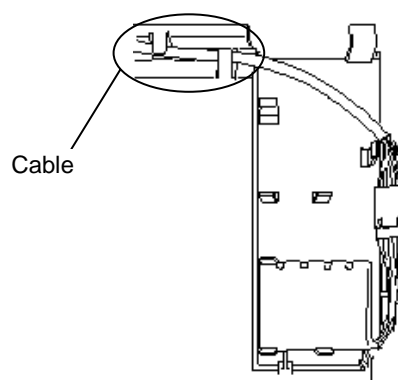**Note**


Make sure that catches are surely engaged with the FBU

7. Remove the screw securing the riser card. Hold the both ends of the riser card and lift it off.

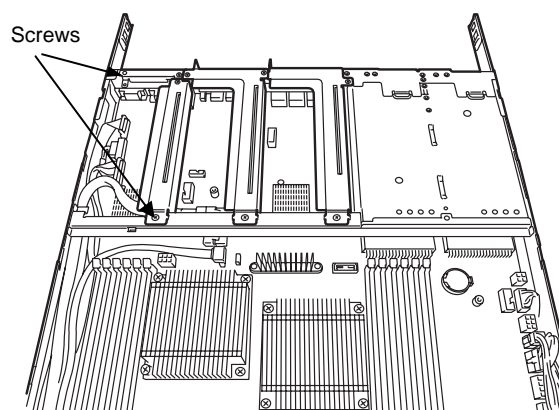
**Note**

Be careful not to contact with other parts.


8. Remove the screw, and remove RAID Controller bracket.

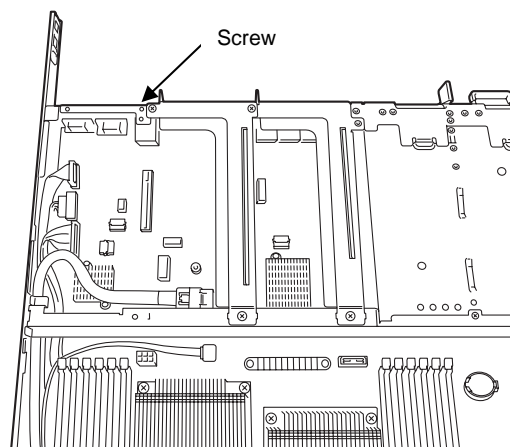

9. Remove the two screws from RAID Controller, and remove PCI bracket.

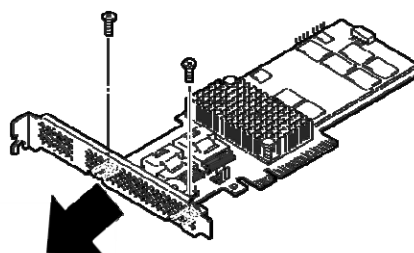

10. Install the controller bracket you have removed in Step 8 to RAID Controller with two screws you have removed in Step 9.

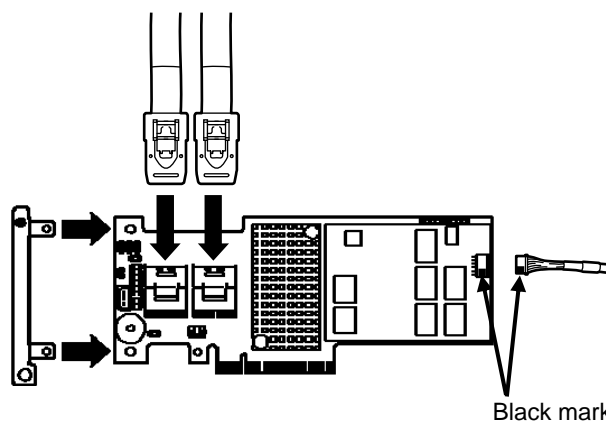


11. Install a RAID Controller to the riser card.
- When installing the card, position the terminal part of the PCI card to the riser card slot and insert it.

Important


- When connecting FBU control cable to RAID Controller and FBU, be sure to mate the black marks on FBU control cable connector and on RAID Controller connector. If the cable is connected conversely, the component might be damaged.
- When installing RAID Controller, route the cable (e.g., FBU control cable and internal SAS/SATA cables) so that they pass under the support bar.

Support bar

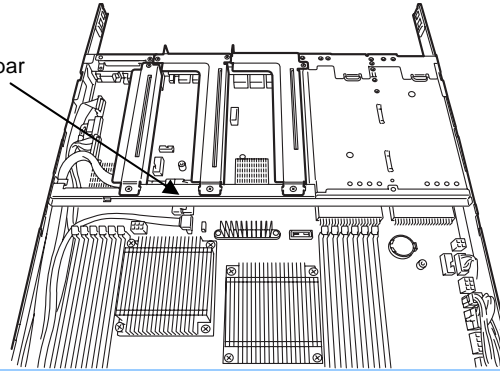

12. Install a RAID Controller to the riser card.

When installing the card, position the terminal part of the PCI card to the riser card slot and insert it.

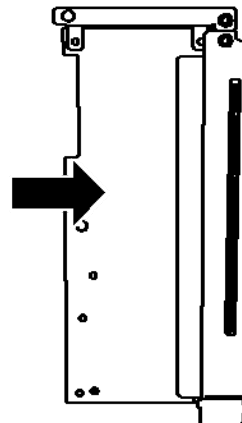**Important**


Do not touch the terminal part of riser cards or RAID Controller and the signal pins of electric parts installed on the card. Installing cards with dirt or oil can cause malfunction.

Note

- Make sure that the head of RAID Controller bracket is seated into the fixed slot.
- If you have trouble installing the RAID Controller, remove the card once and try again. If you apply excessive pressure on the card, RAID Controller or riser card might break.


13. Insert the riser card into the slot on motherboard.

When connecting the card, position the terminal part of the card to the slot on the motherboard and insert it.

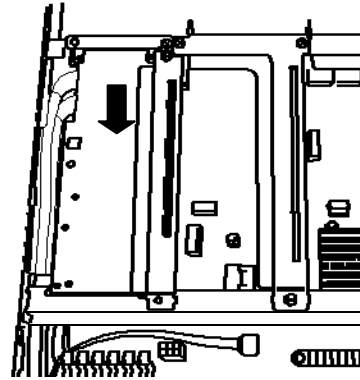

Important


When installing RAID Controller, be careful that cables (e.g., FBU control cable and internal SAS/SATA cables) are not caught with the support bar. If they are caught with support bar, RAID Controller might be damaged.

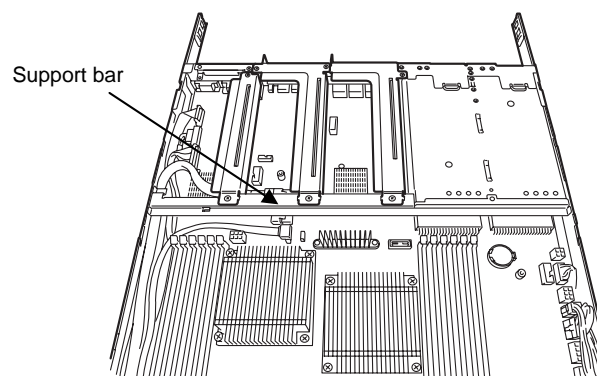


14. Secure the card with two screws you removed in Step 7. Secure the RAID Controller bracket with a single screw you have removed in Step 8.
15. Attach the duct which FBU is installed.

Battery bracket made of plastic:


1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Lift the processor duct and remove it from the server.

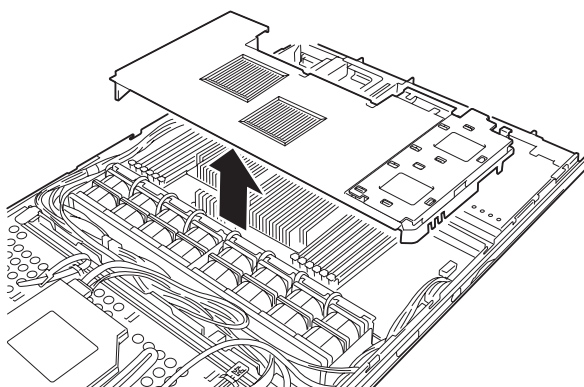

3. Connect the FBU control cable (600mm) to the FBU.

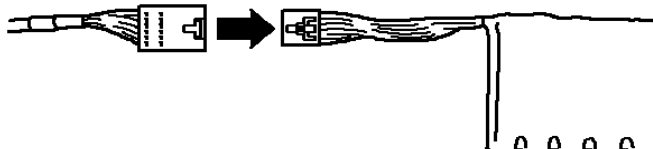


4. Remove the battery bracket from the duct.
5. Install the FBU and fix the cable at the holder on the duct in accordance with the figure on the right.

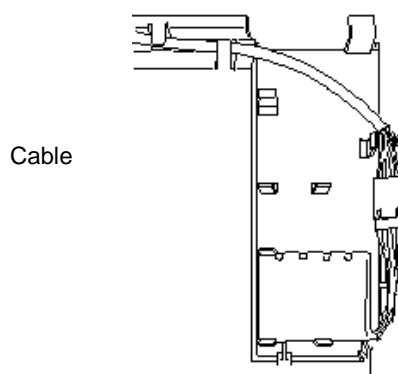**Note**

Make sure that catches are surely engaged with the FBU


6. Install the battery bracket.

Insert the portion (1) into the duct, and fix the hook (2) to the duct.

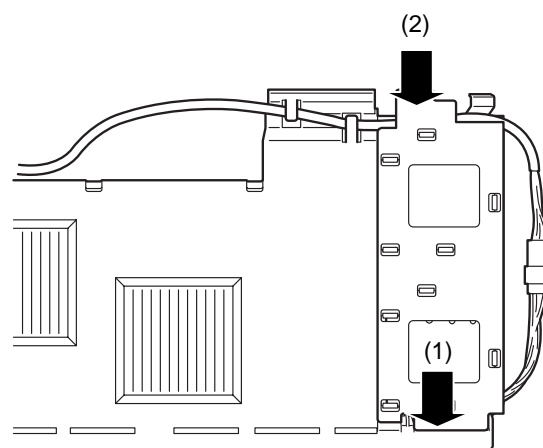


7. Remove the screw securing the riser card.

Hold the both ends of the riser card and lift it off.

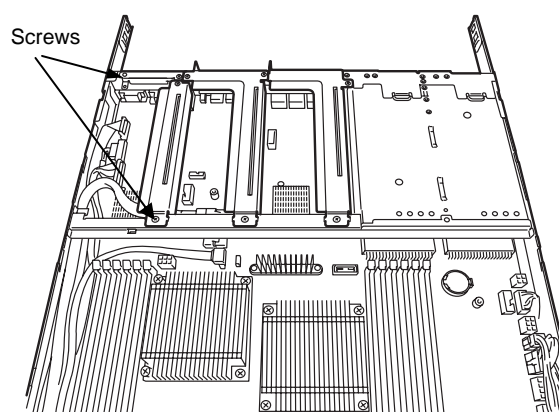
**Note**

Be careful not to contact with other parts.

8. Remove the screw, and remove RAID Controller bracket.

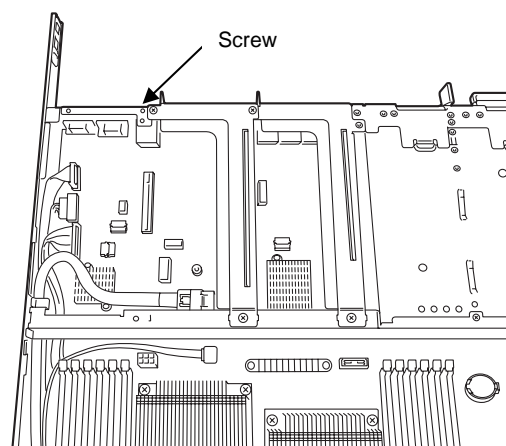


9. Remove the two screws from RAID Controller, and remove PCI bracket.

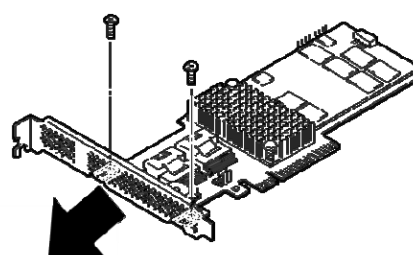


10. Install the controller bracket you have removed in Step 8 to RAID Controller with two screws you have removed in Step 9.

11. Install a RAID Controller to the riser card.
When installing the card, position the terminal part of the PCI card to the riser card slot and insert it.

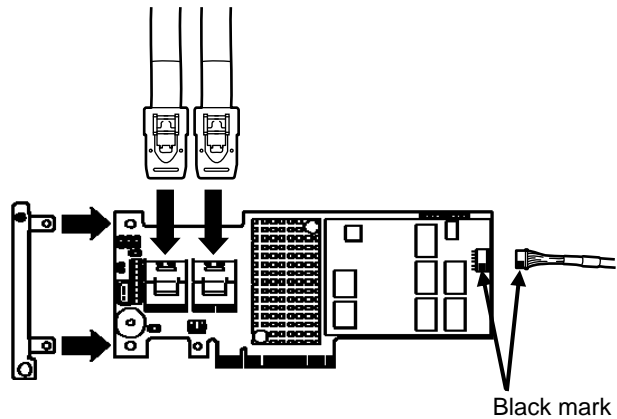


Important

- When connecting FBU control cable to RAID Controller and FBU, be sure to mate the black marks on FBU control cable connector and on RAID Controller connector. If the cable is connected conversely, the component might be damaged.
- When installing RAID Controller, route the cable (e.g., FBU control cable and internal SAS/SATA cables) so that they pass under the support bar.

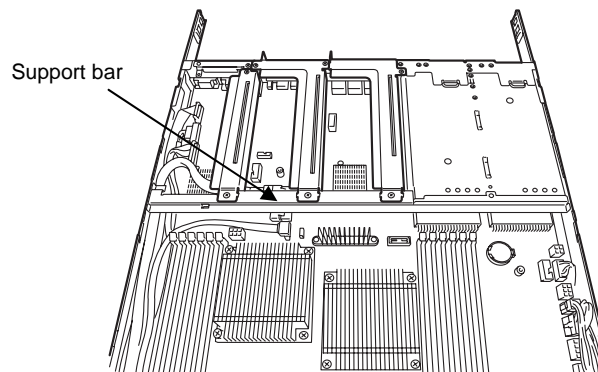

12. Install a RAID Controller to the riser card.
When installing the card, position the terminal part of the PCI card to the riser card slot and insert it.

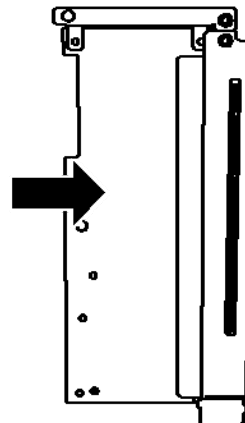


Important Do not touch the terminal part of riser cards or RAID Controller and the signal pins of electric parts installed on the card. Installing cards with dirt or oil can cause malfunction.

Note

- Make sure that the head of RAID Controller bracket is seated into the fixed slot.
- If you have trouble installing the RAID Controller, remove the card once and try again. If you apply excessive pressure on the card, RAID Controller or riser card might break.


13. Insert the riser card into the slot on motherboard.

When connecting the card, position the terminal part of the card to the slot on the motherboard and insert it.

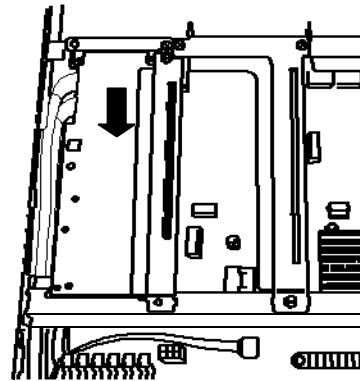

Important When installing RAID Controller, be careful that cables (e.g., FBU control cable and internal SAS/SATA cables) are not caught with the support bar. If they are caught with support bar, RAID Controller might be damaged.

Support bar

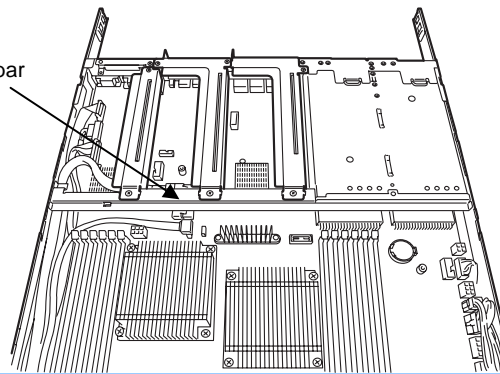


14. Secure the card with two screws you removed in Step 7. Secure the RAID Controller bracket with a single screw you have removed in Step 8.

15. Attach the duct which FBU is installed.

PCI #1B/#1C


1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.

2. Remove the three screws from the riser card B. Hold the both ends of the riser card and lift it off.

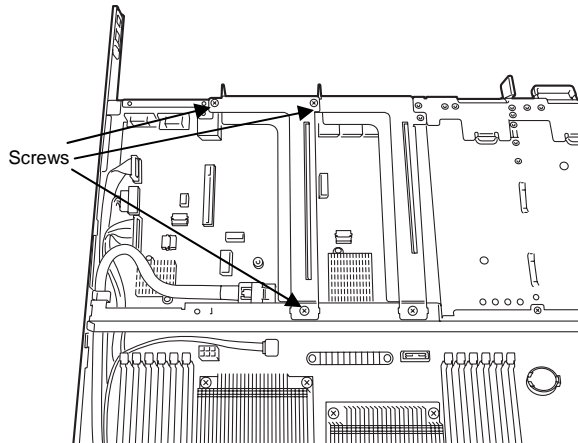**Note**


Be careful not to contact with other components.

3. Remove the three screws securing the riser card C. Hold the both ends of the riser card and lift it off.

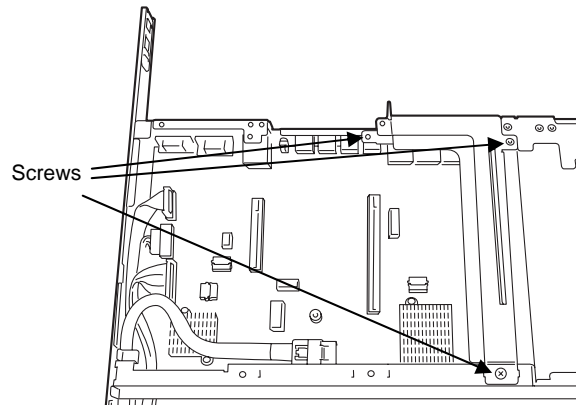**Note**

Be careful not to contact with other components.

4. Confirm the installation position with the reference to the table in (1.12.2 *Supported cards and available slots*).
5. Remove the screw from the riser card and remove the blank cover.
(This step is common for PCI #1B and #1C.)

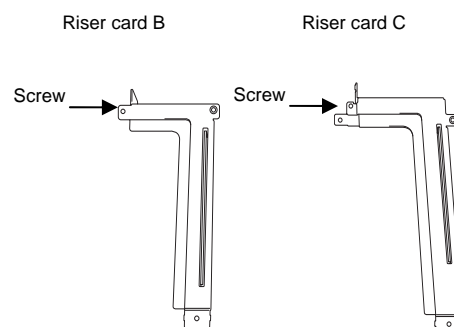**Note**

Keep the slot blank cover for future use.

6. Install riser card.

When installing the card, position the terminal part of the PCI card to the riser card slot and insert it.

Important Do not touch the terminal part of riser cards or PCI cards and the signal pins of electric parts installed on the card. Installing cards with dirt or oil can cause malfunction.


Note

- Make sure that the head of a PCI card bracket is seated into the fixed slot.
- Depending on type of PCI cards, the terminal part of the PCI card may be too large to fit in the connector.
- If you have trouble installing the card, remove the card once and try again. If you apply excessive pressure on the card, a PCI card or riser card might break.


7. Fix the PCI card with the screw you removed in Step 5.

Tips Connect a cable between connector on motherboard and PCI card before installing the riser card to the server.

8. Connect the riser card C to the motherboard slot. Fix the riser card with three screws you have removed in Step 3. When connecting the card, position the terminal part of the card to the slot on the motherboard and insert it.

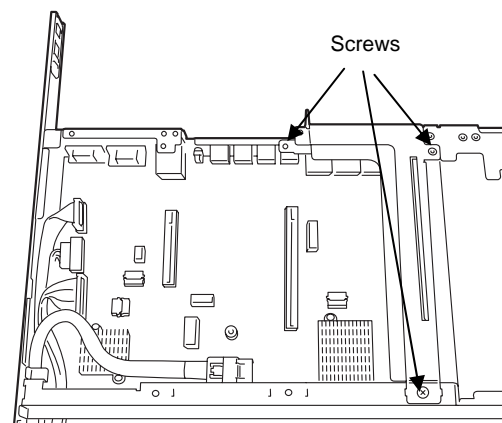

9. Connect the riser card B to the motherboard slot. Fix the riser card with three screws you have removed in Step 2. When connecting the card, position the terminal part of the card to the slot on the motherboard and insert it.

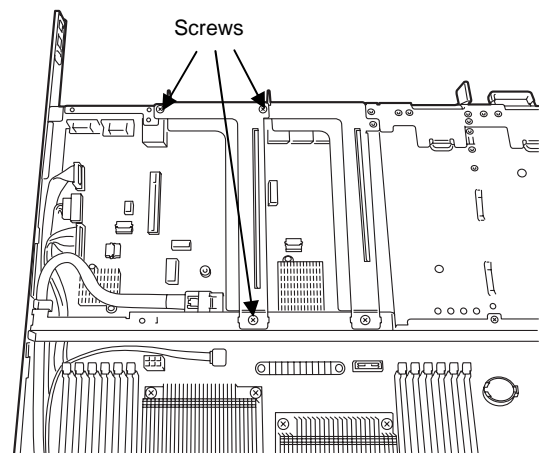

10. Continue to install or remove internal optional devices, mount and connect the server, and turn it on.

11. Make sure that no error messages are displayed on POST screen.

For details on POST error messages, refer to *Chapter 3 (1. POST Error Message)* in "Maintenance Guide".

12. Start the BIOS Configuration utility on the mounted board to set up the board.

Availability or startup and operation procedure of the utility depends on board. For details, refer to the manual that comes with the board. **If a PCI card including RAID Controller and LAN card which connects to any bootable device is added, the boot priority might be changed to the default setting.** In that case, configure the boot priority in the **Boot** menu of the BIOS Setup utility. For details about the **Boot** menu, refer to *Chapter 2 (1.2.5 Boot)* in "Maintenance Guide".

(1) When using the optional controller (N8103-161)

For details, refer to the manual that comes with optional RAID Controller (N8103-161).

Important

- You must avoid static electricity to work with the procedure below. For details, refer to *Chapter 2 (1.2 Anti-static Measures)*.
- Do not change the mode to hibernate when building a RAID System.

Note

- When installing an optional RAID Controller, start the BIOS Setup utility, select **PCI Configuration** from the **Advanced** menu, and then make sure that the parameter of **PCI Slot xx ROM** (xx is PCI slot number) is set to **Enabled**.
- When connecting a RAID Controller, set the boot priority to 8th or higher in the Boot menu of the BIOS Setup utility. If the setting is 9th or lower, the configuration menu for RAID Controllers cannot be launched.

1.12.4 Removal

To remove a riser card, reverse the installation procedure. Hold the card firmly and remove it. When removing it, have another person hold the server so that the server does not move.


If needed, run SETUP utility, and then specify the boot order from the **Boot** menu. For details about the **Boot** menu, refer to *Chapter 2 (1. System BIOS)* in "Maintenance Guide".

If using the server with the PCI card in slot #1A removed, attach the RAID card fixing bracket to the slot.

If using the server with the PCI card in slot #1B and/or #1C removed, attach the blank cover that comes with the riser card to the slot.

Important

Support bar When removing PCI board, be careful that the cables are not caught with the support bar. Otherwise, PCI board might be damaged.

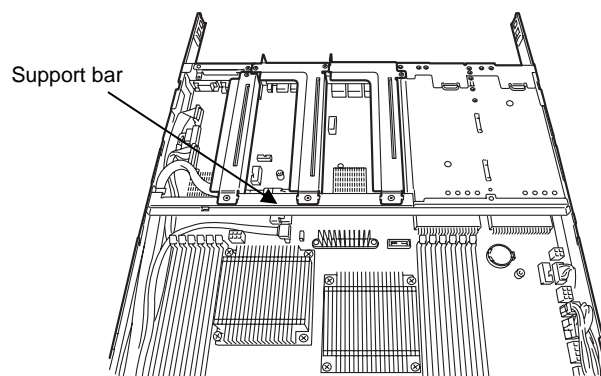


1.13 Additional HDD Cage

The server of Express5800/R120e-1E (2.5-inch Drive Model) can have additional HDD cage for installing additional Hard Disk Drives. The additional HDD cage is installed on front side of the server, and is used exclusively with the optical disk drive.


1.13.1 Installation

Follow steps below to install an additional HDD cage.


1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. If an optical disk drive is already installed, disconnect the cable from optical disk drive.

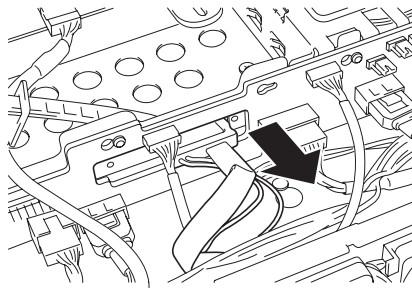

3. Remove the two screws from the optical disk drive bay bracket.

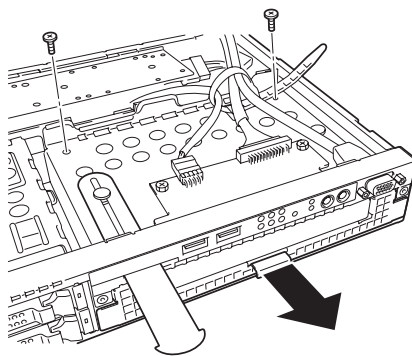


4. Pull out the optical disk drive bay bracket to the direction shown by an arrow.

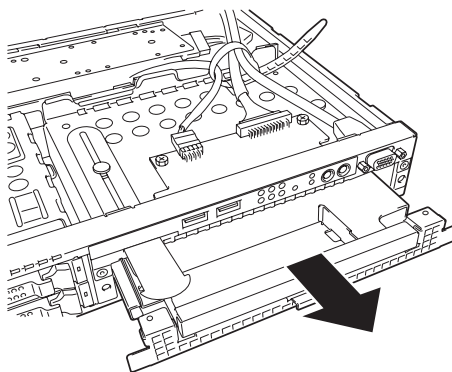**Note**

Keep the removed optical disk drive bay bracket for future use.

5. Install the additional HDD cage to the chassis, and secure it with two screws you have removed in Step 3.

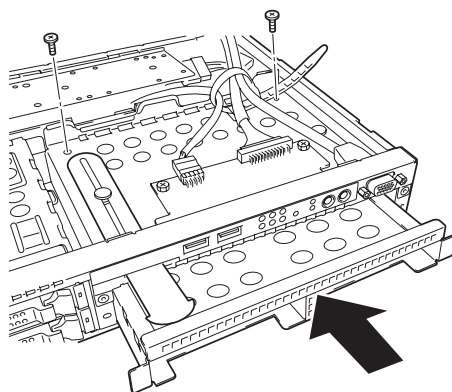

1.13.2 Removal

To remove an Additional HDD cage, reverse the installation procedure.

Important

Before removing additional HDD cage, remove hard disk drives installed in cage.


Be sure to attach bracket to keep cooling efficiency.

1.14 Optical Disk Drive


This section describes the procedure for installing the optional optical disk drive.

Important Do not install any unsupported optical disk drive.

Express5800/R120e-1E (2.5-inch Drive Model)

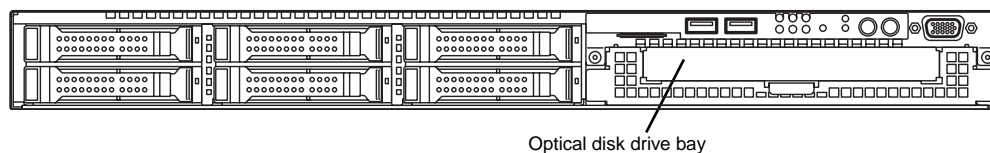

Express5800/R120e-1E (3.5-inch Drive Model)

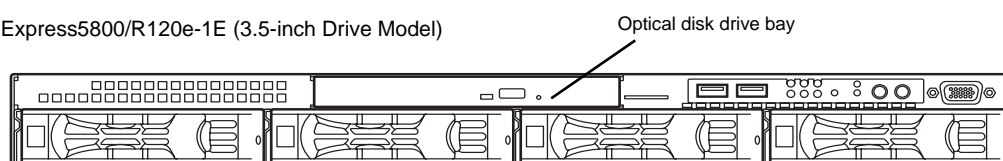


1.14.1 Installation

Install an optical disk drive in the following procedure.


(1) Express5800/R120e-1E (2.5-inch Drive Model)

1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations..

2. Remove the two screws from the optical disk drive tray, and pull the tray out.

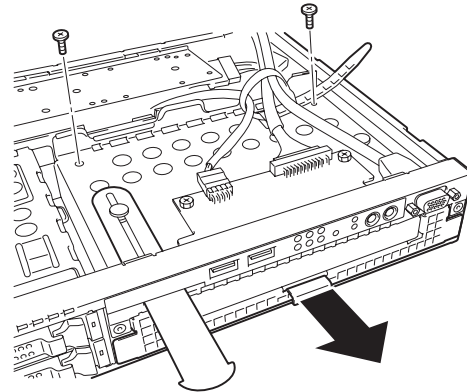


3. Remove a single screw from the tray you have removed in Step 2, and remove the bracket and dummy cover of optical disk drive.

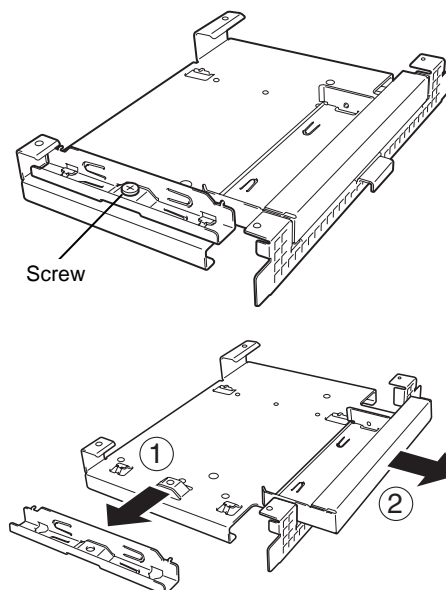


Note Keep the removed screws and dummy cover for future use.


4. Install the optical disk drive to the tray.

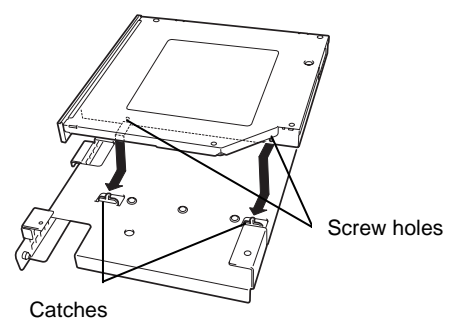


5. Secure the bracket to optical disk drive with a screw you have removed in Step 3.

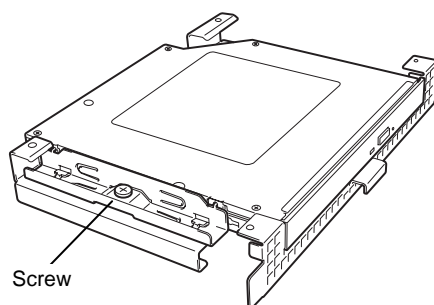

6. Insert the optical disk drive into the slot and secure the drive tray with two screws you have removed in Step 2.

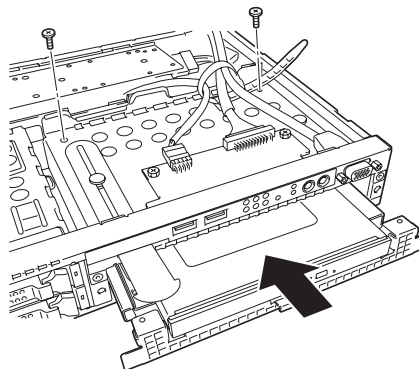


7. Connect the optical disk drive cable.

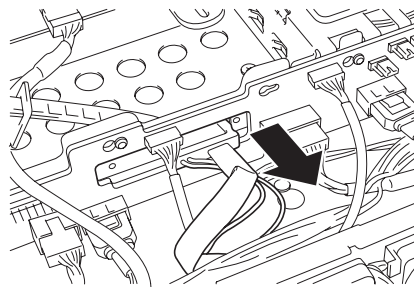


(2) Express5800/R120e-1E (3.5-inch Drive Model)

1. Refer to steps 1 to 6 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Remove a single screw from fixing bracket, and remove the drive cover of optical disk drive.

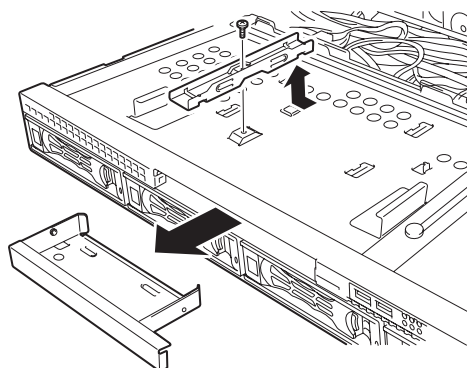


Note Keep the removed screws and dummy cover for future use.


3. Install optical disk drive to the tray.

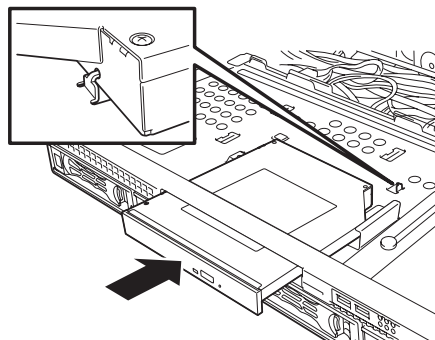

4. Secure the bracket to optical disk drive with a screw you have removed in Step 2.

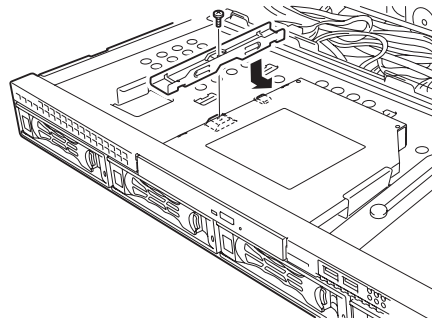

5. Connect the optical disk drive cable.

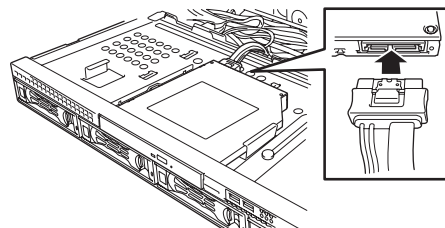

1.14.2 Removal

To remove an optical disk drive, reverse the installation procedure above.

Important

To maintain the cooling effect in the server, install the dummy cover in the vacant slot.

1.15 Use of Internal Hard Disk Drives in the RAID System

This section describes how to use the Hard Disk Drives installed in the HDD cage at the front of the server in the RAID System.

Important	If you use Hard Disk Drives in the RAID System or change the RAID level, initialize the Hard Disk Drives. If the Hard Disk Drive contains valuable data, be sure to backup the Hard Disk Drive before installing the RAID Controller and configuring the RAID System.
Note	In the RAID System, use Hard Disk Drives that have the same specifications (capacity, rotational speed, and standard) for each Disk Array.
Tips	Logical Drives can be created even with only one Physical Device.

(a) If an optional RAID Controller (N8103-172/173/174/168) is used

If using internal Hard Disk Drives in RAID System with an optional RAID Controller (N8103-172/173/174/168) installed in the server, the SAS/SATA cable needs to be rewired.
For more information, refer to the manual provided with optional RAID Controller.


Important	<ul style="list-style-type: none">You must avoid static electricity to work with the procedure below. For details, refer to <i>Chapter 2 (1.2 Anti-static Measures)</i>.Do not change the mode to hibernate when building a RAID System.
Note	<ul style="list-style-type: none">When installing an optional RAID Controller, start the BIOS Setup utility, select PCI Configuration from the Advanced menu, and then make sure that the parameter of PCI Slot xx ROM (xx is PCI slot number) is set to Enabled.When connecting a RAID Controller, set the boot priority to 8th or higher in the Boot menu of the BIOS Setup utility. If the setting is 9th or lower, the configuration menu for RAID Controllers cannot be launched.
Tips	When using SAS Hard Disk Drives, RAID Controllers must be connected.

1.15.1 Connecting cables

To use an on-board RAID Controller or optional RAID Controller, the interface cable must be connected. Refer to the figures below for how to connect cables.

If using onboard RAID Controllers for Express5800/R120e-1E
2.5-inch Drive Models (1 to 4 units)


Connect the first pin of the cable (marked with Δ) to the first pin of the SGPIO1 connector (marked with a bold line) on HDD backplane board.

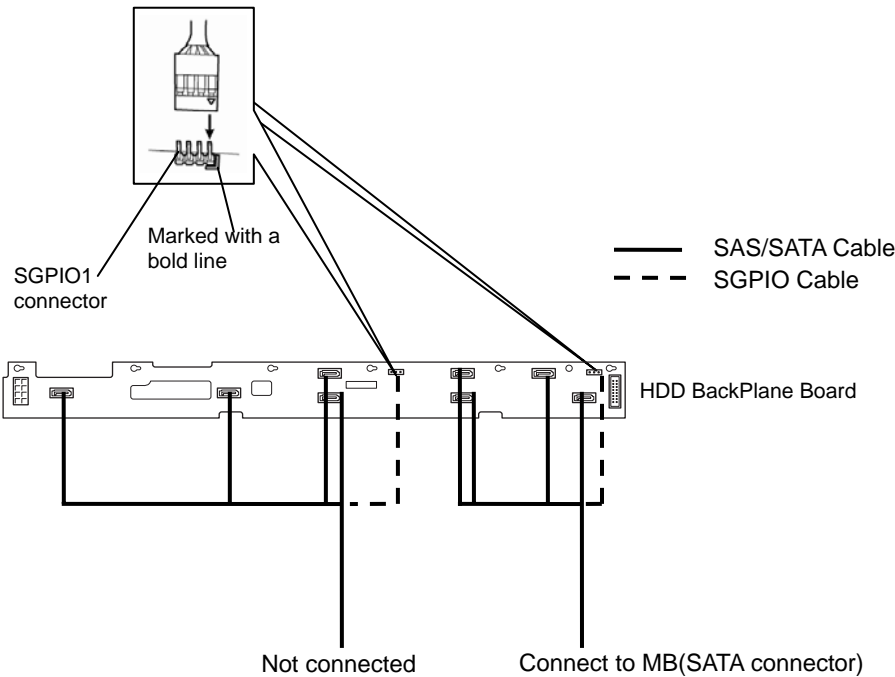

Motherboard	HDD backplane board	Hard Disk Drive
SATA0_3	SATA 0	Port 0
	SATA 1	Port 1
	SATA 2	Port 2
	SATA 3	Port 3

If using optional RAID Controllers for Express5800/R120e-1E 2.5-inch models (1 to 8 units)


Orient the cable so that the first pin of the cable (marked with Δ) will connect to the first pin of the SGPIO1 connector (marked with a bold line) on HDD backplane board.

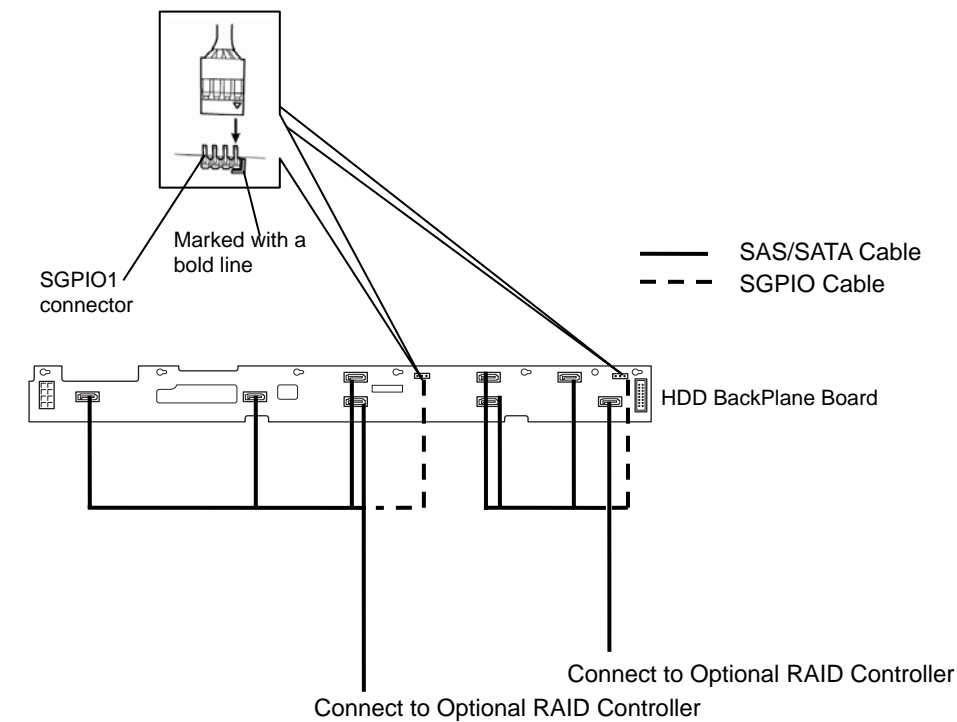

Optional RAID Controller	HDD backplane board	Hard Disk Drive
SAS 1 (Ports 0 to 3 or Ports 1 to 4)	SATA 0	Port 0
	SATA 1	Port 1
	SATA 2	Port 2
	SATA 3	Port 3
SAS 2 (Ports 4 to 7 or Ports 5 to 8)	SATA 4	Port 4
	SATA 5	Port 5
	SATA 6	Port 6
	SATA 7	Port 7

If using onboard RAID Controllers for Express5800/R120e-1E 3.5-inch Drive Model (1 to 4 units)


Connect the first pin of the cable (marked with Δ) to the first pin of the SGPIO1 connector (marked with a bold line) on HDD backplane board.

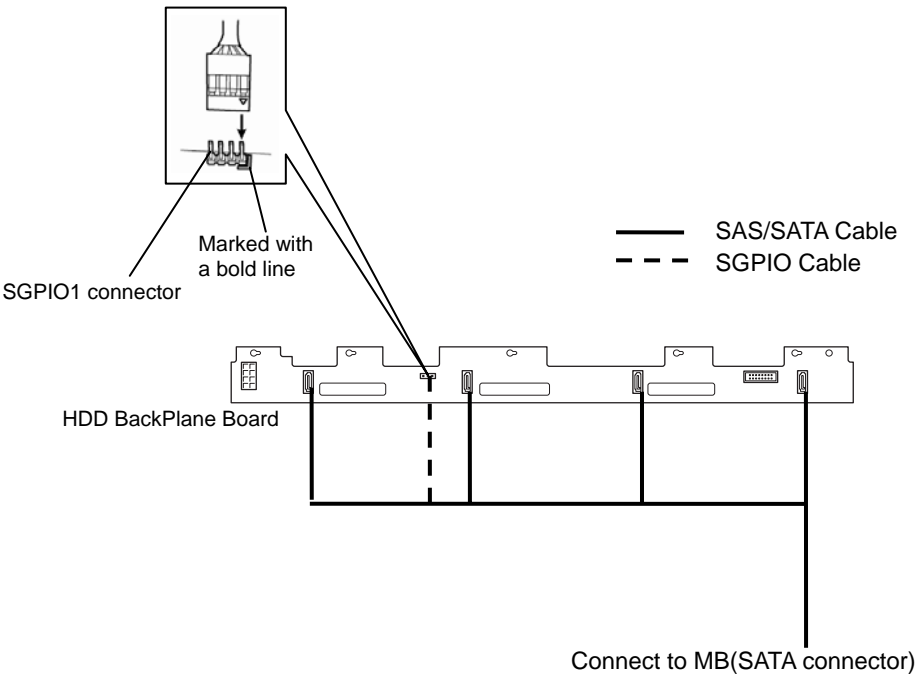

Motherboard	HDD backplane board	Hard Disk Drive
SATA0_3	SATA 0	Port 0
	SATA 1	Port 1
	SATA 2	Port 2
	SATA 3	Port 3

**If using optional RAID Controllers for Express5800/R120e-1E 3.5-inch Drive Models
(1 to 4 units)**

Connect the first pin of the cable (marked with Δ) to the first pin of the SGPIO1 connector (marked with a bold line) on HDD backplane board.

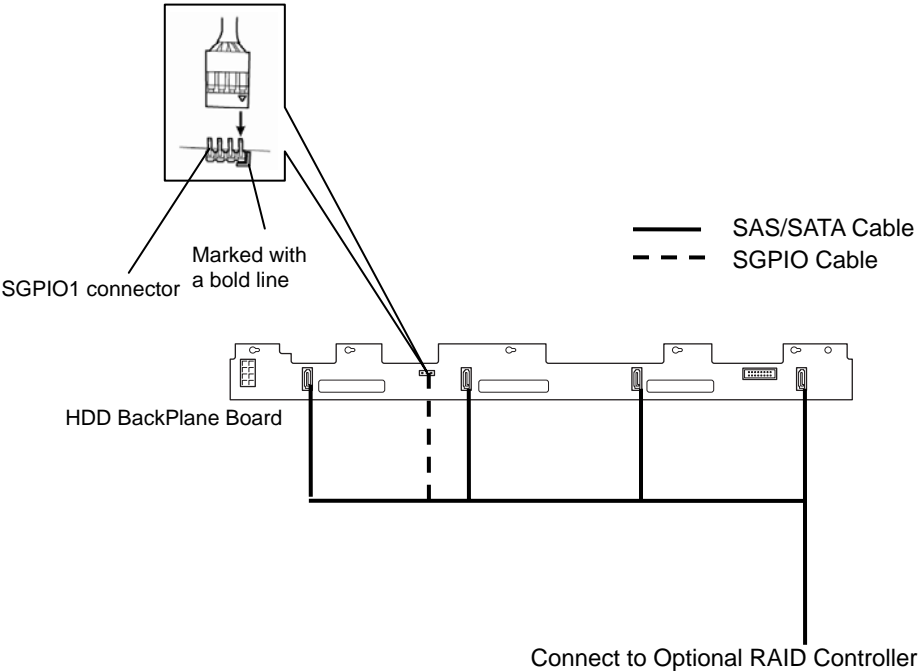

Optional RAID Controller	HDD backplane board	Hard Disk Drive
SAS 1 (Ports 0 to 3 or Ports 1 to 4)	SATA 0	Port 0
	SATA 1	Port 1
	SATA 2	Port 2
	SATA 3	Port 3
SAS 2 (Ports 4 to 7 or Ports 5 to 8)	—	—
	—	—
	—	—
	—	—

1.15.2 Notes on setting up a RAID System

Note the following points when setting up a RAID System.

- The number of Hard Disk Drives required varies in each RAID level.
- If on-the optional RAID Controller (N8103-172) is used, the RAID System cannot be built in RAID5/RAID6/RAID50/RAID60.

RAID level	The minimum number of Hard Disk Drives required to set up a RAID System	
	N8103-172	N8103-173/174/168
RAID 0	1	1
RAID 1	2	2
RAID 5		3
RAID 6		3
RAID 10	4	4
RAID 50 *		6
RAID 60 *		6

* Express5800/R120e-1E (3.5-inch Drive Model cannot build RAID 50 or RAID 60.
(Because this model supports up to 4 hard disk drives.)

- Use SAS/SATA Hard Disk Drives or SSDs that have the same capacity and rotational speed.
- If you intend to install the OS to the RAID System, the process from RAID configuration to OS installation can be easily completed by using the EXPRESSBUILDER. If you wish to install the OS manually, use a RAID System Configuration utility (WebBIOS or SuperBuild utility). The utility can be run during POST which starts immediately after the server is turned on. For details on the procedure of configuring a Logical Drive, refer to *Chapter 2 (4. RAID System Configuration)* in "Maintenance Guide" or the manual supplied with the optional RAID Controller (N8103-172/173/174/168).

Important

- Do not change the RAID System mode to hibernate.
- Build a Disk Array in the RAID System using Hard Disk Drives that have the same specifications (capacity, rotational speed, and standard).


1.16 Installing Top Cover

When all internal optional devices including DIMM and PCI card are installed, close the server with Top Cover.


Important To avoid damage to the cable, connect cables for PCI card such as LAN cable after installing Top Cover.

1.16.1 Installation

1. Put the top cover straight on the server chassis so that it can be surely engaged with the chassis frame.

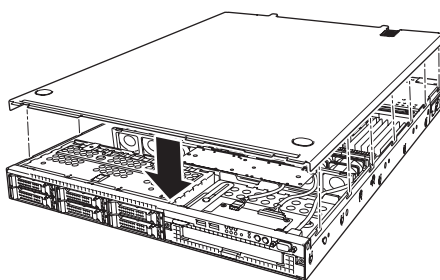

2. Slide the top cover toward the front of the server.

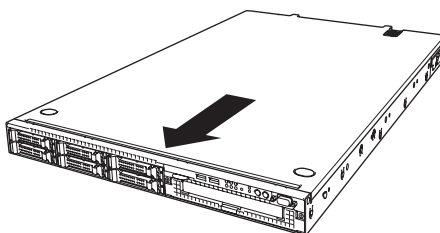

3. Secure the top cover with two screws on rear of the server.

1.17 2.5-inch Hard Disk Drive

The Express5800/R120e-1E (2.5-inch Drive Model) has 2.5-inch Drive Bays are provided at the front of the server.

A Hard Disk Drive mounted in a dedicated drive carrier can be purchased. Install the Hard Disk Drive on the server with it mounted in the drive carrier.

Important Use Hard Disk Drives specified by NEC. Installing a third-party Hard Disk Drive might cause a failure of the server and the Hard Disk Drive.


Note the following precautions to install hard disk drives.

- Hard disk drives having different capacities, interface types, or rotational speeds cannot be installed together.
- In the specific RAID System, hard disk drives and solid state drives cannot be installed together.
- To build a RAID system, you may need to set jumper switch or change cable connection.


Bays can contain up to 8 hard disk drives (when N8154-45 2.5-inch HDD cage is installed).

A unique port number is pre-assigned to each slot.

Standard configuration

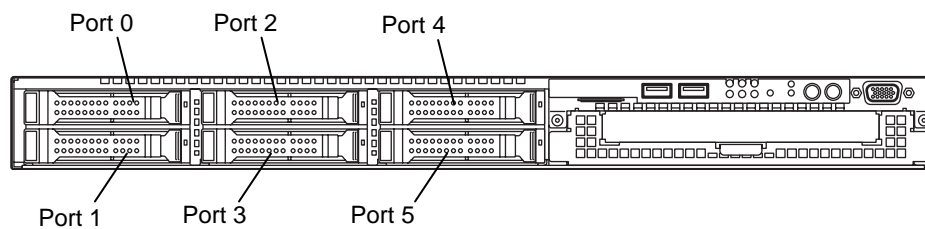

When 2.5-inch HDD Cage is installed

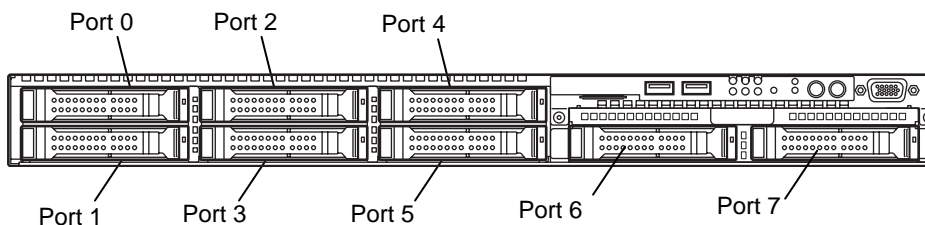

1.17.1 Installation

Install a Hard Disk Drive by using the following procedure. Follow the same installation procedure for other slots.

Note In the RAID System, build a Disk Array using Hard Disk Drives that have the same specifications (capacity, rotational speed, and standard).


1. Refer to *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.

2. Locate the slot where you install the Hard Disk Drive.

The server provides 6 slots (or 8 slots when additional HDD cage is installed).

Install Hard Disk Drives in ascending port number order.


3. Remove the dummy trays.

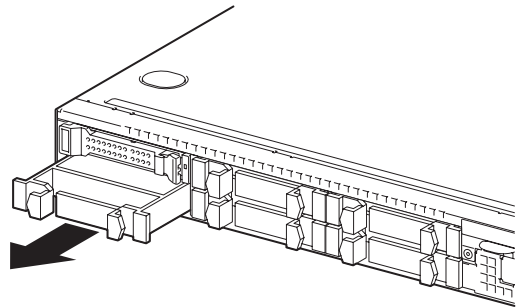


Important

- Keep the dummy trays for future use.
- Dummy trays are intended to increase the cooling effect inside the server. Keep the dummy trays installed in slots where Hard Disk Drives are not installed.

4. Unlock the handle of the drive carrier.

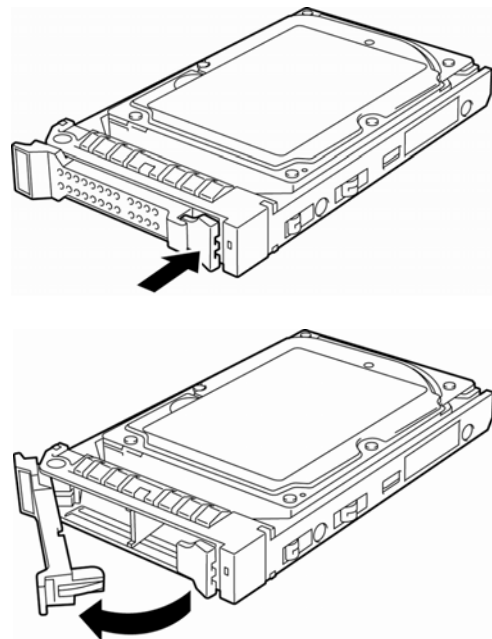

5. Hold the drive carrier firmly and insert it into the slot.

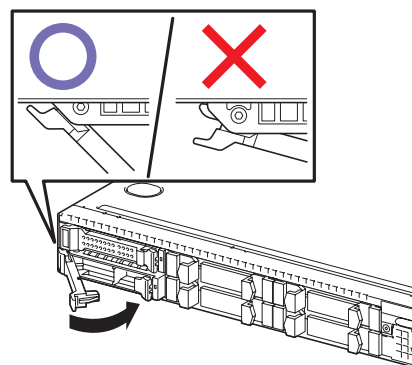**Note**

- Push it all the way until the handle's lock touches the frame.
- Hold the drive carrier firmly with both hands.

6. Slowly close the handle.

The drive carrier is locked making a clicking sound.

Note

When you push the drive into the slot, confirm the handle got hooked on the frame.

7. Run BIOS SETUP utility, and then specify the boot order from the **Boot** menu. For details about the **Boot** menu, refer to *Chapter 2 (1.2.5 Boot)* in "*Maintenance Guide*".

Tips

The saved boot order is cleared when a hard disk drive is added.

1.17.2 Removal

Remove a Hard Disk Drive, reverse the installation procedure.


If you transfer or dispose of the removed hard disk drive, refer to *Chapter 1 (1. Transfer, Movement, and Disposal)* in "Maintenance Guide" to erase data.

Important

NEC assumes no liability for data leakage should the product be transferred to a third party without erasing the data.

Note

If you have to remove a disk due to a Hard Disk Drive failure, check the slot with its DISK LED lit in amber.

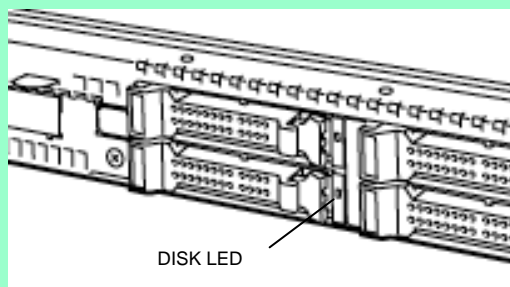

Note

Do not pull the handle to remove the hard disk drive. Doing so may damage the handle.

Run the SETUP utility, and then specify the boot order from the **Boot** menu. For details about the **Boot** menu, refer to *Chapter 2 (1. System BIOS)* in "Maintenance Guide".

Tips

The saved boot order is cleared when a hard disk drive is removed.

1.17.3 Replacing a Hard Disk Drive in the RAID System (Auto Rebuild)

In the RAID System, you can use the auto rebuild feature to restore data back to the state before a failure occurred by writing the data saved before the replacement to a new Hard Disk Drive after replacing the broken Hard Disk Drive.

The auto rebuild feature is enabled in logic drives set to RAID 1, RAID 5, RAID 6, RAID 10, RAID 50, and RAID 60.

The disk is automatically rebuilt when hot swapping (replacing a disk while the power on) a failed Hard Disk Drive.

During the auto rebuild, the DISK LED on the Hard Disk Drive flashes green and amber alternately to indicate that the autorebuild is being performed.

Observe the following precautions whenever executing the auto rebuild

- Do not turn off the server until the auto build completes after a Hard Disk Drive fails.
- Leave an interval of at least 90 seconds between a Hard Disk Drive removal and a Hard Disk Drive installation.
- Do not replace a disk during the auto rebuilding of another Hard Disk Drive (during an auto rebuild, the DISK LED on the Hard Disk Drive flashes green and amber alternately).

1.18 3.5-inch Hard Disk Drive

The Express5800/R120e-1E (3.5-inch Drive Model) has 3.5-inch Drive Bays at the front of the server.

A Hard Disk Drive mounted in a dedicated drive carrier can be purchased. Install the Hard Disk Drive on the server with it mounted in the drive carrier.


Important Use Hard Disk Drives specified by NEC. Installing a third-party Hard Disk Drive might cause a failure of the server and the Hard Disk Drive.

Note the following precautions to install hard disk drives.

- For onboard connection, hard disk drives having different capacities, interface types, or rotational speeds cannot be installed together.
- To build a RAID system, you may need to set jumper switch or change cable connection.

Bays can contain up to 4 hard disk drives.

A unique port number is pre-assigned to each slot.

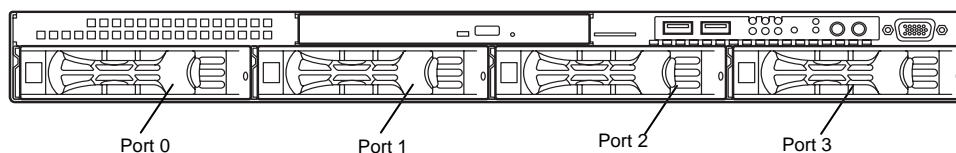


1.18.1 Installation

Install a Hard Disk Drive by using the following procedure.

Note In the RAID System, build a Disk Array using Hard Disk Drives that have the same specifications (capacity, rotational speed, and standard).



1. Refer to *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Locate the slot where you install the Hard Disk Drive.
The server provides 4 slots. Install Hard Disk Drives in ascending port number order.
3. Remove the dummy trays.

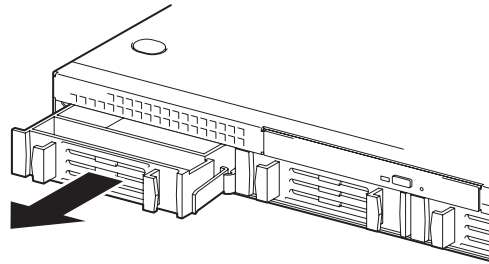


Important

- Keep the dummy trays for future use.
- Dummy trays are intended to increase the cooling effect inside the server. Keep the dummy trays installed in slots where Hard Disk Drives are not installed.

4. Unlock the handle of the drive carrier.

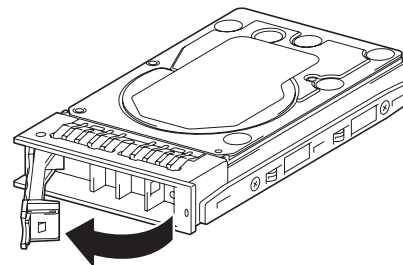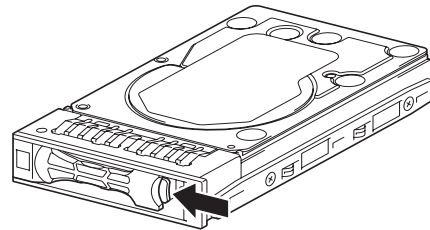

5. Hold the drive carrier firmly and insert it into the slot.

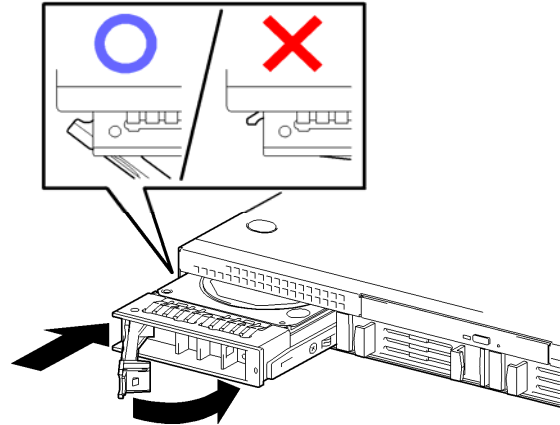**Note**

- Push it all the way until the handle's lock touches the frame.
- Hold the drive carrier firmly with both hands.

6. Slowly close the handle.
The drive carrier is locked making a clicking sound.

Note

When you push the drive into the slot, confirm the handle got hooked on the frame.

7. Turn on the server, start the SETUP utility, and then specify the boot order from the **Boot** menu. For details about the **Boot** menu, refer to *Chapter 2 (1.2.5 Boot)* in "Maintenance Guide".
This process is required because the saved boot order is cleared when you add a Hard Disk Drive.

Tips

The saved boot order is cleared when a hard disk drive is added.


1.18.2 Removal

Remove a Hard Disk Drive, reverse the installation procedure.

If you transfer or dispose of the removed hard disk drive, refer to *Chapter 1 (1. Transfer, Movement, and Disposal)* in "Maintenance Guide" to erase data.

Important NEC assumes no liability for data leakage should the product be transferred to a third party without erasing the data.

Note If you have to remove a disk due to a Hard Disk Drive failure, check the slot with its DISK LED lit in amber.

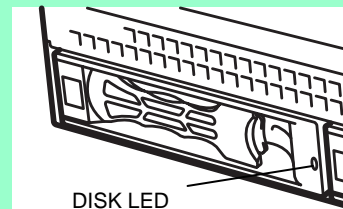

Note Do not pull the handle to remove the hard disk drive. Doing so may damage the handle.

Run the SETUP utility, and then specify the boot order from the **Boot** menu. For details about the **Boot** menu, refer to *Chapter 2 (1. System BIOS)* in "Maintenance Guide".

Tips The saved boot order is cleared when a hard disk drive is added.

***1.18.3* Replacing a Hard Disk Drive in the RAID System (Auto Rebuild)**

In the RAID System, you can use the auto rebuild feature to restore data back to the state before a failure occurred by writing the data saved before the replacement to a new Hard Disk Drive after replacing the broken Hard Disk Drive.

The auto rebuild feature is enabled in logic drives set to RAID 1, RAID 5, RAID 6, RAID 10.

The disk is automatically rebuilt when hot swapping (replacing a disk while the power on) a failed Hard Disk Drive.

During the auto rebuild, the DISK LED on the Hard Disk Drive flashes green and amber alternately to indicate that the autorebuild is being performed.

Observe the following precautions whenever executing the auto rebuild

- Do not turn off the server until the auto build completes after a Hard Disk Drive fails.
- Leave an interval of at least 90 seconds between a Hard Disk Drive removal and a Hard Disk Drive installation.
- Do not replace a disk during the auto rebuilding of another Hard Disk Drive (during an auto rebuild, the DISK LED on the Hard Disk Drive flashes green and amber alternately).

1.19 Power Supply Unit

This server can contain two power supply units. The server provides a redundant power configuration that ensures continued operation of the system in the unlikely event one of the power supply units fails.

You can select a power supply unit appropriate your system configuration. See the table below.

2.5-inch Drive Model

Model (Installed CPU)	Number of CPUs	Additional HDD cage	Number of DIMM	Available power supply unit
N8101-730F (E5-2403v2)	1 CPU	–	–	800 W / 450 W
N8101-731F (E5-2407v2)	2 CPUs	Not installed	–	800 W / 450 W
N8101-732F (E5-2420v2)		Installed	Up to 10	800 W / 450 W
N8101-733F (E5-2430v2)			11 or more	800 W
N8101-734F (E5-2430Lv2)				
N8101-735F (E5-2440v2) N8101-736F (E5-2470v2)	1 CPU	–	–	800 W / 450 W
	2 CPUs	Not installed	Up to 10	800 W / 450 W
			11 or more	800 W
		Not installed	Up to 6	800 W / 450 W
			7 or more	800 W

3.5-inch Drive Model

Number of CPUs	Additional HDD cage	Number of DIMM	Available power supply unit
–	–	–	450 W

1.19.1 Cold Redundant Feature

The server supports the feature to optimize power efficiency as described below:

- Cold redundant feature can run the system with optimum power efficiency by raising operating efficiency of primary power supply unit and lowering that of redundant power supply unit in redundant power configuration.
- If power efficiency of power units is not optimized due to system configuration, this feature is disabled automatically.

Cold redundant feature can be used under the following conditions:

- Two power supply units must be installed for redundant configuration.
- Referring to *Chapter 2 (1. System BIOS) in "Maintenance Guide"*, change parameters as shown below, save the settings and exit from SETUP.



Server → Power Control Configuration → Cold Redundant Mode → Enabled

Run SETUP again, and check if the status of **Cold Redundant Mode** shows **Enabled** in Server menu.

1.19.2 Installation


Follow steps below to install a power supply unit:

1. Refer to steps 1 to 4 in *Chapter 2 (1.3 Overview of Installation and Removal)* for preparations.
2. Remove the blank cover.

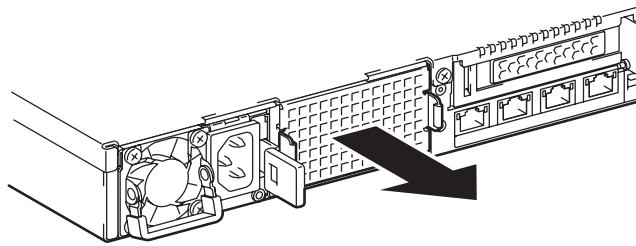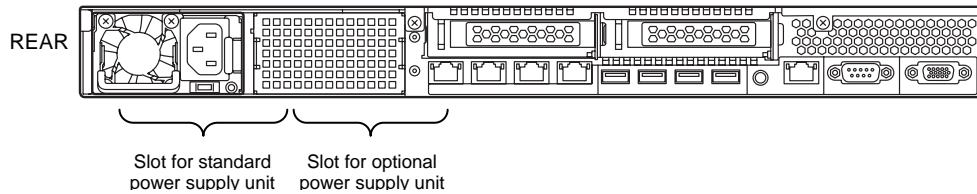

Important Keep the removed blank cover for future use.

3. Insert the power supply unit until it is locked with clicking sound.

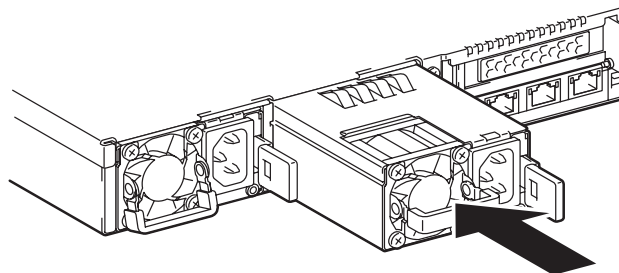


4. Connect power cords.

Use the power cord that comes with the server and the one comes with the additional power supply unit.

The AC POWER LEDs blink green when the power cords are connected.


If the power unit is not connected with the power cord, its AC POWER LED goes on amber.

When the power cords are connected, AC POWER LEDs on both power supply units blink green.

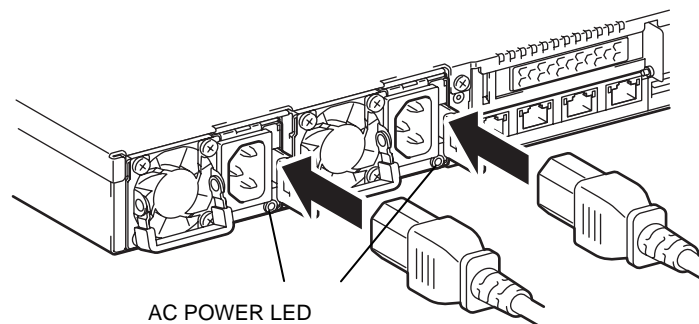


Tips

To prevent getting away of an AC cord unexpectedly while server working, It's better to use AC cable tie.

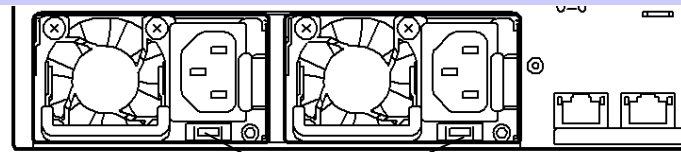

mounting hole for AC cable tie

AC cable tie



Put in a mounting hole of power supply unit this way.

5. Power on the server.

The AC POWER LEDs go on green.


6. Confirm, by the STATUS LED or on the POST screen, that there are no errors related to the power supply units.

See *Chapter 1 (5. Troubleshooting)* in the *Maintenance Guide* for details on the error messages.

If the AC POWER LEDs are off, reinstall the power supply units. If the same error message still appears, contact your service representative.

1.19.3 Replacing a Failing Power Supply Unit

Replace only when the power supply unit fails. To remove a power supply unit, reverse the installation procedure above.

⚠ CAUTION	
	<p>Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause burns, injury, and property damage. For details, refer to <i>Safety precautions in Precautions for Use</i>.</p> <ul style="list-style-type: none"> • Pay attention to electric hazard.


Important Do not remove a power supply unit operating normally.

1. Locate the failing power supply unit by the AC POWER LED on the rear of each power supply unit. (The LED of the failing power supply unit is lit amber or blinking amber.)
2. Shutdown the system, and press the POWER switch on the server to turn off the power.

Tips

In the redundant power configuration (with two power supply units) and if either one of power supply units fails, the failing power supply unit can be replaced with the system power on..

3. Disconnect the AC power cord from the failed power supply unit.
4. Push the lever of the failing power supply unit toward inside, and pull the power supply unit while holding the handle. Remove the power supply unit from the chassis.

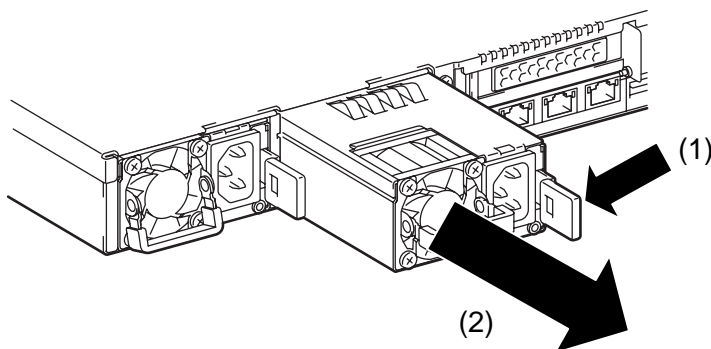

5. If operating the server with a single power supply unit without installing a new one, install the blank cover you removed in step 2 of installation procedure.

Important To maintain the cooling effect in the server, install the blank cover in the vacant slot.


6. Install the new power supply unit taking steps 3 to 7 of "Installation", and confirm that the power supply unit is installed normally.

1.20 Installing Front Bezel

When installing Front Bezel, engage catches of front bezel with those on rails.

After installation, lock the front bezel with security key.

The illustration below shows Express5800/R120e-1E (2.5-inch Drive Model).

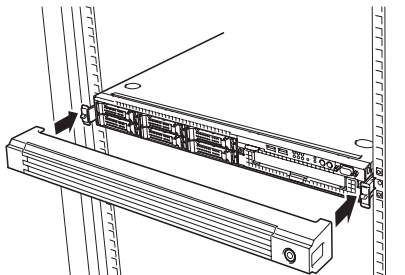

Important Be careful not to press POWER Switch.

2. Installation and Connection


This section describes how to position the server and connect cables.


2.1 Installation

This server must be mounted to a rack which conforms to EIA standards for use.

2.1.1 Installing rack


Refer to the manual that comes with your rack for how to install the rack, or consult with your sales representative.


**WARNING**



Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause death or serious injury. For details, refer to *Safety precautions in Precautions for Use*.

- Use only in the specified environment.
- Do not connect the ground wire to a gas pipe.

**CAUTION**



Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause burns, injury, and property damage. For details, refer to *Safety precautions in Precautions for Use*.


- Do not carry or install the server only by a single person.
- Do not install the server so that the load may be concentrated on a specific point.
- Do not install any components only by a single person. Confirm that hinge pins of the door are completely secured in place.
- Do not pull out the server from the rack when the rack is unstable.
- Do not leave more than one device being pulled out from the rack.
- Do not provide the wiring for the server to exceed the rating of the power supply.
- Do not use in the environment where corrosive gas is generated.


Do not install the rack or server under the following environment. Doing so may cause malfunction of the server.

- Narrow space from which devices cannot be pulled out from the rack completely
- Place that cannot bear the total weights of the rack and devices mounted on the rack
- Place where stabilizers cannot be installed or where the rack can be installed only after the practice of proper earthquake-resistant construction
- Place of uneven or slanting floor
- Place of drastic temperature change (near a heater, air conditioner, or refrigerator)
- Place where intense vibration may be generated
- Place where corrosive gases (sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia, ozone, etc) exist
Place where the air (or dust) includes components accelerating corrosion (ex. sulfur, sodium chloride) or conductive metals
- Place where chemicals may be accidentally sprayed over
- Place where a carpet not subject to anti-static process is laid
- Place where some objects may be fallen on the rack
- Place near a device generating intense magnetic field (such as TVs, radios, broadcast/communication antennas, power transmission wires, and electromagnetic cranes) is placed (If unavoidable, contact your maintenance service company for proper shield construction.)
- Place where the power cord of the server must be connected to an AC outlet that shares the outlet of another device with large power consumption
- Place near equipment that generates power noise (e.g., contact spark at power-on/power-off of commercial power supply through a relay). If you must install the server close to such equipment, have your maintenance service company separate power cables or install noise filter.
- Environment where operation of the server is not guaranteed

2.1.2 Installing the server to the rack or removing it from the rack


Mount the server to the rack. (This section also describes the removal procedure.)


**WARNING**



Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause death or serious injury. For details, refer to *Safety precautions in Precautions for Use*.

- Do not use any racks out of standards.
- Use only under the specified environment.

**CAUTION**



Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause burns, injury, and property damage. For details, refer to *Safety precautions in Precautions for Use*.

- Do not drop.
- Do not leave the server being pulled out.
- Do not install with the cover removed.
- Do not get your fingers caught.

Important

Temperature increases and airflow in the rack

If multiple devices are installed, or if the inside of the rack is not sufficiently ventilated, the internal temperature rises due to the heat emitted from each device, which may result in a malfunction. Review airflow in the rack and room and take sufficient measures so that the internal temperature will not exceed the operational temperature during operation.


Air enters the server from the front and exits from the rear.

Preparation

- Checking rails
- Installing inner and outer rails


Checking rails

Make sure the orientation of inner and outer rails by viewing labels on each rail.

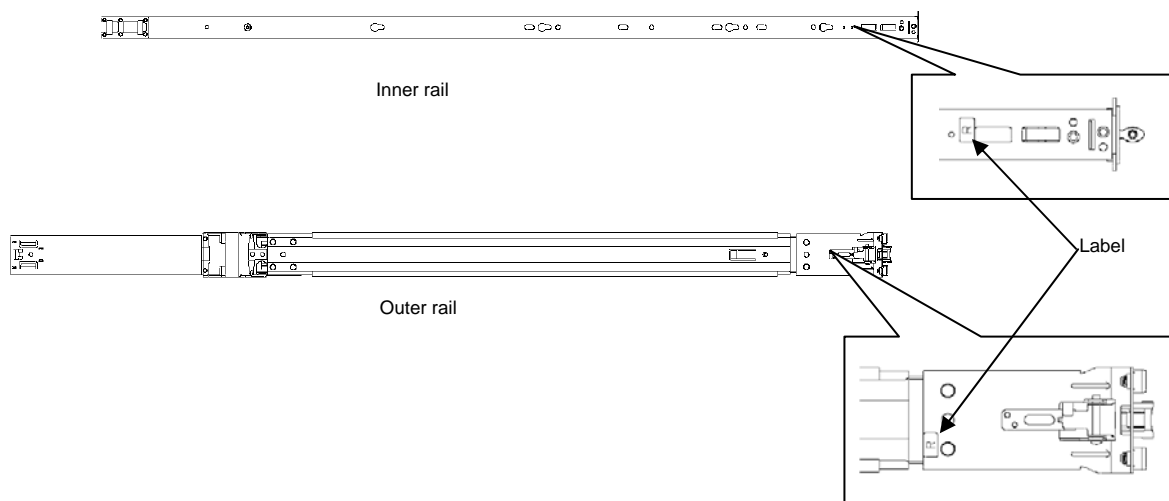

● Installing inner rails

1. Mount an inner rail marked as "R" to the right side of the server and "L" to the left side when viewed the server from front.
2. Align the locks and holes, and insert the inner rails until it clicks.




● Installing outer rails

1. Mount an outer rail marked as "R" to the right side of the rack and "L" to the left side when viewed the rack from front.

2. Fit the square-shaped protrusions of outer rail to the square holes of a 19-inch rack. Make sure that it makes a clicking sound indicating that it is locked.

The image on the right shows the front left side of the rack. Install to the rear left side and front and rear right sides following the same procedure.


Make sure that the rail is installed at the same height as the other rail already installed.

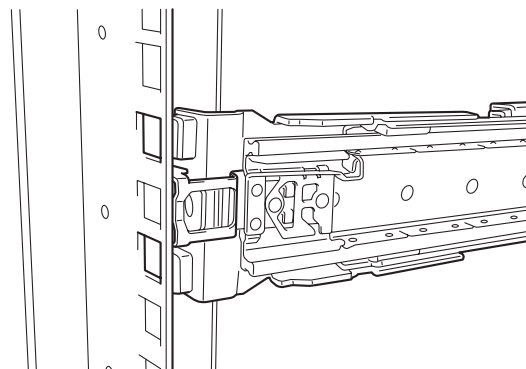



Important Confirm that the rail are securely locked so that they will not fall off.

Tips Although the rail assembly may be somewhat unsteady, it is not defective.

Installation/Removal the Server

 **CAUTION**



Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause burns, injury, and property damage. For details, refer to *Safety precautions* in *Precautions for Use*.


- Do not attempt to lift the server with a single person.
- Do not drop.
- Do not leave the server being pulled out.
- Do not install with the cover removed.
- Do not get your fingers caught.

(1) Installation the server


Mount the server to a rack in the following procedure.

Important Always install the server with two or more persons.


1. Pull the slide rail from the outer rail that is mounted on rack until the slide rail is locked.

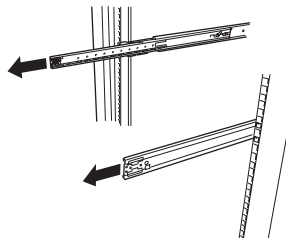

Note Make sure that locking mechanism work normally.

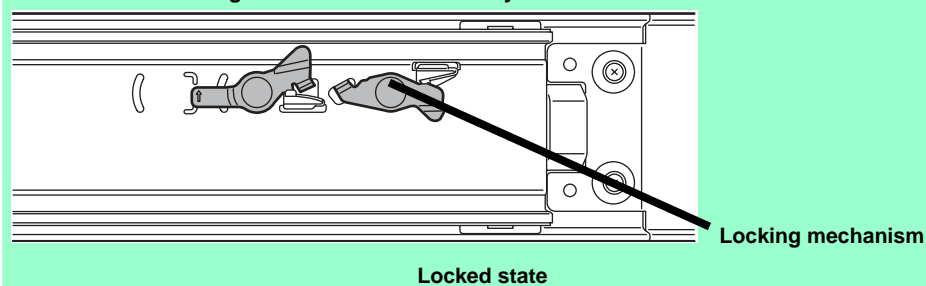

2. With two or more persons, firmly hold the server and mount it to the rack.
3. When the server is pushed into the rack and it is locked, push the server to the end while pulling the release levers (blue) on both sides of the server.
4. Push the server until its lock on front panel clicks.

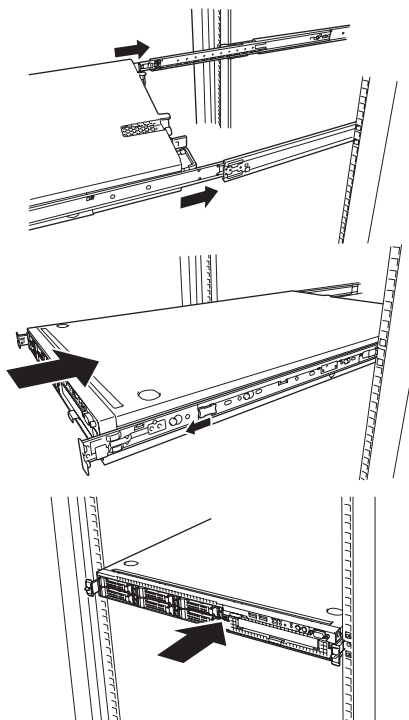


(2) Removal procedure


Remove the server from the rack in the following procedure. This can be removed by one person but it is recommended more than one person work on this together.

Important Always remove the server with two or more persons.


1. Make sure that the server is turned off and then disconnect the power cord or all interface cables from the server.
2. Remove the front bezel.

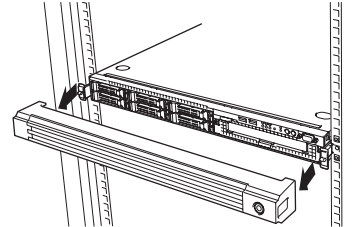

3. Slowly pull the server out while pressing the unlock buttons located on either side of the front of the server.

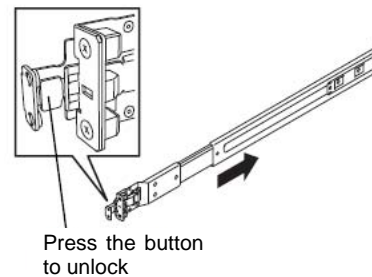

4. Because there are stoppers, the server will come to a stop halfway. Press and hold the rail stoppers on the rails and pull the server out of the rack.

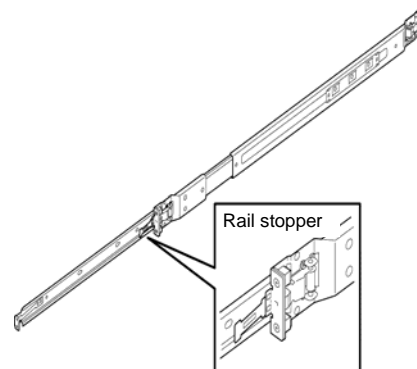

Important Be careful not to get your fingers caught in the rails and levers.

5. Hold the server firmly and remove it from the rack.


Important

- While more than one person is supporting the bottom part of the server, slowly pull out the server.
- Do not apply pressure on the server from top when it is being pulled out. Doing so cause the server to drop, which is dangerous.
- Be careful not to get your finger caught in rails.


(a) Removing Outer Rail

Remove outer rails from the rack in the following procedure.

1. Refer to *Chapter 2 (2.1.2 Installing the server to the rack or removing it from the rack, Removal procedure)* to remove the server from the rack.
2. Push the unlock lever on outer rail to the direction shown by arrow to house the slide rail.

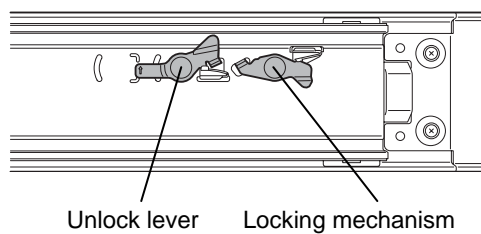


3. While pressing the lever on outer rail, push the outer rail toward inside of the rack, then remove it.

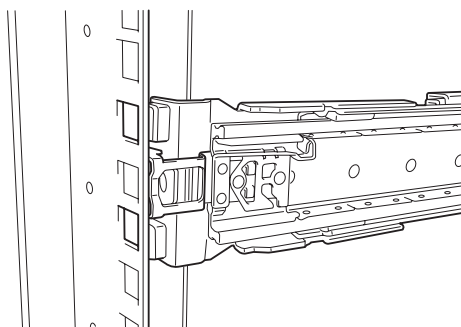


2.2 Connection

Connect peripheral devices to the server.


Connectors that allow a variety of peripheral devices to be connected are provided at the front and rear of the server. Images on the following pages show the peripheral devices that can be connected in their standard state and their respective connector positions.


 **WARNING**



Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause death or serious injury. For details, refer to *Safety precautions in Precautions for Use*.

- Do not hold the power plug with wet hands
- Do not connect the ground wire to a gas pipe


 **CAUTION**



Be sure to observe the following precautions to use the server safely. Failure to observe the precautions may cause burns, injury, and property damage. For details, refer to *Safety precautions in Precautions for Use*.

- Use only the specified outlet to insert.
- Do not connect the power cord to an outlet that has an illegal number of connections.
- Insert the power plug into the outlet as far as it goes.
- Use only the specified power cord
- Do not connect or disconnect the interface cable with the power plugged in the outlet.
- Use only the specified interface cable



Express5800/R120e-1E (3.5-inch Drive Model)

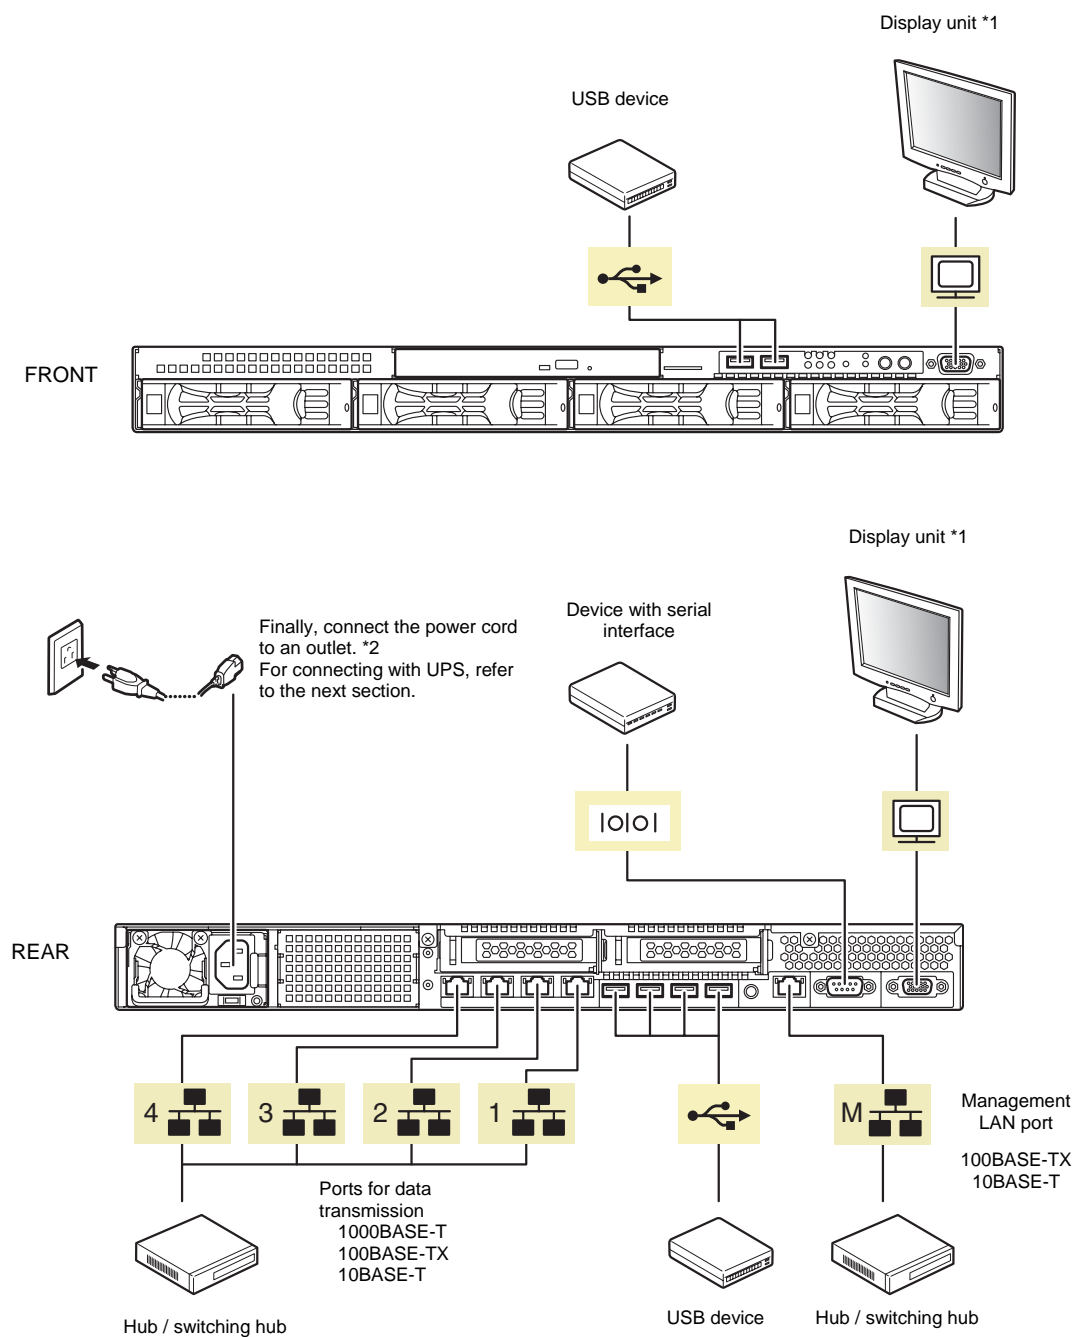

*1 Either one can be connected.

*2 Connect the power cord to circuit breaker of up to 15 A.

Express5800/R120e-1E (2.5-inch Drive Model)

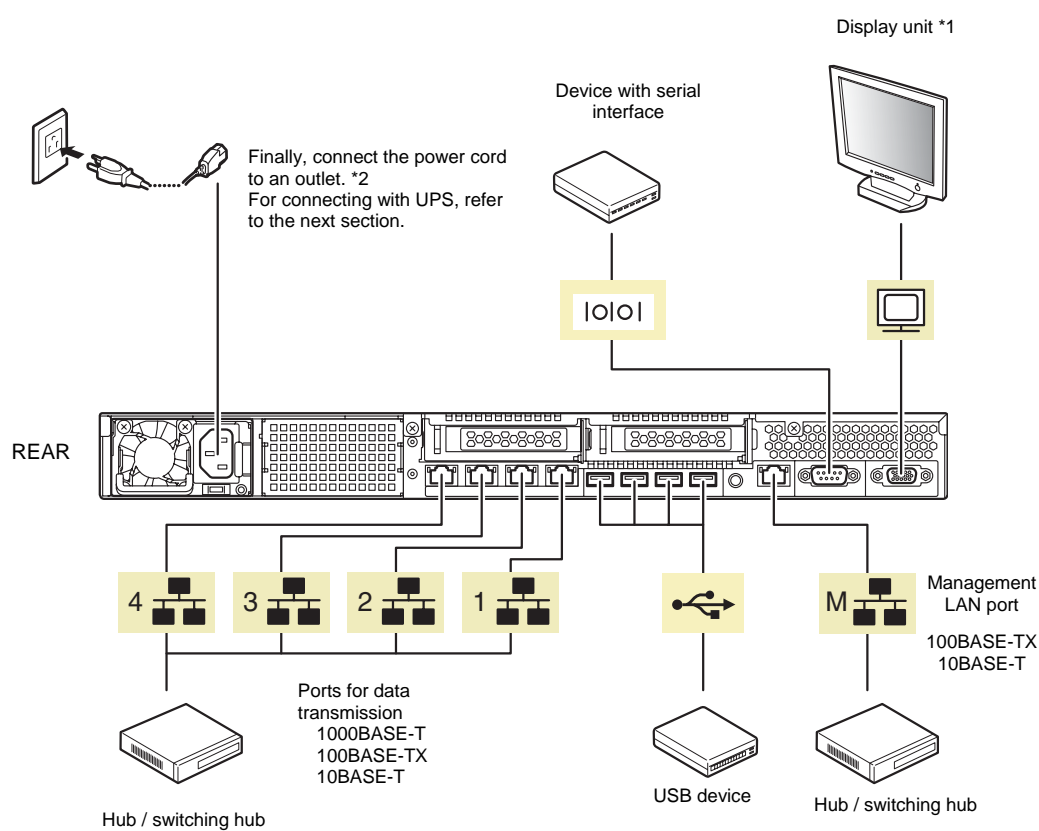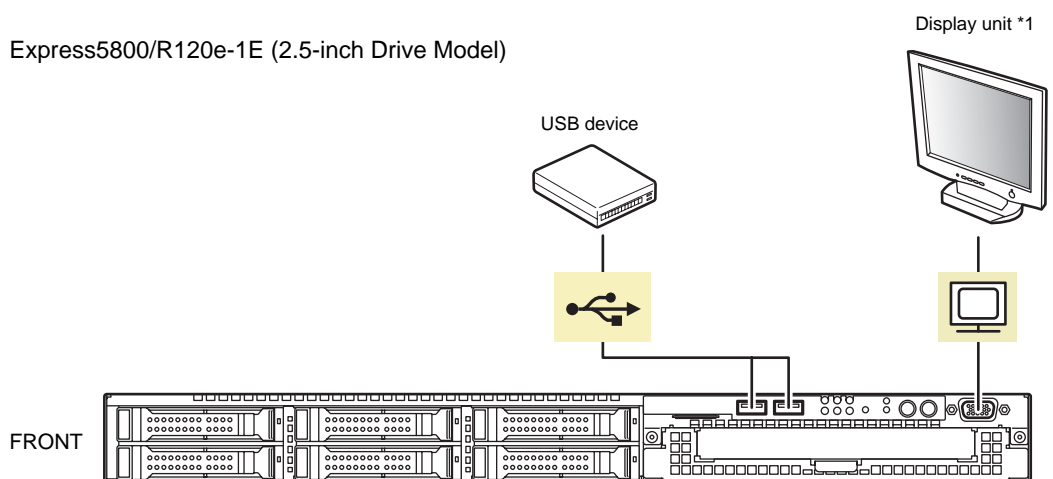

*1 Either one can be connected.

*2 Connect the power cord to circuit breaker of up to 15 A.

Note


If you connect a card to a line, use the card which you have applied for with the certification authority.

Tips

A leased line cannot be directly connected to the serial port connector.

Tips


2 ports USB connectors at the rear of the server are supplied with power even when DC is off.

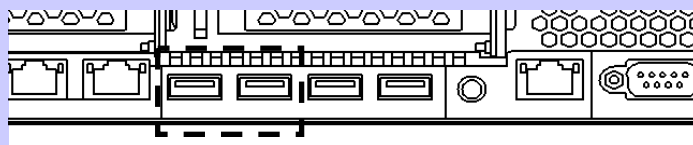

Note the following precautions to connect cables.

- When the device is not Plug and Play device, turn off the server and devices before connecting.
- If connecting any peripheral device and its interface cable made by other companies (a third party), contact your sales representative to check if they can be used with the server beforehand.
- Fix the power cord or interface cable with cable ties.
- Make sure that no pressure is applied on the plug of power cord.
- If you connect an external USB DVD-ROM drive to a USB connector at the front of the server, do not connect any other device to the adjacent USB port.


* The ports in a box in the images below are “adjacent USB ports”.

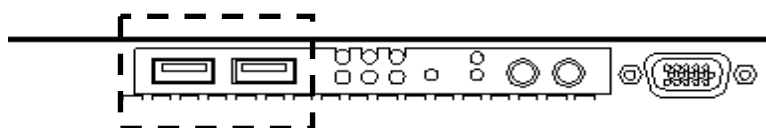

2.2.1 Connecting to a uninterruptible power supply (UPS)

To connect the power cord of the server to the uninterruptible power supply (UPS), use the connector output on the rear of the UPS. For details, refer to the manual supplied with the UPS.

Example

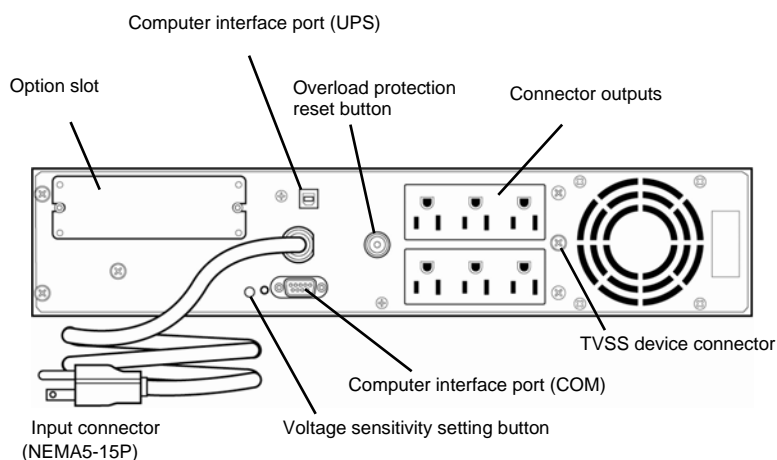

When the power cord is connected to a UPS, the BIOS settings may need to be changed in order to link the server with the power supply from the UPS.

To change the settings, select **Server** and then **AC-LINK** in the BIOS setup utility, and change the displayed parameters. Select **Power On** to perform automatic operations by using the UPS. For details, refer to *Chapter 2 (1.2.4 Server)* in "Maintenance Guide".

NEC Express5800 Series Express5800/R120e-1E

3

Setup

This chapter describes how to set up the server.

1. Turning on the Server

POST (Power-On Self-Test) is explained in this section.

2. System BIOS Setup

You can customize the BIOS settings by following the instructions in this section.

3. EXPRESSSCOPE Engine 3

EXPRESSSCOPE Engine 3 provides useful features through the Baseboard Management Controller (BMC).

4. EXPRESSBUILDER

EXPRESSBUILDER helps you to install Windows and maintain the server.

5. Installing Software Components

You can install Windows and bundled software by following the instructions in "*Installation Guide (Windows)*".

6. Turning off the Server

Turn off power when not using the server.

1. Turning on the Server

Pressing the POWER switch at the front of the server turns on the server.

Turn on the server by using the following procedure.

Tips

- Wait for at least 40 seconds before turning on the server after connecting the power cord.
- Do not power on the server before amber POWER LED is unlit.

1. Turn on the display unit and peripheral devices.

Note

If the power cord is connected to power control system such as an Uninterruptible Power Supply (UPS), make sure that the power control system is turned on.


2. Remove the front bezel.
3. Press the POWER switch at the front of the server.

The POWER LED is turned on green and after a while, the logo appears on the display unit.


Important

Do not connect or disconnect USB device while POST is running.

Express5800/R120e-1E (2.5-inch Drive Model)

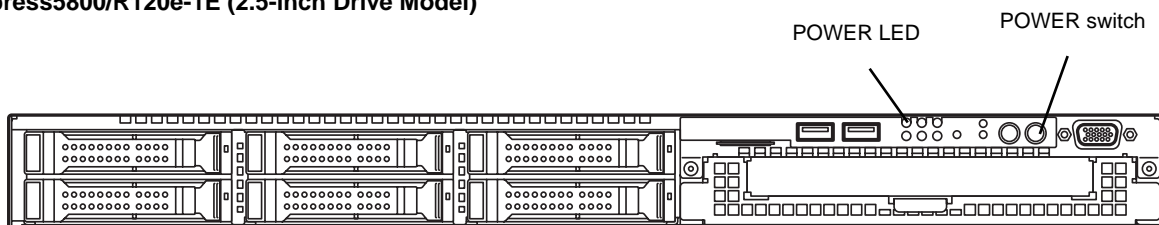

Express5800/R120e-1E (3.5-inch Drive Model)

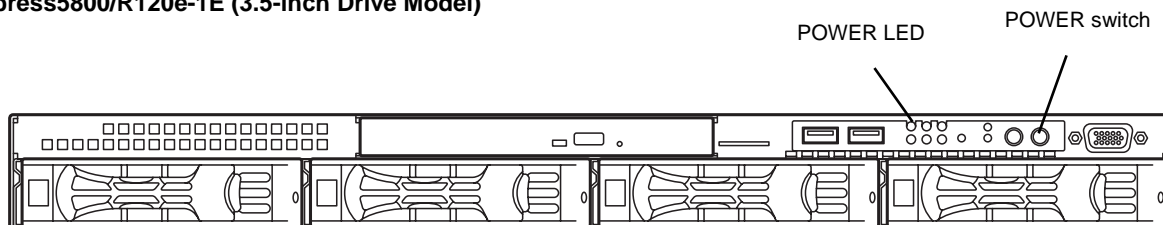

While the logo is being displayed, the self-diagnostic program (POST) runs and diagnoses the hardware. For details, refer to *Chapter 3 (1.1.1 POST sequence)*.

1.1 POST

Power-On Self-Test (POST) is a self-diagnostic program stored in the server as standard. POST automatically runs immediately after the server is turned on and checks the motherboard, memory, processor (CPU), keyboard, and mouse. POST also displays the start-up messages of different utilities during the operation.

Usually, you do not need to check the contents of POST. However, check messages displayed at POST in the following cases.

- When introducing a server
- If you suspect a failure
- When you hear beep many times during the time between Power ON and OS startup
- When any error message is displayed

1.1.1 POST sequence

Explains how POST runs in order.

1. Turn on the server. POST starts running and the initialization message indicating that modules such as the memory and PCI device are being initialized is displayed. Following the initialization message, the NEC logo is displayed.



Note

- Keyboard becomes operable after the logo appears.
- The screen might go black several times while the initialization message is displayed. This does not cause any operational problems.
- The initialization message might not be displayed when the optional VGA controller is connected or depending on the settings specified by using the BIOS setup utility (SETUP)
- The initialization message is not displayed on the serial port console redirection screen.

2. If **Enabled** is specified for **Password On Boot** in **Security** menu of SETUP, you will be prompted to enter password after the logo is displayed. If you enter the incorrect password three times consecutively, **POST aborts**. (You can no longer proceed.) In this case, power off the server, and power it on.

Important

Do not set a password before OS is installed.

3. If the <Esc> key is pressed, the logo disappears and the details of POST are displayed.

Tips

If **Quiet Boot** is **Disabled** from **Boot** menu in BIOS settings, the logo is not displayed without requiring <Esc> key to be pressed.

4. POST displays several types of message. These messages let you know that the installed CPU or connected keyboard and mouse are detected.

5. After a while, the following message is displayed on the screen.

Press <F2> SETUP, <F3> Internal Flash Memory, <F4> ROM Utility, <F12> Network

By pressing the designated function key following messages, you can call the functions below upon completion of POST.

- <F2> key: Run BIOS Setup Utility (SETUP). For information on the SETUP, refer to *Chapter 3 (2. BIOS Setup Utility (SETUP))*.
- <F3> key: Run EXPRESSBUILDER from Internal Flash Memory (optional). For information on EXPRESSBUILDER, refer to *Chapter 3 (4. EXPRESSBUILDER)*

Note

- If the optional Internal Flash Memory is not installed in the system, <F3> key message will not be displayed.
- <F3> key must be pressed within 5 seconds of the message being displayed.
- Note that the server will not boot from Internal Flash Memory even if it is specified to do so by pressing <F3> key, as long as a bootable CD/DVD-ROM is set on the drive.

- <F4> key: Run the offline tool. For information on the offline tool, refer to *Chapter 1 Maintenance (9. Offline Tools) in "Maintenance Guide"*.

<F12> key: Boot from network.

6. If a controller which has its dedicated BIOS such as a RAID Controller is installed, a message that prompts you to start the dedicated utility to set each board is displayed.

Example: If an optional RAID Controller is installed

Press <Ctrl> <H> for Web BIOS

The utility starts by pressing the <Ctrl> + <H> keys.

Example: If the jumper setting for an onboard RAID Controller is enabled

Press <Ctrl> <M> to Run LSI Software RAID Configuration Utility

The utility starts by pressing the <Ctrl> + <M> keys.

For details on the utility, refer to the manual supplied with each optional board.

Depending on the configuration, the message "Press Any Key" might appear to prompt a key entry. This is a behavior of the BIOS of the optional board. Continue to operate after checking the manual of the optional board.

7. The OS starts when POST is completed.

1.1.2 POST error messages

When POST detects an error, it displays an error message on the screen or beeps for some errors. For descriptions of error messages, causes, and countermeasures, refer to *Chapter 3 (1. POST Error Message) in "Maintenance Guide"*.

Important

Take notes on the messages displayed before consulting with your sales representative. Alarm messages are useful information for maintenance.

2. System BIOS Setup

This section describes how to configure Basic Input Output System (BIOS).

Before you install the server and add or remove optional devices, make sure you have read and understood this section to configure properly.

2.1 Overview

BIOS Setup Utility (SETUP) is a utility to do basic hardware settings. This utility is installed in a flash memory in the server as standard and can be run without requiring a media for boot.

BIOS settings were configured with optimal settings before the server was shipped to you. Therefore, in most of cases, you should not need to use the SETUP. **Use only when the case applies to any of cases described in *Chapter 3 (2.4 Cases that Require Configuration)*.**

2.2 Starting and Exiting SETUP Utility

☐ Starting SETUP Utility

Run POST following *Chapter 3 (1.1.1 POST sequence)*.

After a while, the following message will be displayed on the lower left of the screen.

Press <F2> SETUP, <F3> Internal Flash Memory, <F4> ROM Utility, <F12> Network

If you press <F2> key at this time, SETUP runs and displays **Main** menu upon completion of POST. (You can also press <F2> key while NEC logo appears to display **Main** menu.)

Password

If you have set a password, a message prompt you to enter password will be displayed from the next time.

Enter password [

You can attempt password entry up to 3 times. **If you entered a wrong password 3 times, operation stops.**
(You cannot operate further.) Turn off the power.

❑ Exiting SETUP Utility


To exit SETUP after saving parameters, select **Save & Exit** → **Save Changes and Exit**.

To exit SETUP without saving parameters, select **Save & Exit** → **Discard Changes and Exit**.

Important To restore the default value, select **Save & Exit** → **Load Setup Defaults**.
(The default value might be different from the factory setting.)

2.3 Description on On-Screen Items and Key Usage

This section shows display examples and how to control the key. Use the keyboard to work with the SETUP utility.

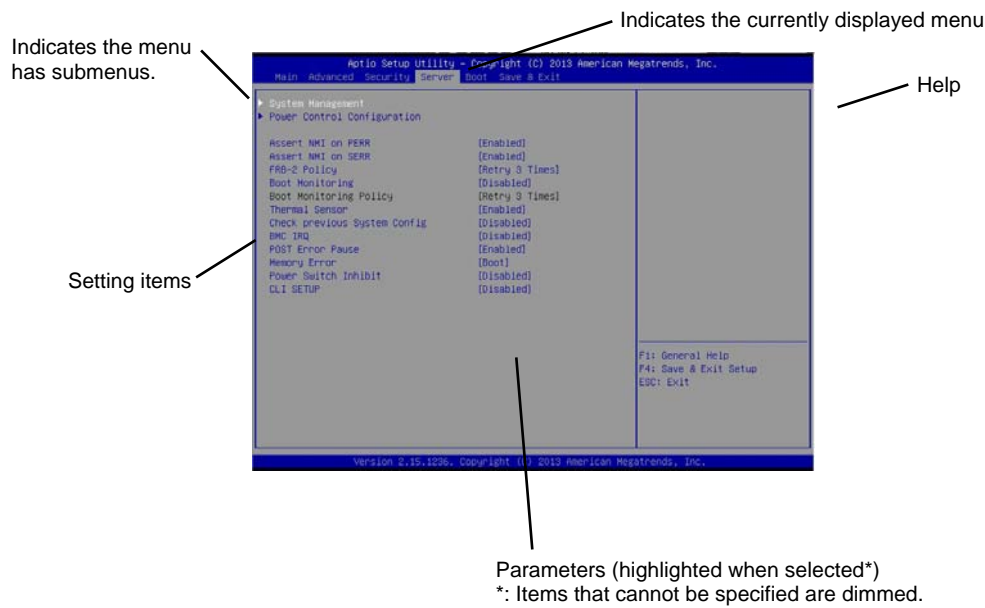

- ☐ Cursor keys (<↑>, <↓>)
Select an item displayed on the screen. If characters of an item are highlighted, that means the item is currently selected.
 - ☐ Cursor keys (<←>, <→>)
Select top menus including **Main**, **Advanced**, **Security**, **Server**, **Boot**, and **Save & Exit**.
 - ☐ <→> key/<+> key
Change the value (parameter) of the selected item. You cannot use this key when a menu which has ► on the left is selected.
 - ☐ <Enter> key
Press this key to confirm the selected parameter.
 - ☐ <Esc> key
Press this key to cancel pop up menu. In sub menu, press this key takes you to the previous screen. In top menu, press this key takes the following window is displayed. If you select **Yes**, the SETUP closes without saving the changed parameters.
- | | |
|----------------------|----|
| Quit without saving? | |
| [Yes] | No |
- ☐ <F1> key
Press this key to display help information of key usage. If you need help using the SETUP, press this key. Press the <Esc> key to go back to the original screen.

☐ <F2> key

If you press this key, the following window appears. If you select **Yes**, the previous parameter(s) are restored. However if you save parameter(s) using [Save Changes], the saved parameter(s) are restored.

Load Previous Values?
[Yes] No

☐ <F3> key

If you press this key, the following window appears. If you select **Yes**, restore the SETUP parameters of the currently selected item to the default setting. (**This might be different from the parameters configured before shipment.**)

Load Setup Defaults?
[Yes] No

☐ <F4> key

If you press this key, the following window appears. If you select **Yes**, the parameter you configured is saved and SETUP closes.

Save configuration and exit?
[Yes] No

2.4 Cases that Require Configuration

Only if a case applies to any of following cases, use SETUP to change a parameter which was configured as factory setting. A list of SETUP parameters and factory settings are described in **Chapter 2 (1. System BIOS) in "Maintenance Guide"**.

Category	Description	Setting of parameter	Remark
Basic	Change date and time	Configure date and time Main → System Date Main → System Time	Configurable on OS
	On NumLock on power ON	Boot → Bootup Numlock State → On	
	Off the function to display the NEC logo during POST	Boot → Quite Boot → Disabled	By pressing the <Esc> key, prevent the display of the logo.
Memory	Memory configure after add or change DIMM	Advanced → Memory Configuration → Memory Retest → Yes	After rebooting, Memory Retest changes No automatically.
	Use memory RAS feature	Change to RAS mode Advanced → Memory Configuration → Memory RAS Mode	You can select Mirroring , Lock Step , or Sparing .
Optional board	Disabled Option ROM that installed RAID Controller board	Advanced → PCI Configuration → PCI Device Controller and Option ROM Settings → PCI Slot n Option ROM → Disabled	<i>n</i> is PCI slot number of the RAID Controller
Boot	Change the boot order of devices	Change the boot priority Boot → Boot Option Priorities	When you use EXPRESSBUILDER, set CD/DVD to the highest priority.
	Use remote power on function (from modem)	Advanced → Advanced Chipset Configuration → Wake On Ring → Enabled	
	Use remote power on function (from RTC alarm)	Advanced → Advanced Chipset Configuration → Wake On RTC Alarm → Enabled	
	Control from HW console terminal	Change respective setting Advanced → Serial Port Configuration → Console Redirection Settings	
Security	Set a password to restrict operation of SETUP Utility	Set a password Security → Administrator Password Security → User Password	if you set password, you havet to enter password when starting SETUP Utility..
	Set a password to restrict Boot	Security → Password On Boot → Enabled	You can select this parameter after you set password.
UPS Powerlink	When the server is supplied with power from UPS, always turn on the power.	Server → Power Control Configuration → AC-LINK → Power On	
	If it is turned off by using POWER switch, leave it OFF even when UPS supplies power.	Server → Power Control Configuration → AC-LINK → Last State	
	Keep the power OFF even when UPS supplies power.	Server → Power Control Configuration → AC-LINK → Stay off	

3. EXPRESSSCOPE ENGINE 3

3.1 Overview

EXPRESSSCOPE Engine 3 provides a variety of features using BMC (Baseboard Management Controller), which is a system management LSI.

Refer to EXPRESSSCOPE Engine 3 User's Guide for more information.

EXPRESSSCOPE Engine 3 monitors the power unit, fans, temperature, and voltage of the server. If you have the management LAN port connected to the network, you can remotely perform the following over a web browser or SSH client:

- ✧ Manage the server
- ✧ Remotely control the keyboard, video, and mouse (KVM)*
- ✧ Remotely access a CD/DVD/floppy disk/ISO image/USB memory*.

* To enable this feature, the optional license for remote management (N8115-04) is required.

To actualize these functions, virtual USB mass storage (Remote FD, Remote CD/DVD, Remote USB Memory, or Virtual Flash) is always connected as USB mass storage.

3.2 EXPRESSSCOPE ENGINE 3 Network configuration


To enable EXPRESSSCOPE Engine 3 to be used via network, network configuration is required. Below is an example of the configuration procedure which enables EXPRESSSCOPE Engine 3 to be used via a web browser.

1. Run POST following *Chapter 3 (1.1.1 POST sequence)*. Wait until the following message appears on the lower left of the screen.

Press <F2> SETUP, <F3> Internal Flash Memory, <F4> ROM Utility, <F12> Network

2. If you press the <F4> key at this time, ROM utility starts upon completion of POST. You can also press the <F4> key while the NEC logo is being displayed to open the Off-line TOOL MENU screen.
3. The keyboard selection screen appears. Select your keyboard type.
After that, the Off-line TOOL MENU screen appears. On this screen, specify the network settings for EXPRESSSCOPE Engine 3.


4. When the Off-line TOOL MENU appears, select **BMC Configuration**, **BMC Configuration**, **Network**, and then **Property**.

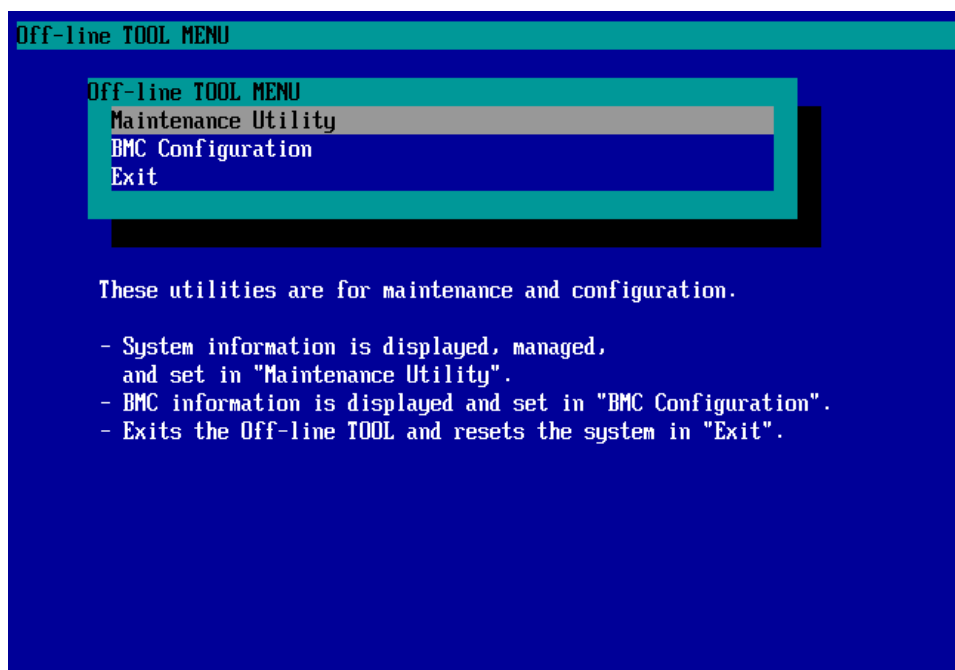

5. If **Property** is selected, the following screen is displayed. On this screen, specify whether to use DHCP and if DHCP is not used, configure IP Address/Subnet Mask.

Tips

If **Shared BMC LAN** is enabled, Web feature, remote media/KVM feature, or command line interface feature may be interrupted. In this case, wait for a while, and connect with network again.

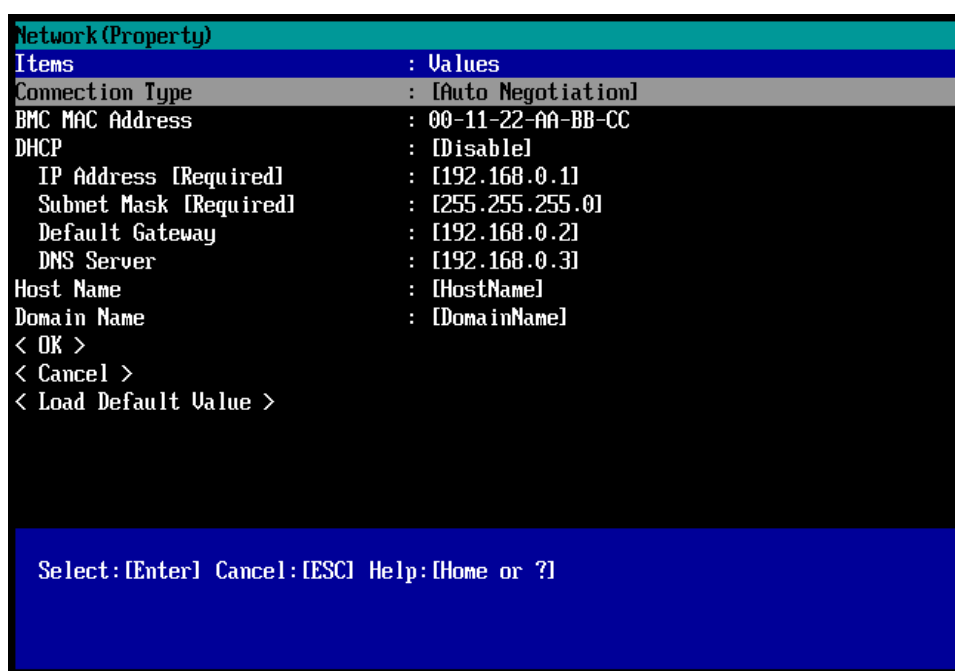

6. Connect the LAN cable to the management LAN connector in order to connect to the network. It will be available for use if you access EXPRESSSCOPE Engine 3 via Web browser from PC for management according to the setting.

4. EXPRESSBUILDER

EXPRESSBUILDER helps you to install Windows or maintain the server.

4.1 Features of EXPRESSBUILDER

EXPRESSBUILDER provides the following features.

Feature	Description
Setup (OS reinstallation)	Installs OS on your server. Easily completes the process from RAID configuration to installation of applications. To use this feature, choose OS installation in Boot Selection Menu.
Bundled software*	Stores various bundled software, such as NEC ESMPRO Agent.
Maintenance	Diagnoses your server system. To use this feature, choose Tool menu in Boot Selection Menu.
Instruction manuals*	Stores various manuals, such as "User's Guide", "Installation Guide" and "Maintenance Guide".

* Manuals and some software components are not stored in [N8115-05 Internal Flash Memory](#) (optional).

4.2 Usage of EXPRESSBUILDER

If you want to install Windows, start EXPRESSBUILDER by using the following ways.

EXPRESSBUILDER disc:

Insert the disc into the server and either turn on the server or restart the server by pressing <Ctrl> + <Alt> + <Delete> keys. EXPRESSBUILDER starts from disc.

If you want to install any bundled software or see manuals, insert the disc into a computer running Windows. Autorun menu appears automatically.

N8115-10 Internal Flash Memory (optional):

Confirm that the EXPRESSBUILDER disc or other bootable disc is not inserted. Press <F3> key when the following message appears on POST screen.

Press <F2> SETUP, <F3> Internal Flash Memory, <F4> ROM Utility, <F12> Network

5. Installing Software Components

Continue to install software components such as OS.

Refer to the instructions below.

- Installation Guide (Windows)

6. Turning Off the Server

Turn off the server by using the following procedure. If the power cord of the server is connected to a UPS, refer to the documentation supplied with the UPS or the documentation for the application controlling the UPS.

1. Shut down the OS.
2. The server automatically turns off after the OS shuts down.
Confirm that POWER LED is OFF.
3. Turn off peripheral devices.

Tips

Hibernate function of Windows Server cannot be used. Do not set Hibernate at Windows shutdown.

NEC Express5800 Series Express5800/R120e-1E

4

Appendix

1. **Specifications**
2. **PCI Configuration**

1. Specifications

Part Number		Express5800/R120e-1E (2.5-inch Drive Model) N8100-2142F, N8100-2143F, N8100-2144F							
Professor Part Number		N8101-730F	N8101-731F	N8101-732F	N8101-733F	N8101-734F	N8101-735F	N8101-737F	
CPU	Type	Intel® Xeon® processor E5-2403 v2	Intel® Xeon® processor E5-2407 v2	Intel® Xeon® processor E5-2420 v2	Intel® Xeon® processor E5-2430 v2	Intel® Xeon® processor E5-2430L v2	Intel® Xeon® processor E5-2450 v2	Intel® Xeon® processor E5-2470 v2	
	Clock speed	1.80GHz	2.40GHz	2.20GHz	2.50GHz	2.40GHz	1.90GHz	2.40GHz	
	Standard/Maximum	1/2							
	Intel® Smart Cache (Last Level Cache)	10MB		15MB			20MB	25MB	
	Number of cores(C)/ Number of threads(T) (1CPU)	4C/4T		6C/12T			8C/16T	10C/20T	
Chipset		intel® C602 chipset							
Memory	Standard/Maximum	Not pre-installed / Unbuffered DIMM : 48GB (12x 4GB), Registered DIMM : 384GB (12x 32GB)							
	Memory module	DDR3L-1600 Unbuffered DIMM (4GB), DDR3L-1600 Registered DIMM (4/8/16GB), DDR3L-1333 Registered DIMM (32GB)							
	Maximum clock speed	1333MHz			1600MHz				
	Error check, correction	ECC, x4 SDDC, Memory LockStep (x8 SDDC)							
	Memory Sparing	Supported							
	Memory Mirroring	Supported							
Auxiliary storage device	Drive bay	Standard	-						
		Maximum	2.5-inch HDD: SATA 8TB (8x 1TB), SAS 9.6TB (8x 1.2TB), 2.5-inch SSD: SAS 3.2TB (8x 400GB) (with optional HDD cage installed)						
		Hot swap	Supported						
	Interface level / RAID System	SATA 3, 6Gb/s : RAID 0/1/10(Standard), RAID 5/6/50/60 (Option), SAS 6Gb/s : RAID 0/1/5/6/10/50/60 (Option)							
	Optical disk drive	Internal / external drive (Option)*1							
	FDD	Option: Flash FDD (1.44MB) *2							
	Device bay	-							
Expansion slots	Supported slot	1x PCI Express 3.0 (x16 lane, x16 socket)(Low profile, 170mm in length) 1x PCI Express 3.0 (x8 lane, x8 socket) (Dedicated to RAID Controller) 1x PCI Express 2.0 (x4 lane, x8 socket) (Low profile, 170mm in length)							
Graphics	Chip / VideoRAM	Management controller chip / 32MB							
	Graphic display / resolution	16,770,000 colors: 640x480, 800x600, 1,024x768, 1,280x1,024							
Interface		2x Analog RGB (Mini D-Sub 15 pin, 1x Front, 1x Rear) 9x USB2.0 (2x Front, 4x Rear, 3x Internal), 1x Serial port (RS-232C compliant / D-Sub 9 pin, Serial port A, 1xRear, optional port can be used up to two ports in total) 4x 1000BASE-T LAN connector (1000BASE-T/100BASE-TX/10BASE-T supported, RJ-45, 4x Rear) 1x Management LAN connector (100BASE-TX/10BASE-T supported, RJ-45, 1x Rear)							
Redundant power supply		Supported (option, hot-plug available)							
Redundant fan		Supported (Standard, hot-plug unavailable)							
External dimensions (width x depth x height)		439.8mm x 682.1mm x 43.4mm (Front bezel, inner rails, projections are excluded) 482.4mm x 908.2mm x 44.4mm (Front bezel, inner rails, projections are included)							
Weight (Minimum*3 / Maximum)		13kg / 18kg (Rails included)							
Power supply		450W is pre-installed (N8100-1954F) / 800W is pre-installed (N8100-1955F) 450W/800W 80 PLUS® Platinum/Titanium compliant (bipolar grounded outlet) (hot-plug available) (Maximum : 2 [Standard + option]) 100V/200V AC±10%, 50/60Hz							
Power consumption (100V at maximum configuration)	High-load state	535VA/531W	535VA/531W	535VA/531W	535VA/531W	535VA/531W	535VA/531W	535VA/531W	
	40°C environment	535VA/531W	535VA/531W	535VA/531W	535VA/531W	535VA/531W	535VA/531W	535VA/531W	
Environmental requirements Temperature		Operating: 10 to 40°C, Storage: -10 to 55°C							
Environmental requirements Humidity		Operating: 20 to 80%, Storage: 20 to 80% (No condensation either when operating or when stored)							
Main accessories		EXPRESSBUILDER(NEC ESMPRO Manager(Windows), NEC ESMPRO Agent, User's Guide(electronic document) included), Getting Started, Notes on Use, one-touch rack rail							
Installed OS		-							
Supported OSs		Microsoft Windows Server 2008 Standard (RTM, SP1 or later), Microsoft Windows Server 2008 Enterprise (RTM, SP1 or later), Microsoft Windows Server 2008 Standard (x64) (RTM, SP1 or later), Microsoft Windows Server 2008 Enterprise (x64) (RTM, SP1 or later), Microsoft Windows Server 2008 R2 Standard, Microsoft Windows Server 2008 R2 Enterprise, Microsoft Windows Server 2012 Standard (x64) (RTM), Microsoft Windows Server 2012 DataCenter (x64) (RTM), Red Hat Enterprise Linux 5.9 or later (x86) Red Hat Enterprise Linux 5.9 or later (EM64T) Red Hat Enterprise Linux 6.4 or later (x86) Red Hat Enterprise Linux 6.4 or later (x86_64) VMware ESXi™ 5.0 Update 2, VMware ESXi™ 5.1 Update 1 VMware ESXi™ 5.5							

Part Number		Express5800/R120e-1E (3.5-inch Drive Model) N8100-2145F				
Processor Part Number		N8101-730F	N8101-731F	N8101-733F	N8101-734F	N8101-735F
CPU	Type	Intel® Xeon® processor E5-2403 v2	Intel® Xeon® processor E5-2407 v2	Intel® Xeon® processor E5-2430 v2	Intel® Xeon® processor E5-2430L v2	Intel® Xeon® processor E5-2450 v2
	Clock speed	1.80GHz	2.40GHz	2.50GHz	2.4GHz	1.90GHz
	Standard/Maximum	1/2				
	Intel® Smart Cache (Last Level Cache)	10MB		15MB		20MB
	Number of cores(C)/ Number of threads(T) (1CPU)	4C/4T		6C/12T		8C/16T
Chipset		intel® C602 chipset				
Memory	Standard/Maximum	Not pre-installed / Unbuffered DIMM : 48GB (12x 4GB), Registered DIMM : 384GB (12x 32GB)				
	Memory module	DDR3L-1333 Unbuffered DIMM (4GB), DDR3L-1600 Registered DIMM (2/4/8/16GB), DDR3L-1066 Registered DIMM (32GB)				
	Maximum clock speed	1333MHz			1600MHz	
	Error check, correction	ECC, x4 SDDC, Memory LockStep (x8 SDDC)				
	Memory Sparing	Supported				
	Memory Mirroring	Supported				
Auxiliary storage device	Drive bay	Standard	-			
		Maximum	3.5-inch HDD: SATA 12TB (4x 3TB)			
		Hot swap	Supported			
	Interface level / RAID System	SATA 3, 6Gb/s : RAID 0/1/10(Standard), RAID 5/6/50/60 (Option)				
	Optical disk drive	Internal / external drive (Option)*1				
	FDD	Option: Flash FDD (1.44MB) *2				
	Device bay	-				
Expansion slots	Supported slot	1x PCI Express 3.0 (x16 lane, x16 socket)(Low profile, 170mm in length) 1x PCI Express 3.0 (x8 lane, x8 socket) (Dedicated to RAID Controller) 1x PCI Express 2.0 (x4 lane, x8 socket) (Low profile, 170mm in length)				
	Chip / VideoRAM	Management controller chip / 32MB				
Graphics	Graphic display / resolution	16,770,000 colors: 640x480, 800x600, 1,024x768, 1,280x1,024				
Interface		2x Analog RGB (Mini D-Sub 15 pin, 1x Front, 1x Rear) 9x USB2.0 (2x Front, 4x Rear, 3x Internal), 1x Serial port (RS-232C compliant / D-Sub 9 pin, Serial port A, 1xRear, optional port can be used up to two ports in total) 4x 1000BASE-T LAN connector (1000BASE-T/100BASE-TX/10BASE-T supported, RJ-45, 4x Rear) 1x Management LAN connector (100BASE-TX/10BASE-T supported, RJ-45, 1x Rear)				
Redundant power supply		Supported (option, hot-plug available)				
Redundant fan		Supported (Standard, hot-plug unavailable)				
External dimensions (width x depth x height)		439.8mm x 682.1mm x 43.4mm (Front bezel, inner rails, projections are excluded) 482.4mm x 908.2mm x 44.4mm (Front bezel, inner rails, projections are included)				
Weight (Minimum*3 / Maximum)		12kg / 19kg (Rails included)				
Power supply		450W is pre-installed 450W 80 PLUS® Platinum/Titanium compliant (bipolar grounded outlet) (hot-plug available) (Maximum : 2 [Standard + option]) 100V/200V AC±10%, 50/60Hz				
Power consumption (100V at maximum configuration)	High-load state	453VA/450W	453VA/450W	453VA/450W	453VA/450W	453VA/450W
	40°C environment	453VA/450W	453VA/450W	453VA/450W	453VA/450W	453VA/450W
Environmental requirements Temperature		Operating: 10 to 40°C, Storage: -10 to 55°C				
Environmental requirements Humidity		Operating: 20 to 80%, Storage: 20 to 80% (No condensation either when operating or when stored)				
Main accessories		EXPRESSBUILDER(NEC ESMPro Manager(Windows), NEC ESMPro Agent, User's Guide(electronic document) included), Getting Started, Notes on Use, one-touch rack rail				
Installed OS		-				
Supported OSs		Microsoft Windows Server 2008 Standard (RTM, SP1 or later), Microsoft Windows Server 2008 Enterprise (RTM, SP1 or later), Microsoft Windows Server 2008 Standard (x64) (RTM, SP1 or later), Microsoft Windows Server 2008 Enterprise (x64) (RTM, SP1 or later), Microsoft Windows Server 2008 R2 Standard, Microsoft Windows Server 2008 R2 Enterprise, Microsoft Windows Server 2012 Standard (x64) (RTM), Microsoft Windows Server 2012 DataCenter (x64) (RTM), Red Hat Enterprise Linux 5.9 or later (x86) Red Hat Enterprise Linux 5.9 or later (EM64T) Red Hat Enterprise Linux 6.4 or later (x86) Red Hat Enterprise Linux 6.4 or later (x86_64) VMware ESXi™ 5.0 Update 2, VMware ESXi™ 5.1 Update 1 VMware ESXi™ 5.5				

*1 If you do not intend to install an internal DVD-ROM or internal DVD SuperMULTI in all system, prepare at least one external DVD-ROM per system for maintenance and OS reinstallation purposes.

*2 Prepare this if required. For the principal uses of a Flash FDD, refer to the notes on Flash FDD in the Maintenance Guide.

*3 Minimum configuration is 1x CPU, 1x DIMM, 1x HDD, 1x power supply.

2. PCI Configuration

Bus Number

If **Enabled** (factory setting) is specified for **Advanced** → **PCI Configuration** → **PCI Bus Static Allocation** in BIOS SETUP, PCI bus numbers are assigned as shown below:

Range of PCI bus number	Onboard / PCI card
8(08h)	Onboard LAN 1/2/3/4 controller
16(10h) - 31(1Fh)	PCI card installed in PCI slot 1A
32(20h) - 79(4Fh)	PCI card installed in PCI slot 1B
96(60h) - 124(7Ch)	PCI card installed in PCI slot 1C
125(7Dh)	Onboard VGA controller

(): Hexadecimal notation

If **Disabled** is specified for **Advanced** → **PCI Configuration** → **PCI Bus Static Allocation** in BIOS SETUP, PCI bus numbers are not unique, but assigned in the order as shown below:

Order	Onboard / PCI card
1	PCI card installed in PCI slot 1A
2	PCI card installed in PCI slot 1B
3	Onboard LAN 1/2/3/4 controller
4	Onboard VGA controller
5	PCI card installed in PCI slot 1C

Onboard LAN

Correspondence between device numbers and function numbers of onboard LAN is as shown below:

Onboard LAN	Device number (Device#)	Function number (Function#)
1	0	0
2	0	1
3	0	2
4	0	3

Interrupt Request

Interrupt requests are assigned as shown below. Find an appropriate one to install a PCI card.

"PCI1A: INTA" denotes INTA of PCI card installed in PCI slot 1A.

If the operating system and device driver support MSI/MSI-X (Message Signaled Interrupts), assignments differ from those shown in the table below.

IRQ/PIRQ	Peripherals (Controller)	IRQ/PIQR	Peripherals (Controller)
0(00h)	System timer	24(18h)	–
1(01h)	–	25(19h)	–
2(02h)	–	26(1Ah)	PCI1A: INTA
3(03h)	COM2 serial port	27(1Bh)	–
4(04h)	COM1 serial port	28(1Ch)	PCI1A: INTB
5(05h)	–	29(1Dh)	PCI1A: INTC
6(06h)	–	30(1Eh)	PCI1A: INTD
7(07h)	–	31(1Fh)	Primary IOAT
8(08h)	Realtime clock (RTC)	32(20h)	–
9(09h)	Microsoft ACPI-Compliant System (SCI)	33(21h)	–
10(0Ah)	–	34(22h)	–
11(0Bh)	Motherboard resources (BMC)	35(23h)	–
12(0Ch)	–	36(24h)	–
13(0Dh)	Numeric data processor	37(25h)	–
14(0Eh)	–	38(26h)	–
15(0Fh)	–	39(27h)	Primary IOAT
16(10h)	Onboard LAN1/3 PCI1C: INTA	40(28h)	PCI1B: INTA
17(11h)	Onboard LAN2/4 PCI1C: INTB	41(29h)	–
18(12h)	Onboard VGA/SMBus PCI1C: INTC	42(2Ah)	–
19(13h)	Onboard SATA1/2 PCI1C: INTD	43(2Bh)	–
20(14h)	–	44(2Ch)	PCI1B: INTB
21(15h)	–	45(2Dh)	PCI1B: INTC
22(16h)	EHCI#2 (USB)	46(2Eh)	PCI1B: INTD
23(17h)	EHCI#1 (USB)	47(2Fh)	–

(): Hexadecimal notation

Properties shown on Windows Device Manager

PCI slot numbers shown on **Device Manager** → **Properties** → **General** tab correspond to actual PCI slot numbers as shown below:

PCI slot	Indication on Properties page
	Windows Server 2008 Windows Server 2012
PCI1A	Windows Server 2008 R2
PCI1B	PCI Slot 1
PCI1C	PCI Slot 2