



**N8800-128F, EXP320J**

**NEC Express5800/320Fd-LR**

**N8800-129F, EXP320K**

**NEC Express5800/320Fd-MR**

## **User's Guide**

1st Edition  
8-2008  
856-127506-111-A

## **PROPRIETARY NOTICE AND LIABILITY DISCLAIMER**

The information disclosed in this document, including all designs and related materials, is the valuable property of NEC Corporation (NEC) and /or its licensors. NEC and/or its licensors, as appropriate, reserve all patent, copyright and other proprietary rights to this document, including all design, manufacturing, reproduction, use, and sales rights thereto, except to the extent said rights are expressly granted to others.

The NEC product(s) discussed in this document are warranted in accordance with the terms of the Warranty Statement accompanying each product. However, actual performance of each such product is dependent upon factors such as system configuration, customer data, and operator control. Since implementation by customers of each product may vary, the suitability of specific product configurations and applications must be determined by the customer and is not warranted by NEC.

To allow for design and specification improvements, the information in this document is subject to change at any time, without notice. Reproduction of this document or portions thereof without prior written approval of NEC is prohibited.

First Printing, August 2008  
Copyright 2008  
NEC Corporation  
7-1 Shiba 5-Chome, Minato-Ku  
Tokyo 108-8001, Japan  
All Rights Reserved  
Printed in Japan

Keep this User's Guide handy for quick reference when necessary.

## SAFETY INDICATIONS

To use NEC Express5800 series safely, follow the instructions in this User's Guide.

This guide explains components that pose a danger, types of dangers, and actions taken to prevent them; such components are labeled warning.


This guide and warning labels use "WARNING" and "CAUTION" to indicate a danger depending on the degree. These terms are defined as follows:

	Indicates a danger that could lead to a death or serious injury.
	Indicates a danger that could lead to a burn, other injuries or damage to physical assets.

This guide uses the following three types of symbols to give indications and precautions against a danger. They are defined as follows:

	Indicates that there is a risk of danger. Each image symbolizes a particular type of danger. (Attention)
	Indicates what you must not do. Each image symbolizes a particular type of prohibition. (Prohibited actions)
	Indicates what you must do. Each image symbolizes a particular type of action necessary to avoid a danger. (Mandatory actions)

(Example)

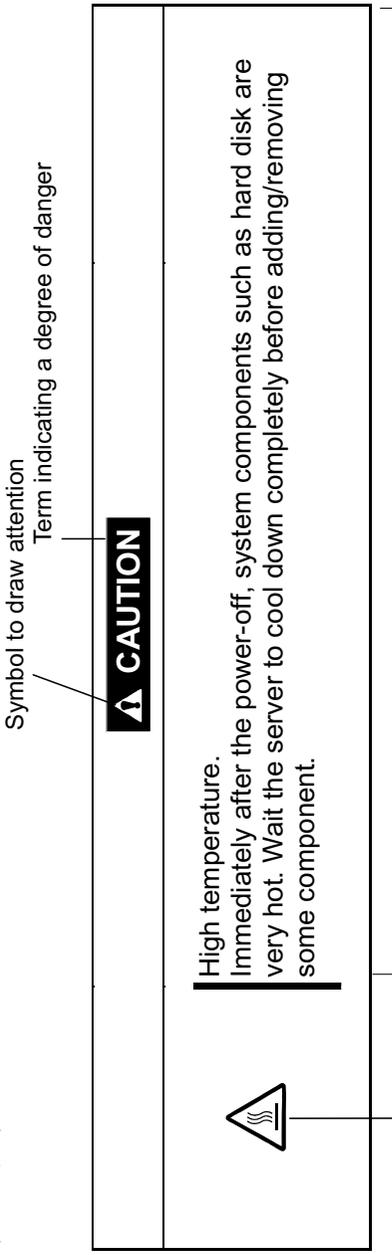

Symbol indicating a prohibited action (may not always be indicated)

Description of a danger

## SYMBOLS USED IN THIS USER'S GUIDE AND WARNING LABELS

### Attention

	Indicates a risk of an electric shock.
	Indicates a risk of a personal injury due to heat.
	Indicates a risk of catching your fingers.
	Indicates a risk of a fire or smoke.
	Indicates a general precaution or warning that is not defined herein.
	Indicates a risk of losing eyesight due to laser beam.
	Indicates a risk of an explosion.
	Indicates a risk of a personal injury.

### Prohibited actions

	Indicates a general prohibition that is not defined herein.
	Do not touch the indicated area. There is a risk of an electric shock or fire.
	Do not touch with wet hands. There is a risk of an electric shock.
	Keep from flame. There is a risk of a fire.
	Avoid using water or liquid nearby. If it spills on the equipment, there is a risk of an electric shock or fire.
	Do not disassemble, repair, or modify the equipment. There is a risk of an electric shock or fire.

## Mandatory actions

	Unplug the server. There is a risk of an electric shock or fire.
	Indicates a general action to take that is not defined herein. Make sure to follow the instructions.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

이 기기는 업무용으로 전자파적합등록을  
한 기기이오니 판매자 또는 사용자는  
이 점을 주의하시기 바라며 만약 잘못  
판매 또는 구입하였을 때에는 가정용으  
로 교환하시기 바랍니다.

This class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

#### CE Statement

**Warning:** This is a Class A product. In residential environment, this product may cause radio interference, in which case the user may be required to take adequate measures (EN55022).

**CLASS 1  
LASER PRODUCT**

This system is classified as a CLASS 1 LASER PRODUCT. This label is located on the internal DVD-ROM installed in your system.

**NOTE:** This product provides resistance against hardware faults with its redundant hardware modules. However, this does not mean complete fault-tolerance is assured. For example, there is a risk of system down when:

- A fatal fault occurs in software.
- Both modules within a redundant hardware pair break down.
- A fatal fault occurs in a non-redundant component, such as the clock generator circuitry or the interconnect backplane.
- The entire system is cut off from AC power.

## 安全注意事項

### 安全標示

請參考本用戶指南中的指示以安全使用NEC Express5800系列伺服器。

本用戶指南說明了設備何處有危險、危險類型、如何避免危險等。在設備可預計到的危險之處或其附近貼有警告標籤。

用戶指南及警告標籤中，根據危險程度不同，使用“警告”、“注意”等詞，含義如下：

	<b>WARNING</b>	表示如不遵守該指示，可能引發人員傷亡。
	<b>CAUTION</b>	表示如不遵守該指示，可能發生燒傷等身體損傷或造成物質損失。

對危險的提示表示有如下三種符號，具體含義如下所述：

	表示該處可能發生危險。符號為危險內容的圖案。（注意）
	表示禁止行爲。符號中或其附近的圖案為禁止行爲內容。（禁止行爲）
	表示強制行爲。符號中的圖案為強制必須做的行爲內容。即為避免危險必需的行爲。（強制行爲）

(用戶指南中範例)

	注意符號
	表示危險程度的用語
	注意高溫。 本產品關閉電源後，內置硬碟等內部設備仍然處於高溫狀態。請在充分冷卻之後進行拆裝。

禁止行爲的提示符號（有可能沒有此類提示）

危險提示內容

## 本書及警告標籤中使用的符號

### 注意

	表示有觸電的危險。
	表示有因高溫而負傷的危險。
	表示有手指等被夾住的危險。
	表示有冒煙或者著火的危險。
	表示非特定的一般的提醒警告。
	表示有因雷射導致失明的危險。
	表示有爆炸的危險。
	表示有受傷的危險。

### 禁止行爲

	表示非特定的一般禁止。
	不要觸摸指定區域。有觸電或著火的危險。
	不要用濕手觸摸。有觸電的危險。
	遠離火源。有著火的危險。
	遠離液體。如果沾到液體，有觸電或著火的危險。
	請不要對本設備進行拆卸、修理、改造。有觸電和發生火災的危險。

## 強制行爲

	請將本設備的電源插頭從伺服器上拔下。有發生火災和觸電的危險。
	對非特定的一般使用者的行爲進行指示。請按照說明進行操作。

### 警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

### CLASS 1 LASER PRODUCT

這是CLASS 1 LASER PRODUCT。該標籤貼於系統的內部光碟。

- 注意：
- 本產品通過多餘的硬體模組提供硬體容錯性能。但是這並不代表能夠保證完全容錯。如，在以下情況下可能發生宕機：
    - 軟體發生致命故障。
    - 多餘硬體雙方均發生故障，不能運行。
    - 時鐘產生器線路或內部連接背板等非多餘元件發生致命故障。
    - 切斷了整個系統的AC電源

## **Trademarks and Patents**

NEC EXPRESSBUILDER, NEC ESMPRO and NEC DianaScope are trademarks of NEC Corporation.

Microsoft, Windows, Windows Server, Windows NT, and MS-DOS are registered trademarks of Microsoft Corporation in the United States and other countries.

Intel and Pentium are registered trademarks of Intel Corporation.

AT is a registered trademark of International Business Machines Corporation in the United States and other countries.

Adobe, the Adobe logo, Acrobat, and the Acrobat logo are trademarks of Adobe Systems Incorporated.

Datalight is a registered trademark of Datalight, Inc. ROM-DOS is a trademark of Datalight, Inc.

Xeon is a trademark of Intel Corporation in the United States. DLT and DLTtape are trademarks of Quantum Corporation in the United States.

Mozilla is a registered trademark of Mozilla Foundation.

Netscape is a registered trademark of Netscape Communications Corporation in the United States and other countries.

Java is a registered trademark of Sun Microsystems, Inc in the United States and other countries.

All other product, brand, or trade names used in this publication are the trademarks or registered trademarks of their respective trademark owners.

Microsoft Windows Server 2003 R2 Standard x64 edition operating system and Microsoft Windows Server 2003 R2 Enterprise x64 Edition operating system or Microsoft Windows Server 2003 Enterprise x64 Edition operating system are called Windows Server 2003 x64 Edition for short. Microsoft Windows Server 2003 R2 32-bit Standard Edition operating system, Microsoft Windows Server 2003 R2 32-bit Enterprise Edition operating system, Microsoft Windows Server 2003 Standard Edition operating system and Microsoft Windows Server 2003 Enterprise Edition operating system are called Windows Server 2003 for short. Microsoft Windows 2000 Server operating system, Microsoft Windows 2000 Advanced Server operating system and Microsoft Windows 2000 Professional operating system are called Windows 2000 for short. Microsoft Windows Vista Business operating system is called Windows Vista for short. Microsoft Windows XP Professional x64 Edition operating system is called Windows XP x64 Edition for short. Microsoft Windows XP Home Edition operating system and Microsoft Windows XP Professional operating system are called Windows XP for short. Microsoft Windows NT Server network operating system version 3.51/4.0 and Microsoft Windows NT Workstation operating system version 3.51/4.0 are called Windows NT for short. Microsoft Windows Millennium Edition Operating System is called Windows Me for short. Microsoft Windows 98 operating system is called Windows 98 for short. Microsoft Windows 95 operating system is called Windows 95 for short. Names used with sample applications are all fictitious. They are unrelated to any existing product names, names of organizations, or individual names.

AVOCENT and DVC (DAMBRACKAS VIDEO COMPRESSION) are registered trademarks of US AVOCENT in the United States and other countries.  
N8815/006, ft remote management card, adopts the DVC technology of AVOCENT US.

The patent numbers for the DVC technology of AVOCENT US:

US Patent Number: 5,732,212/5,937,176/6,633,905/6,681,250/6,701,380 (other patents pending)

Taiwanese Patent Number: 173784

European Patent Number: 0 740 811

### **To prevent voltage sag:**

This product may be affected by voltage sag caused due to lightning. To prevent voltage sag, you are recommended to use an AC uninterruptible power supply (UPS) unit.

#### **Notes:**

- (1) No part of this manual may be reproduced in any form without prior written permission of NEC Corporation.
- (2) The contents of this manual are subject to change without prior notice.
- (3) The contents of this manual shall not be copied or altered without prior written permission of NEC Corporation.
- (4) All efforts have been made to ensure the accuracy of all information in this manual. If you find any part unclear, incorrect, or omitted in this manual, contact the sales agent where you purchased this product.
- (5) NEC assumes no liability arising from the use of this product, nor any liability for incidental or consequential damage arising from the use of this manual regardless of (4) above.

© NEC Corporation 2008

**(THIS PAGE IS INTENTIONALLY LEFT BLANK.)**

## PREFACE

Welcome to the NEC Express5800/ft series.

NEC Express5800/ft series is a “fault-tolerant (ft)” server focusing on “high reliability” in terms of fault-tolerance, in addition to “high performance,” “scalability,” and “general versatility” provided by NEC Express5800 series. In the event of trouble, its dual configuration will allow the system to instantaneously isolate the failed parts to assure non-stop running; operation will be moved smoothly from one module to the other, minimizing damage to it. You can use this NEC Express5800/ft series in a mission-critical system where high availability is required. By the use of VMware, it also provides outstanding openness for general-purpose applications, etc.

To make the best use of these features, read this User's Guide thoroughly to understand how to operate NEC Express5800/ft series.

## 開始

這次，請購買敝社的 Express5800/ft 服務器，實在謝謝。

Express5800/ft 服務器系列，是 Express5800 系列的「高性能」，「擴展性」，「通用性」的特長之外又加上，考慮與耐故障性出色的「高(貴)的可靠性」，被開發了的「Fault Tolerant 服務器」。在要求是把向從不給予由於在萬一障礙的發生中根據也雙重化，把障礙地方做為瞬間割開的事業務影響繼續做動作，一邊的組件已經一方的組件業務交待順暢地進行，業務給予的損壞做為最小限度控制住的事可能的系統的本裝置，高(貴)的可用性的基幹業務中也可以放心使用。再根據 Windows 操作系統的採用，能適用通用應用軟件等，開放性也出色。

爲了到最大限度拉出本裝置有的機能，很好地變成爲變成使用之前正式文本爲念，充分地裝置的對待也請理解。

## ABOUT THIS USER'S GUIDE

This User's Guide helps a user to properly setup and use the product.

Consult this guide to ensure safety as well as to cope with trouble during a system setup and daily operation.

Keep this manual handy.

This User's Guide is intended for users who have a good knowledge on the basic use of VMware ESX Server and general I/O devices such as a keyboard and mouse.

### How to Use this User's Guide

This guide consists of eight chapters and appendices. To help you find a solution quickly, the guide contains the following information:

For descriptions on setting up this product, see the separate volume "User's Guide (Setup)." Read "Precautions for Use" first.

Before going on to main chapters, be sure to read "Precautions for Use." These precautions are very important for using the product safely.

#### Chapter 1 Precautions for Use

This chapter describes precautions necessary to use the product safely and properly. Be sure to read this chapter before using the product. It also provides information on user support. It will be helpful when you need maintenance service, support, etc.

#### Chapter 2 General Description

This chapter describes what you should know about the product: its component names, functions, operating procedures as well as handling of devices and other parts.

#### Chapter 3 ESX Server Setup and Operation

This chapter describes setup and operation specific to the product when it is on ESX Server.

#### Chapter 4 System Configuration

This chapter describes how to make settings of built-in basic input/output system. It also describes factory-shipped parameters.

#### Chapter 5 Installing and Using Utilities

This chapter describes features and operating procedures of a standard utility "NEC EXPRESSBUILDER." It also describes procedures to install and operate various software programs contained in its DVD.

#### Chapter 6 Maintenance

This chapter describes maintenance procedures and use of maintenance tools. If you need to move the product for maintenance purposes, follow the steps provided in this chapter.

#### Chapter 7 Troubleshooting

If the product does not work properly, see this chapter before deciding that it is a breakdown.

#### Chapter 8 System Upgrade

This chapter describes procedures to add options and precautions. See also this chapter when you replace failed components.

#### Appendix A Specifications

This appendix lists specifications of the product.

#### Appendix B I/O Port Addresses

This appendix lists factory-assigned I/O port addresses.

## Additional symbols

The following symbols are used throughout this User's Guide in addition to the caution symbols describe at the beginning.

- IMPORTANT:** Important points or instructions to keep in mind when using the server or software
- CHECK:** Something you need to make sure when using the server of software
- TIPS:** Helpful information, something useful to know

## About our Web Service

Information on NEC Express5800/ft series including modification modules is also available on our web site, NEC Express5800 Web Site Asia Pacific:

<http://www.nec.co.jp/express/index.html>

## Accessories

This product is shipped with various accessories. See the packing list to make sure everything is included and check the individual items. If some component is missing or damaged, contact your sales agent.

- Keep the accessories in a safe place. You will need them when you perform setup, addition of options, or replacement of failed components.
- To check NEC EXPRESSBUILDER components, see the attached list.
- Be sure to fill out and mail the software registration card that is attached to your operating system.
- Make backup copies of included floppy disks, if any. Keep the original disks as the master disks; use these copies in operation.
- Improper use of an included floppy disk or DVD may alter your system environment. If you find something unclear, stop using them and contact your sales agent.

## 關於正式文本

正式文本，是爲了確實使用本裝置的輔導。在日常使用上，不知道的發生了事和情形壞事的時候，包含對待上的安全性請利用。使正式文本與另冊的用戶指南(安裝編輯)一起請經常放置在實體旁邊無論什麼時候被看。

正式文本，作爲所說的關於 Windows Server 2003 和 Windows NT 等的操作系統和鍵盤，鼠標的一般的輸入輸出設備等的基本的對待有了充分的知識的用戶對象被記載。

## 關於正式文本的構成

正式文本與 8 個章從附錄被構成。各自的章象下面一樣的說明被記載。再者，卷末有索引。按照必要請有效的利用。關於有關本裝置的安裝的說明請參照另冊的用戶指南(安裝編輯)。

### 第 1 章 爲了安全確

實辦理使用上的注意本裝置必要的注意事項被記載。處理本裝置之前必定請讀。同時，關於用戶支持也記載著。保守和各種各樣的服務，請希望支持的時候讀。

### 第 2 章 想預先知道的事

本裝置的各部分的名稱和那個功能，一般的操作和設備，關於零部件的處理說明著。

### 第 3 章 關於 Windows 的設

定和在操作 Windows 上的本裝置固有的安裝和操作說明。

### 第 4 章 關於系統的構成

本裝置內部被容納的基本輸入輸出系統的設定方法說明著。同時，關於出貨的時候的參數價值也記載著。

### 第 5 章 關於實用程序的安裝和操作

本裝置用標準添加的「EXPRESSBUILDER」提供的功能和操作方法，和被「EXPRESSBUILDER」光碟容納的各種軟件的安裝次序和操作方法說明著。

## 第 6 章 保守

關於本裝置的保守方法和保守工具的用法說明著。同時，需要如果移動裝置到保守時候，請遵從用這個章說明的次序移動裝置。

### 第 7 章 故障嗎？想的時候

本裝置確實不做動作，「故障嗎？想」的時候，請懷疑實體的故障之前參照。

### 第 8 章 系統的升級

關於關於本裝置用的選擇的增設方法的注意事項和增設次序說明著。也請交換出現故障了的零部件的時候參照。

#### 附錄 A 方法

記載著本裝置的方法。

#### 附錄 B I/O 端口地址

用一覽顯示著本裝置內部的 I/O 端口地址的分配。

#### 附錄 C 保守服務網一覽

是 NEC 守備株式會社的服務據點的地址和電話號碼的一覽。受到保守的時候參照，請聯絡到附近的保守據點。

## 關於本文中的記號

除了正式文本卷頭表現了的安全有關的注意記號以外使用者 3 種記號。變成這些的記號和意義為理解，請確實處理裝置。關於正式文本的

### 重要:

裝置的對待，表現必須用軟件的操作保持的事情和特別應該做注意點。

### 檢查:

需要在操縱裝置和軟件上預先做確認表示的點。

### 暗示:

預先知道的話對錶現有用的信息，方便的事等。

## 關於正式文本的再購買

如果被遺失了正式文本，最近的銷售店，或購買的銷售店請諮詢。能從用戶指南，和添加的光碟收納的在綠文獻的一部分，下面的主頁下載。

## 關於附屬品

本產品的捆包箱子的其中，對實體以外種種的附屬品進入著。確認參照添加的構成部品全部齊(整)的事，請各自檢查。萬一不足的如果有東西和損傷的東西，請與購買的銷售店聯繫。

### 重要: 關於附屬品

- 添加品因為做安裝的時候和選擇的增設，實體成為出現故障了的時候必要最後一幕請保管。
- 關於添加品的「EXPRESSBUILDER」光碟的構成部品，請參照包裝中有的構成部品表。
- 操作系統添加的軟件登記卡，請所定事項記入之後，必定投進郵筒。
- 如果軟盤被添加，請採用軟盤的接應。同時，作為主人軟盤最後一幕保管添加的軟盤，請使用備份盤。
- 添加的軟盤再光碟，有在使用方法上犯錯誤的話變更了顧客的系統環境的可能。如果關於使用有不明  
的點，不做困難的操作請對購買的銷售店，或保守服務公司詢問。

## CONTENTS

Preface.....	i
About This User's Guide.....	iii
How to Use This Guide .....	iii
Additional Symbols .....	iv
About Our Web Service .....	iv
Accessories .....	v
Contents .....	ix
<b>CHAPTER 1 PRECAUTIONS FOR USE .....</b>	<b>1-1</b>
Warning Labels .....	1-3
Precautions for Safety .....	1-5
General .....	1-5
Use of Power Supply and Power Cord .....	1-6
Installation, Relocation, Storage and Connection .....	1-7
Cleaning and Handling of Internal Devices .....	1-9
During Operation .....	1-10
Rack-mount Model .....	1-11
For Proper Operation .....	1-12
Disposal of Equipment and Consumables .....	1-14
If System Trouble Is Suspected .....	1-15
About Repair Parts .....	1-15
About Our Web Service .....	1-15
<b>CHAPTER 2 GENERAL DESCRIPTION .....</b>	<b>2-1</b>
Standard Features .....	2-2
Names and Functions of Components.....	2-6
Appearance .....	2-6
Front View .....	2-7
Rear View.....	2-9
Optical Disk drive .....	2-12
CPU/IO Module.....	2-13
Mother Board .....	2-14
LEDs.....	2-15
Power LED.....	2-15
CPU/IO Module Status LED 1, 2 .....	2-15
PCI Slot Status LED 1, 2.....	2-16
Access LED on the Optical Disk Drive .....	2-17
LAN Connector LED .....	2-17
EXPRESSSCOPE .....	2-18
Basic Operation .....	2-20
Installing/Removing the Front Bezel .....	2-20
Power On .....	2-21
Power Off.....	2-22
POST Check .....	2-22
Flow of POST .....	2-23
Behavior at Occurrence of Error.....	2-24

POST Error Messages .....	2-24
CPU/IO Module Status .....	2-24
Floppy Disk Drive (Option) .....	2-26
Use of Floppy Disk.....	2-27
Optical Disk Drive .....	2-28
Insert/Remove DVD-ROM.....	2-28
When You cannot Eject a DVD/CD-ROM.....	2-29
Handling Optical Disks.....	2-30
<b>CHAPTER 3 ESX SERVER OPERATION AND CONFIGURATION.....</b>	<b>3-1</b>
Dual LAN Configuration .....	3-2
Functional Overview.....	3-2
Operable Network Configuration .....	3-2
Check the Duplicating Operation of Modules.....	3-3
Evaluate Startup and Stop of PCI Modules .....	3-3
Evaluate Start and Stop of CPU Modules .....	3-6
<b>CHAPTER 4 SYSTEM CONFIGURATION.....</b>	<b>4-1</b>
System BIOS –SETUP–.....	4-2
Starting SETUP Utility.....	4-3
Description of On-Screen Items and Key Usage .....	4-4
Configuration Examples .....	4-6
Menu and Parameter Descriptions.....	4-8
Main .....	4-8
Advanced.....	4-10
Security.....	4-17
Server.....	4-20
Boot.....	4-27
Exit .....	4-28
Emulex BIOS .....	4-34
Starting the Emulex BIOS .....	4-34
Forced Shutdown and Clear .....	4-35
Forced Shutdown.....	4-35
Clear CMOS/Password.....	4-36
How to Clear CMOS .....	4-37
How to Clear Passwords.....	4-39
How to Clear the BMC Configuration.....	4-40
<b>CHAPTER 5 INSTALLING AND USING UTILITIES .....</b>	<b>5-1</b>
<b>NEC EXPRESSBUILDER .....</b>	<b>5-2</b>
Start Menu.....	5-2
Autorun Menu.....	5-4
<b>NEC ESMPRO Agent and Manager .....</b>	<b>5-5</b>
Overview .....	5-5
Detection of Server Fault .....	5-7
Prevention of Server Fault .....	5-7
Management of Server Operation Status .....	5-8
Monitoring (Management) of NEC Express5800/ft series.....	5-9
Collective Management of Distributed Servers .....	5-11
NEC ESMPRO Agent.....	5-13

---

Device ID in Alert Report.....	5-13
Supplement.....	5-14
NEC ESM PRO Manager.....	5-21
Monitoring by Use of DataViewer .....	5-21
Maintenance of NEC Express5800/ft series.....	5-33
Start and Stop of Components.....	5-35
Check and Clear of MTBF Information .....	5-40
Diagnostics .....	5-43
Firmware Update.....	5-46
Dump Collection .....	5-53
Refresh of View Based on State Change Alert Setting.....	5-56
<b>CHAPTER 6 MAINTENANCE.....</b>	<b>6-1</b>
Daily Maintenance .....	6-2
Checking Alert .....	6-2
Checking Status LEDs .....	6-2
Cleaning.....	6-3
Cleaning the NEC Express5800/ft series.....	6-3
Cleaning the Keyboard and Mouse .....	6-4
Cleaning the Floppy Disk Drive.....	6-5
Cleaning DVD/CD-ROM .....	6-5
System Diagnostics .....	6-6
Test Items .....	6-6
Startup and Exit of System Diagnostics .....	6-6
Off-line Maintenance Utility .....	6-9
Starting the Off-line Maintenance Utility .....	6-9
Function ofOff-line Maintenance Utility .....	6-11
Relocation/Storing the NEC Express5800/ft series .....	6-13
<b>CHAPTER 7 TROUBLESHOOTING.....</b>	<b>7-1</b>
To Locate the Errors.....	7-2
Error Messages.....	7-3
Error Messages by LED Indication.....	7-3
POST Error Messages.....	7-4
Troubleshooting .....	7-8
Problems with NEC Express5800/ft series .....	7-8
Problems with NEC EXPRESSBUILDER.....	7-15
Problems with NEC ESM PRO.....	7-16
Collecting Trouble Logs.....	7-17
Collection of System Information .....	7-17
Collection of ESM PRO Agent .....	7-17
Collection of the Memory Dump .....	7-18
Preparing for Memory Dump.....	7-18
Saving Dump Files .....	7-18
<b>CHAPTER 8 SYSTEM UPGRADE.....</b>	<b>8-1</b>
Safety Precautions .....	8-2
Anti-Static Measures .....	8-3
Pre-Upgrade Verification.....	8-4
Preparing Your System for Upgrade.....	8-5

---

CPU/IO Module.....	8-6
Precautions .....	8-6
Removing CPU/IO Module .....	8-7
Installing CPU/IO Module .....	8-10
DIMM .....	8-12
Precautions .....	8-13
Installing DIMM.....	8-14
Removing DIMM .....	8-17
Replacing DIMM .....	8-19
Processor (CPU) .....	8-20
Installing CPU.....	8-21
Removing CPU .....	8-24
PCI Board.....	8-25
Installing PCI Board.....	8-27
Removing PCI Board .....	8-31
Replacing PCI Board .....	8-31
Setup of Optional PCI Board .....	8-32
APPENDIX A SPECIFICATIONS .....	A-1
APPENDIX B I/O PORT ADDRESSES .....	B-1

# Chapter 1

---

## Precautions for Use

This chapter includes information necessary for proper and safe operation of the server.

## 使用上的注意

本章包含著對服務器恰當安全的操作必要的信息。




## 1-4 Precautions for Use

### 關於警告標籤

隱藏實體內的危險性的零部件和那個週邊警告標籤被粘貼。這個是爲了請操縱本裝置的時候，經常在顧客裡(上)認識能考慮的危險性的東西(揭下標籤，請別弄髒)。如果這個標籤沒被粘貼，剝落懸掛著，髒等做不能辨認的時候購買的銷售店請聯絡。

對以下表現被本產品粘貼的標籤的位置。

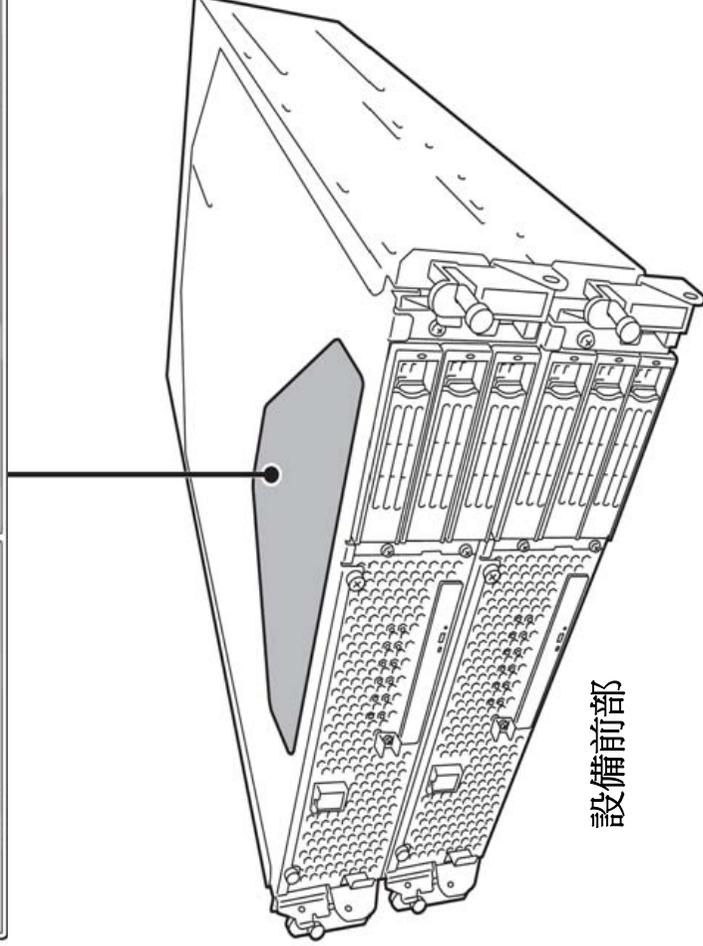

設備前部

# PRECAUTIONS FOR SAFETY

This section provides precautions for using the server safely. Read this section carefully to ensure proper and safe use of the server. For symbol meanings, see "SAFETY INDICATIONS" described in the previous section.

## General

<b>⚠ WARNING</b>	
	<p>Do not use the equipment in an operation where human lives are involved or high reliability is required.</p> <p>This equipment is not intended for use and control in facilities/systems where human lives are involved or high reliability is required, including medical devices or nuclear, aerospace, transportation, and traffic control facilities. NEC assumes no liability for any accidents or damage to physical assets resulting from the use of this equipment in such systems or facilities.</p>
	<p>Do not continue to use the equipment if you detect smoke, odor, or noise. If the equipment emits smoke, odor, or noise, immediately flip off the POWER switch, unplug the cord, and contact your sales agent. There is a risk of a fire.</p>
	<p>Do not insert a wire or metal object.</p> <p>Do not insert a wire or metal objects into a vent or disk drive slot. There is a risk of an electric shock.</p>
	<p>Do not use the equipment in an unsuitable place.</p> <p>Do not install a server rack in an unsuitable environment. Other systems also may be affected, and the rack may fall over to cause a fire or injuries. For details about installation environment and quake-resistant engineering, see the attached manual or contact your sales agent.</p>
<b>⚠ CAUTION</b>	
 	<p>Prevent water or foreign objects from getting into the equipment.</p> <p>Do not let water or foreign objects (e.g., pins or paper clips) enter the equipment. There is a risk of a fire, electric shock, and breakdown. When such things accidentally enter the equipment, immediately turn off the power and unplug the cord. Contact your sales agent instead of trying to disassemble it yourself.</p>

## Use of Power Supply and Power Cord

<b>⚠ WARNING</b>	
	Do not handle a power plug with a wet hand.
	Do not plug/unplug a power cord with a wet hand. There is a risk of an electric shock.
	Do not connect the ground wire to a gas pipe.
	Never connect the ground wire to a gas pipe. There is a risk of a gas explosion.

<b>⚠ CAUTION</b>	
	Do not plug the attached cord in a nonconforming outlet.
	Use a wall outlet with specified voltage and power type. There is a risk of a fire or current leakage.
	Avoid installing the equipment where you may need an extension cord. If the cord that does not meet the power specifications, there is a risk of overheating that could lead to a fire.
	Do not plug multiple cords in a single outlet.
	If the rated current is exceeded, there is a risk of overheating that could lead to a fire.
	Do not plug the cord insecurely.
	Insert the plug firmly into an outlet. There is a risk of heat or fire due to poor contact. If dust settles on the slots and it absorbs moisture, there is also a risk of heat or fire.
 	Do not use nonconforming power cords.
	AC cord is to spend the thing of the next specifications. You also have to observe the following prohibitions about handling and connecting interface cables.
	<ul style="list-style-type: none"><li>■ Do not pull on the cord.</li><li>■ Do not pinch the cord.</li><li>■ Do not bend the cord.</li><li>■ Keep chemicals away from the cord.</li><li>■ Do not twist the cord.</li><li>■ Do not tread on the cord.</li><li>■ Do not place any object on the cord.</li><li>■ Do not use cords as bundled.</li><li>■ Do not alter, modify, or repair the cord.</li><li>■ Do not staple the cord.</li><li>■ Do not use any damaged cord. (Replace it with a new one of the same specifications. For replacement procedures, contact your sales agent.)</li></ul>

## Installation, Relocation, Storage and Connection

	<b>WARNING</b>
	<p>Disconnect the power cord(s) before installing or removing the equipment.</p> <p>Be sure to power off the equipment and unplug its power cords from the wall outlet before installation/relocation. All voltage is removed only when the power cords are unplugged.</p>

	<b>CAUTION</b>
	<p>Do not install or store the equipment in an unsuitable place.</p> <p>Install or store the equipment in such a place as specified in this User's Guide. Avoid the following, or there is a risk of a fire.</p> <ul style="list-style-type: none"> <li>■ a dusty place</li> <li>■ a humid place located near a boiler, etc</li> <li>■ a place exposed to direct sunlight</li> <li>■ an unstable place</li> </ul>
	<p>Be careful not to hurt your fingers.</p> <p>Exercise great care not to hurt your fingers on the rail when you mount/dismount the equipment into/from the rack.</p>
	<p>Do not use or store this product in corrosive environment.</p> <p>Avoid the usage or storage of this product in an environment which may be exposed to corrosive gases, such as those including but not limited to: sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia and/or ozone.</p> <p>Avoid installing this product in a dusty environment or one that may be exposed to corrosive materials such as sodium chloride and/or sulfur.</p> <p>Avoid installing this product in an environment which may have excessive metal flakes or conductive particles in the air.</p> <p>Such environments may cause corrosion or short circuits within this product, resulting in not only damage to this product, but may even lead to be a fire hazard.</p> <p>If there are any concerns regarding the environment at the planned site of installation or storage, please contact your sales agent.</p>

**▲ CAUTION**



Do not connect any interface cable with the power cord of the server plugged to a power source.



Make sure to power off the server and unplug the power cord from a power outlet before installing/removing any optional internal device or connecting/disconnecting any interface cable to/from the server. If the server is off-powered but its power cord is plugged to a power source, touching an internal device, cable, or connector may cause an electric shock or a fire resulted from a short circuit.



Do not use any non-designated interface cable.

Use only interface cables designated by NEC; identify which component or connector to attach beforehand. If you use a wrong cable or make a wrong connection, there is a risk of short-circuit that could lead to a fire. You also have to observe the following prohibitions about handling and connecting interface cables:

- Do not use any damaged cable connector.
- Do not step on the cable.
- Do not place any object on the cable.
- Do not use the equipment with loose cable connections.
- Do not use any damaged cable.

## Cleaning and Handling of Internal Devices

<b>⚠ WARNING</b>	
	<p>Do not disassemble, repair, or alter the server.</p> <p>Unless described herein, never attempt to disassemble, repair, or alter the equipment. There is a risk of an electric shock or fire as well as malfunction.</p>
	<p>Do not look into the DVD-ROM drive.</p> <p>The DVD-ROM drive uses a laser beam. Do not look or insert a mirror inside while the system is on. A laser beam is invisible; if your eyes are exposed to the laser beam, there is a risk of losing eyesight.</p>
	<p>Do not detach a lithium battery yourself.</p> <p>This equipment has a lithium battery. Do not detach it yourself. If the battery is exposed to fire or water, it could explode.</p> <p>When the lithium battery is running down and the equipment doesn't work correctly, contact your sales agent. Do not disassemble replace or recharge the battery yourself.</p>
	<p>Disconnect the power plug before cleaning the server.</p> <p>Make sure to power off the server and disconnect the power plug from a power outlet before cleaning or installing/removing internal optional devices. Touching any internal device of the server with its power cord connected to a power source may cause an electric shock even if the server is off-powered.</p> <p>Disconnect the power plug from the outlet occasionally and clean the plug with a dry cloth. Heat will be generated if condensation is formed on a dusty plug, which may cause a fire.</p>
<b>⚠ CAUTION</b>	
	<p>High temperature</p> <p>Immediately after powering off the system, system components such as hard disk may be very hot. Wait for the server to cool down completely before adding/removing components.</p>
	<p>Make sure to complete installation.</p> <p>Firmly install all power cords, interface cables and/or boards. An incompletely installed component may cause a contact failure, resulting in fire and/or smoke.</p>

<b>⚠ CAUTION</b>	
	<p>Protect the unused connectors with the protective cap.</p> <p>The unused power cord connectors are covered with the protective cap to prevent short circuits and electrical hazards. When removing the power cord connector from the internal devices, attach the protective cap to the connector. Failure to follow this warning may cause a fire or an electric shock.</p>

---

### During Operation

<b>⚠ CAUTION</b>	
	<p>Do not pull out a device during operation.</p>
	<p>Do not pull out or remove a device while it works. There is a risk of malfunction and injuries.</p> <p>Do not touch the equipment when it thunders.</p>
	<p>Unplug the equipment when it threatens to thunder. If it starts to thunder before you unplug the equipment, do not touch the equipment and cables. There is a risk of a fire or electric shock.</p> <p>Keep animals away.</p>
	<p>Animal's waste or hair may get inside the equipment to cause a fire or electric shock.</p>
	<p>Do not place any object on top of the server.</p>
	<p>The object may fall off to cause injuries, damage to hardware and/or a fire.</p> <p>Do not leave the DVD tray ejected.</p>
	<p>Dust may get in the equipment to cause malfunction. The ejected tray may also become a cause of injuries.</p>

## Rack-mount Model

### CAUTION



Do not install the equipment on a nonconforming rack.

Install the equipment on a 19-inch rack conforming to the EIA standard. Do not use the equipment without a rack or install it on a nonconforming rack. The equipment may not function properly, and there is a risk of damage to physical assets or injuries. For suitable racks, contact your sales agent.



Do not attempt to install the server yourself.

To avoid a risk of injuries, users should not attempt to install the equipment into a rack. Installation should be performed by trained maintenance personnel.



#### < For Maintenance Personnel Only >

Do not install the equipment in such a manner that its weight is imposed on a single place.

To distribute the weight, attach stabilizers or install two or more racks. It may fall down to cause injuries.



Do not assemble parts alone.

It takes at least two people to mount doors and trays to a rack. You may drop some parts to cause a breakage or injuries.



Do not pull a device out of the rack if it is unstable.

Before pulling out a device, make sure that the rack is fixed (by stabilizers or quake-resistant engineering).



Do not leave two or more devices pulled out from the rack.

If you pull out two or more devices the rack may fall down. You can only pull out one device at a time.



Do not install excessive wiring.

To prevent burns, fires, and damage to the equipment, make sure that the rated load of the power branch circuit is not exceeded. For more information on installation and wiring of power-related facilities, contact your electrician or local power company.



Do not pull out a device from the rack during operation.

Do not pull out a device while it works. There is a risk of malfunction and injuries.

### **For Proper Operation**

Observe the following instructions for successful operation of the server. Failure to observe them could lead to malfunction or breakdown.

- Do not use a cellular phone or pager around the equipment. Turn off your cellular phone or pager when you use the equipment. Their radio waves may cause the equipment to malfunction.
- Perform installation in a place where the system can operate correctly. For details, see the separate volume “User’s Guide (Setup).”
- Before turning off the power or ejecting a disk, make sure that the access LED is off.
- When you have just turned off the power, wait at least 30 seconds before turning it on again.
- Once you have turned on the server, do not turn it off until the “NEC” logo appears on the screen.
- After plugging in the power cord, do not turn on the power of the equipment for 30 seconds.
- For safe operation, it is recommended to reboot the OS after duplication is completed.
- Before you move the equipment, turn off the power and unplug the cord.
- This server shall not assure reproduction of copy-protect CDs using reproduction equipment if such disks do not comply with CD standards.
- Clean the equipment regularly. (For procedures, see Chapter 6.) Regular cleaning is effective in preventing various types of trouble.
- Lightning may cause voltage sag. As a preventive measure, it is recommended to use UPS (uninterruptible power supply).

This equipment does not support the connection through an UPS serial port (RS-232C) or the control using PowerChute *Plus*.

- Check and adjust the system clock before operation in the following conditions:
    - After transporting the equipment
    - After storing the equipment
    - After the equipment halt under the conditions which is out of the guranteed environment conditions (Temperature: 10 to 35°C, Humidity: 20 to 80%).
- Check the system clock once in a month. It is recommended to operate the system clock using a time server (NTP server) if it is installed on the system which requires high level of time accuracy. If the system clock goes out of alignment remarkably as time goes by, though the system clock adjustment is performed, contact your sales agent.
- When you store the equipment, keep it under storage environment conditions (Temperature: -10 to 55°C, Humidity: 20 to 80%, non-condensing).
  - If NEC Express5800/ft series, the built-in optional devices, and the media set for the backup devices (tape cartridges) are moved from a cold place to a warm place in a short time, condensation will occur and cause malfunctions and breakdown when these are used in such state. In order to protect important stored data and assets, make sure to wait for a sufficient period of time to use the server or components in the operating environment.

Reference: Length of the time effective at avoiding condensation in winter (more than 10°C differences between room temperature and atmospheric temperature)

Disk devices: Approximately 2-3 hours

Tape media: Approximately 1 day

- Make sure that the optional devices are attachable and connectable to the equipment. There is a risk of malfunctions that could lead to a breakdown of the equipment even if you could attach and connect.
- Make sure that your options are compatible with the system. If you attach any incompatible option, there is a risk of malfunction that could lead to a breakdown.
- It is recommended to use NEC's genuine option products. Some competitors' products are compatible with this server. However, servicing for trouble or damage resulting from such a product will be charged even within the warranty period.

## DISPOSAL OF EQUIPMENT AND CONSUMABLES

- When you dispose of the main unit, hard disk drives, floppy disks, DVDs, optional boards, etc., you need to observe your local disposal rules. Dispose the attached power cable along with the equipment to avoid being used with other equipment.

For details, ask your municipal office.

---


### IMPORTANT:

For disposal (or replacement) of batteries on the motherboard, consult with your sales agent.

You are responsible for wiping out such data before disposal. Erase all data on the hard disk, backup data cartridges, floppy disks, or other writable media (such as CD-R and CD-RW); prevent your data from being restored and reused by a 3rd party. You need to exercise sufficient care to protect privacy and confidential information.

---

- Some of the system components have limited lifetime (e.g., cooling fans, built-in batteries, built-in DVD-ROM drive, floppy disk drive and mouse). For stable operation, it is recommended to replace them regularly. For lifetime of individual components and replacing procedures, ask your sales agent.

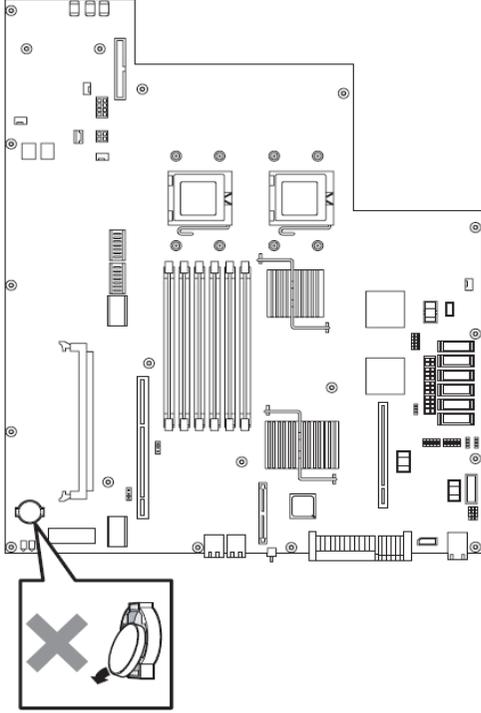	 <b>WARNING</b>
<p>Do not detach a lithium battery yourself.</p> <p>This equipment has a lithium battery. Do not detach it yourself. If the battery is exposed to fire or water, it could explode. <b>RISK OF EXPLOSION IF BATTERY IS REPLACED WITH INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.</b> When the lithium battery is running down and the equipment doesn't work correctly, contact your sales agent. Do not disassemble, replace or recharge the battery yourself.</p>	
	

## **IF SYSTEM TROUBLE IS SUSPECTED**

Before sending the equipment for repair, try the following:

- 1.** Check if its power cord and connection cables are attached correctly.
- 2.** See “Error Messages” in Chapter 7 to check if there is a relevant symptom. If yes, take measures as instructed.
- 3.** Certain software programs are required for operation of NEC Express5800/ft series. Check if these programs are properly installed.
- 4.** Use a commercially available anti-virus program to check the server.

If the problem isn't solved by the above actions, stop using the server and consult with your sales agent. In this case, check LED indications of the server and alarm indications on the display, which will serve as helpful information at the time of repair.

## **ABOUT REPAIR PARTS**

The minimum duration of holding repair parts of this equipment may be different for each country, so contact the NEC sales representatives.

If the period is not specified, the repair parts are kept for 5 years after discontinuance of the product.

## **ABOUT OUR WEB SERVICE**

Information on NEC Express5800/ft series including modification modules is also available on our web site, NEC Express5800 Web Site Asia Pacific, at <http://www.nec.co.jp/express/index.html>


## Advice for Your Health

Prolonged use of a computer may affect your health. Keep in mind the following to reduce stresses on your body:

### Sit in a good posture

Sit on your chair with your back straight. If the desk height is appropriate, you will slightly look down at the screen and your forearms will be parallel to the floor. This “good” work posture can minimize muscle tension caused by sedentary work.

If you sit in a “bad” posture—for example, sit round-shouldered or with your face too close to the display—you may easily suffer fatigue or have your eyesight affected.

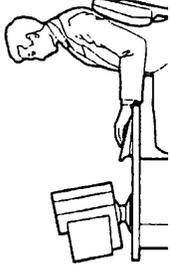


### Adjust the installation angle of Display

Most types of displays allow you to adjust the angle vertically and horizontally. This adjustment is very important to prevent the reflection of light as well as to make the screen more comfortable to see. Without this adjustment, it is difficult to maintain a “good” work posture and may get tired soon. Be sure to adjust the angle before using the display.




### Adjust Brightness and Contrast

Displays allow you to adjust brightness and contrast. Optimum brightness and contrast vary depending on the individual, age, brightness of the room, etc; you need to make an adjustment accordingly. If the screen is too bright or too dark, it is bad for your eyes.

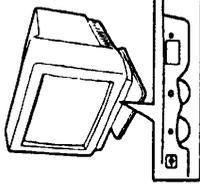

### Adjust the installation angle of Keyboard

Some types of keyboards allow you to adjust the angle. If you adjust the angle to make the keyboard more comfortable to use, you can greatly reduce stresses on your shoulders, arms, and fingers.

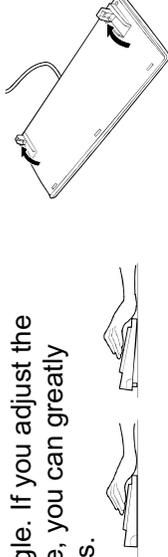

### Clean the Equipment

Cleanliness of the equipment is very important not only for reasons of appearance but also from the viewpoints of function and safety. Especially, you need to regularly clean the display, which gets unclear due to the accumulation of dirt.

### Take a break when you get tired

If you feel tired, you are recommended to refresh yourself by taking a short break or doing a light exercise.



## 安全注意事項

本節講述安全使用本伺服器所需的注意事項。爲了您正確安全地使用本伺服器，請仔細閱讀該節內容。符號的相關說明請參考“安全標示（SAFETY INDICATIONS）”說明。

### 一般注意事項

 <b>WARNING</b>	
	<p>不要用於危及人命和需要高度可靠性的操作上。</p> <p>本產品不要安裝在醫療設備、原子能設備、航空宇宙機器、航空宇宙機器、運輸設備等會危及人命以及需要高度可靠性的設備和機器上，也不要使用本產品來控制這些機器。如果將本產品用於這類系統的設備及機器，造成人身事故及財產損失等後果，本公司概不負責。</p>
	<p>發生冒煙、異味、雜音時不要使用。</p> <p>發生冒煙、異味、雜音等時，請直接關閉電源POWER，並將電源插頭從插座上拔下。然後請與經銷商或維護服務公司聯繫。繼續使用會導致火災。</p>
	<p>不要插入鐵絲和金屬片。</p> <p>不要將金屬片和鐵絲等異物插入通氣孔或軟碟機、光碟機的縫隙。有觸電的危險。</p>
	<p>不要在未指定的場所使用本產品。</p> <p>不要在未指定的環境中安裝伺服器機架。</p> <p>否則，其他系統可能會受到影響，並且機架脫落可能導致火災或者人身傷害。有關安裝環境和防震技術的詳細事項請參閱附帶的用戶手冊或與經銷商或維護服務公司聯繫。</p>

 <b>CAUTION</b>	
 	<p>設備內不要進水和異物。</p> <p>設備內不要進入水、針、夾子等異物。有可能導致火災和觸電。一旦進入異物，請立即關閉電源，將電源插頭從插座上拔下來。不要自行拆卸，請與經銷商或維護服務公司聯繫。</p>

## 使用電源及電源線注意事項

<b>⚠ WARNING</b>	
	不要用濕手拿電源插頭。
不要用濕手插拔電源插頭。有觸電的危險。	
	不要把地線連接到煤氣管道上。
請勿將地線連接到煤氣管道上。有導致煤氣爆炸的危險。	

<b>⚠ CAUTION</b>	
不要插入未指定的插座。	
電源請使用指定電壓及電源的壁式插座。使用未指定的電源會造成火災和漏電。請避免使用延長線安裝設備。如果連接與本產品電源規格不相符的電線，會因過熱而導致火災。	
	不要在一個插座上插接多個電源線。
插座如果超過額定電流，會因過熱而導致火災的危險。	
	不要只插入一半。
請將電源插頭直插到底部。如果插入一半會因接觸不良而發熱，造成火災。另外，插入部如附著灰塵、水滴等，會因發熱導致火災。	
不要使用未指定的電源線。	
	請使用下列規格的AC電源線。
	此外，操作和連接電源線時請遵循以下注意事項。
<ul style="list-style-type: none"><li>■ 不要拖拽電源線。</li><li>■ 不要夾電源線。</li><li>■ 不要彎折電源線。</li><li>■ 不要使電源線靠近化學藥品。</li><li>■ 不要扭曲電源線。</li><li>■ 不要踩踏電源線。</li><li>■ 不要在電源線上載入物品。</li><li>■ 不要捆綁電源線。</li><li>■ 不要對電源線進行改造、加工、修復。</li><li>■ 不要用固定器等固定電源線。</li><li>■ 不要使用損傷的電源線。（損傷的電源線要立即更換為相同規格的電源線。更換事宜請與經銷商或維護服務公司聯繫）</li></ul>	

## 安裝，移動，保管及連接注意事項

 <b>WARNING</b>
<p> 在安裝或移動設備之前請拔下電源插頭。</p> <p>在安裝或移動設備之前要切斷設備電源，並拔下電源插頭。只有在拔下電源線後，設備的電壓才會消除。</p>

 <b>CAUTION</b>
<p>不要安裝或存放在未指定的場所。</p> <p>不要將本設備放置在如下場所和本書未指定的場所，有導致火災的危險。</p> <ul style="list-style-type: none"><li>■ 灰塵較多的場所</li><li>■ 熱水器旁等濕氣較高的場所</li><li>■ 陽光直射的場所</li><li>■ 不平穩的場所</li></ul>
<p> 請小心不要夾住或碰傷手指。</p> <p>將本機器安裝到機架上或者從機架上卸載的時候，請務必小心以免被滑軌劃傷手指。</p>
<p> 不要在腐蝕性環境中使用或存放設備。</p> <p>不要在有腐蝕性氣體（如二氧化硫、氯化硫、氮、氫、氨或臭氧等）的環境中使用或存放本產品。</p> <p>不要將本產品安裝在灰塵較多或含有腐蝕性物質如氫化鈉或硫磺等的地方。</p> <p>不要將本產品安裝在空氣中含有過量金屬碎末或傳導粒子的地方。</p> <p>上述環境可能導致本產品腐蝕或短路，因而損壞產品，甚至引起火災。</p> <p>對產品安裝或存放環境有任何疑問，請與經銷商或維修服務公司聯繫。</p>

**▲ CAUTION**



不要在插入插頭的狀態下進行信號線的連接。

在安裝拆除可選配件或者拆裝信號線前先將電源線從插座拔下。即使電源已切斷，在電源線連接的狀態下，可能因接觸信號線和介面產生觸電、或因短路而引起火災。



不要使用未指定的信號線。

使用NEC指定的信號線，並在確認連接設備和介面後進行連接。使用未指定信號線或連接錯誤等會造成短路、導致火災。

信號線的操作和連接，須遵守以下注意事項：

- 不要使用任何損壞的信號線接頭。
- 不要踩踏信號線。
- 不要在信號線上載入物品。
- 信號線接鬆動時不要使用。
- 不要使用任何損壞的信號線。

## 整理及操作內部設備時的注意事項

<b>⚠ WARNING</b>	
	<p>不要自行拆卸、修理或改造本伺服器。</p> <p>除本書記載的情況外，不要進行拆卸、修理、改造。否則，不但可能導致設備不能進行正常運行，還有發生觸電和火災的危險。</p> <p>不要看光碟機內部。</p> <p>光碟機使用了雷射，請不要在電源打開的狀態下觀看內部或插入鏡子等。雷射射入眼睛有導致失明的危險（雷射肉眼眼看不見）。</p> <p>不要擅自拆除鋰電池。</p> <p>本產品內部安裝有鋰電池。請不要拆下電池。鋰電池靠近火或浸水均有可能發生爆炸。</p> <p>由於電池使用期限而導致設備不能正常運行時，不要自行拆卸、更換、充電等，請與經銷商或維護服務公司聯繫。</p> <p>清潔伺服器前請拔下電源插座。</p> <p>整理或拆裝本設備內部的選購配置時，要切斷設備電源，並拔下電源插頭。即使已關閉電源，但連接著電源線，接觸到任何內部設備也有觸電的危險。</p> <p>另外，請經常拔下電源插頭，用乾布擦拭灰塵和附著物。有灰塵或水滴等附著時會發熱，有導致火災的危險。</p>
<b>⚠ CAUTION</b>	
	<p>注意高溫</p> <p>本產品關閉電源後，內置硬碟等內部設備仍然處於高溫狀態。請在充分冷卻之後進行拆裝。</p> <p>確認安裝完畢。</p> <p>電源線和信號線、配件板要確實安裝妥當。</p> <p>安裝不牢有可能引起接觸不良，可能造成冒煙和著火。</p>


<p>請用保護蓋保護好未使用的介面。</p> <p>請用保護蓋保護好未使用的電源線介面以防止短路或觸電。從內部設備上拔下電源插頭時，用保護蓋蓋好介面，否則有導致火災或觸電的危險。</p>

### 操作注意事項


<p> 不要在設備運行時拔出設備。</p> <p>不要拔出或拆除運行中的設備。有導致系統故障和損壞的危險。</p> <p> 不要在打雷時觸摸機器。</p> <p>打雷時請拔下電源插頭。如來不及拔下電源插頭，請不要觸摸設備及線纜等，防止發生火災或觸電。</p> <p> 不要讓寵物靠近。</p> <p>寵物的排泄物和毛髮進入設備可能導致火災和觸電。</p> <p> 設備上不要放置物品。</p> <p>物品倒下可能引起傷亡，破壞硬體或導致火災。</p> <p> 不要將光碟機托盤拉出放置。</p> <p>防止托盤中進入灰塵引起運轉錯誤。同時防止因碰撞等造成托盤損傷。</p>

## 機架式伺服器的注意事項

**⚠ CAUTION**

不要將設備安裝在未指定的機架上。

請將設備安裝在符合EIA標準的19英寸機架上。一定要將設備安裝在指定的機架上才能使用。否則設備可能無法正常使用，並有可能損壞機器零部件或導致人身傷害。關於合適的機架，請與您的經銷商聯繫。



請不要自行安裝本設備。

爲了避免人身傷害，請不要自行將本機器安裝到機架上。應該由受過專業訓練的維護人員來安裝。

**<僅供維護人員閱讀>**

安裝機器時不能將機器的所有重量由一個地方來承載。

爲了分散重量，應該加裝固定器或者同時安裝兩個或更多的機架，否則機架可能會傾倒導致人身傷害。



不要擅自組裝零部件。

將前門和托架安裝到機架上至少需要兩人共同完成，否則可能會因爲零部件跌落而導致損壞或者人身傷害。



不要從不牢固的機架中抽出設備。

在抽出設備之前請確認機架已經被穩固器或者通過抗震技術固定。



不要從機架抽出兩個或者兩個以上的設備。

同時抽出兩個或者兩個以上的設備可能導致機架傾倒。一次只能抽出一個設備。



不要裝配過多電線。

爲了避免火災和設備損壞，請務必確保不要超過線路的額定負載。有關電力設備的安裝和電線的更多資訊請聯繫電工或者當地的電力公司。

### 操作注意事項

為使伺服器正常運行，請遵守以下注意事項。如無視這些注意事項進行操作可能導致伺服器的運行錯誤和故障。

- 不要在設備附近使用行動電話或呼叫器。在本產品附近時請關閉行動電話及呼叫器電源，防止因電波影響導致運轉錯誤。
- 請將本產品安放在能正常運行的場所。具體請參考分冊“用戶指南(安裝)”。
- 關閉電源和取出軟碟前，請確認設備的訪問燈是否已滅。
- 電源切斷後，請間隔 30 秒以上再開啓電源。
- 一旦開啓了伺服器，在螢幕顯示“NEC”圖示之前請不要關閉伺服器。
- 將附帶的電纜插在電壓為 100V 的電源插座上。
- 插上電源線纜後，請等待 30 秒以後再打開設備電源。
- 移動本產品前請關閉電源，拔掉電源插頭。
- 本產品在使用不符合標準的 CD（複製保護式 CD）時，不保證 CD 驅動器能夠識別。
- 請定期清潔本產品（具體步驟請參考第六章）。定期清潔可使部分故障防患於未然。
- 為防止因雷擊等原因造成的瞬間電壓的下降，建議使用不間斷電源設備（UPS）。

該產品不支援通過不間斷電源序列埠(RS-232C)進行連接或者使用 PowerChutePlus 進行控制。

- 在下列情況下進行操作時，請檢查並調整系統時鐘：
  - 對本設備進行運輸後
  - 對本設備進行一段時間的儲存後
  - 當設備在超出正常環境條件下(溫度 10~35°C, 濕度：20~80%)停止時。

請每月檢查一次系統時鐘。如果系統對時間要求很高的精確度且安裝有時間伺服器(NTP)的話，建議您用時間伺服器來作業系統時鐘。如果即使進行了時鐘調整，但是隨著時間的流逝系統時鐘仍然顯著偏離正常水平的話，請向經銷商或維護服務公司諮詢。

- 如果要保存該設備，請將設備保存在以下環境溫度下(溫度:-10 to 55°C, 濕度: 20 to 80%, 無結露)。
- 在將 NEC Express800ft 系列、內部可選設備或備份媒體設備(盒式磁帶)突然從溫度很低的地方轉移到溫暖的地方時，會發生結露現象。如果在這種狀態下使用的話，會引起故障或系統崩潰。為了保證重要資料以及資產不至於受到損壞，請先等候充分時間後，再使用伺服器或其中的元件。

參考：冬季避免結露問題的有效時間長度（當室內與室外溫度差超過 10°C 時）

磁片設備：約 2-3 小時

磁帶媒體：約 1 天

- 請確認可選設備能安裝或連接在本設備上，否則即便安裝或連接上，不僅設備不能正常運行，還可能導致設備本身故障。
- 請確認可選設備與系統可以相容。如果使用了不可相容的可選設備，可能導致設備故障。
- 可選設備建議使用 NEC 原裝正品。其他公司生產的記憶體和硬碟等，雖然也可適用於本產品，但是由此產生的破損或故障，即便在保修期間內也要收取維修費用。

## 設備及消耗品的廢棄

- 伺服器主機及硬碟驅動器、軟碟、光碟及可選配件板卡等的廢棄方式，請遵守各地方廢棄規定。請將設備附帶的電源線纜一併廢棄以免用於其他設備。  
詳情請諮詢各地方機構。

### 重要：


- 伺服器主板電池的廢棄（以及更換）請向經銷商或維護服務公司諮詢。  
為防止設備的硬碟、備份光碟、軟碟及其他可寫媒體（CD-R/CD-RW 等）中存儲的資料，可能因被第三者複製或恢復後，被挪作他用，請客戶負責切實刪除這些資料。在廢棄設備時應充分考慮保護個人隱私及企業的機密資訊。
- 伺服器的某些部件到使用期限必須更換（風扇、內置電池、內置光碟機、軟盤機、滑鼠等）。為使設備穩定運行，建議定期更換這些部件。使用期限及更換相關事宜請與經銷商或維護服務公司聯繫。

### ⚠ WARNING



不要擅自拆開鋰電池。

本設備內裝有鋰電池。請不要拆下電池，防止鋰電池近火、浸水發生爆炸。  
用不同型號的電池更換有可能引起爆炸。請根據本書說明來處理舊電池。  
電池用完，設備無法正常工作時，不要自行拆卸、更換、充電等，請與維護服務公司聯繫。

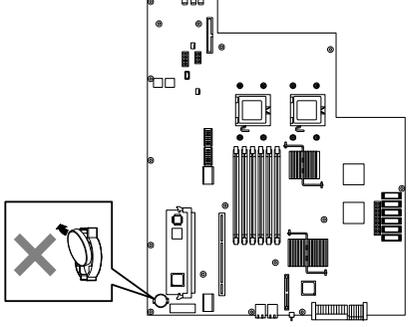

### 懷疑系統出現故障時

當伺服器不能正常運行時，請在送修之前，先對照下述內容，找出問題所在並進行相應處理：

1. 請檢查電源線和連接線纜連接是否正確。
2. 請參照第七章的“錯誤消息”檢查是否出現相應症狀。如果有，請按提示採取相應的措施。
3. 請確認運行 NEC Express5800/ft 系列伺服器所需的軟體程式是否都已經正確安裝。
4. 請使用市場上銷售的抗病毒程式對伺服器進行檢查。

如果進行了相應的處理之後仍然不能正常運行，請停止使用本伺服器並與經銷商或維護服務公司聯繫。在這種情況下請檢查伺服器的指示燈顯示並記錄顯示器顯示的資訊，這些提示有助於機器的維護。

### 部件維修

部件保修期在各個國家不同，請諮詢NEC銷售代表。  
如果沒有指定時期，部件維修將在停產後被保留5年。

### 網路服務


有關NEC Express5800/ft系列以及相關修正模組的資訊，可以參考NEC Express5800 亞太地區網站：  
<http://www.nec.co.jp/express/index.html>

## 保護健康的建議

長時間連續使用電腦，有時身體各部位會出現異常反應。使用電腦時，請注意以下幾點，不要給身體造成負擔。

### 保持良好的坐姿

使用電腦時的基本姿勢是伸直腰背坐在椅子上，將鍵盤放置在與兩手和地板基本平行的高度，電腦螢幕比視線水平高度略低為宜。如果採用該基本姿勢，身體的任何部位都不用施加多餘的力，這是最能夠減輕小肌肉緊張的姿勢。不好的作業姿勢：如果彎腰曲背，臉離顯示器很近，這種狀態下工作會造成疲勞和視力下降。

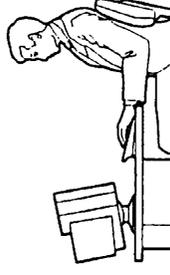


### 調整顯示器的角度

顯示器角度大多可上下、左右調節。為防止耀眼光射入畫面、保持顯示內容清晰，調節顯示器的角度非常重要。如果不調節角度，在不易觀看的角度下工作，則無法保持良好坐姿，很容易疲勞。因此，使用前，為便於觀看，請調整好顯示器的角度。



### 調整畫面亮度和對比度

顯示器具有調節亮度、對比度的功能。根據年齡和個人的差異、周圍的亮度不同，畫面的最佳亮度、對比度也有所不同，因此請根據具體情況將畫面調節到易於觀看的狀態。畫面過亮、過暗都會對眼睛產生不良影響。

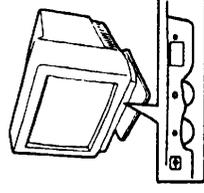

### 調整鍵盤角度

有些鍵盤可以調節角度。調節鍵盤角度以便更易於輸入，對於減輕肩、腕和手指的負擔非常有效。



### 清潔機器

保持機器的整潔不論從美觀的角度，還是從功能和安全角度來看都是非常重要的。特別是顯示器的畫面上如果有灰塵等髒物，顯示內容就會看不清楚，所以定期清潔是很必要的。

### 疲勞時請注意放鬆

建議您疲勞時停下雙手休息一下，做做輕體操，轉換一下心情。



(This page is intentionally left blank.)

# Chapter 2

---

## General Description

This chapter describes what you need to know to use the NEC Express5800/ft series. Refer to this chapter when you want to know about certain components and how to operate them.

## STANDARD FEATURES

The NEC Express5800/ft series is the server that has hardware for two servers.

### High performance

- Quad-Core Intel® Xeon™ Processor (2.00GHz/3.00GHz)
- High-speed Ethernet interface (1000Mbps/100Mbps/10Mbps supported)

### Expandability

- Three slots
- Low Profile (PCI-X bus, 133MHz) x 1
- Large capacity memory (max: 24 GB)

### High-reliability

- Memory monitoring feature (1-bit error correction / 2-bit error detection)
- Bus parity error detection
- Error notification
- BIOS password feature

### Self-diagnosis

- Power On Self-Test (POST) Test and Diagnosis (T&D) Utility

### Maintainability

- Off-line Maintenance Utility

### Management Utilities

- NEC ESMPRO

### Easy and Fine Setup

- NEC EXPRESSBUILDER (system setup utility)
- SETUP (BIOS setup utility)


### Ready-to-use

- Quick cableless connection: CPU/IO module

### Fault-tolerant Feature

- Redundant modules achieved within a system
- Higher hardware availability by isolation of failed module

Hardware modules work while synchronizing and comparing with each other. Even if one hardware module stops, the server can continue its operation as the service with the other hardware module.

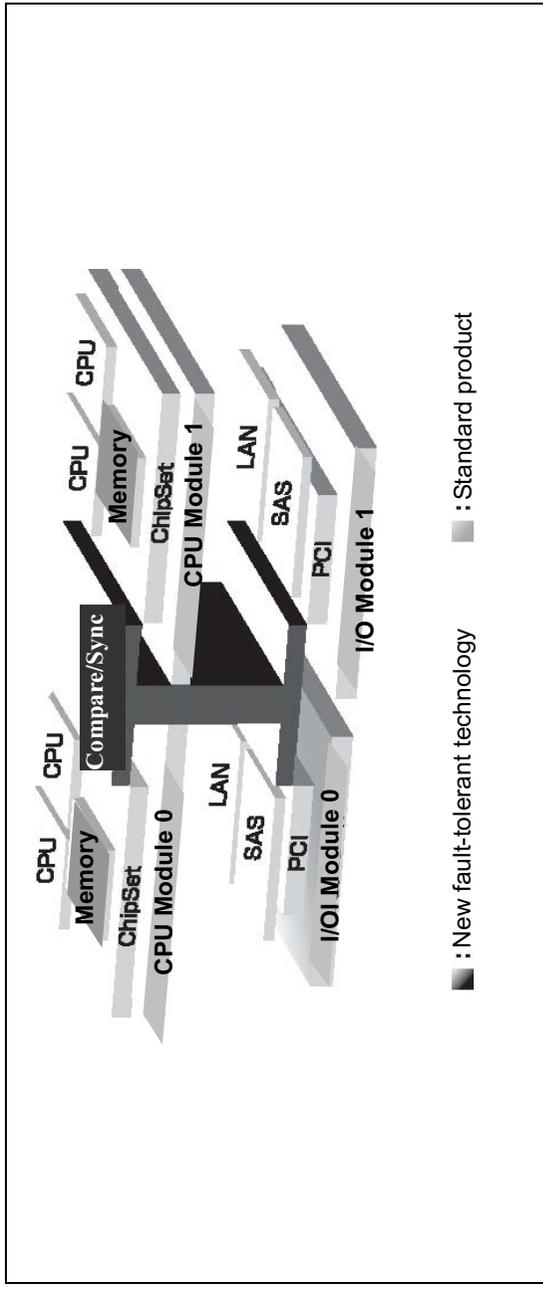

NEC Express5800/ft series is a highly fault-tolerant Windows server that achieves continuous computing operations, data storage mirror, and continuous network connection. It allows you to run Windows Server 2003-based applications.

NEC Express5800/ft series achieves continuous computing operations for the Windows server and server-based applications with its redundant CPU processing and redundant memory. It assures data redundancy through duplication of server data on an independent storage system. These features eliminate server downtime that is usually caused by network disconnection or trouble with the I/O controller, Ethernet adapter or disk drive, and support operation of the network and server applications continuously. While being transparent to application software, NEC Express5800/ft series achieves high fault-tolerance.

NEC Express5800/ft series detects status changes, errors and other events and notifies the Windows Event Log of these events. If you use an alarm notification tool, you can configure NEC Express5800/ft series to notify you when certain events occur.

NEC ESMPRO is installed on the system as a server management solution. NEC ESMPRO, a GUI-based management tool, allows you to monitor, view, and configure NEC Express5800/ft series. This tool also supports both local and remote management of NEC Express5800/ft series.

## 2-4 General Description

---

NEC Express5800/ft series mainly provides the following advantages:

- Highly fault-tolerant processing and I/O subsystems  
NEC Express5800/ft series use redundant hardware and software to assure server operation even if one module suffers trouble with its processor, memory, I/O (including trouble related to the I/O controller), disk drive, or Ethernet adapter.
- Continuous network connection  
NEC Express5800/ft series maintains continuous network connection by detecting any trouble with the network adapter, connection, etc. If trouble occurs, the standby network connection will take over all network traffic processing and thus securely maintain the network system connection of NEC Express5800/ft series without losing network traffic or client connection.
- Support of multiple network connections  
Since NEC Express5800/ft series can support multiple Ethernet connections, you can add network redundant control or network traffic control.
- Industry standard hardware platform  
NEC Express5800/ft series uses IA (Intel Architecture)-based system hardware.
- No need to modify applications  
You can run Windows Server 2003-compliant applications on NEC Express5800/ft series. Thus, unlike other highly fault-tolerant products, special API or scripts are not necessary.
- Automatic mirroring  
NEC Express5800/ft series automatically maintains data as the current data.
- Automatic detection and notification of faults  
NEC Express5800/ft series detects and sorts out all events such as general status changes and faults, and notifies Windows Event Log of these events.
- Transparent migration  
NEC Express5800/ft series constantly monitors events. If trouble occurs on NEC Express5800/ft series' server module, it will transparently use a redundant module of the failed module. This feature maintains data and user access without losing application service.
- Automatic reconfiguration  
When the failed module restarts after the trouble is corrected, NEC Express5800/ft series will perform reconfiguration automatically, and if necessary, resynchronize the affected modules. Reconfiguration can include CPU processing (e.g., CPU memory), server's operating system (and related applications), and system data stored on the hard disks. In most cases, NEC Express5800/ft series automatically restores redundancy of the server modules after recovery.

- Local and remote management

NEC Express5800/ft series uses NEC ESMPRO as a server management tool. This tool uses a GUI that enables monitoring and setting of NEC Express5800/ft series. NEC ESMPRO can be used both locally and remotely on work station PCs or server PCs.

- Syslog function

When trouble or other events are detected on NEC Express5800/ft series, they will be saved in syslog. You can also use alarm report software such as “Express Report Service” for managing NEC Express5800/ft series. We recommend you to use Express Report Service for prompt action upon failure. For details, contact your sales agent.

- Online repairing

You can repair or replace a failed module even if NEC Express5800/ft series is operating online.


- ESX Server and media

Although ESX Server media used on NEC Express5800/ft series are specifically processed for it, the standard operating methods of ESX Server are same as general.

## NAMES AND FUNCTIONS OF COMPONENTS

### Appearance

Names and functions of components are shown below:

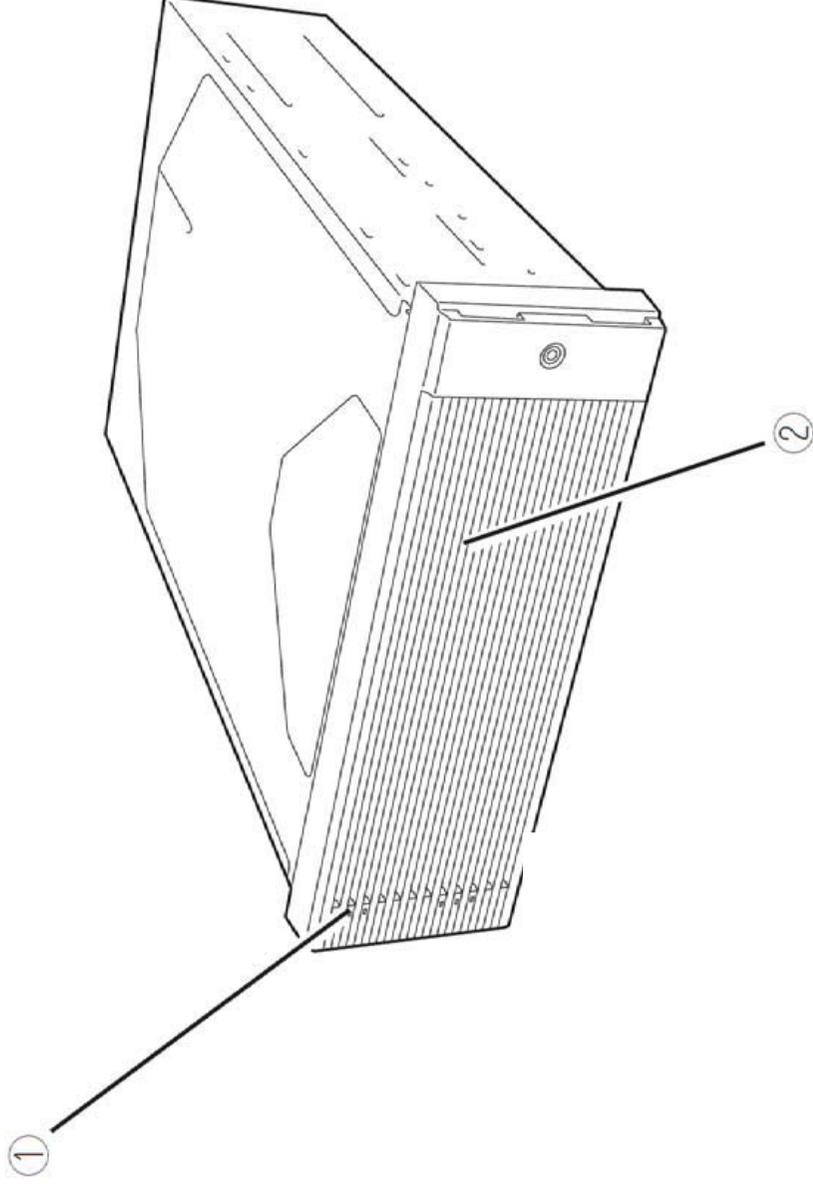


**(1) LEDs**

For more information see the description on the front view (page 2-7) and rear view (page 2-9).

**(2) Front bezel**

The cover to protect devices in the front.

## Front View

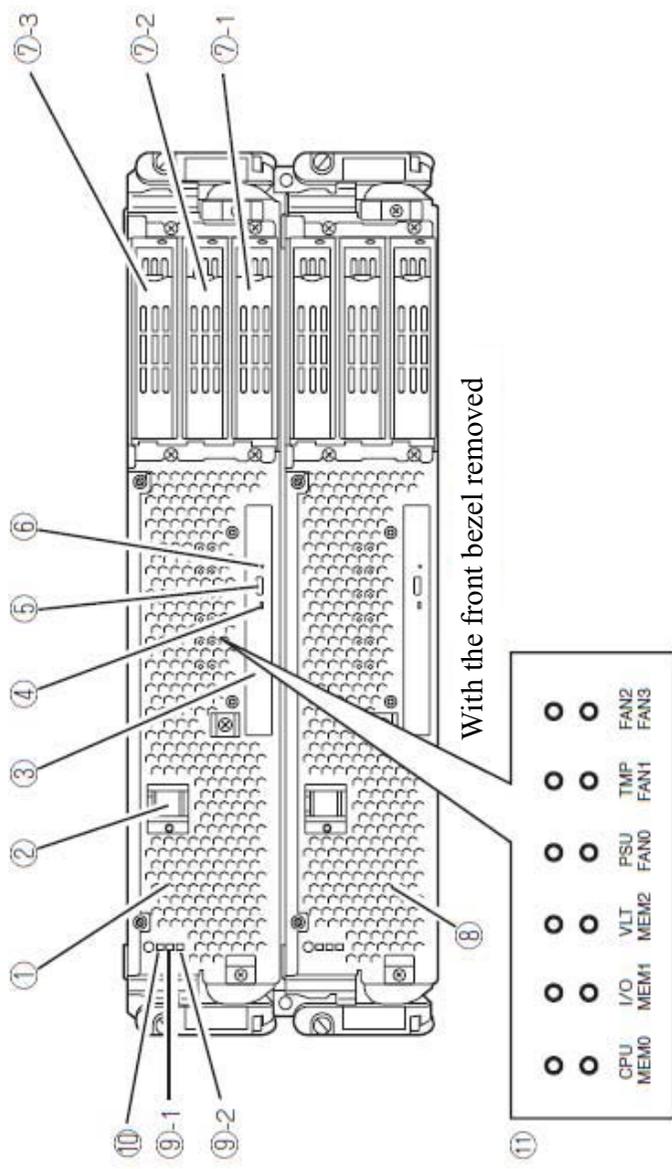

### (1) CPU/IO module 0

This is a module with a set of CPU (processor), memory (DIMM), PCI board, cooling fan unit.

### (2) POWER switch

This switch is used to power on/off the server. The in-built LED illuminates for the primary CPU/IO module, showing that it is primary. (The secondary POWER LED (off) cannot be used. If the switch is pressed once, the server is powered on. If the switch is pressed again, the server is powered off. If the switch is pressed for more than 4 seconds, the server is forcibly shut down.

### (3) Optical disk drive

This device is used to read data from DVDs and CD-ROMs.

### (4) DISK ACCESS LED

This LED illuminates when the set optical disks are accessed.

### (5) Tray eject button

This button ejects the tray.

### (6) Forcible eject hole

This is the hole for forcibly eject by inserting a metal pin.

### (7) Hard disk drive bay

This is not used with this server model.

### **(8) CPU/IO module 1**

This is a module with a set of CPU (processor), memory (DIMM), PCI board, cooling fan unit.

### **(9)-1 CPU/IO module status LED 1 (amber)**

This LED indicates the status of the CPU/IO module. When the module is successfully running, the LED is powered off. If a module has a problem, the LED illuminates in amber.

### **(9)-2 CPU/IO module status LED 2 (green)**

This LED indicates the status of the CPU/IO module. When both of the CPU/IO modules are running, the LED illuminates in green. When one of the modules is running, the LED blinks in green or is powered off.


### **(10) CPU/IO module POWER LED (green)**

When the power is turned on, the LED illuminates in green.

### **(11) EXPRESSSCOPE LEDs (amber)**

This LED indicates the fault status of the designated modules. If a module has a problem, the LEDs illuminate in amber.

### Rear View

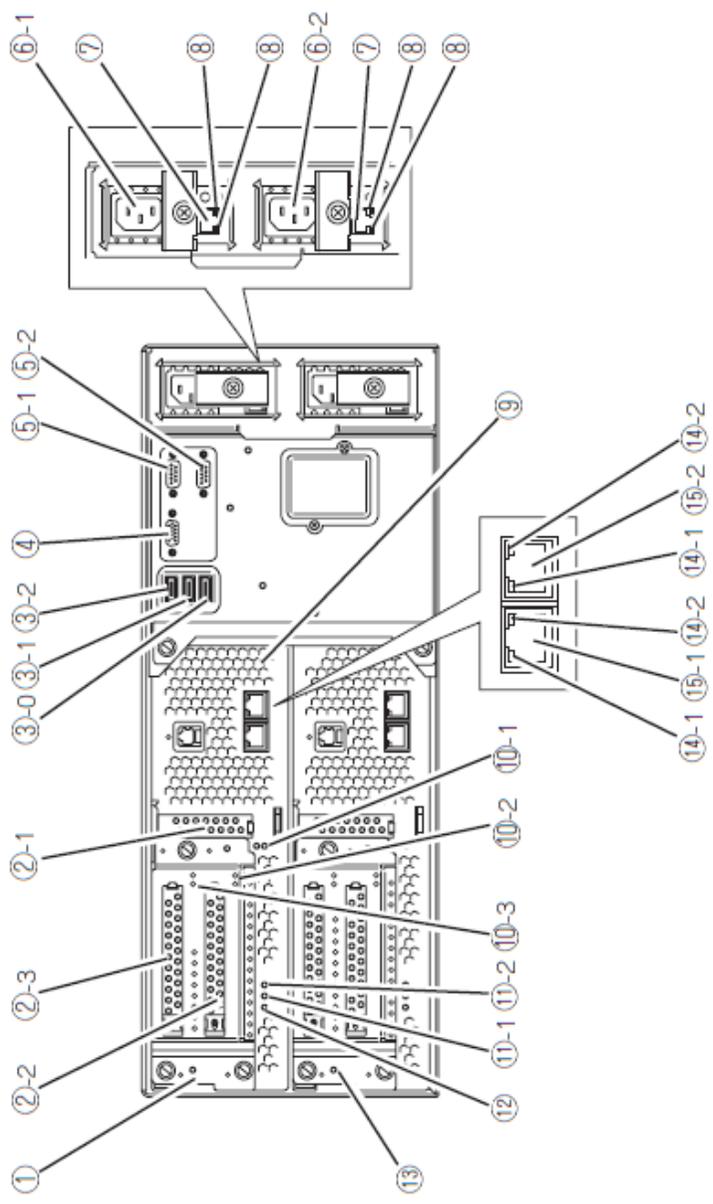

## 2-10 General Description

---

### (1) CPU/IO module 0

This is a module with a set of CPU (processor), memory (DIMM), PCI board, and cooling fan unit.

### (2)-1, 2 PCI slots 1, 2, 3

- (2)-1: A Low Profile type PCI board is mounted on this slot (64 bit 133MHz 3.3V PCI).
- (2)-2: This is not used with this server model.
- (2)-3: Fibre Channel board is implemented.

### (3)-0, 1, 2 USB connector 0, 1, 2

These connectors attach USB2.0-interface-supported devices.

### (4) Monitor connector

This is used to attach a display device.

### (5)-1, 2 serial port 1, 2 connector

This is used to attach a serial interface connector.

This can be used only for maintenance.

### (6)-1 AC inlet A connector

A power cord is connected to this socket (for the CPU/IO module 0). If you want make the CPU/IO module 0 primary, connect a power cord to this inlet first.

### (6)-2 AC inlet B connector

A power cord is connected to this socket (for the CPU/IO module 1). If you want to make the CPU/IO module 1 primary, connect a power cord to this inlet first.

### (7) LAN connector (VTM)

This is not used with this server model.

### (8)-1 LINK/ACT LED (VTM)

This is not used with this server model.

### (8)-2 Speed LED (VTM)

This LED indicates the transfer speed of LAN (VTM).

### (9) DUMP (NMI) switch

This switch executes a memory dump.

Press the DUMP switch on the primary CPU/IO module, whose POWER LED has been blinking, for four to eight seconds.

### (10)-1, 2 PCI slot status LEDs (Slot 1, 2, 3)

These LEDs display the status of the PCI slot. The status is shown by the display combination of the 2 LEDs (Refer to the chart on p 2-19).

### (11)-1 CPU/IO module status LED 1 (amber)

This LED indicates the status of the CPU/IO module. When the module is successfully running, the LED is powered off. If a module has a problem, the LED illuminates in amber.

**(11)-2 CPU/IO module status LED 2 (green)**

This LED indicates the status of the CPU/IO module. When both modules are operating, the LED illuminates in green. When one module is operating, the LED blinks in green or is powered off.

**(12) CPU/IO module POWER LED (green)**

This LED illuminates in green when the system is powered on.

**(13) CPU/IO module 1**

This is a module with a set of CPU (processor), memory (DIMM), PCI board, and cooling fan unit.

**(14)-1 LINK/ACT LED**

This LED indicates the access status of the LAN connector.


**(14)-2 Speed LED**

This LED indicates the transfer speed of the LAN connector.

**(15)-1, 2 LAN connector 1, 2**

These connectors support 1000BASE-T/100BASE-TX/10BASE-T. These are connected to the network system on LAN.

## **Optical disk drive**

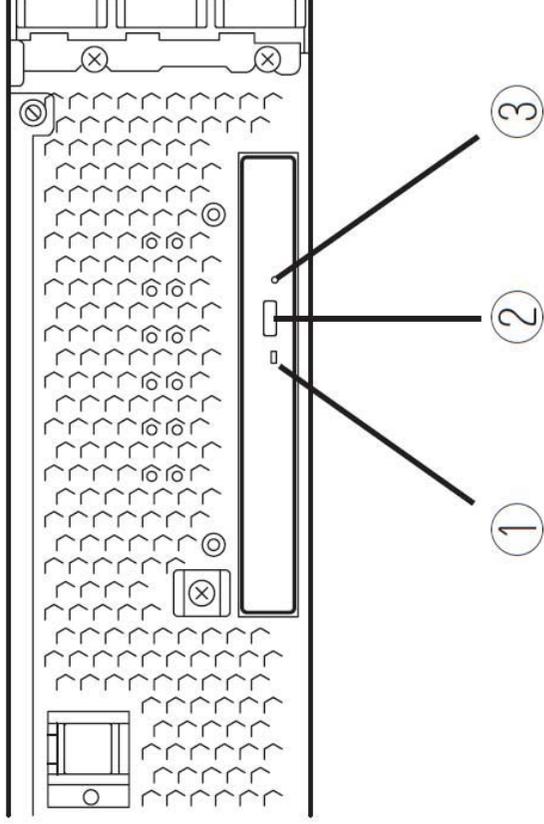

**(1) Status LED**

The LED that illuminates while accessing the loaded DVD/CD-ROM


**(2) Tray eject button**

The button to eject the tray.

**(3) Manual release hole**


When the eject button does not work, insert a metal pin into this hole to forcefully eject the tray.

## CPU/IO Module

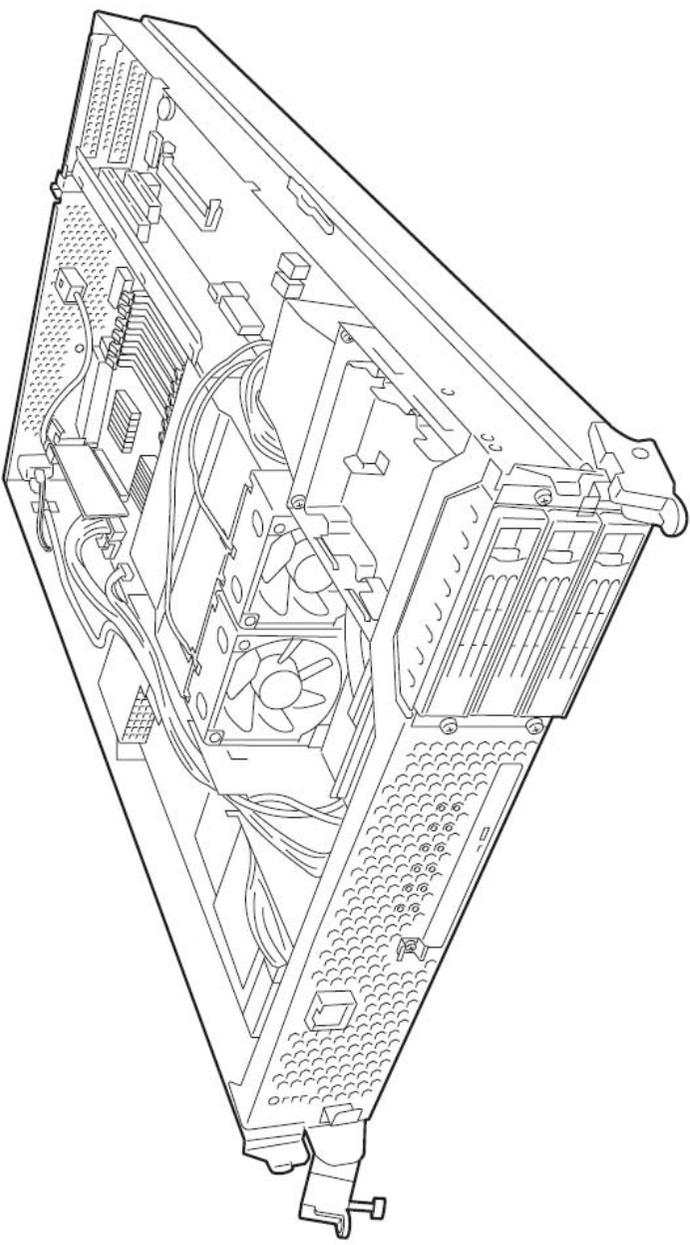

CPU/IO module

## **Mother Board**

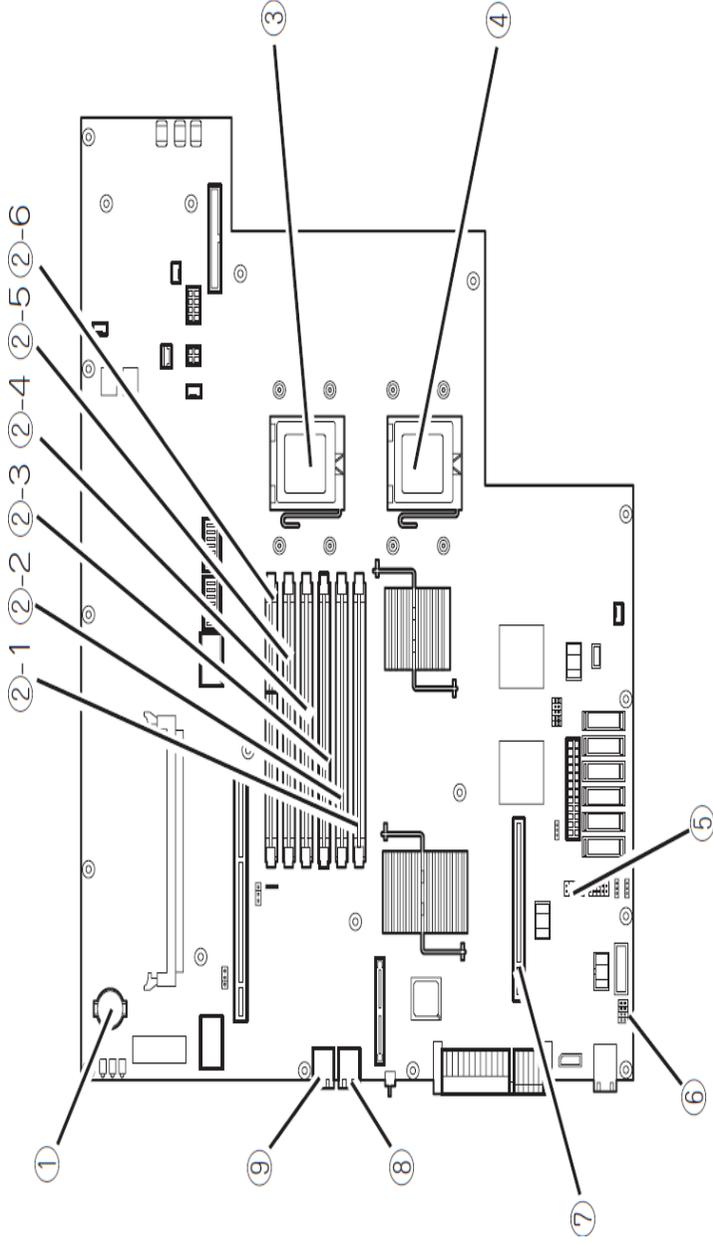

CPU/IO module mother board

- (1) **Lithium battery**
- (2) **DIMM slot ((2)-1 from the bottom)**
  - (2)-1 DIMM CH0 Slot 0
  - (2)-2 DIMM CH0 Slot 1
  - (2)-3 DIMM CH0 Slot 2
  - (2)-4 DIMM CH1 Slot 0
  - (2)-5 DIMM CH1 Slot 1
  - (2)-6 DIMM CH1 Slot 2
- (3) **Processor 0 socket (CPU0)**
- (4) **Processor 1 socket (CPU1)**
- (5) **Jumper switch for clearing CMOS/password**
- (6) **Jumper switch for clearing BMC configuration**
- (7) **F-RMC card slot**

This is not used in the server.
- (8) **LAN 2 connector**
- (9) **LAN 1 connector**

## LEDs

### POWER LED

The POWER switch of the CPU/IO module has an in-built LED. If the AC power is supplied, the LED of the primary POWER switch illuminates (only the primary POWER switch functions). Also, the CPU/IO module has the POWER LED to show the status of the module power status.

### POWER LED

LED indication	Description	Action
Not on	Power supply is off.	Check that the status LED 1 on both CPU/IO modules is powered off, and then press the POWER LED to power on the system.
On	Power supply is on.	

### CPU/IO Module Status LED 1, 2

There are two kinds of LEDs that indicate the module status on the front and back sides of the CPU/IO module. The display combination of the two LEDs indicates the CPU/IO module status.

Status LED1	Status LED2	Description	Action
Not on	Not on	Power supply is off.	
	Blinking in green	When the system is starting, the initialization process is performed. If the OS is running, duplex configuration is not made for one of the components in the CPU/IO modules.	Wait for a while; the LED will illuminate in green. Check that the cable is firmly connected. If the LED does not illuminate in green after a while, record the status LED status, and contact a maintenance service company.
	Green	The device is duplexed and running normally.	
Amber	Not on	After the AC power is supplied, the device running in the standby power mode is being initialized.	Wait for a while. The status LED 1 will be powered off, and the POWER switch will be enabled.
		When the system is starting, the initialization process is performed. When the OS is running, the CPU/IO module has a problem.	Wait for a while; the status LED 1 is powered off. Check that the cable is firmly connected. If the LED does not illuminate in green after a while, record the status LED status, and contact a maintenance service company.

### PCI Slot status LED 1, 2

There are two kinds of LEDs that indicate the PCI slot status on the back of the CPU/IO module. The PCI slot status is indicated by the display combination of the two LEDs.

Status LED1	Status LED2	Description	Action
Not on	Not on	Power supply is off.	<p>Wait for a while; the LED illuminates in white.</p> <p>Check that the cable is firmly connected. If the LED does not illuminate in white after a while, record the status LED status, and contact a maintenance service company.</p>
	Blinking in white	When the system is starting, the initialization process is performed. If the OS is running, and it is in the Simplex mode, the PCI slot of the other CPU/IO module is degenerated.	
	White	<p>If the PCI slot status LED 2 of the other CPU/IO module is on, the device is successfully running in the Duplex mode.</p> <p>If the PCI slot status LED 2 of the other CPU/IO module is blinking, the cable may be disconnected, the option PCI board of the slot has a problem, or the CPU/IO module itself has a problem.</p>	
Amber	Not on	When the system is starting, the initialization process is performed.	<p>Check that the cable is connected securely. If the PCI slot status LED 2 of the other CPU/IO module does not illuminate white, record the status of the status LED, and call your maintenance service company.</p> <p>Wait for a while; the status LED 1 is powered off.</p>
		<p>When the OS is running;</p> <p>1) The optional PCI board of the slot has a problem.</p> <p>2) The CPU/IO module has a problem.</p>	

### **Access LED on the Optical Disk Drive**

This LED illuminates when the installed DVD or CD-ROM is being accessed.

### **LAN Connector LED**

- LINK/ACT LED

The LINK/ACT LED shows the status of a standard network port. It is green if power is supplied to the main unit and hub, and they are connected correctly (“LINK”). It blinks green while the network port sends or receives data (ACT).

When the LED does not illuminate during “LINK,” check the condition and connection of network cables. If there is nothing wrong with the cables, a defect is suspected in the network (LAN) controller. In this case, contact your sales agent.


- Speed LED

This LED indicates the network interface of the communication mode used by a network port.

1000BASE-T and 100BASE-TX are the supported LAN port types. When this LED illuminates in amber, the port is operating on 1000BASE-T; when in green, 100BASE-TX; and when not illuminate, 10BASE-T.

## EXPRESSSCOPE

Corresponding EXPRESSSCOPE LEDs (amber) illuminate when modules have failures. The LEDs on the upper line correspond to the upper names, and the LEDs on the lower line correspond to the lower names.

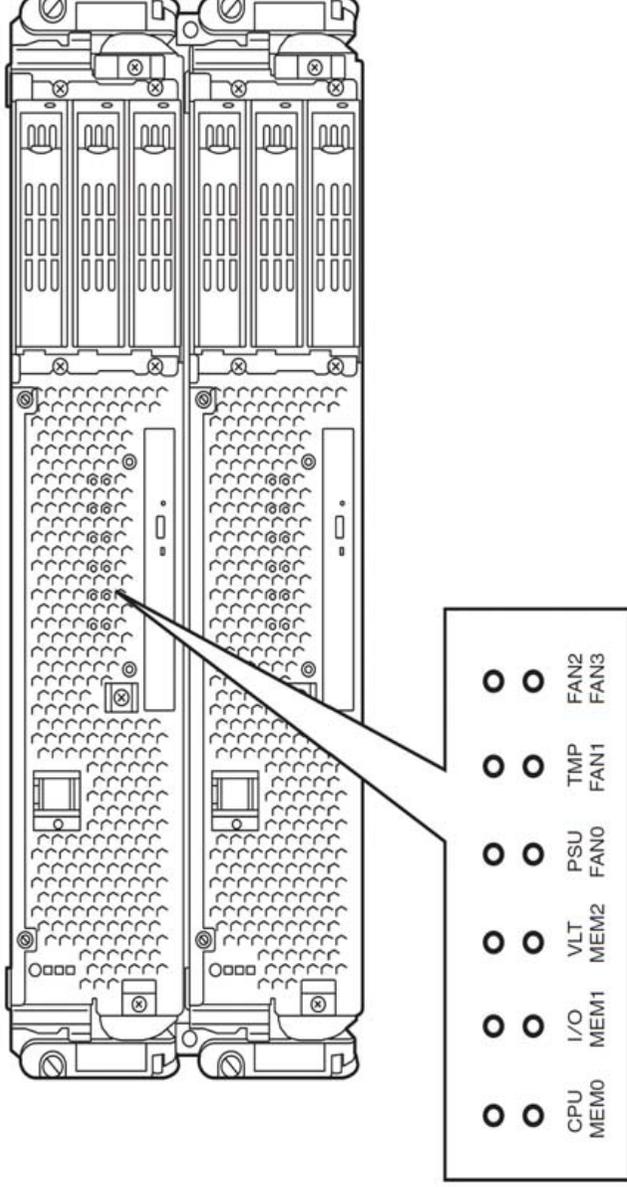

### **CPU (CPU module error LED)**

Amber LED illuminates when failure occurs on CPU of CPU/IO module.

### **I/O (I/O module error LED)**

Amber LED illuminates when failure occurs on I/O of CPU/IO module.

### **VLT (Power error LED)**

Amber LED illuminates when electric voltage failure occurs in CPU/IO module.

### **MEM0 (Memory slot 0 error LED)**

Amber LED illuminates when failure occurs on the memory slot 0 of CPU/IO module.

### **MEM1 (Memory slot 1 error LED)**

Amber LED illuminates when failure occurs on the memory slot 1 of CPU/IO module.

### **MEM2 (Memory slot 2 error LED)**

Amber LED illuminates when failure occurs on the memory slot 2 of CPU/IO module.

### **PSU (Power supply unit error LED)**

Amber LED illuminates when failure occurs on the power supply unit of CPU/IO module.

### **TMP (Abnormal temperature LED)**

Amber LED illuminates when temperature in CPU/IO module becomes abnormal.

**FAN0 (Fan 0 error LED)**

Amber LED illuminates when failure occurs on the cooling fan for CPU0 of CPU/IO module.

**FAN1 (Fan 1 error LED)**

Amber LED illuminates when failure occurs on the cooling fan for CPU1 of CPU/IO module.

**FAN2 (Fan 2 error LED)**

Amber LED illuminates when failure occurs on the disk cooling fan of CPU/IO module.

**FAN3 (Fan 3 error LED)**

Amber LED illuminates when failure occurs on the power supply unit's fan of CPU/IO module.

## BASIC OPERATION

This section describes basic operation procedures of NEC Express5800/ft series.


### **Installing/removing the front bezel**

When you power on/off the server or remove/install CPU/IO module, remove the front bezel.


#### **IMPORTANT:**

The front bezel can only be removed by unlocking the lock with the security key attached.

- (1) Insert the product-accessory security key into the key slot and push lightly. Turn the key to the left to unlock.
- (2) Hold the right edge of the front bezel and pull it forward.
- (3) Slide the front bezel to take the tab off the frame and remove the front bezel.

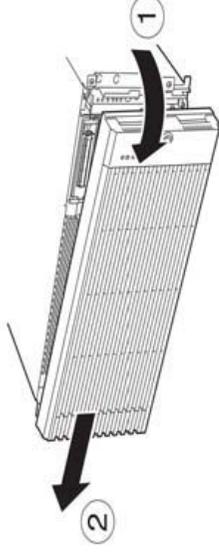

When attaching the front bezel, hook the left tab into the server's frame first, then push forward on the right side.

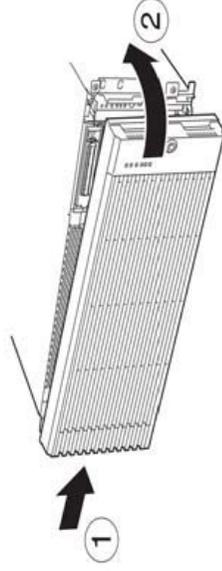

## **Power ON**

To power on NEC Express5800/ft series, press the POWER switch (the one whose in-built LED is illuminating).

Follow the steps below to turn on the power.

1. Power on the display unit and other peripheral devices connected to the server.

---

### **CHECK:**

If the power cord is connected to a power controller like a UPS, make sure that it is powered on.


2. Remove the front bezel.
3. Press the power switch located on the front of the front panel.  
After a while, the “NEC” logo will appear on the screen.

---

### **IMPORTANT:**

Do not turn off the power before you see the “NEC” logo and a character below the logo.

---

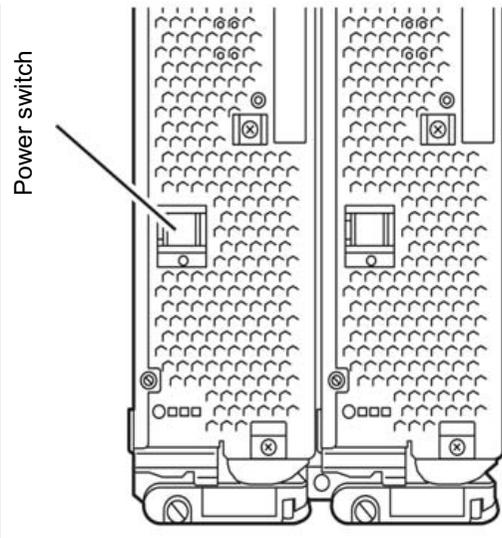

While the “NEC” logo is displayed on the screen, NEC Express5800/ft series is performing a power-on self test (POST) to check itself. For details, see “POST Check” described later in this chapter. Upon the completion of POST, Windows Server 2003 will start.

---

### **CHECK:**

If the server finds errors during POST, it will interrupt POST and display the error message. See Chapter 7.

---

## **Power OFF**

Follow the steps below to turn off the power. If NEC Express5800/ft series is plugged to a UPS, see manuals included with the UPS or the application that controls the UPS.

1. Perform a normal shutdown from Windows Server 2003.

The system will be powered off automatically. (Note: the POWER switch on the primary side will remain illuminating when AC power is supplied.)

2. Power off all peripheral devices.

## **POST Check**

POST (power-on self test) is a self-test function stored on the motherboard of NEC Express5800/ft series.

When you power on the server, POST will start automatically to check the motherboard, ECC memory modules, CPU/IO modules, keyboard, mouse, etc. It also shows startup messages for various BIOS setup utilities.



According to the factory default settings, the “NEC” logo appears on the display while POST is being performed. (To view details of POST, press **Esc**.)

---

### **TIPS:**

- You can view POST details from the beginning without the need to press **Esc** when the BIOS menu is displayed: select [System Configuration] - [Advanced], and set [Boot-time Diagnostic Screen] to “Enabled” (see Chapter 4).
- You can view the test items and details from a management PC where NEC ESMPRO Manager is installed.

You do not always need to check POST details. You will need to check messages when:

- You install a new NEC Express5800/ft series.
- A failure is suspected.
- You hear several beeps between the time of the power-on and OS start-up.
- The display unit shows an error message.

## Flow of POST

This section walks you through how POST is performed.

1. When you power on the system, one selected CPU/IO module will start up. POST will be performed on this selected CPU/IO module.
2. Memory check starts.  
A message appears at the upper left of the screen to show that the basic and expanded memories are being counted. The memory check may take a few minutes to complete depending on the server's memory size. Likewise, it may take about one minute for the screen to appear when the server is rebooted.
3. The server starts processor check, IO check, and initialization.  
Several messages appear: they show the ID of the selected CPU/IO modules, information on the processor, detection of the keyboard and mouse, etc.
4. A message appears at the lower left of the screen, prompting for startup of the BIOS setup utility "SETUP."

Press <F2> to enter SETUP

You will need to start it when you want to modify the configuration for using the server. Unless this message appears together with an error message, you do not need to start the utility to modify the configuration. (If you wait for a few seconds, POST will go on automatically.)

To start the SETUP utility, press **F2** while the above message is displayed. For setting and parameter functions, see the section of BIOS setup.

When SETUP is completed, the server will reboot itself automatically and perform POST.

5. A message will appear prompting for startup of Emulex BIOS configuration Utility. (If you wait for a few seconds, POST will go on automatically.)

If you press **Ctrl E or Alt E**, the Emulex BIOS configuration Utility will start. However, you usually do not need to use the setup utility. For setting and parameter functions, see Chapter 4 of User's Guide(Setup).

When SETUP is complete, the server will reboot automatically and perform POST from the start again.

---

### IMPORTANT:

If a message does not appear prompting for startup of Emulex BIOS configuration Utility, correct the setting of Emulex BIOS. For details, see Chapter4 of User's Guide (Setup).

6. The screen shows the ID numbers of the connected disk drive.
7. Upon completion of POST, the password entry screen appears prior to OS startup.  
The password entry screen will appear after the normal termination of POST only if you

have set a password in the BIOS setup utility “SETUP.”

You can enter a password up to three times. If you enter an incorrect password three times, the startup will be unsuccessful. In this case, turn off the power and then turn it on again after waiting 30 seconds to boot the server.

---

**IMPORTANT:**

Do not set a password before installing the OS.

8. Upon completion of POST, the OS will start up.

### **Behavior at Occurrence of Error**

If POST or OS startup does not finish normally, the server will reboot itself automatically.

At the time of reboot, it will select the other CPU/IO module and run POST or OS startup.

In this manner, the server retries POST or OS startup with different combinations of CPU/IO modules. If POST does not finish normally with any combinations, the server will stop with the state of DC OFF or Post end with an error message displayed.

While performing retries, the server displays or registers the error types.

For details of error messages, see Chapter 7 “Troubleshooting.”

### **POST Error Messages**

When the server detects an error during POST, it will notify you of the occurrence in the following manners:

- Displays an error message on the display unit.

These notification methods are described in “POST Error Messages” (Page 7-4).

---

**IMPORTANT:**

Before you contact your sales agent, write down the error messages. They will serve as helpful information at the time of maintenance.

---

### **CPU/IO Module Status**

The CPU/IO module (0 or 1) started first is managed as primary, and the module started later is managed as secondary. If one CPU/IO module is disconnected because of the failure and others, the other module becomes primary.

The CPU/IO module to be started first is selected depending on the primary/secondary status of modules when the server was shut down the last time. When the server is started for the first time after power OFF, the CPU/IO module which was powered ON first becomes primary.

The following devices are connected to the primary CPU/IO module by the hardware switch.

However, those are not for duplication, which requires attention upon operation.

- VGA (display)
- USB device (keyboard, mouse, floppy disk drive)

Also, only the optical disk drive on primary CPU/IO module can be used.

### **Notes on VGA (display)**

VGA is connected to the primary CPU/IO module by the hardware switch upon starting. When the primary CPU/IO module is disconnected because of a failure, the screen blacks out without switching to the other CPU/IO module.

### **Notes on USB device**

A USB device can be used before the ft control software is installed. After the ft control software is installed, a USB device can be used only when the following is selected in Grub menu upon starting ESX Server. When you select others, a USB device cannot be used.

[Grub menu]

Service Console only (troubleshooting mode) (USB enabled)

### **Notes on optical disk drive**

Only the optical disk drive on the primary CPU/IO module can be used. If the primary CPU/IO module is disconnected because of a failure, it is not switched to the other CPU/IO module, resulting in that the optical disk drive cannot be accessed thereafter. Use of optical disk drive in normal operation is not recommended. Do not operate the server while using the optical disk drive, such as mounting on service console or allocating to guest OS.

When an optical disk drive is used during the system operation, the product may not work properly. If an optical disk drive is used, remove the mounted / allocating optical disk drive and reboot the system.

## **Floppy Disk Drive (Option)**

If you want to use a floppy disk drive with this server, connect N8160-74USB FDD UNIT, which are available optionally to a USB connector. This server supports 3.5-inch 2HD (1.44 MB) and 2DD (720KB) floppy disks.

---

### **CHECK:**

A USB device is connected to the primary CPU/IO module by hardware switch. However, it is not for duplication, which requires attention upon operation. A USB device can be used before the ft control software is installed. After the ft control software is installed, a USB device can be used only when the following is selected in Grub menu upon starting ESX Server. When you select others, a USB device cannot be used.

[Grub menu]

Service Console only (troubleshooting mode) (USB enabled)

---

## **Insert/Remove Floppy Disk**

Before inserting a floppy disk into the drive, make sure that NEC Express5800/ft series is on (the POWER LED illuminates).

Insert a floppy disk into the drive firmly until it snaps in place. The eject button of the drive is then raised slightly.

---

### **CHECK:**

- You cannot use 1.2 MB-formatted disks.
  - If you insert an unformatted disk, you will see a message that the disk cannot be read or that needs formatting. To format a floppy disk, see your OS manual.
  - If you power on or restart NEC Express5800/ft series with a floppy disk left in the drive, the server will access the floppy disk to start the system. Unless a system exits on the FD, the server will be unable to start.
- 

To remove a floppy disk from the drive, press the eject button.

---


### **CHECK:**

- Before removing a floppy disk, make sure that the floppy disk access LED is off. If you eject a floppy disk while the LED is on, the stored data could be damaged.
  - When using a USB floppy disk drive, the access to the floppy disk is delayed on rare occasions if the display graphic load is high because a moving picture is being played. In such a case, retry the operation with the floppy disk inside the floppy disk drive.
-

## Use of Floppy Disk

You may need to store important data on a floppy disk. Since the floppy disk is a very delicate medium, you must handle it with extra care:

- Push the floppy disk gently into place.
- Attach the label on a proper position.
- Do not use a pencil or ballpoint pen to write on the floppy disk.
- Do not open the protective shutter.
- Do not use the floppy disk in a dusty place.
- Do not place anything on the floppy disk.
- Do not leave the floppy disk in a place that is subject to direct sunlight or high temperatures (e.g., near a heater).
- Keep away from cigarette smoke.
- Do not leave the floppy disk near water or chemicals.
- Keep away from magnetic objects.
- Do not clip disks. Be careful not to drop.
- Store floppy disks in a protective case where they are kept away from magnetic waves or dust.
- To prevent data from being erased accidentally, the floppy disk has a write-protect notch. When the disk is write-protected, you can read data, but you cannot write to or format the disk. It is recommended that you write-protect floppy disks that contain important data except when you write data to the floppy disk. To write-protect a 3.5-inch floppy disk, slide the write-protect notch located on its back.

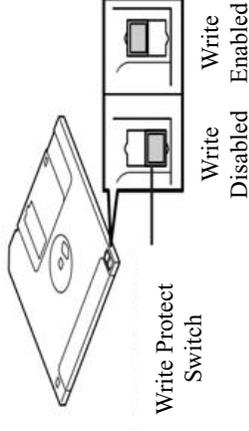

- The floppy disk is a very delicate storage medium. Dust or changes in temperature could cause data to be lost. Data loss could also be caused by faulty operation and computer trouble. To avoid such possible data loss, it is recommended that you back up important data regularly. (Be sure to make back-up copies of the floppy disks that are included with NEC Express5800/ft series.)

## Optical Disk drive



NEC Express5800/ft series has an optical disk drive on the front panel. It is a device used to read data from an optical disk (compact disc read-only memory). Compared to a floppy disk, an optical disk allows for larger volume and fast data readout.

	<b>CAUTION</b>
<p>Observe the following instructions to use the server safely. There are risks of a burn, injury, or damage to physical assets. For details, see “PRECAUTIONS FOR SAFETY” in Chapter 1.</p> <ul style="list-style-type: none"><li>■ Do not leave the optical disk drive tray ejected.</li></ul>	


### Insert/Remove DVD-ROM

Follow the steps below to set an optical disk.

1. Before you insert an optical disk, make sure that the server is powered on. When the server is powered on, the LED illuminates in green.
2. Press the tray-eject button located in the front of the optical disk drive. The tray is then ejected.
3. Hold the optical disk with its signaling side facing the tray.

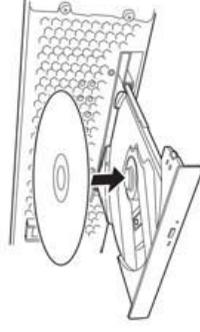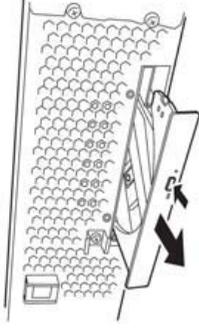

5. Push the front side of the tray gently to the drive-closed position.

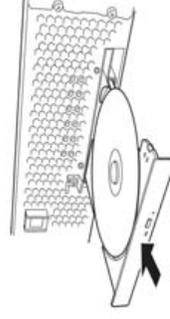

---


#### **IMPORTANT:**

If you hear noise while running the optical disk drive, reset the optical disk.

---

To remove the optical disk, press the tray-eject button as you did in setting the optical disk.

When the access LED illuminates in green, it indicates the optical disk is being accessed. Make sure the access LED is not illuminating in green before you press the tray-eject button.

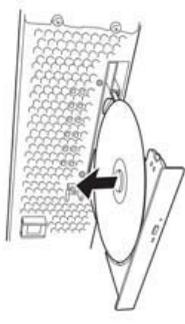


Press the locking part in the center of the tray and pick the optical disk gently. When you have removed the optical disk, push the tray to the drive-closed position.

### When you cannot eject a DVD/CD-ROM

When you cannot eject the optical disk from the server even by pressing the eject button, follow the steps below to eject it:

1. Press the POWER switch to power off this server (i.e. the POWER LED is off).
2. Use a metal pin of about 1.2 mm in diameter and 100 mm long (alternatively, you can use a fairly large paper clip after straightening). Insert it gently into the manual release hole located at the low front side of the server until the tray is ejected.

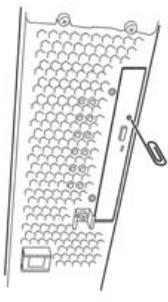

---

### IMPORTANT:

- Do not use a toothpick, plastic pin, or other breakable objects.
- If you cannot eject the optical disk by following the steps above, contact your sales agent.

3. Hold the tray and pull it out.
4. Take out the optical disk.
5. Push the tray back.

## Handling Optical Disks

Observe the following when you use an optical disk on NEC Express5800/ft series:

- As for a disk such as a noncompliant “copy-protected CD,” we shall not guarantee that you can use a CD player to play it with this server.
- Be careful not to drop the optical disk.
- Do not bend or place anything on the optical disk.
- Do not attach labels on the optical disk.
- Do not touch the signal side (blank side).
- Place the optical disk gently on the tray with the printed side up.
- Do not scratch, or use a pencil or ballpoint pen to write on the optical disk.
- Keep away from cigarette smoke.
- Do not leave the optical disk in a place that is subject to direct sunlight or high temperatures (e.g., due to a heater).
- If the optical disk becomes dirty with dust or fingerprints, wipe it gently from its center to edge with a dry soft cloth.
- When you clean the optical disk, use the cleaner expressly meant for it. Do not use a record cleaner (spray), benzine, or thinner.
- Store the optical disk in a protective case when not in use.

# Chapter 3

---

## ESX Server Operation and Configuration

This chapter describes setup and operation specific to NEC Express5800/ft series on ESX Server. CPU/IO module has a processor function part and IO function part. In utilities in this chapter, the processor function part is referred to as CPU module and IO function part PCI module.

## DUAL LAN CONFIGURATION

The operable network configuration is described here.

### Functional Overview

Duplicating a LAN is achieved by binding multiple adapters to the same virtual switch (NIC teaming). If an uplink adapter fails, it switches to another adapter to continue the operation.

### Operable Network Configuration

For NEC Express5800/ft series, network interface names are based on the naming convention as described in the table below. Network duplication is achieved by pairing network interfaces of PCI slots in CPU/IO module 0 and network interfaces in the same PCI slots in CPU/IO module 1 (i.e. Two network interfaces are bound to a switch). You can configure the setting of and check the network interfaces from VI client. For more specific setting method, see VMware Infrastructure *Server Configuration Guide*.

#### PCI slot and network interface name

PCI slot	Port	CPU/IO module 0	CPU/IO module 1
On Board	#1	vmnic 100200 (1)	vmnic 110200 (1)
	#2	vmnic 100201 (2)	vmnic 110201 (2)
PCI-X slot 1	#1	vmnic 100600 (3)	vmnic 110600 (3)

\*The number enclosed with brackets in the CPU/IO module column is slot numbers allocated by vndctl described later. The numbers from 1 to 8 are allocated to the interface names in alphabetical order.


## CHECK THE DUPLICATING OPERATION OF MODULES

This section describes how to check if the system runs properly after system installation or reinstallation. CPU/IO module has a processor function part and IO function part. Each part is monitored and managed by the module. In this section, the processor function part is referred to as CPU module and IO function part PCI module.

### Evaluate Startup and Stop of PCI Modules

This section describes how to confirm the continuous system operation by failover after stopping the primary PCI module.

1. Check which is the primary PCI module.  
The PCI module with the POWER switch illuminated is the primary module.
2. Check that the PCI modules are duplicated.  
To check if the PCI modules are duplicated, see the CPU/IO modules' status LEDs.

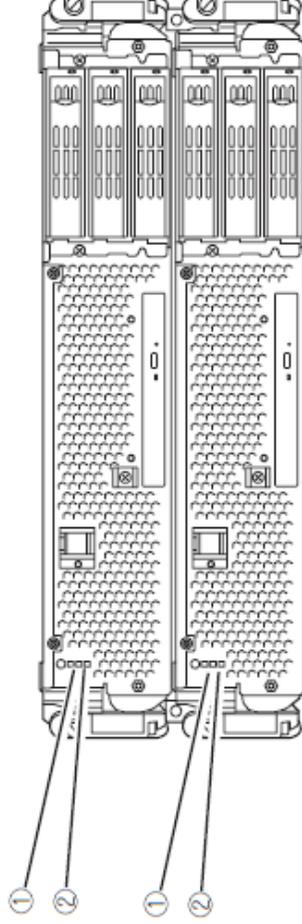

[Indications of the status LEDs when PCI modules are duplicated]


LED	Primary	Secondary
1 CPU/IO module status LED1	-	-
2 CPU/IO module status LED2	Green	Green

\* The numbers in the table correspond to the numbers in the above figure.


### 3-4 ESX Server Operation and Configuration

---

3. Stop the operation of a PCI module using the ft server utility.  
Move to the directory where the ft server utility of NEC ESMPRO Agent is installed.  
# cd /opt/nec/esmpro\_sa/bin/  
Start the ft server utility.  
# ./ESMfcutil  
The screen of the ft server utility will appear.

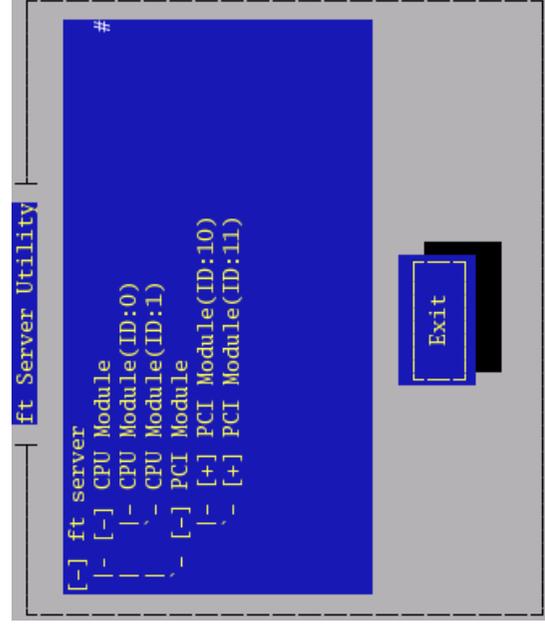

Select [ftServer] - [PCI Module] - [primary PCI Module (\*)]. The screen of the PCI Module will appear.

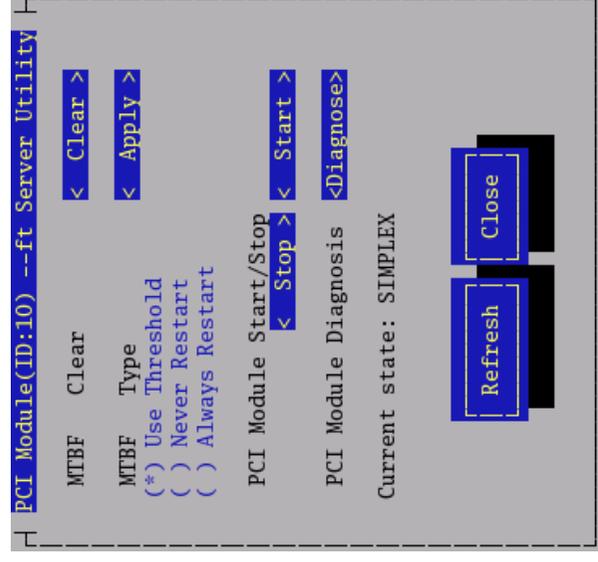

Select [PCI Module Start/Stop] - [Stop] to the stop of the PCI Module.

- \* As for the primary PCI module (\*), if the PCI module 0 is primary, select [PCI Module(ID:10)]. If the PCI module 1 is primary, select [PCI Module (ID:11)].
- When you stop the operation of the primary PCI module, a failover occurs and the secondary PCI module becomes the primary module.

When you stop the PCI module and a failover occurs, the following event or change will occur:

- The screen of the server turns black and nothing is displayed thereafter (this is not a failure).
- The DVD-ROM drive becomes unable to use (this is not a failure).
- The status LEDs of the PCI module change as follows.

**[Indications of the status LEDs]**

	<b>LED</b>	<b>Secondary*</b>	<b>Primary*</b>
1	CPU/IO module status LED1	Amber	-
2	CPU/IO module status LED2	-	Green blinking

\*indicating primary or secondary after failover

**4.** Restart the PCI module.

From the fit server utility, click [Start] of [Start/Stop] to the PCI module which was stopped in the step 3, and the PCI module will be started. Once the PCI module is started, PCI module diagnosis and PCI module duplication are performed.

The PCI modules' status LEDs changes as shown below:

**[Indications of the status LEDs]**

Immediately after the PCI module startup until the completion of diagnosis

	<b>LED</b>	<b>Secondary</b>	<b>Primary</b>
1	CPU/IO module status LED1	-	-
2	CPU/IO module status LED2	-	Green blinking




When duplication of disks is started after the completion of PCI module diagnosis

	<b>LED</b>	<b>Secondary</b>	<b>Primary</b>
1	CPU/IO module status LED1	-	-
2	CPU/IO module status LED2	Green blinking	Green blinking

## Evaluate Start and Stop of CPU Modules

This section describes how to confirm the continuous system operation after stopping one of the CPU modules.


1. Confirm that the CPU modules are duplicated.  
To check if the CPU modules are duplicated, see the status LEDs of the CPU modules.

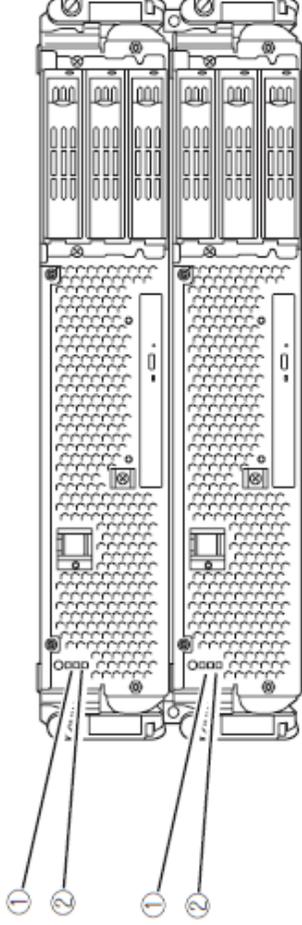


### [Indications of status LEDs when CPU modules are duplicated]

LED	CPU module 0 (Operating)	CPU module 1 (Operating)
1 CPU/IO module status LED1	-	-
2 CPU/IO module status LED2	Green	Green

2. Use the ft server utility to stop the operation of the CPU module to be removed.  
Move to the directory where the ft utility of NEC ESMPRO Agent is installed.  
# cd /opt/nec/esmpro\_sa/bin/  
Start the ft server utility.  
# ./ESMfctutil  
The screen of the ft server utility will appear.

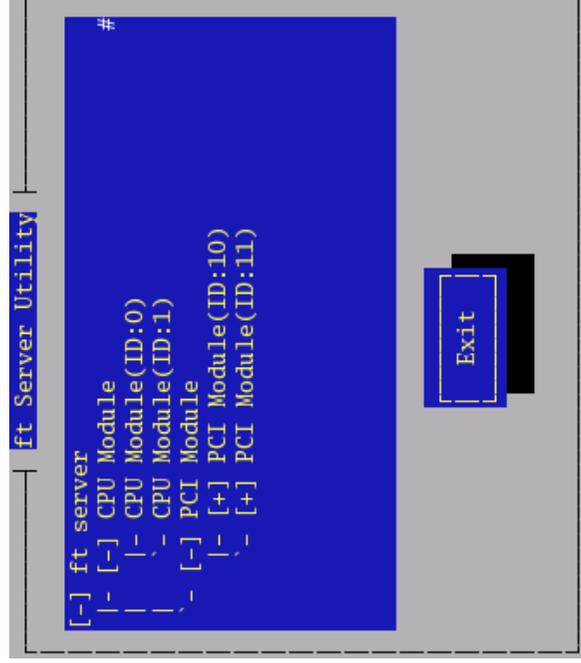

Select [ftServer] - [CPU Module] - [(primary)CPU Module(\*)]. The screen of the CPU Module(to be removed) will appear.

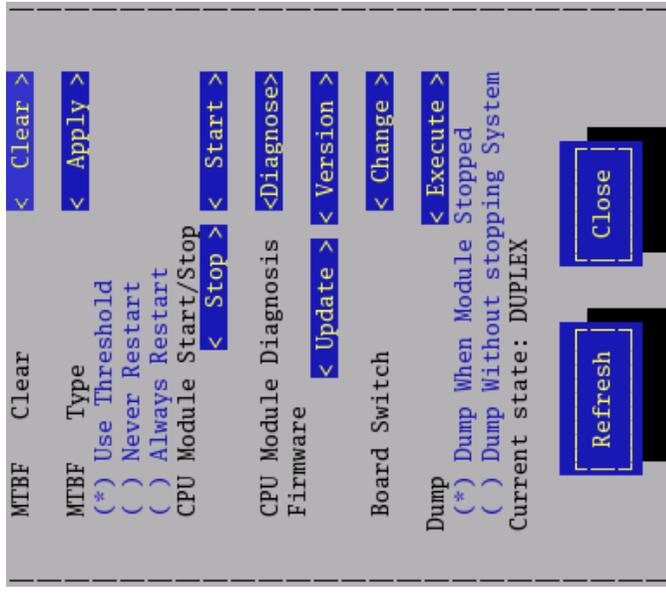

Select [CPU Module Start/Stop] - [Stop] to the stop of the CPU Module.

\*As for the CPU module to be stopped, select [CPU Module(ID:0)] to stop CPU module 0, select [CPU Module(ID:1)] to stop CPU module 1.

When the CPU module is stopped, the status LEDs change as follows. This indicates that one CPU module is operating now.

**[Indications of status LEDs during diagnosis]**

LED	Secondary*	Primary*
1 CPU/IO module status LED1	Amber	-
2 CPU/IO module status LED2	-	Green blinking

\*Here, an example where CPU module 0 is stopped is shown.

3. Start the stopped CPU module.  
In the ft server utility, select the CPU module stopped in step 2 and click [Start] of [CPU Module Start/Stop].  
Once the CPU module is started, hardware diagnosis and then the duplication process are performed.  
Note that the system is paused temporarily for copying memory during memory synchronization.

**[Indications of status LEDs during diagnosis]**

LED	CPU module 0 (Started)	CPU module 1 (Operating)
1 CPU/IO module status LED1	-	-
2 CPU/IO module status LED2	-	Green blinking

**[Indications of status LEDs after completion of duplication]**

LED	CPU module 0 (Operating)	CPU module 1 (Operating)
1 CPU/IO module status LED1	-	-
2 CPU/IO module status LED2	Green	Green

---

**IMPORTANT:**

After duplication is completed, the status of memory will be checked.

Wait until this process ends to perform the next step (evaluation of start and stop of PCI and CPU modules). When the process completes, the following event log will be output:

Kernel: EVLOG: INFORMATION – Memory consistency check has completed memory scan.

---

# Chapter 4

---

## System Configuration

This chapter describes Basic Input Output System (BIOS) configuration.

When you install the NEC Express5800/ft series for the first time or install/remove optional devices, thoroughly read this chapter for better understanding and correct setups.

## SYSTEM BIOS – SETUP –

The SETUP utility is provided to make basic hardware configuration for the server. This utility is pre-installed in the flash memory of the server and ready to run.

---

### **IMPORTANT:**

- Change the setting of the SETUP if needed referring to this chapter since the status of SETUP by factory default is not most typical and appropriate for the server.
  - The SETUP utility is intended for system Administrator use only.
  - The SETUP utility allows you to set a password. The server is provided with two levels of password: Supervisor and User. With the Supervisor password, you can view and change all system parameters of the SETUP utility. With the User password, system parameters available for viewing and changing are limited.
  - Do not set any password before installing the OS.
  - The server contains the latest version of the SETUP utility. Dialog boxes appearing on your SETUP utility, thus, may differ from descriptions in this User's Guide. If you find anything unclear, see the online help or ask your sales agent.
-

## **Starting SETUP Utility**

Powering on the server starts POST (Power On Self-Test) and displays its check results. If the NEC logo is displayed, press **Esc**.

After a few seconds, either of the following messages appears at bottom left on the screen depending on your system configuration.

Press <F2> to enter SETUP

Press <F2> to enter SETUP or Press <F12> to boot from Network

You may see either of the following messages at bottom left on the screen when POST terminates.

Press <F1> to resume, <F2> to SETUP

Press **F2** to start the SETUP utility and display its Main menu.

If you have previously set a password with the SETUP utility, the password entry screen appears. Enter the password.

Enter password:|

Up to three password entries will be accepted. If you fail to enter the password correctly for three consecutive times, the server halts. (You can no longer proceed.) Power off the server.

---

### **TIPS:**

The server is provided with two levels of password: Supervisor and User. With the Supervisor password, you can view and change all system configurations. With the User password, the system configurations you can view or change are limited.

---

## Description of On-Screen Items and Key Usage

Use the following keyboard keys to work with the SETUP utility. (Key functions are also listed at the bottom of the screen.)

Shows the current menu.

Options to be configured

Denotes there are submenus

Online help window

Parameters (selected parameters are highlighted)

Explanation of keys

**Cursor** (↑, ↓):

Selects an item on the screen. The highlighted item is currently selected.

**Cursor** (←, →):

Selects the Main, Advanced, Security, Server, Boot, or Exit menu. Changes the value (parameter) of the selected item to the previous value.

**+**

Changes the value (parameter) of the selected item to next value.

**Enter**

Displays a submenu or chooses the selected parameter. Displays the previous screen.

**Esc**

Press **F1** when you need help on SETUP operations. The help screen for SETUP operations appears. Press **Esc** to return to the previous screen.

**F9:**

Shows the following:

```
Setup Confirmation
Load default configuration now?
[Yes] [No]
```

If you select “Yes” and then press the **Enter** key, all items in the setup are set to default values. If you select “No” and then press either the **Enter** or **Esc** key, the status before pressing the **F9** key is restored.

**F10:**

Shows the following:

```
Setup Confirmation
Save Configuration changes and exit now?
[Yes] [No]
```

If you select “Yes” and then press the **Enter** key, the setup will complete with all changes you have made saved. If you select “No” and then press either the **Enter** or **Esc** key, the status before pressing the **F10** key is restored.

## **Configuration Examples**

The following describes examples of configuration required to use software-link features or for system operations.

### **UPS**

#### **To link power supply with the UPS**

- To power on the server when power is supplied from the UPS  
Select [Server] - [AC-LINK] - [Power On].
- To keep the server off-powered even when power is supplied from the UPS if the POWER switch was used to power off  
Select [Server] - [AC-LINK] - [Last State].
- To keep the server off-powered even when power is supplied from the UPS  
Select [Server] - [AC-LINK] - [StayOff].
- To have enough time to initialize Fibre Channel disk and Fibre Channel switch and so on  
Adjust [Server] - [Power On Delay Time].

### **Keyboard**

#### **To set Num Lock**

Select [Advanced] - [I/O Device Configuration] - [NumLock]

### **Security**

#### **To set passwords on the BIOS level**

Select [Security] - [Set Supervisor Password] and enter a password.

Select [Security] - [Set User Password] and enter a password.

Set Supervisor password first, then User password.

### **Optional PCI-related devices**

#### **To enable Option ROM of the PCI card (option) installed on the server**

Select [Advanced] - [Option ROM Configuration] - [PCI Slot n (...)] - [Enabled].

n: Slot number to install the board

## Boot

### To change the boot order of devices connected to the server

Select [Boot] and specify the boot order.

### To display POST check results

Select [Advanced] - [Boot-time Diagnostic Screen] - [Enabled].

You can also press **Esc** while the NEC logo is on the screen to display POST check results.

### To control from the HW console

- Remote operation via Serial  
Select [Server] - [Console Redirection], and make necessary settings.

## Memory

### To check the installed memory (DIMM) status:

Select [Main] - [System Memory] and [Extended Memory] and check the status indications.

## Saving the Configuration Data

### To save the BIOS configuration data

Select [Exit] - [Exit Saving Changes]

### To discard changes to the BIOS configuration data

Select [Exit] - [Exit Discarding Changes]

### To restore the default BIOS configuration data (the data may differ from the factory preset)

Select [Exit] - [Load Setup Defaults].

## Menu and Parameter Descriptions

The SETUP utility has the following six major menus:


- Main
- Advanced
- Security
- Server
- Boot
- Exit

To configure detailed settings of functions, select a submenu from the above menus. Below describes configurable functions and parameters and the factory settings displayed in the screen for each menu.

### Main

Start the SETUP utility to display the Main menu.

When you select a menu with the “▶” mark and press the **Enter** key, its submenu appears.  
<Example>

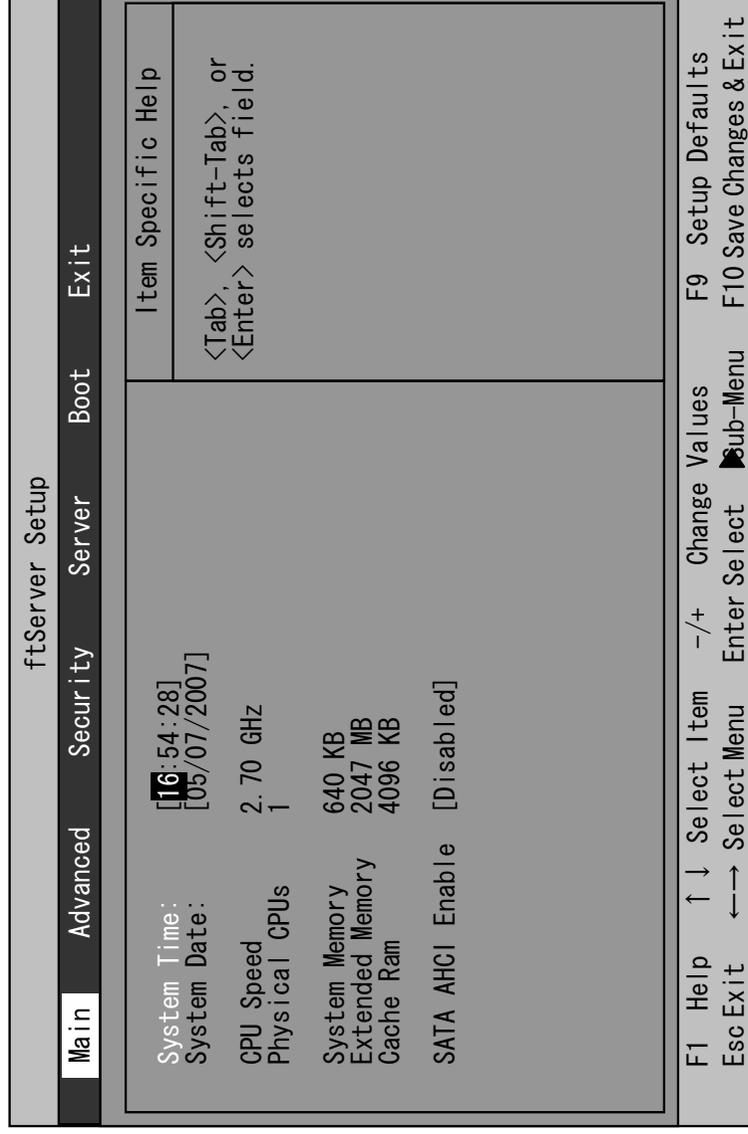

Available options in the Main and descriptions are listed below.

Option	Parameter	Description
System Time	HH:MM:SS	Specify the system time.
System Date	MM/DD/YYYY	Specify the system date.
CPU Speed	XXXX MHz	Displays the processor clock frequency.
Physical CPUs	X	Displays the number of processor installed.
System Memory	XXXX KB	Displays the size of system memory.
Extended Memory	XXXX MB	Displays the size of extended memory.
Cache Ram	XXXX KB	Displays the capacity of L2 cache.
SATA AHCI Enable	[Disabled] Enabled	Specify whether or not to enable AHCI mode.

[ ] factory default

### **IMPORTANT:**

Check and adjust the system clock before operation in the following conditions.


- After transporting the equipment
- After storing the equipment
- After the equipment halt under the conditions which is out of the guaranteed environment conditions (Temperature: 10 to 35°C, Humidity: 20 to 80%).

Check the system clock once in a month. It is recommended to operate the system clock using a time server (NTP server) if it is installed on the system which requires high level of time accuracy. If the system clock goes out of alignment remarkably as time goes by, though the system clock adjustment is performed, contact your sales agent.

Do not change "SATA AHCI" as "Enabled." The BIOS version may become unable to display on the ft Server Utility.

### Advanced

Move the cursor onto “Advanced” to display the Advanced menu. Select an option with the “▶” mark and press **Enter** to display its submenu. Display each sub menu and make settings on the sub menu screen.

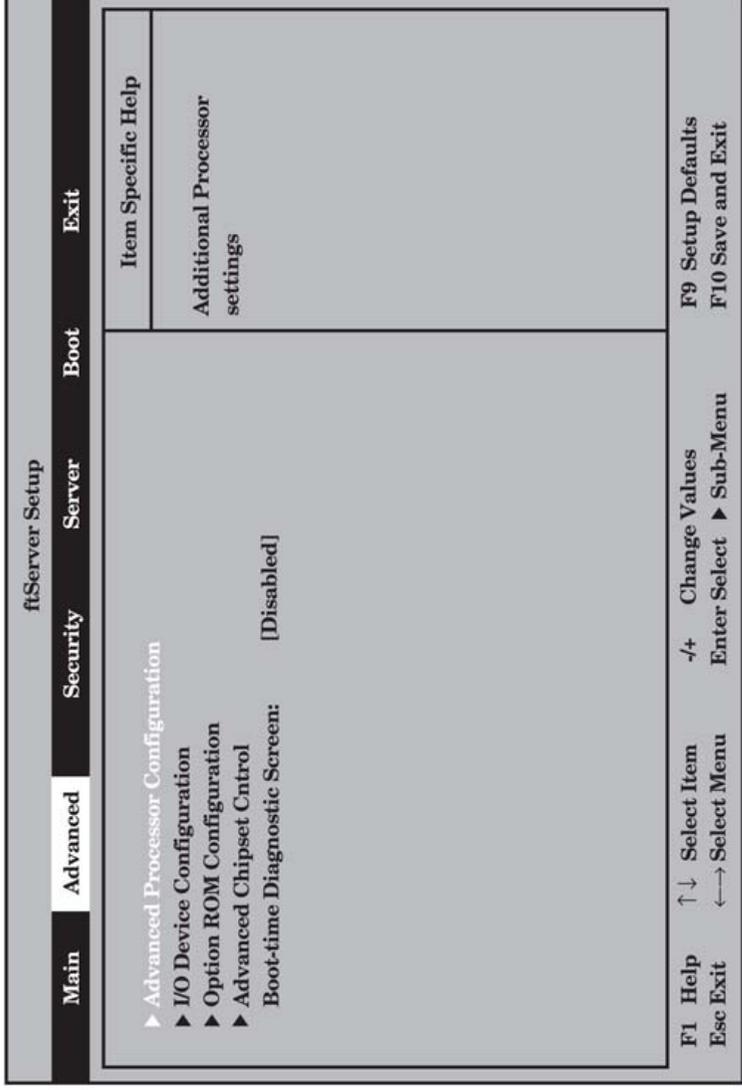


See the table below for setup options on the screen.

Option	Parameter	Description
Boot-time Diagnostic Screen	[Disabled] Enabled	Specify whether to display the Power On Self-Test (POST) screen at start-up. If “Disabled” is selected, the NEC logo appears while POST is in progress. (To display POST check results, press <b>Esc</b> .)

[ ] : factory default

## Advanced Processor Configuration

When you select “Advanced Processor Configuration” in the Advanced menu, the following screen appears.

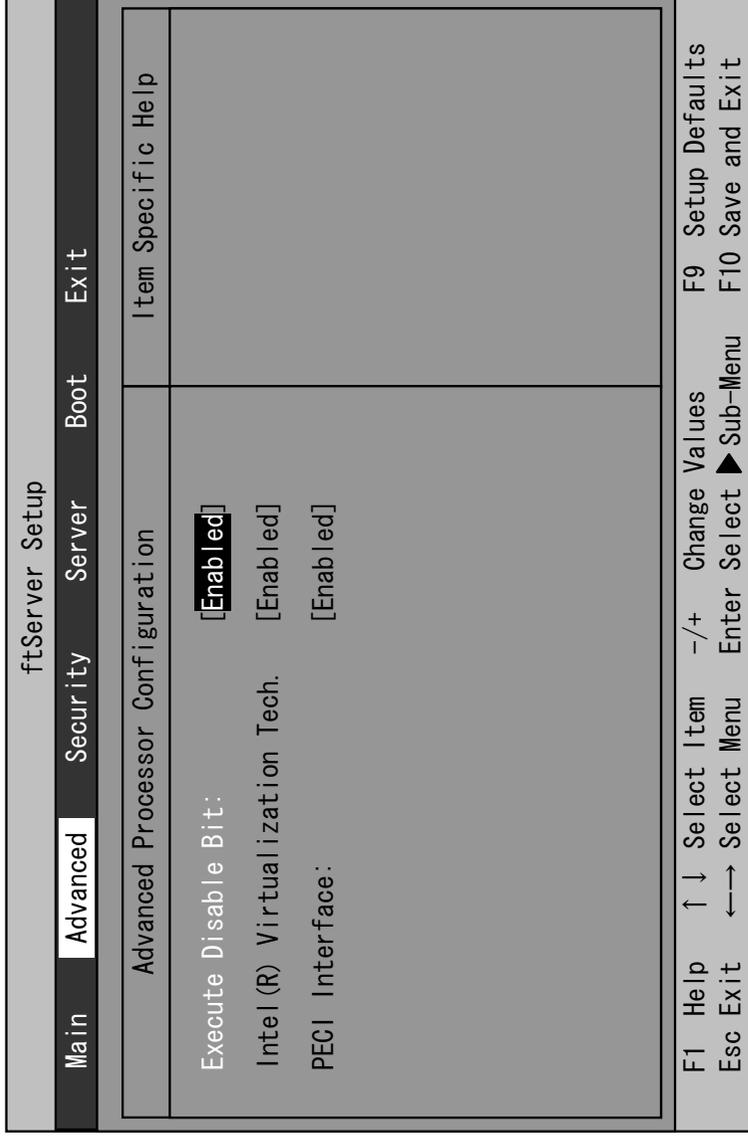

Refer to the table below for information on options.

Option	Parameter	Description
Execute Disable Bit	[Enabled] Disabled	Specify whether or not to enable Execute Disable Bit feature.
Intel(R) Virtualization Tech	[Enabled] Disabled	Specify whether or not to enable Intel Virtualization Technology feature.
PECI Interface	[Enabled] Disabled	Specify whether or not to enable Platform Environment Control Interface feature.

[ ]: factory default

## I/O Device Configuration

When you select “I/O Device Configuration” in the Advanced menu, the following screen appears. If you select a menu with the “▶” mark and press **Enter**, its submenu appears.

ftServer Setup			
Main	Advanced	Security	Server Boot Exit
I/O Device Configuration		Item Specific Help	
Serial Port1: Base I/O address: Serial Port 1 Connection: Serial Port2: Base I/O address:	[Enabled] [3F8/IRQ 4] [Serial Connector] [Enabled] [2F8/IRQ 3]	Configure Serial Port 1 using options: [Disabled] No configuration [Enabled] User configuration [Auto] BIOS or OS chooses configuration	
Serial Port2 Sharing	[Disabled]		
Keyboard Features:			
NumLock:	[Off]	NOTE: Serial Port 1 may not be routed to the Modem if a VTM is present.	
F1 Help	↑ ↓ Select Item	-/+ Change Values	F9 Setup Defaults
Esc Exit	← → Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit

Refer to the table below for information on options.


Option	Parameter	Description
Serial Port 1	Enabled [Disabled] Auto	Specify whether or not to enable Serial Port 1.
Base I/O address	[3F8/IRQ4] 2F8/IRQ3 3E8/IRQ4 2E8/IRQ3	Specify the I/O address and IRQ of Serial Port 1.
Serial Port 1 Connection	[Serial Connector] Internal Modem	Specify Serial Connector or Internal Modem for Serial Port 1 connection.
Serial Port 2	Enabled [Disabled] Auto	Specify whether or not to enable Serial Port 2.
Base I/O address	3F8/IRQ4 [2F8/IRQ3] 3E8/IRQ4 2E8/IRQ3	Specify the I/O address and IRQ of Serial Port 2.
Serial Port 2 Sharing	Enabled [Disabled]	Specify whether or not to use Serial Port 2 in BMC.

Keyboard Features		Display only.
NumLock	AUTO On [Off]	Specify whether or not to enable NumLock at system startup.

[ ]: factory default

## Option ROM Configuration

When you select “Option ROM Configuration” in the Advanced menu, the following screen appears.

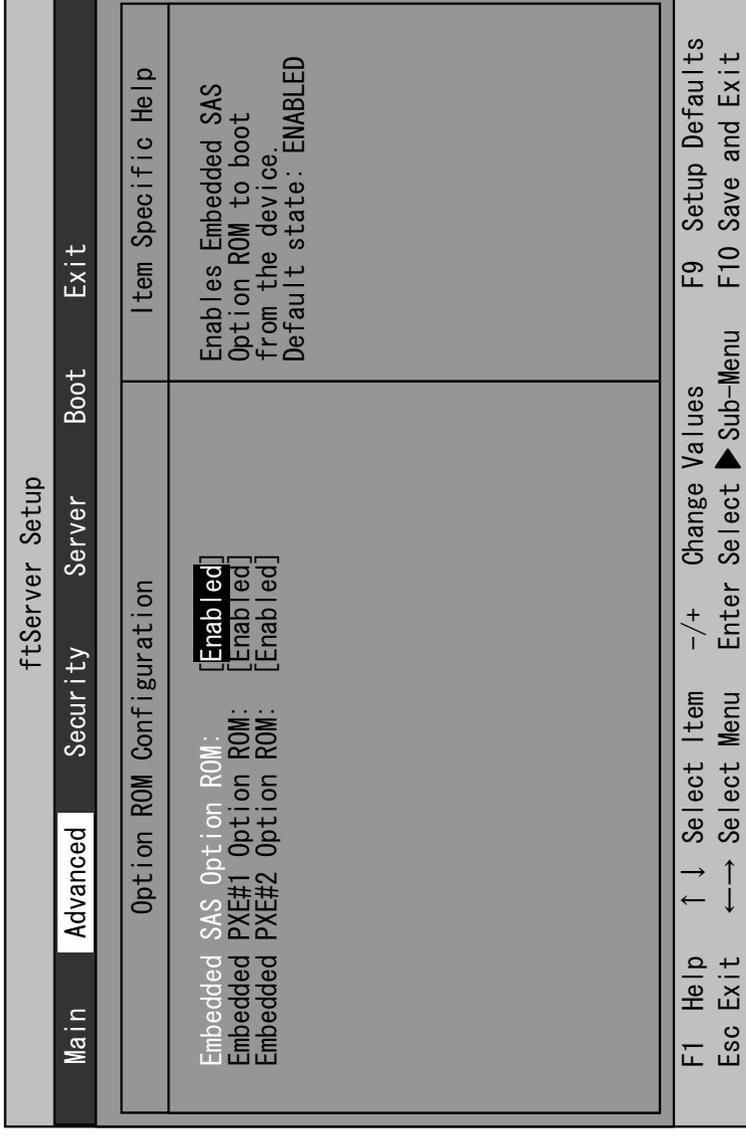

Refer to the table below for information on options.


Option	Parameter	Description
PCI Slot 1 (onboard) Option ROM	Enabled [Disabled]	If “Enabled” is selected, the extended ROM of the PCI card installed on PCI Slot 1 is initialized. Note: this option is displayed only when a PCI card is installed.
PCI Slot 2 (lower) Option ROM	Enabled [Disabled]	If “Enabled” is selected, the extended ROM of the PCI card installed on PCI Slot 2 is initialized. Note: this option is displayed only when a PCI card is installed.
PCI Slot 3 (upper) Option ROM	Enabled [Disabled]	If “Enabled” is selected, the extended ROM of the PCI card installed on PCI Slot 3 is initialized. Set this option to “Enabled” for the server.
Embedded SAS Option ROM	[Enabled] Disabled	If “Enabled” is selected, SAS extended ROM embedded in the motherboard is initialized. Set this option to “Disabled” for the server.

Option	Parameter	Description
Embedded PXE#1 Option ROM	[Enabled] Disabled	If “Enabled” is selected, the extended ROM of LAN #1 embedded in the motherboard is initialized.
Embedded PXE#2 Option ROM	[Enabled] Disabled	If “Enabled” is selected, the extended ROM of LAN #2 embedded in the motherboard is initialized.

[ ]: factory default

### Advanced Chipset Control

When you select “Advanced Chipset Control” in the Advanced menu, the following screen appears.

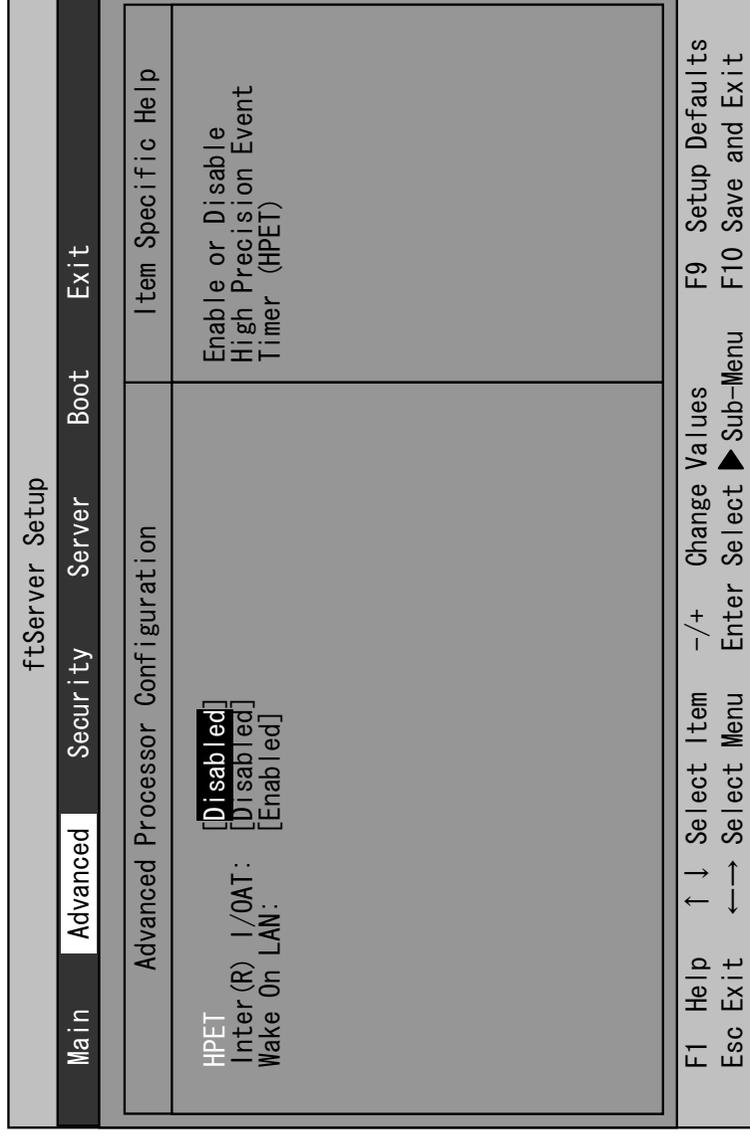

Refer to the table below for information on options.


Option	Parameter	Description
HPET	Enabled [Disabled]	Specify whether or not to enable High Precision Timer feature.
Intel(R) I/OAT	Enabled [Disabled]	Specify whether or not to enable Intel(R) I/O Acceleration Technology feature.
Wake On LAN	[Enabled] Disabled	Specify whether or not to enable network remote power-on feature. [ ]: factory default

**IMPORTANT:**

Wake On LAN environment is unavailable on this server.

## Security


Move the cursor onto “Security” to display the Security menu.

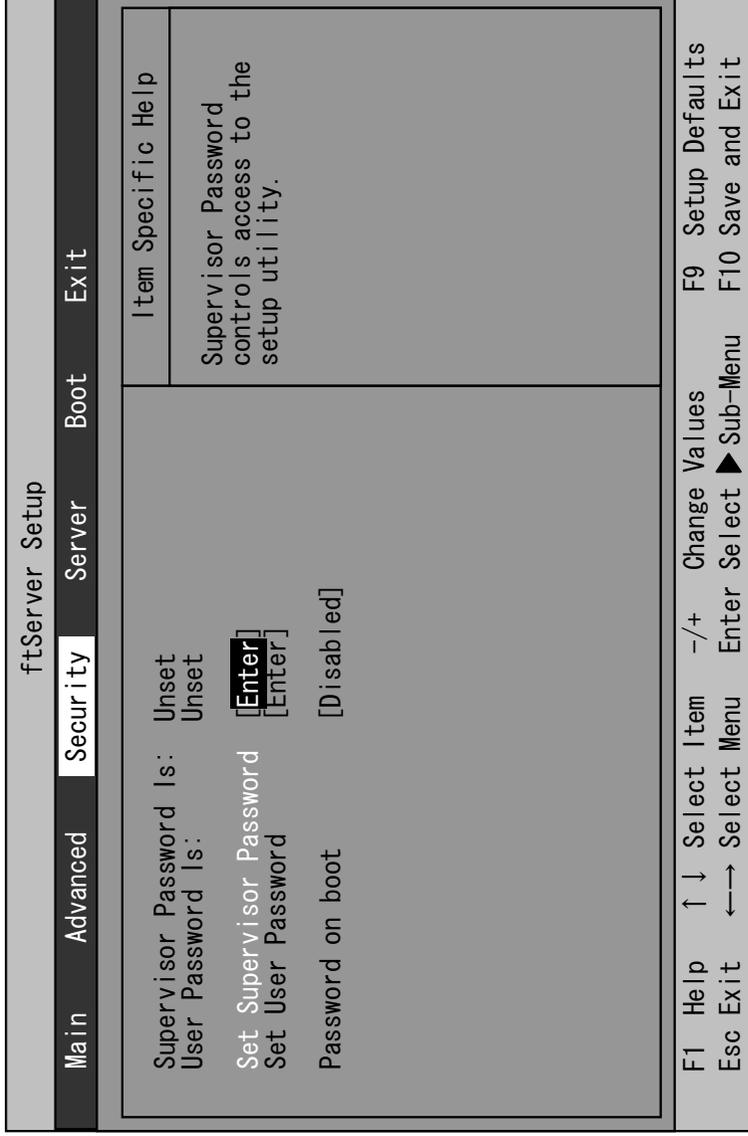

## 4-18 System Configuration

Select “Set Supervisor Password” or “Set User Password” and press **Enter** to display the following pop-up screen. The screen below shows when “Set Supervisor Password” is selected.

Set a password on this pop-up screen. Enter a password of up to seven alphanumeric characters and symbols from the keyboard.

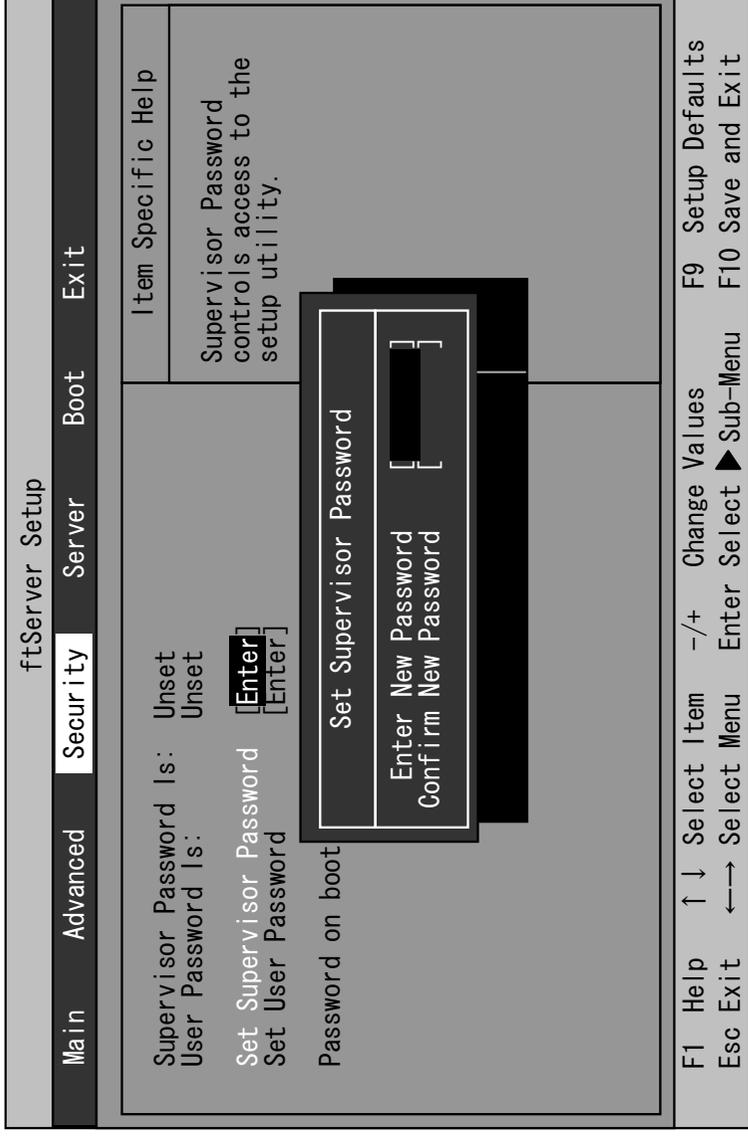

### IMPORTANT:

- User password setup is not available before Supervisor password setup.
- Do not set any password before installing the OS.
- If you forget your password, contact your sales agent.

See the table below for setup options on the screen.

Option	Parameter	Description
Supervisor Password Is	[Unset] Set	Indicates Supervisor password setup status (view only).
User Password Is	[Unset] Set	Indicates User password setup status (view only).
Set Supervisor Password	[Enter]	Press <b>Enter</b> to display the supervisor password entry screen. This option is available only when you log into the SETUP utility with the supervisor password.
Set User Password	[Enter]	Press <b>Enter</b> to display the user password entry screen. With a user password, accessing the SETUP menus is restricted.

Option	Parameter	Description
Password on boot	[Disabled] Enabled	Specify whether to request a password entry at boot-up. User password setup is required beforehand.

[ ]: factory default

---

**IMPORTANT:**

If you have logged in SETUP by using the Supervisor Password, you can check and change all settings. If you have logged in SETUP by using User Password, you can see the settings but cannot make changes on the settings except System Time, System Date and User Password of Main.

---

## Server

Move the cursor onto [Server] to display the Server menu.

The following describes options you can configure in the Server menu and their functions. Select an option with the “▶” mark and press **Enter** to display its submenu.

ftServer Setup			
Main	Advanced	Security	Server Boot Exit
▶ System Management ▲ Console Redirection ▲ Event Log Configuration ▲ Monitoring Configuration Post Error Pause: [Enabled] AC-LINK: [Last State] Power On Delay Time: [180]		Item Specific Help Additional setup menu to view server management features.	
F1 Help	↑ ↓ Select Item	-/+ Change Values	F9 Setup Defaults
Esc Exit	← → Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit

Refer to the table below for information on options.

Option	Parameter	Description
Post Error Pause	Disabled [Enabled]	Set whether or not to pause POST at the end of POST if an error has occurred during POST execution.
AC-LINK	Stay Off [Last State] Power On	Specify the AC-LINK feature by selecting the status of the power supply unit of the server when the AC power supply restarts. (See the following table for details.)
Power ON Delay Time	[180]-255(s)	Configure the DC-ON delay time if AC-LINK is set to “Power On” or “Last State” (unit: second).

[ ] : factory default

The table below lists how selections for “AC-LINK” determine the power status of the server when the power supply to the server restarts.

State before powered off	Parameter		
	Stay Off	Last State	Power On
In service	Off	On	On
Out of service (DC power: Off)	Off	Off	On
Forced shutdown *	Off	Off	On

\* Pressing the POWER switch for over four seconds shuts down the power to the server.

### System Management

Select “System Management” on the Server menu and press **Enter** to display the following screen.

ftServer Setup

Main	Advanced	Security	Server	Boot	Exit
System Management					
BIOS Version: 3. 7: 07 Board Part #: 243-633088 Board Serial #: 113108030768 System Part #: N8800-122 System Serial #: 9072543618 Chassis Part #: 243-417867-001 Chassis Serial #: 01 BMC Device ID: 26 BMC Device Rev: 01 BMC Firmware Rev: 02. 04 SDR Rev: SDR Version 02. 00 PIA Rev: 01. 20 ASIC Rev: 2030 SMM Rev: 00. 33			Item Specific Help All items on this menu cannot be modified in user mode. If any items require changes, please consult your system Supervisor.		
F1 Help	↑ ↓ Select Item	-/+ Change Values	F9 Setup Defaults		
Esc Exit	← → Select Menu	Enter Select	▶ Sub-Menu	F10 Save and Exit	

See the table below for setup options on the screen.

Option	Parameter	Description
BIOS Version	—	Displays the BIOS revision.
Board Part Number	—	Displays the board information.
Board Serial Number	—	Displays the board information.
System Part Number	—	Displays the system information.
System Serial Number	—	Displays the system information.
Chassis Part Number	—	Displays the chassis information.

## 4-22 System Configuration

---

<b>Option</b>	<b>Parameter</b>	<b>Description</b>
Chassis Serial Number	—	Displays the chassis information.
BMC Device ID	—	Displays the BMC information.
BMC Device Revision	—	Displays the BMC information.
BMC Firmware Revision	—	Displays the BMC information.
SDR Revision	—	Displays the revision of SDR (sensor device information).
PIA Revision	—	Displays the PIA (plat form information) revision.
ASIC Rev	—	Displays the firmware information of the fault-tolerant chipset.
SMM Rev	—	Displays the firmware information of System Management.

[ ]: factory default

## Console Redirection

Select “Console Redirection” on the Server menu and press **Enter** to display the following screen.

ftServer Setup					
Main	Advanced	Security	Server	Boot	Exit
Console Redirection		Item Specific Help			
Com Port Address	[Disabled]				
Baud Rate	[19.2K]				
Console Type	[PC-ANSI]				
Flow Control	[CTS/RTS]				
Console connection:	[Direct]				
Continue C.R. after POST:	[Off]				
F1 Help	↑ ↓ Select Item	-/+	Change Values	F9 Setup Defaults	
Esc Exit	← → Select Menu	Enter	Select ► Sub-Menu	F10 Save and Exit	

See the table below for setup options on the screen.

Option	Parameter	Description
Com Port Address	[Disabled] Serial Port1 Serial Port2	Select a serial port.
Baud Rate	9600 [19.2K] 38.4K 57.6K 115.2K	Select a port rate used for the interface with a hardware console to be connected.
Console Type	VT100 VT100, 8bit PC-ANSI, 7bit [PC-ANSI] VT100+ VT-UTF8	Select a console type.
Flow Control	None XON/XOFF [CTS/RTS]	Select a flow control method.
Console Connection	[Direct] Via modem	Select a connector.
Continue C.R. after POST	[Off] On	Specify whether or not to continue Console Redirection after OS is loaded. [ ]: factory default

## Event Log Configuration

Select “Event log Configuration” on the Server menu and press **Enter** to display the following screen.

ftServer Setup			
Main	Advanced	Security	Server
			Boot
			Exit
Event Log Configuration			
Clear Online Event Logs	[Press Enter]		Item Specific Help
Clear Offline Event Logs	[Press Enter]		The system event log will be cleared if selecting “YES”.
F1 Help	↑ ↓ Select Item	-/+ Change Values	F9 Setup Defaults
Esc Exit	← → Select Menu	Enter Select	F10 Save and Exit
		▶ Sub-Menu	

See the table below for setup options on the screen.

Option	Parameter	Description
Clear Online Event Logs	[Press Enter]	To clear event logs of the working module, press the <b>Enter</b> key and select “Yes.”
Clear Offline Event Logs	[Press Enter]	To clear event logs of the stand-by module, press the <b>Enter</b> key and select “Yes.”

## Monitoring Configuration

Select “Monitoring Configuration” on the Server menu and press **Enter** to display the following screen.

ftServer Setup	
Main	Advanced Security Server Boot Exit
Monitoring Configuration	
FRB-2 Timer	[Enabled]
PCI Enumeration Monitoring:	[Enabled]
PCI Enumeration Monitoring Timeout:	[ 180]
Option ROM Scan Monitoring:	[Enabled]
Option ROM Scan Monitoring Timeout:	[ 300]
OS Boot Monitoring:	[Enabled]
OS Boot Monitoring Timeout:	[ 600]
POST Pause Monitoring:	[Enabled]
POST Pause Monitoring Time-out	[ 180]
F1 Help	↑ ↓ Select Item -/+ Change Values F9 Setup Defaults
Esc Exit	← → Select Menu Enter Select ► Sub-Menu F10 Save and Exit
	Item Specific Help
	Disables/enables the FRB-2 Timer.

Option	Parameter	Description
FRB-2 timer	Disabled [Enabled]	Select whether or not to enable the FRB-2 timer.
PCI Enumeration Monitoring	Disabled [Enabled]	Select whether or not to enable the function to monitor PCI Device scan.
PCI Enumeration Monitoring Timeout	60-[180]-1200	Set the timeout for PCI Device scan. (unit: second)
Option ROM Scan Monitoring	Disabled [Enabled]	Select whether or not to enable the function to monitor the extended ROM scan.
Option ROM Scan Monitoring Timeout	60-[300]-1200	Set the timeout of the extended ROM scan. (unit: second)
OS Boot Monitoring	Disabled [Enabled]	Select whether or not to enable the function to monitor OS boot-up. If you are starting up from an OS with no NEC ESMPRO Agent installed, disable this option. If you use Disaster Recovery Option for ARCServe, select [Disabled].
OS Boot Monitoring Timeout	60-[600]-1200	Set the timeout at OS boot-up. (unit: second)
POST Pause Monitoring	Disabled [Enabled]	Select whether or not to enable the POST monitoring function during boot pause. (unit: second)

## 4-26 System Configuration


---

<b>Option</b>	<b>Parameter</b>	<b>Description</b>
POST Pause Monitoring Time-out	60-[180]-1200	Set the time for POST monitoring during boot pause. (unit: second)  [ ]: factory default

## Boot

Move the cursor onto “Boot” to display the Boot menu.

The server searches for the boot device according to the order specified in this menu and use the software to boot the system if found.

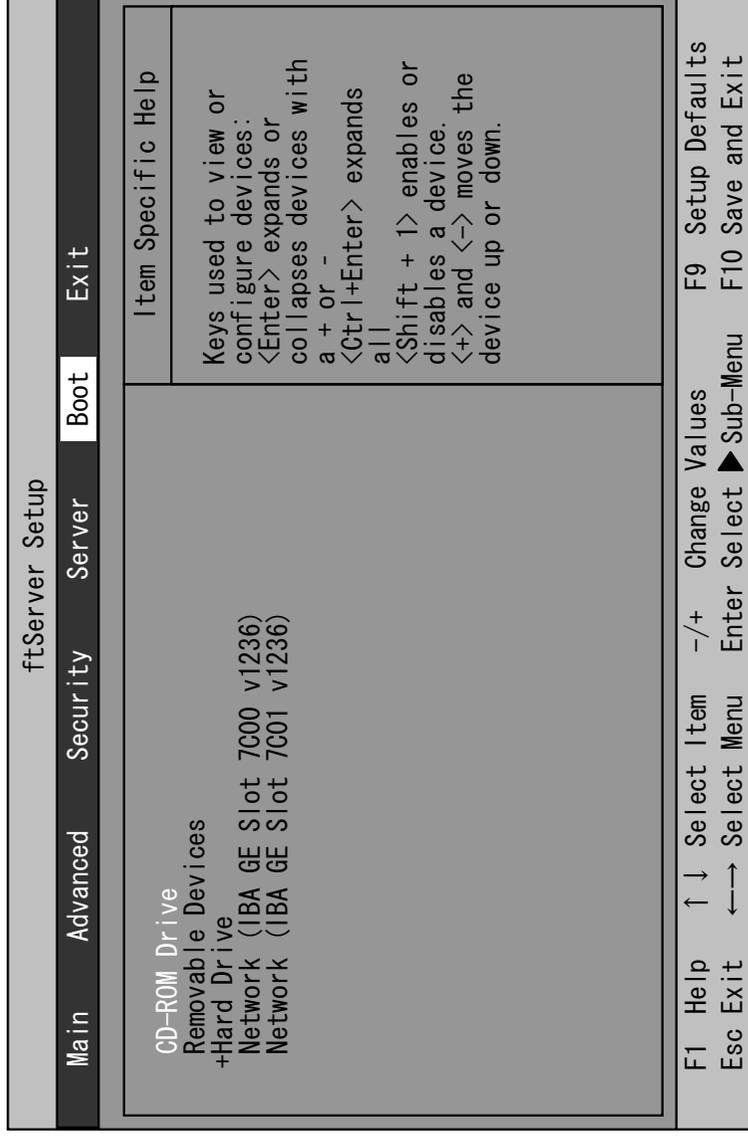


You can change the boot device order using ↑ or ↓ and + or -. Move the cursor to select the device by ↑ or ↓, and then change the priority using + or -.

### IMPORTANT:

Move to set “CD-ROM Drive” above “Hard Drive” when you boot the NEC EXPRESSBUILDER.

### Exit

Move the cursor onto “Exit” to display the Exit menu.

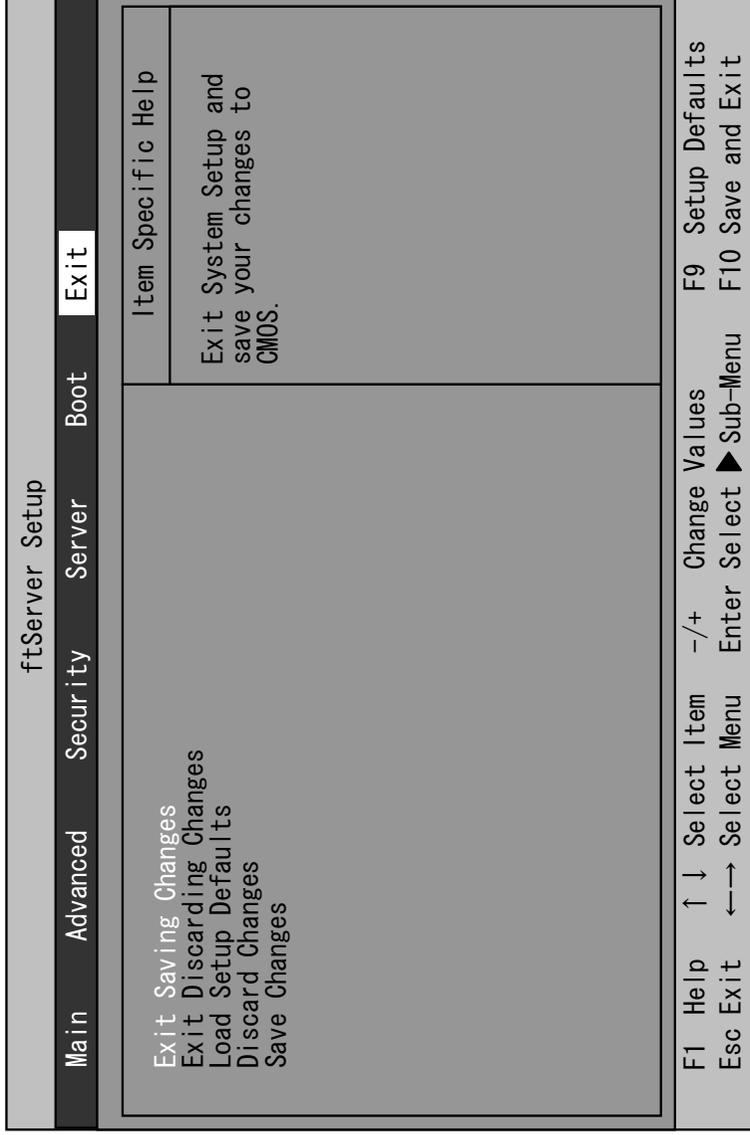


The following describes each option on the Exit menu:

#### Exit Saving Changes


Select this option to save the current configuration data into the CMOS (non-volatile memory) and exit the SETUP utility.

Select “Exit Saving Changes” to display the screen below. Select “Yes” to save the current configuration data into the CMOS (non-volatile memory) and exit the SETUP utility. The server will automatically restart the system.

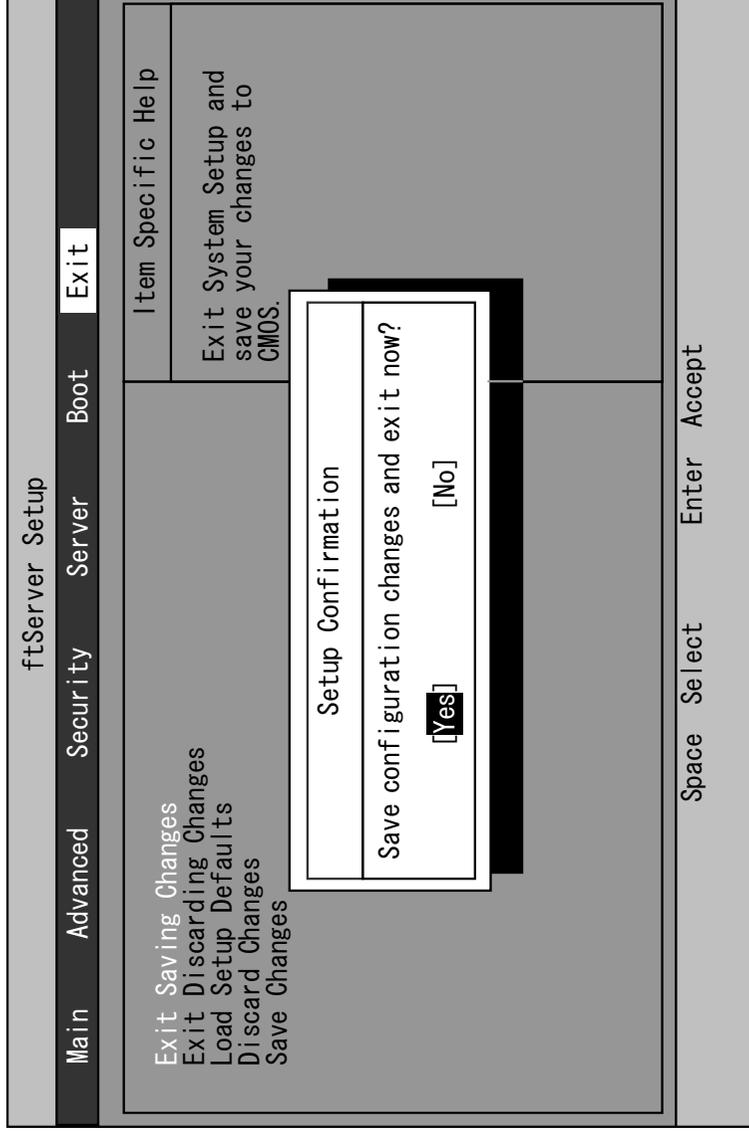


**Exit Discarding Changes**

Select this option to exit the SETUP utility without saving the current configuration data into the CMOS (non-volatile memory). If you select “Yes” here, the “SETUP Warning” dialogue box appears. If you select “No” in the “SETUP Warning” dialogue box, you can exit SETUP without saving the changes you have made. If you select “Yes” in the dialogue box, you can exit SETUP with the changes you have made saved in CMOS. The server reboots automatically.

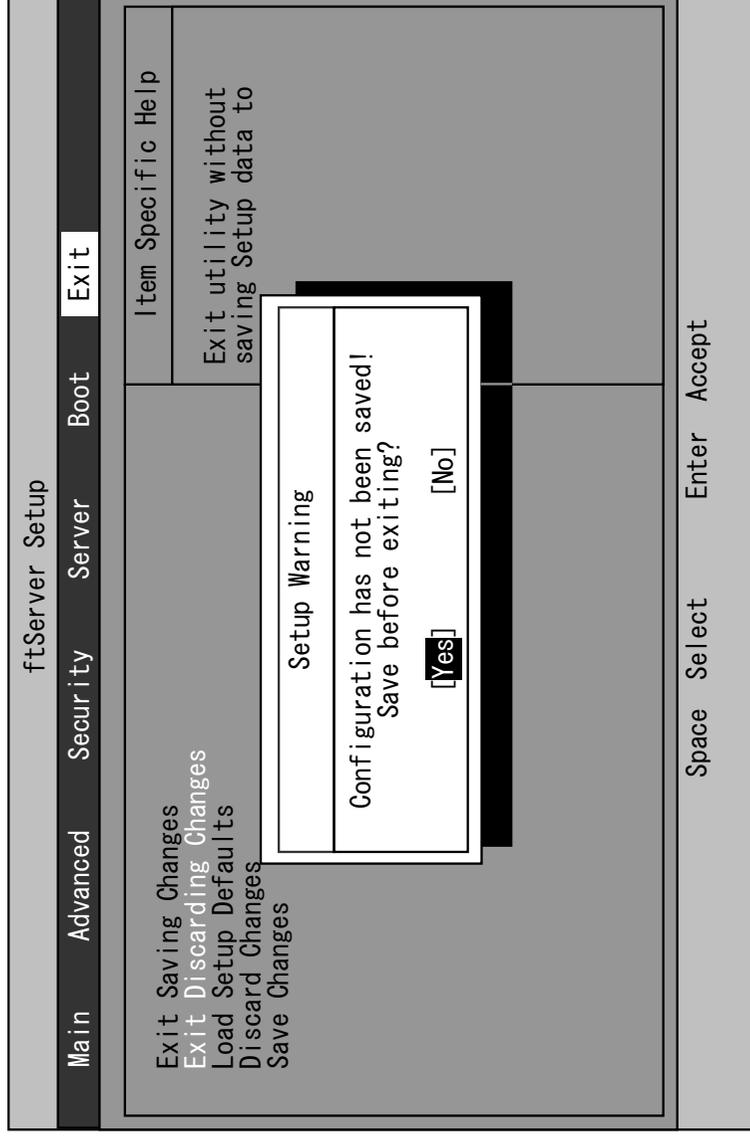

### Load Setup Defaults

Select this option if you want to reset all values in SETUP to default (factory-set values). When you select Load Setup Defaults, the dialogue box as shown below appears. If you select “Yes” in the dialogue box, default values are restored. If you select “No”, you will see the Exit menu screen.

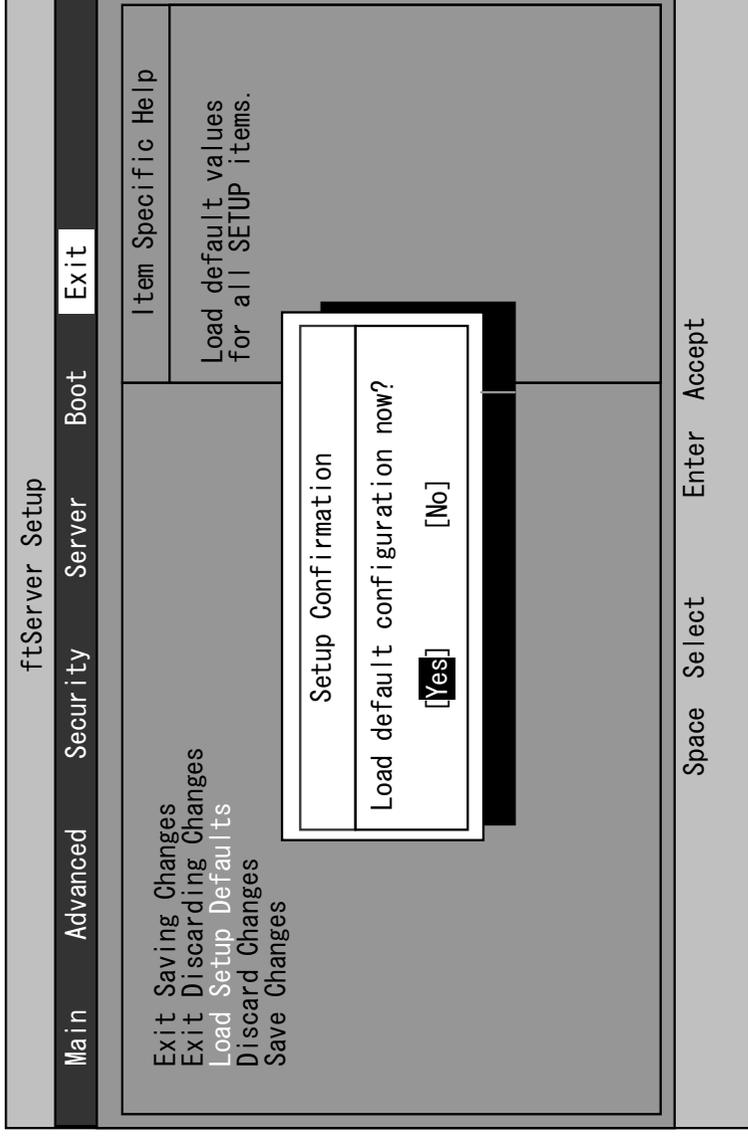


### IMPORTANT:

The default value and the factory default value differ partially. If you want to bring the value back to the default, verify all the value you want to make changes on.

**Discard Changes**


Select this option if you want to restore previous values before saving values in CMOS. When you select “Discard Changes”, you will see the dialogue box as shown below. If you select “Yes” in the dialogue box, changes you have made are discarded and previous settings are restored.

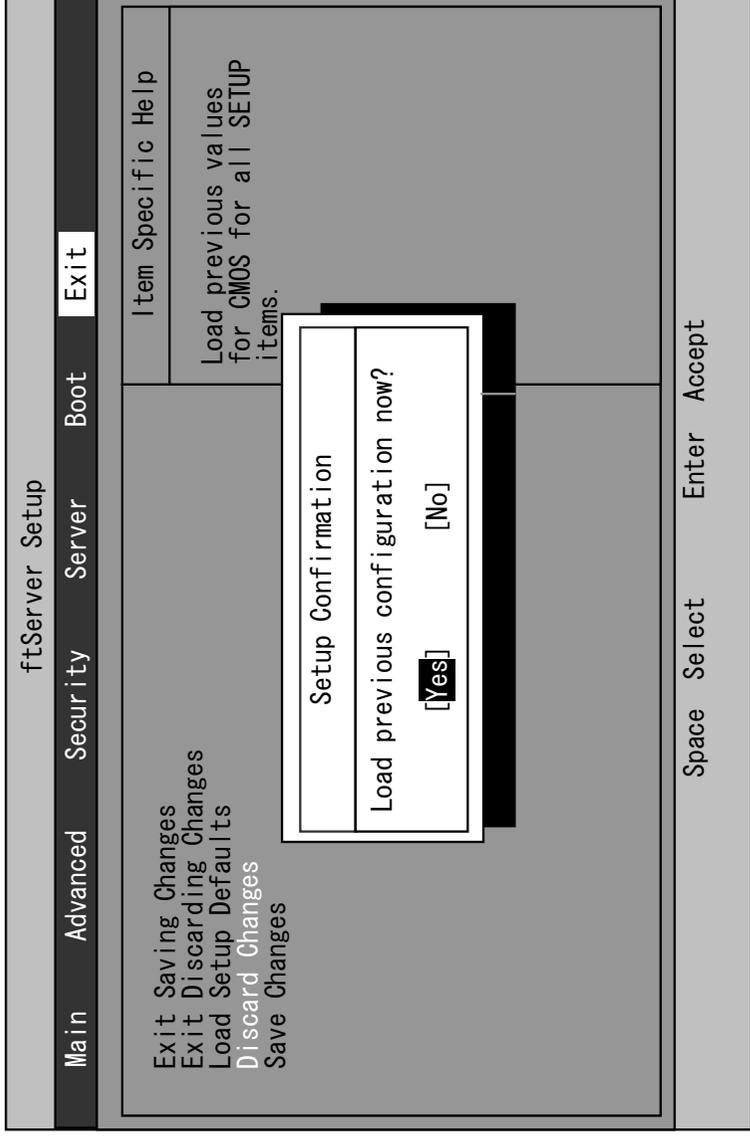

### Save Changes

Select this option if you want to save changes you have made in CMOS (non-volatile memory) without exiting SETUP. When you select the Save Changes, you will see the dialogue box as shown below.

If you select “Yes” in the dialogue box, changes you have made are saved in CMOS (non-volatile memory).

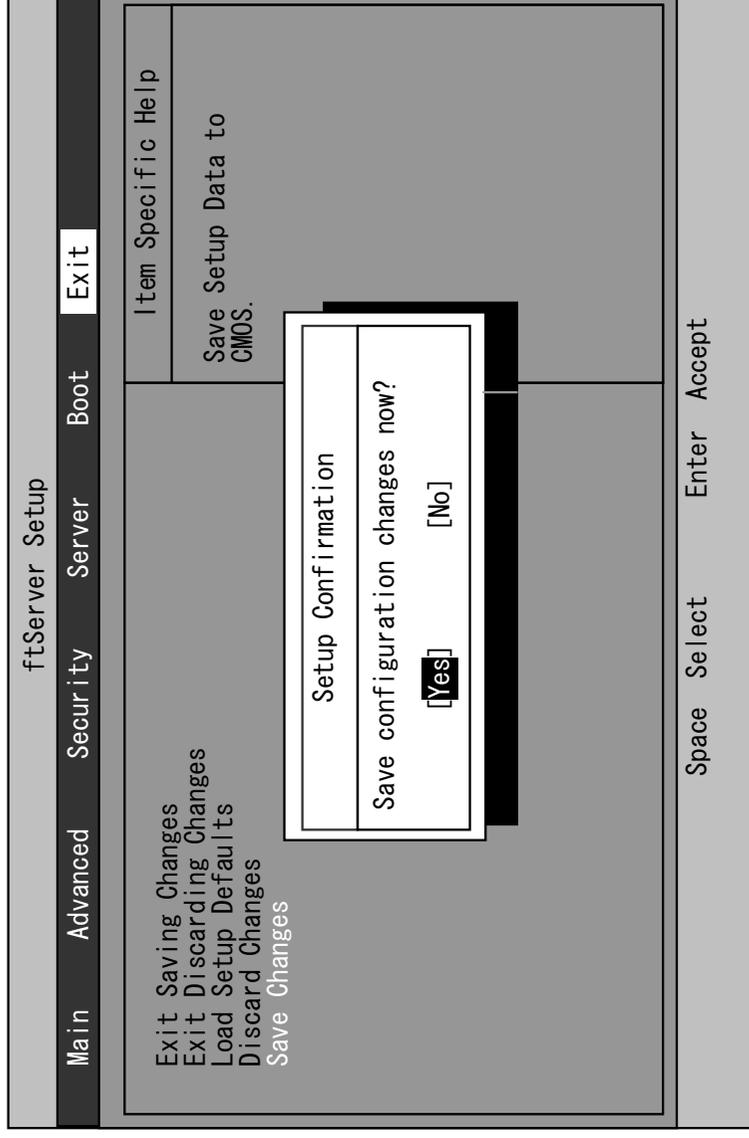

## **Emulex BIOS**

Emulex BIOS Configuration utility makes settings of the standard implemented Fibre Channel controller. You can start it up by simple key operation during POST execution without using any special startup disk.

### **IMPORTANT:**

- When setting up the system or replacing Fibre channel controller, configure the setting referring to Chapter 4 of *User's Guide (Setup)*.
- If you do not configure the above setting of *User's Guide (Setup)*, the screen of this utility may not be displayed or an error may occur during POST execution.

## **Starting the Emulex BIOS**

Press **Alt** and **E** on the Emulex prompt screen during POST execution.

```
!!! Emulex LightPulse x86 BIOS !!!, Version 2.00a1
Copyright(C) 1997-2007 Emulex. All rights reserved.

Press <Alt E> or <Ctr E> to enter Emulex BIOS
configuration
```


## **FORCED SHUTDOWN AND CLEAR**

Read this section if your server does not operate as expected, or if you want to return all setup values to those made at shipment.

### **Forced Shutdown**

Use this function when an OS command does not shut down the server, the POWER switch does not turn off the server, or resetting does not work.

Press and hold the POWER switch on the primary server for over 4 seconds. The power is forcibly turned off. To turn on the power back again, wait approximately 30 seconds after the forced shutdown.

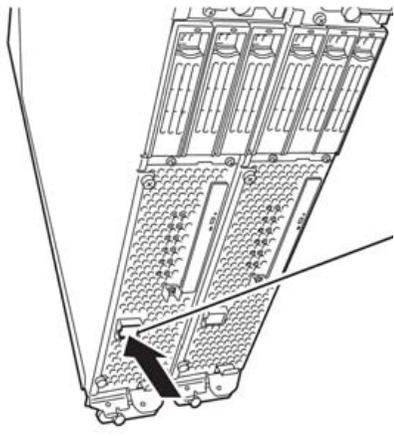

Press this for over 4 seconds.

## CLEAR CMOS/PASSWORD

With the pre-installed SETUP utility, you can set desired passwords to protect data stored on the server from unauthorized user access. If you forget the password, you can clear them by following the procedure described in this section.

You can also use the same procedure to clear the CMOS data in the server.

---

### IMPORTANT:

- Clearing the CMOS data restores the factory settings.
  - To clear the password or CMOS data, power off the server.
- 


To clear the password or the CMOS data, use configuration jumper pins (jumper switches) located inside of the server. The jumper switches are found on the motherboard in a CPU/IO module. See the figure below.

---

### IMPORTANT:


Do not change any other jumper switch settings. Any improper change may cause the server to fail or malfunction.

---

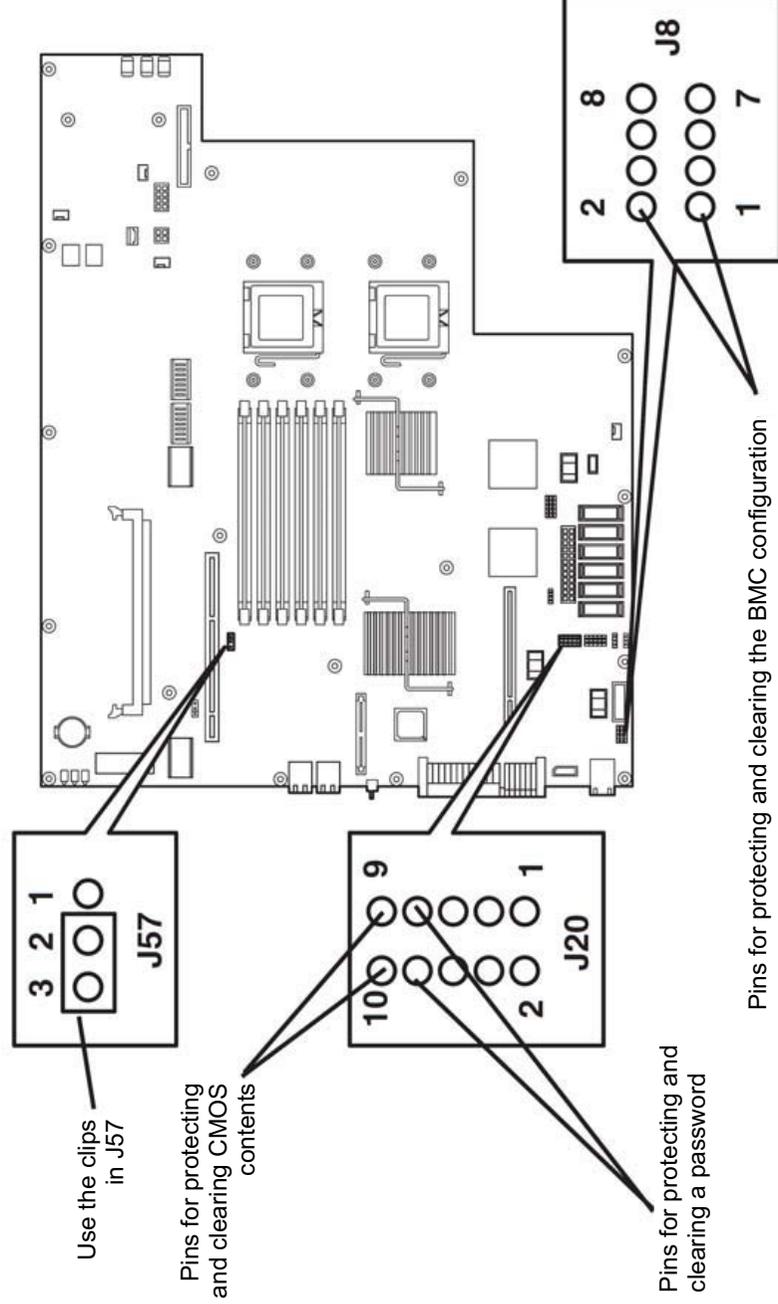

- Pins for protecting/clearing the password  
Short-circuiting the two pins: Clears the password  
Opening the two pins: Protects the password (factory preset)
- Pins for protecting/clearing the CMOS data  
Short-circuiting the two pins: Clears the CMOS data  
Opening two pins: Protects the CMOS data (factory preset)
- Pins for protecting/clearing the BMC configuration  
Short-circuiting the two pins: Clears the BMC configuration  
Opening two pins: Protects the BMC configuration (factory preset)

The following describe the clearing procedure.

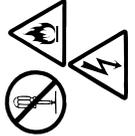	<b>WARNING</b>
	<p>Observe the following instructions to use the server safely. There are risks of death or serious personal injury. See “PRECAUTIONS FOR SAFETY” in Chapter 1.</p> <ul style="list-style-type: none"><li>■ Do not disassemble, repair, or alter the server.</li></ul>

### How to Clear CMOS

1. Power off the NEC Express5800/ft series and unplug the both power cords.
2. Remove the both CPU/IO modules (0 and 1) from the NEC Express5800/ft series (see “Removing CPU/IO Module” on page 8-7).
3. Make setting of jumper switch for clearing CMOS of CPU/IO module 0.  
Remove the clips from the jumper pins (J57) 2-3 and place them on the jumper pins (J20) 9-10 on the CPU/IO Module 0.
4. Connect only the power cord of the CPU/IO module 0 and press the POWER switch to power on.
5. When POST is completed after the startup, press the POWER switch to power off, and then disconnect the power cord from the outlet.

- 6.** By referring to “Removing CPU/IO Module” on page 8-7, remove the CPU/IO module 0 from the server.
- 7.** Restore the previous CMOS clear jumper switch settings. Remove the jumper pins (J20) 9-10 of the CPU/IO module 0 and install them on the jumper pins (J57) 2-3.
- 8.** By referring to “Installing CPU/IO Module” on page 8-10, install the CPU/IO module 0 on the server.
- 9.** Reconnect only the power cord of the CPU/IO module 0 and press the POWER switch to power on.
- 10.** After the startup, press the **F2** key during POST to start BIOS SETUP.
- 11.** Make settings in SETUP as you desire and then save the settings by selecting “Exit”→ “Exit Saving Changes.” Switch the power off and disconnect the power cord from the outlet.
- 12.** Clear CMOS for the CPU/IO module 1 by following the steps 3 to 12.
- 13.** By referring to “Installing CPU/IO Module” on page 8-10, connect both CPU/IO modules to the device.
- 14.** Connect both power cords.

## HOW TO CLEAR PASSWORDS

1. Power off NEC Express5800/ft series and unplug the both power cords.
2. Remove the both CPU/IO modules (0 and 1) from the NEC Express5800/ft series (see “Removing CPU/IO Module” on page 8-7).
3. Make setting of jumper switch for clearing the password of CPU/IO module 0.  
Remove the clips from the jumper pins (J57) 2-3 on CPU/IO module 0 and place them on the jumper pins (J20) 7-8 on the CPU/IO module 0.
4. Mount the CPU/IO module 0 to NEC Express5800/ft series (see “Installing CPU/IO Module” on page 8-10).
5. Connect the power cord of CPU/IO module 0 only, and then press the POWER switch to power on.
6. When POST is completed after the startup, press the POWER switch to power off, and then disconnect the power cord from the outlet.
7. By referring to “Removing CPU/IO Module” on page 8-7, remove the CPU/IO module 0 from the server.
8. Reset the jumper switch setting.  
Remove the clips from the jumper pins (J20) 7-8 and place them on the jumper pins (J57) 2-3 on the CPU/IO module 0.
9. Clear password for the CPU/IO module 1 by following the steps 3 to 8.
10. By referring to “Installing CPU/IO Module” on page 8-10, install both CPU/IO modules on the server.
11. Connect both power cords.

## HOW TO CLEAR THE BMC CONFIGURATION

1. Power off NEC Express5800/ft series and unplug the both power cords.
2. Remove the both CPU/IO modules (0 and 1) from the NEC Express5800/ft series (see “Removing CPU/IO Module” on page 8-7).
3. Make setting of jumper switch for clearing the BMC configuration of module 0.  
Remove the clips from the jumper pins (J57) 2-3 on CPU/IO module 0 and place them on the jumper pins (J8) 1-2 on the CPU/IO module 0.
4. Mount the CPU/IO module 0 to NEC Express5800/ft series (see “Installing CPU/IO Module” on page 8-10).
5. Connect the power cord of CPU/IO module 0 only, and then press the POWER switch to power on.
6. When POST is completed after the startup, press the POWER switch to power off, and then disconnect the power cord from the outlet.
7. By referring to “Removing CPU/IO Module” on page 8-7, remove the CPU/IO module 0 from the server.
8. Reset the jumper switch setting.  
Remove the clips from the jumper pins (J8) 1-2 and place them on the jumper pins (J57) 2-3 on the CPU/IO module 0.
9. Clear password for the CPU/IO module 1 by following the steps 3 to 8.
10. By referring to “Installing CPU/IO Module” on page 8-10, install both CPU/IO modules on the server.
11. Connect both power cords.

# Chapter 5

---

## Installing and Using Utilities


This section describes how to use the NEC EXPRESSBUILDER DVD that comes with your server and to install the utilities stored on the NEC EXPRESSBUILDER. CPU/IO module has a processor function part and IO function part. In utilities in this chapter, the processor function part is referred to as CPU module and IO function part PCI module.

## NEC EXPRESSBUILDER

The NEC EXPRESSBUILDER, integrated setup software, can automatically detect the hardware connected to an NEC Express5800/ft series machine to advance the processing. The hardware subject to setup with the NEC EXPRESSBUILDER should have the same configuration as that for operation.

### Start Menu


When you insert the EXPRESSBUILDER disk into the optical disk drive and reboot the system, the following menu appears.

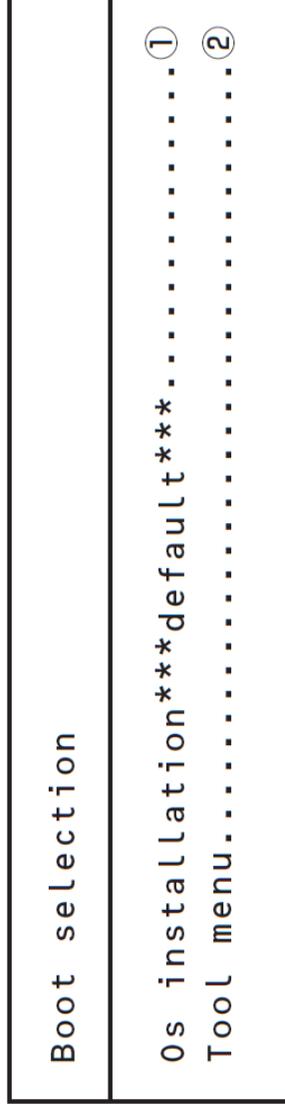

1. Os installation

### IMPORTANT:

Do not select this item on this server. If you do so, the EXPRESSBUILDER Top Menu below appears. Quit EXPRESS BUILDER.

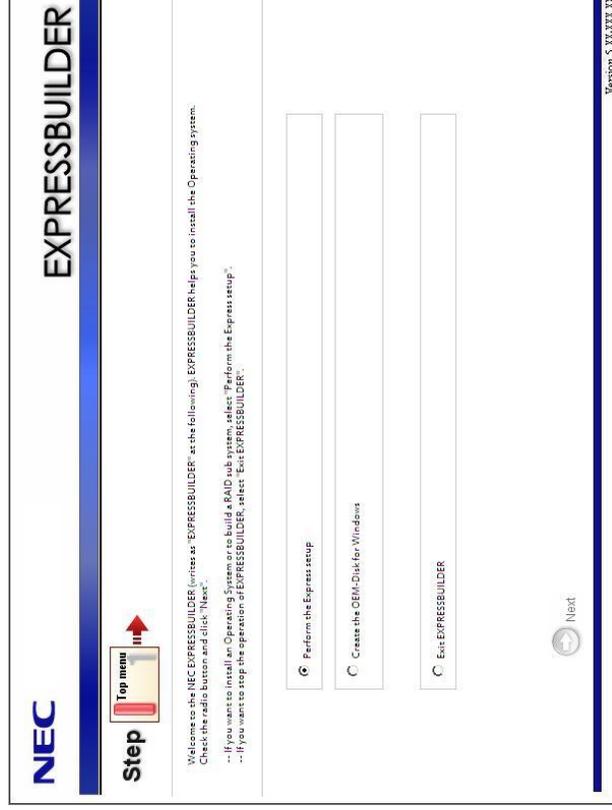

## 2. Tool menu

If you select this item after choosing the display language, the Tool menu appears.



You can use the below functions for maintenance.

- Maintenance Utility  
Starts up the Offline Maintenance Utility.
- BIOS/FW Updating  
Updates the system BIOS.
- ROM-DOS Startup FD  
Creates Startup FD is used for starting the ROM-DOS system.
- Test and Diagnostics  
Starts up the system test and diagnostics.
- System Management  
Starts up the system management function.

## **Autorun Menu**



The Master Control Menu automatically appears when the “NEC EXPRESSBUILDER” DVD is loaded on a computer running Windows (Windows XP, Vista or Windows Server 2003 or later).

---

### **IMPORTANT:**

This is not used on this server.

---

## NEC ESMPRO Agent and Manager

NEC Express5800/ft series system management applications “NEC ESMPRO Manager” is bundled to accessory “NEC EXPRESSBUILDER DVD.”

“NEC ESMPRO Agent” is stored in “NEC ESMPRO Agent for VMware Infrastructure 3” CD-ROM.

This section describes the functions and features provided by NEC ESMPRO Manager and NEC ESMPRO Agent and the notes on their operations.

These applications are necessary for continuous operation of NEC Express5800/ft series.

---

### Overview

NEC ESMPRO Manager and NEC ESMPRO Agent are the server management software provided for the stable operation of a server system and effective system operations. They can manage the configuration information and operating status of server resources to prevent server faults from occurring. If a server fault occurs, they detect the fault to notify the system Administrator of the occurrence. This enables the system Administrator to take appropriate action against faults.

- Importance of server management
  - “Constantly stable operation” and “less management workload” are keywords in server management.
  - Stable operation of server
    - Shutdown of a server immediately leads the customer to lose business opportunities and profits. This requires servers to always operate in their perfect state. If a fault occurs in a server, it is necessary to detect the occurrence as soon as possible, make clear the cause, and take appropriate action. The shorter the time taken from the occurrence of a fault to the recovery from the fault is, the smaller the loss of profits (and/or costs) is.
    - Load reduction of server management
      - The server management requires many jobs. In particular, if the system becomes large or remote servers are used, required jobs increase further. The reduction of the load of the server management brings the decrease in costs (and thus customer's benefit).
- What are NEC ESMPRO Manager and NEC ESMPRO Agent?
  - NEC ESMPRO Manager and NEC ESMPRO Agent are server management software used to manage and monitor NEC Express5800 series systems on the network. The installation of NEC ESMPRO Manager and NEC ESMPRO Agent enables the server configuration, performance, and fault information to be acquired, managed, and monitored in real time and also the occurrence of a fault to be detected immediately by the alert report function.

- Effects of using NEC ESMPRO Manager and NEC ESMPRO Agent  
NEC ESMPRO Manager and NEC ESMPRO Agent have sufficient effects on a variety of needs in versatile and complicated system environments.
  - Detection of server fault  
NEC ESMPRO Agent collects a variety of fault information on NEC Express5800 series systems to identify the states of the systems. If a server detects a fault, the server provides NEC ESMPRO Manager with the proper alert report.
  - Prevention of server fault  
NEC ESMPRO Agent includes the preventive maintenance function predicting the occurrence of a fault in advance as countermeasures for preventing faults from occurring. It can previously detect the increase in the chassis temperature and the empty capacity in a file system.
  - Management of server operation status  
NEC ESMPRO Agent can acquire the detailed hardware configuration and performance information on NEC Express5800 series systems. The acquired information can be viewed at any point through NEC ESMPRO Manager.
  - Collective management of distributed servers  
NEC ESMPRO Manager provides the GUI interface that allows servers distributed on the network to be managed efficiently.

## Detection of Server Fault

NEC ESMPRO Manager and NEC ESMPRO Agent detect errors causing faults to occur at an early stage and notify Administrators of fault information real-time.

- Early detection of error  
If a fault occurs, NEC ESMPRO Agent detects the fault and reports the occurrence of the fault to NEC ESMPRO Manager (alert report). NEC ESMPRO Manager displays the received alert in the AlertViewer and also changes the status colors of the server and server component in which the fault occurs. This allows you to identify the fault at a glance. Further, checking the content of the fault and the countermeasures, you can take appropriate action for the fault as soon as possible.
- Types of reported faults  
The table below lists the typical faults reported by NEC ESMPRO Agent.

Component	Reported information
CPU	<ul style="list-style-type: none"><li>• CPU load is over the threshold</li><li>• CPU degrading, etc.</li></ul>
Voltage	Voltage lowering
Temperature	Temperature increase in chassis, etc.
Fan	Fan failure (decrease in the number of revolutions), etc.
Storage	File system usage rate, etc.
LAN	<ul style="list-style-type: none"><li>• Line fault threshold over</li><li>• Send retry or send abort threshold over, etc.</li></ul>

## Prevention of Server Fault

NEC ESMPRO Agent includes the preventive maintenance function forecasting the occurrence of a fault as countermeasures for preventing faults from occurring.

NEC ESMPRO Manager and NEC ESMPRO Agent can set the threshold for the CPU usage rate and the empty capacity in a file system, etc. in the server. If the value of a source exceeds the threshold, NEC ESMPRO Agent reports the alert to NEC ESMPRO Manager.

The preventive maintenance function can be set for a variety of monitoring items including the CPU usage rate.

## Management of Server Operation Status

NEC ESMPRO Agent manages and monitors a variety of components installed in the server. You can view the information managed and monitored by NEC ESMPRO Agent on the Data Viewer of NEC ESMPRO Manager.

NEC ESMPRO Agent also manages and monitors components and conditions required to keep the server reliability at a high level such as hard disks, CPU, fans, power supply, and temperature.

Functional availability on the DataViewer:

System	Available	This function shows CPU's logical information and monitors CPU utilization. This function shows memory's logical information and monitors the status.
I/O devices	Available	This function shows information about I/O devices (such as Floppy disk, serial port, parallel port, keyboard, mouse, video).
System environment	Available	This function monitors temperature, fan, voltage, power supply and door.
	Available	This function monitors temperature inside of chassis.
	Available	This function monitors fan.
	Available	This function monitors voltage inside of chassis.
	Unavailable	This function monitors power supply unit.
	Unavailable	This function monitors chassis intrusion(open/close of cover/door of chassis).
Software	Available	This function shows information about service, driver and OS.
Network	Available	This function shows network (LAN) information and monitors packet.
Expansion device	Unavailable	This function shows information about expansion bus device.
BIOS	Available	This function shows BIOS information.
Local polling	Available	This function monitors values of MB that agent takes at random.
Storage	Unavailable	This function monitors controllers and storage devices such as HDD.
File system	Available	This function shows file system structure and monitors utilization.
Disk array	Unavailable	This function monitors LSD disk array controller (N8103-73A/80/81) and Promise disk array controller. *On the servers which do not support the disk array controllers above, disk array information is not displayed on the DataViewer.
Others	Unavailable	This function monitors OS stall by using Watch Dog Timer.

### Monitoring (Management) of NEC Express5800/ft series

NEC Express5800/ft series is a fault tolerant system. It can continue the operation even if a major component fails. NEC Express5800/ft series improves the system availability with the hardware, NEC ESMPRO, and system software functions.

If a major component fails, the NEC ESMPRO fault report function can notify the system Administrator of the occurrence of the fault. In addition, the DataViewer of NEC ESMPRO Manager can monitor the system status and also identify the failed component.

NEC ESMPRO provides several maintenance functions such as the update of F/W and BIOS in the NEC Express5800/ft series in the online state (in which the system continues the operation but the components used to update F/W or BIOS is suspended) and the suspension of a specific component.


The table below lists the NEC Express5800/ft series management tasks using NEC ESMPRO and system functions.

NEC Express5800/ft series management task	NEC ESMPRO function or tool (on managed NEC Express5800/ft series)	NEC ESMPRO function or tool (on management manager)
Monitoring of major component states	-	NEC ESMPRO Manager DataViewer
Diagnosis and start/stop of major components and F/W update	NEC ESMPRO Agent ft server utility	NEC ESMPRO Manager DataViewer
Verification of alert or occurrence event information	syslog (/var/log/messages)	NEC ESMPRO Manager AlertViewer

## 5-10 Installing and Using Utilities

The report of a fault occurrence in the NEC Express5800/ft series (alert) is immediately sent to the NEC ESMPro Manager. When the NEC ESMPro Manager receives the alert, a popup message appears.

The alert contains the detailed information of the fault and the proper countermeasures. You can take the appropriate action for the alert.

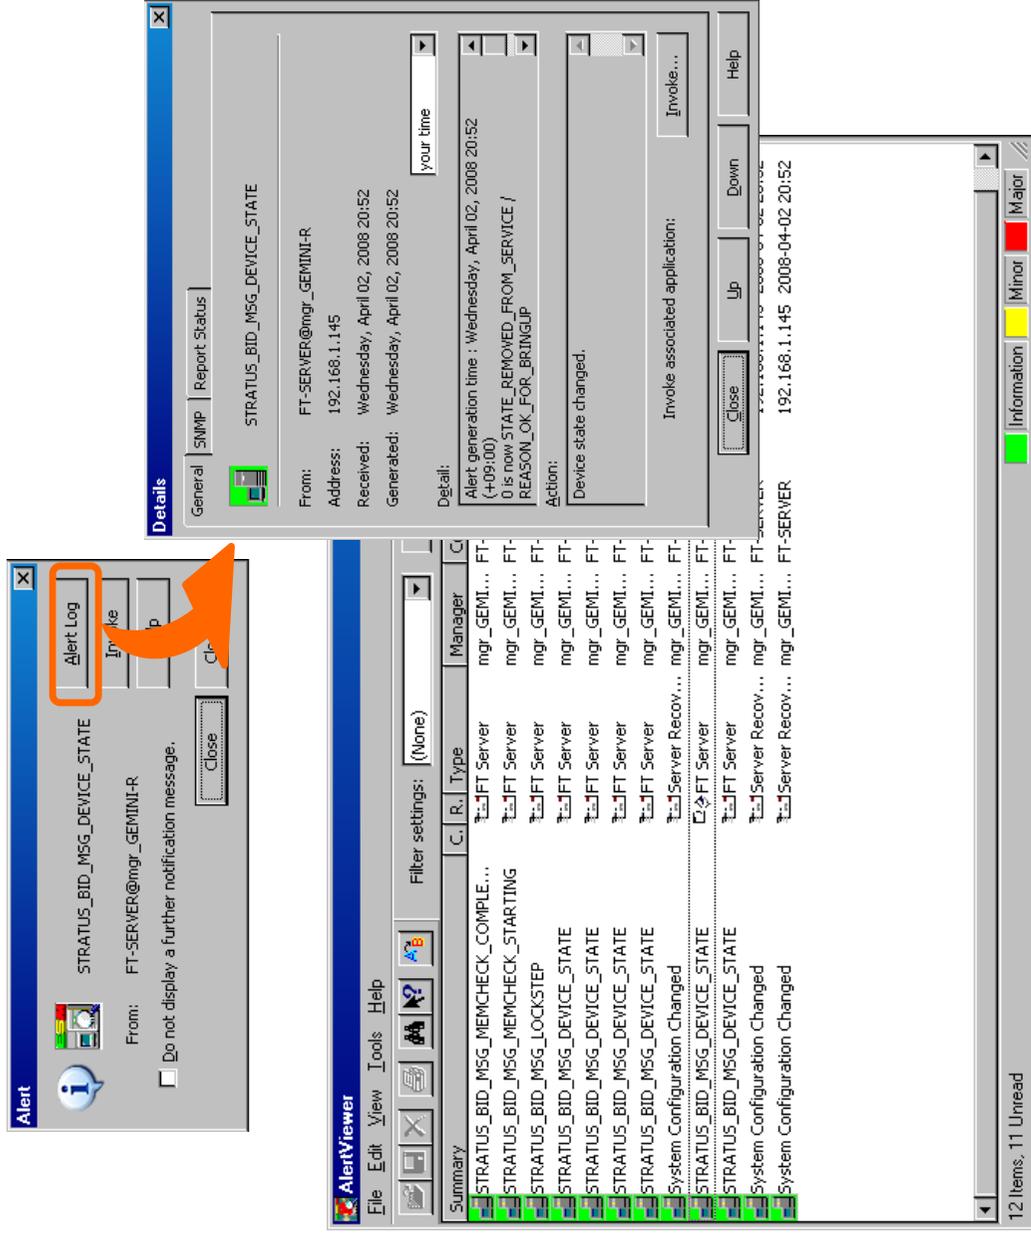


## Collective Management of Distributed Servers

The excellent GUI provided by NEC ESMPRO Manager allows servers on a network to be managed collectively. The management screen is designed in the Explorer format to indicate the components in a server hierarchically for effective server management.

NEC ESMPRO Manager manages servers by using the following three types of GUIs.

- Operation Window

The operation window is used to create the map of servers connected to network to manage them. The map can be multi-layered depending on the installation areas, organizations, and objects.

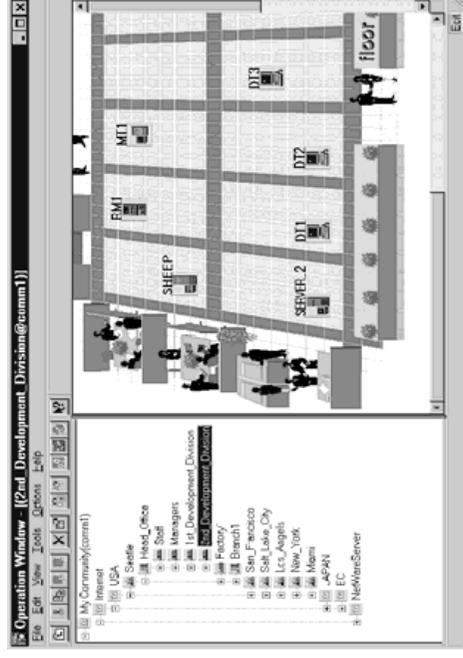



## NEC ESMPRO Agent

NEC ESMPRO Agent is a utility which acts as an agent (proxy) between NEC Express5800/ft series and NEC ESMPRO Manager (management PC). For details on the operating environment, the setting required before the setup, and the installation procedure, see the separate volume “User’s Guide (Setup).”

### Device ID in Alert Report

Some NEC Express5800/ft series reports use unique device IDs which correspond to the devices listed in the table below as the device identification information.

Device name	Device ID
CPU module 0	0
DIMM CH0/CH1 SLOT 0 on CPU module 0	0/0
DIMM CH0/CH1 SLOT 1 on CPU module 0	0/1
DIMM CH0/CH1 SLOT 2 on CPU module 0	0/2
DIMM CH0/CH1 SLOT 3 on CPU module 0	0/3
DIMM CH0/CH1 SLOT 4 on CPU module 0	0/4
DIMM CH0/CH1 SLOT 5 on CPU module 0	0/5
CPU0 on CPU module 0	0/20
CPU1 on CPU module 0	0/23
CPU module 1	1
DIMM CH0/CH1 SLOT 0 on CPU module 1	1/0
DIMM CH0/CH1 SLOT 1 on CPU module 1	1/1
DIMM CH0/CH1 SLOT 2 on CPU module 1	1/2
DIMM CH0/CH1 SLOT 3 on CPU module 1	1/3
DIMM CH0/CH1 SLOT 4 on CPU module 1	1/4
DIMM CH0/CH1 SLOT 5 on CPU module 1	1/5
CPU0 on CPU module 1	1/20
CPU1 on CPU module 1	1/23
PCI module 0	10
PCI slot 1 on PCI module 0	10/6
PCI slot 2 on PCI module 0	10/8
PCI slot 3 on PCI module 0	10/7
Ethernet Board 1 on PCI module 0	10/2
PCI module 1	11
PCI slot 1 on PCI module 1	11/6
PCI slot 2 on PCI module 1	11/8
PCI slot 3 on PCI module 1	11/7
Ethernet Board 1 on PCI module 1	11/2

## Supplement

When using NEC ESMPRO Agent, see “NAMES AND FUNCTIONS OF COMPONENTS” in Chapter 2.

### About restart of NEC ESMPRO Agent

NEC ESMPRO Agent uses the library which ft Server Control Software installs. By the restrictions of the library, it use cron and have to restart the NEC ESMPRO Agent-related service every day.

When you performed the life and death monitor of the server, there is the case that a report of "No response from the server" is performed during this restart. Therefore please change "Server Down Detection Retry Count" in 5 times than 0 times of the existing set price.

But there is the thing that a report occurs by the operative situation 5 times of the server. In that case, please change "Server Down Detection Retry Count" in an appropriate value.

About the change method, please refer to Users Guide of NEC ESMPRO Manager.

In addition, a report is again performed in the case of abnormality and the warning again when it restarts NEC ESMPRO Agent even if finished with a report.

Please note so that restart processing by cron does not execute just after installation of NEC ESMPRO Agent (before the system reboot).

It is set to restart by default at 4:02 a.m.

### Notice on Operation of NEC ESMPRO Agent

- It may become unable to send report after recovering from hardware failure.

<Workaround>

Execute the following operation after hardware failure recovery.

After replacing the hardware, confirm the status LED 2 on both CPU/IO modules are green (duplex mode) and log on as a user with root privilege to execute the following command.

```
# /opt/nec/esmpro_sa/bin/ESMRrestart
```

\* For the status LED position, refer to “NAMES AND FUNCTIONS OF COMPONENTS” of Chapter 2 “General Description” in User’s Guide.

- It may become unable to execute operation on CPU/PCI module on ftServer Utility.

<Workaround>

Do not end ftServer Utility until commands such as MTBF information clear or starting up CPU/PCI module complete.

You need to confirm the following status by using “Harvesting” that indicates command is completed.

```
MTBF information clear < MTBF Clear > ... Status that is the same as before starting  
CPU/PCI module < Start > ... DUPLEX
```

CPU/PCI module < Stop > ... OFFLINE

\* This becomes DUPLEX after the INITIALIZING or DIAGNOSTICS.

- The following message may be registered on the syslog when starting the system.

```
"ntagent: libft init failed"
```

```
<Workaround>
```

When ESMfreport/ESMps process does not work, login as a root user and execute ESMRestart.

```
<Process confirmation procedure>
```

```
# ps aux | grep ESM
```

```
<ESMRestart executing procedure>
```

```
# /opt/nec/esmpro_sa/bin/ESMRestart
```

## File System Monitoring

On the file system monitoring of NEC ESMPRO Agent, vmfs areas are not monitored.

## Maintenance-related Functions

When you want to use maintenance-related functions of the NEC Express5800/ft series, contact your maintenance personnel.

## Each Sensor Monitoring Setting

Dataviewer can show information on temperature, fan and voltage sensor, but it cannot change monitoring status itself or the threshold level. The threshold level is appropriately set for NEC ESMPRO Agent.

## Update Interval Setting of DataViewer

Update interval setting of DataViewer must be 60 seconds as the default setting or more.

If the interval setting of Dataviewer is set less than 60 seconds while Dataviewer is launching, the notification may delay or may leak.

## About portmap

NEC ESMPRO Agent uses portmap function.

If portmap stops or NEC ESMPRO Agent reboots while NEC ESMPRO Agent is operating, NEC ESMPRO Agent does not work appropriately.

Run the following command and reboot NEC ESMPRO Agent.

```
# /opt/nec/esmpro_sa/bin/ESMRestart
```

### **DataViewer Display of NEC ESMPRO Manager When System Configuration Is Changed**

If CPU module is started/stopped with dataviewer is on the screen, wait for about five minutes and operate “Reconstruct the tree” on dataviewer.

### **ntagent Memory Usage**

When dataviewer appears, the memory usage of ntagent increases about 10KB per hour. Do not always display dataviewer, but display it only when failure occurs.

### **USB Device and Window Displaying**

On dataviewer window of NEC ESMPRO Manager, if mouse, keyboard or display appears because USB is disabled, the details are shown as unknown.

### **CPU Information**

If you select [CPU Module] – [CPU] in the [ft] tree of the DataViewer, unknown or incorrect information appears in some information items.

The CPU information can be viewed by selecting [System] – [CPU] in the [ESMPRO] tree.

### **CPU Module Status**

“CPU module” icon status in “ft” tree on dataviewer remains green even if CPU module is stopped. If you receive notification that indicates system configuration is changed, confirm the current status on “Status” in “CPU module” – “General information”.

### **PCI Module Status**

When a cable is detached from the onboard ethernet board, “Status” of “PCI module” – “General information” of “ft” tree on dataviewer remains the same. Confirm the current status on “Status” of “PCI module” – “Ethernet board”.

### **Change of Installation Status of CPU and PCI Modules**

If CPU module/PCI module configuration of the system is changed into dynamic while displaying the server information on dataviewer, the information on the dataviewer may differ from the current system information because the information does not reflect the system configuration change. Run the following command and reboot NEC ESMPRO Agent, and reconfigure the tree on dataviewer.  
# /opt/nec/esmpro\_sa/bin/ESMRestart

### **Impact When Module Status Changes**

PCI modules, PCI slot and Ethernet board have impact on each other. For example, when the “Status” item of a module changes to “fault,” it may be caused by another module’s error. Therefore, you need to check the status of the other modules based on alert information.

### **LAN Monitoring Report**

The LAN monitoring function defines the line status depending on the number of transmission packets and the number of packet errors within a certain period. Thus, the LAN monitoring function may report a line fault or high line load only in a temporary high line impedance state. If a normal state recovery is reported immediately, temporal high line impedance may have occurred thus there is not any problem.

### **LAN Monitoring Threshold**

Because the NEC Express5800/ft series detects hardware faults on the network in the driver level, NEC ESMPRO Agent does not monitor line faults. Thus, the value set for “Line fault occurrence rate” of a [LAN] tab of [NEC ESMPRO Agent properties] in the control panel is not used.

### **Hardware Monitoring by ESMPRO**

On this server, power supply is not monitored. Moreover, the tree of [Power Supply] is not displayed on [System Environment] of DataViewer of NEC ESMPRO Manager.

### **System Environment Monitoring**

On this server, monitoring of temperature, fan and voltage under [System Environment] of [ESMPRO] tree in the DataViewer is set to enable and cannot be changed to disable by default.

### **Change of SNMP Community**

If the security setting of the SNMP Service of a system, where the NEC ESMPRO Agent is installed, is changed from the default “public” to a community name, change the community settings of the NEC ESMPRO Agent, too.

1. Log on as a user with root privilege
2. Move to the directory where the control panel of NEC ESMPRO Agent is stored.  
# cd/opt/nec/esmpro\_sa/bin
3. Start the control panel.  
# ./ESMagentconf  
The Control Panel window appears.

4. Click [General].  
The [General Properties] window appears.
5. Select a SNMP community name used when you retrieve local machine information in the [SNMP Community] box. (Select by “↑” key or “↓” key.)
6. Click [OK] to quit.

### The Detail Information of Alert

Detail information of some alert displayed on the alert viewer may be displayed as “Unknown.”

### Connection with Hard Disk Drive

The preventive hard disk drive maintenance function may not work properly when a hard disk drive which was used in a system where NEC ESMPRO Agent is installed is connected to other systems. Make sure not to connect such hard disk drives.

### Change Settings of File System Monitoring Function

New settings in thresholds of monitoring interval and free space monitoring are not reflected immediately after they are changed. They are reflected at the next monitoring interval of monitoring service.

### File System Monitoring on the system using NEC EXPRESSCLUSTER

When using NEC ESMPRO Agent in the cluster environment configured by NEC EXPRESSCLUSTER, there is the following limitation:

If a failover occurs, the settings of the threshold for the empty space monitoring function and the enable/disable of monitoring of the operating sever are not inherited to the standby server. Make sure to reset the threshold and the enable/disable of monitoring on the standby server.

### CPU Load Ratio of snmpd Service

While monitoring the server from NEC ESMPRO Manager, the CPU load ratio of snmpd Service on the NEC ESMPRO Agent side may increase at every monitoring interval (default: 1 minute).

NEC ESMPRO Manager and NEC ESMPRO Agent exchange information through snmpd Service. If the server status monitoring by NEC ESMPRO Manager is on (default: ON), NEC ESMPRO Manager regularly issues a request to NEC ESMPRO Agent to get the current status of the server. In response, NEC ESMPRO Agent checks the status of the server. As a result, the CPU load ratio of snmpd Service increases temporarily.

If you have trouble of terminating a movie player application, turn off the server status monitoring by NEC ESMPRO Manager or extend the monitoring interval.

### Hang of snmpd Service

Snmpd Service has a module called “SNMP Extended Agent.” This module may be registered when you install some software that uses snmpd Service.

If you start snmpd Service, SNMP Extended Agent is also loaded at the initialization. However, if the initialization is not completed within a specified period, snmpd Service will hang.

It may take time to complete the initialization due to temporary high load on the system. In this case, wait for the system load become low enough before restarting snmpd Service.

### Operation when Temperature/Voltage Error Occurs on the CPU/PCI Modules

At the time when a temperature or voltage error occurs on CPU/PCI module, necessary actions will differ depending on their status as shown below. You can check the status of each module from the data viewer of NEC ESMPRO Manager or ftServer Utility.

Status	Operation
Duplex	Stop the failed CPU/PCI module
Other than Duplex and Empty	Shut down the system.

---

#### TIPS:

- If the status is “Empty”, the module is not mounted. Sensor monitoring is not conducted.
  - If disks are mounted on PCI modules, the status of both modules is “Simplex” while the disks are mirrored. Temperature or voltage error occurring during disk mirroring will result in the system to shut down.
- 

### Shutdown Monitoring

When performing shutdown monitoring, all shutdown processes are to be monitored. If there is an application that performs shutdown without rebooting OS or turning off the power, set the timeout value longer or disable the monitoring function.

### CPU Information

In [CPU Information] of DataViewer’s system tree, the external clock is listed as “Unknown.”

### When [ft] Tree Appears on Date Viewer in an Incorrect Manner

If you open a DataViewer or reconfiguration of the tree immediately after starting the system or starting/stopping CPU/PCI module, the [ft] tree side of the Data Viewer may not be displayed correctly. Wait about five minutes and then start the Data Viewer again.

### **When the Displayed BIOS Information is Incorrect**

BIOS information which is displayed by clicking [ft] - [CPU Module] - a CPU module - [General] - [BIOS Information] on a Data Viewer on ftServer Utility may not be displayed correctly. In such a case, display the BIOS information on the Data Viewer by clicking [ESMPRO] - [BIOS] or SETUP of system BIOS ([Server] - [System Management] - [BIOS Version]).

### **Ethernet Adapters You Do Not Use**

When the Ethernet adapter is unused (i.e. cables are not connected to its port), NEC ESMPRO Agent determines that the port is faulty (does not have any media), and the status color of [ft] - [PCI module] - [Ethernet Board] of the Data Viewer turns red (abnormal). The server status color of Operation Window also turns red (abnormal).  
As for the ports of the unused Ethernet adapter, connect the unused port of PCI module 0 and that of PCI module 1 with a cross cable.

### **DataViewer Display When Only One of the PCI Modules (IO Modules) Is Operating**

When only one of the PCI modules (IO modules) is operating (non-dual configuration), the SCSI enclosure or mirror disk status cannot be displayed normally.

To check if the dual configuration is changed to the simplex operation mode, check the event log, AlertViewer log, or the status color of PCI module of DataViewer.

### **Display of Ethernet Board of ftServer Utility**

FtServer Utility displays the information of Network Controller.

This server has four in-built Network Ports. Two trees of the Ethernet Board are displayed since a module has two Network Controllers.

## **NEC ESMPRO Manager**

To monitor and manage a computer, on which NEC ESMPRO Agent is installed, with a management PC online, use NEC ESMPRO Manager that is bundled with the product.

For detailed procedures of installation and setting, see online documents or NEC ESMPRO Online Help.

---

### **TIPS:**

- Online documents provide cautions and information for using NEC ESMPRO Manager. See *NEC ESMPRO Manager User's Guide* in the NEC EXPRESSBUILDER DVD.

### **Monitoring by Use of DataViewer**

To monitor the state of the NEC Express5800/ft series on a management computer with installation of NEC ESMPRO Manager, the DataViewer is used. If you click each of the modules and items to be checked sequentially on the tree view in the Windows Explorer format, the DataViewer indicates their states on the right side of the screen.

You can manage the status on a Web browser using Web component functions of NEC ESMPRO Manager. For details, see Help on Web Component.

This section describes the tree structure and displayed screens in the DataViewer. The screens in this description may differ from the server configuration since they are examples.


To make the DataViewer indicate the state of each module and those of the components on it, select the server to be monitored from NEC ESMPRO Manager to start the DataViewer (in the following description, the start procedure of the DataViewer is omitted).

## Monitoring CPU Module

To monitor the CPU modules and the components on the CPU module, see the [CPU Module] tree. To see the information on the [CPU Module] tree, select the target CPU module from [CPU Module] in the [ft] tree.


You can see the following information on the modules and the components on the CPU modules in the [CPU Module] tree.

- **General**  
Allows the configuration and other information on the CPU modules to be viewed.

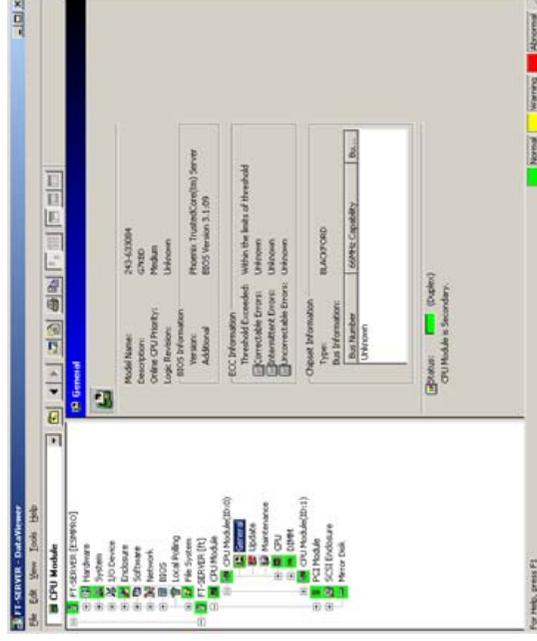


- **Maintenance**

Allows the start/stop, MTBF information clear, dump acquisition, and diagnosis of the CPU modules to be provided. See “Maintenance of NEC Express5800/ft series” described later for the start/stop and MTBF information clear of the CPU modules.

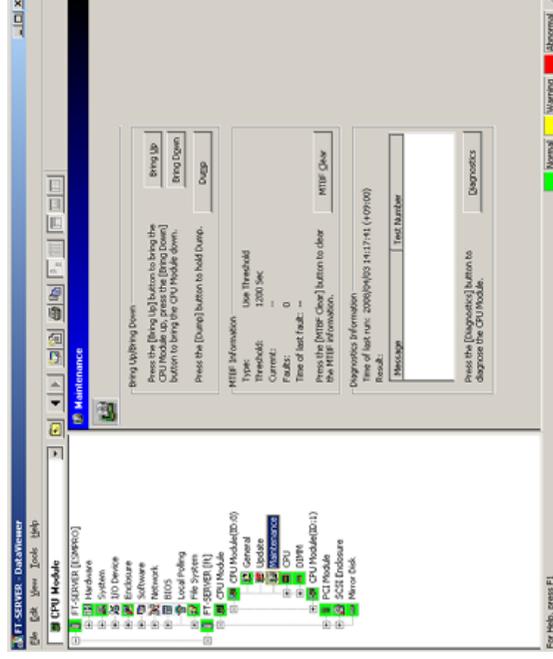

- Update

Allows the device identification information of the CPU modules to be viewed and BIOS of the CPU modules to be updated. See “Maintenance of NEC Express5800/ft series” described later for the update of BIOS of the CPU modules. The detailed device identification information can be checked by selecting [ESMPRO] tree→[Hardware] tree→[Field Replaceable Unit] tree.

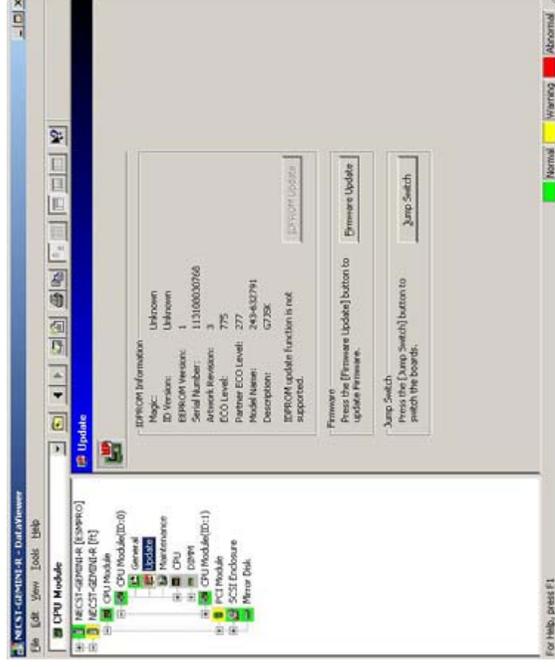

- CPU

Allows the information of the CPU on the CPU modules to be viewed.




- Keyboard/mouse display on Data Viewer

On Data Viewer of NEC ESMPRO Manager, keyboard/mouse is displayed even if they are not connected.

- DIMM

Allows the information of DIMM on the CPU modules to be viewed.

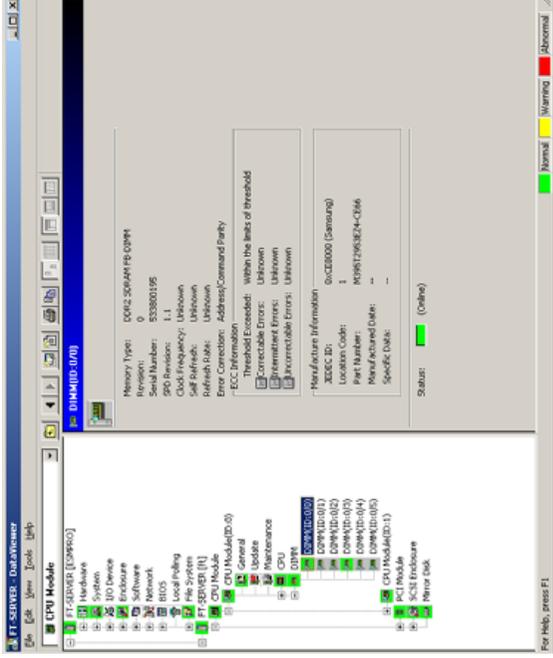

## Monitoring PCI Module

To monitor the PCI modules and the components on the PCI modules, refer to the [PCI Module] tree. To see the information on the [PCI Module] tree, select the target PCI module from [PCI Module] in the [ft] tree.

You can see the following information on the PCI modules and the components on the PCI modules of the [PCI Module] tree.


(This section describes the general information screens of the PCI modules. The components on the PCI modules are described later.)

- **General**  
Allows the configuration and other information of the PCI modules to be viewed.




## 5-26 Installing and Using Utilities

- **Maintenance**  
Allows the start/stop, MTBF information clear, and diagnosis of the PCI modules to be provided. See “Maintenance of NEC Express5800/ft series” described later for the start/stop and MTBF information clear of the CPU modules.

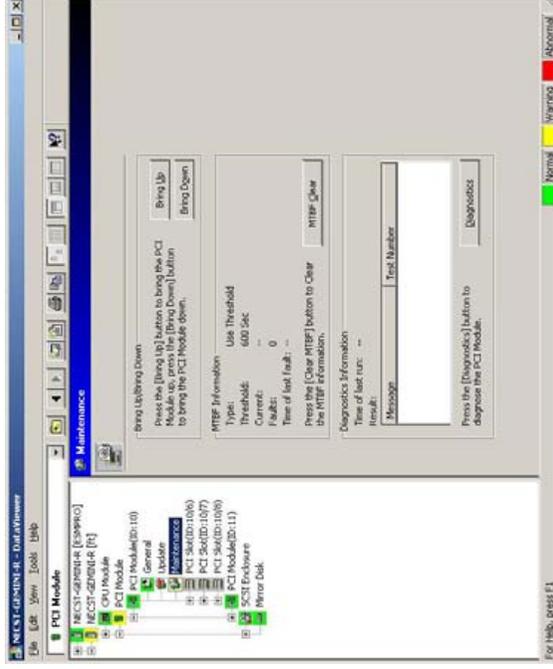

- **Update**  
Allows the device identification information of the PCI modules to be viewed. The detailed device identification information can be checked by selecting [ESMPRO] tree→[Hardware] tree→[Field Replaceable Unit] tree.

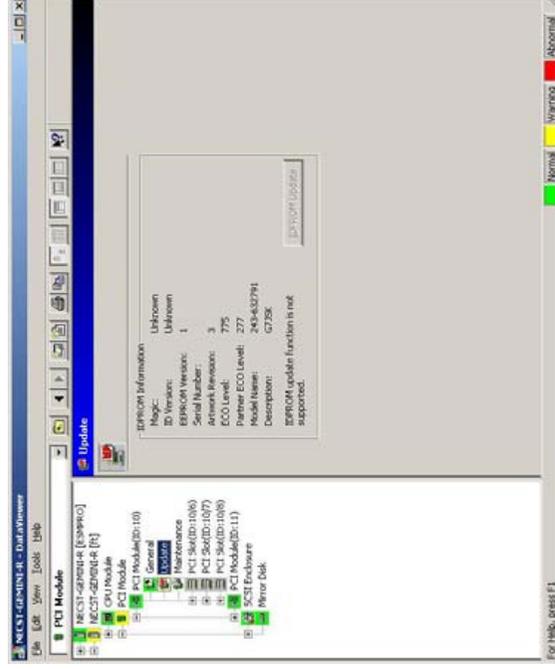

## Monitoring PCI Slots and Devices on PCI Module

To monitor the PCI slots and devices on the PCI modules, see the [PCI slot] tree. To see the information on the [PCI slot] tree, select [PCI Module]→[PCI module (containing PCI slot to be seen)]→[PCI slot] of the [ft] tree.

You can see the following information on the PCI slot and the devices on the PCI slot in the [PCI slot] tree.

- **General**  
Allows the PCI slot configuration information to be viewed.



- **Maintenance**

Allows a device on the PCI slot to be started. This function is not supported in the current version.




- **PCI Device – General**

Allows the information of devices on the PCI slot to be viewed.



- **PCI Device – Detail**

Allows the detailed information of a device on the PCI slot to be viewed.

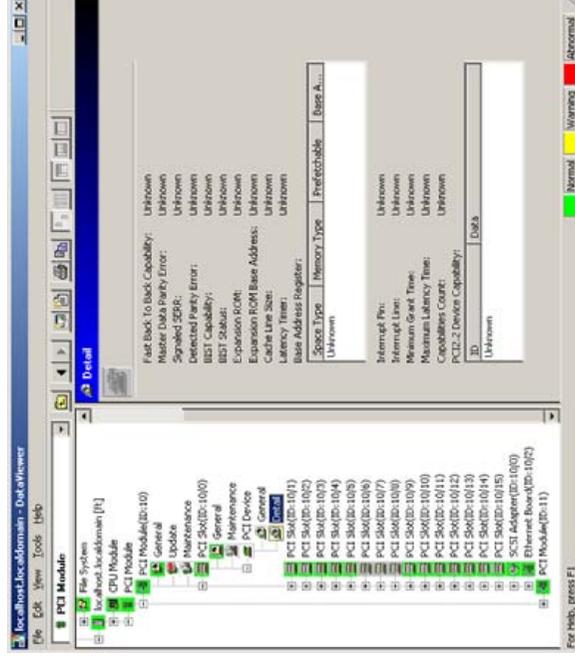

- **PCI Bridge – General**

This function is not supported in the current version.

- **PCI Bridge – Bus**

This function is not supported in the current version.

- **PCI Bridge – Detail**

This function is not supported in the current version.

### Monitoring SCSI adapter on PCI module

To monitor the SCSI adapters on the PCI modules, see the [SCSI adapter] tree. To see the information on the [SCSI adapter] tree, select [PCI Module]→[PCI module (connected to SCSI adapter to be seen)]→[SCSI adapter] of the [ft] tree.

You can see the following information on the SCSI adapters in the [SCSI adapter] tree. This function is not supported in the current version.

- **General**  
This function is not supported in the current version.
- **Maintenance**  
This function is not supported in the current version.
- **Update**  
This function is not supported in the current version.
- **SCSI bus**  
This function is not supported in the current version.

### Monitoring Ethernet adapter on PCI module

To monitor the Ethernet adapters on the PCI modules, see the [Ethernet Board] tree. To see the information on the [Ethernet Board] tree, select [PCI Module]→[PCI module (connected to the Ethernet adapter to be seen)]→[Ethernet Board] of the [ft] tree. You can see the following information on the Ethernet adapters in the [Ethernet Board] tree.


---

#### **IMPORTANT:**


When the Ethernet adapter is unused (i.e. cables are not connected to its port), NEC ESMPRO Agent determines that the port is faulty (does not have any media), and the status color of [PCI module] – [Ethernet Board] of the Data Viewer turns red (abnormal). The server status color of Operation Window also turns red (abnormal).  
As for the ports of the unused Ethernet adapter, connect the unused port of PCI module 0 and that of PCI module 1 with a cross cable.

---

- **General**  
Allows the Ethernet adapter configuration information to be viewed.

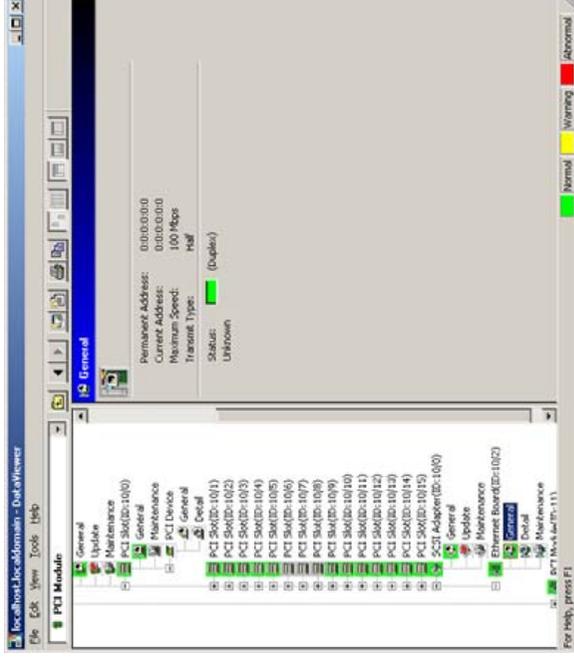


- **Detail**  
Allows the received/transmitted information of the Ethernet adapter to be viewed.

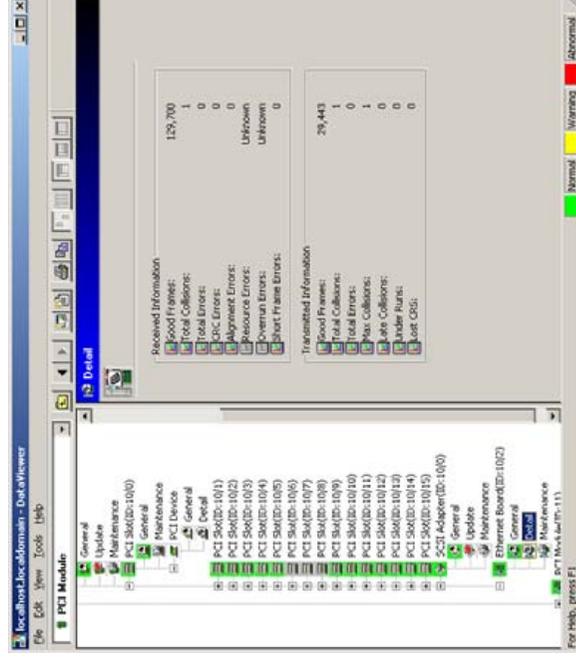

- Maintenance

Allows the MTBF information of Ethernet adapters to be viewed and cleared. See "Maintenance of NEC Express5800/ft series" described later for the MTBF information clear of the Ethernet adapter.

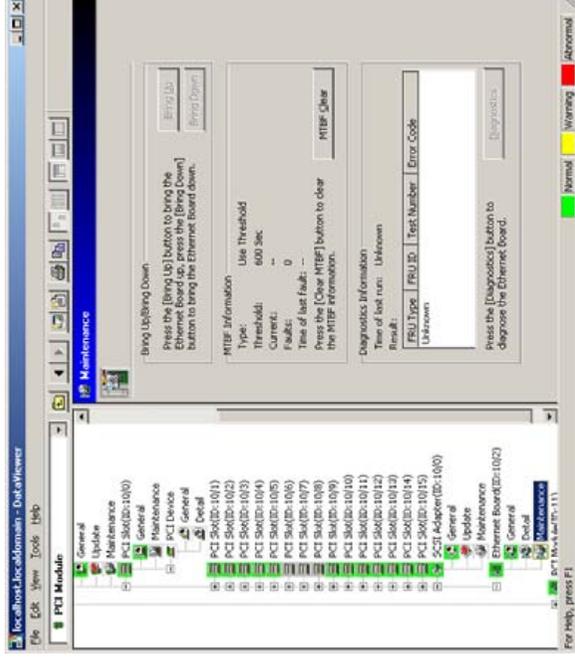

### **Monitoring SCSI Enclosure**

To monitor the SCSI enclosure, see the [SCSI enclosure] tree. To see the information on the [SCSI enclosure] tree, select [SCSI enclosure] of the [ft] tree.

You can see the following information of the SCSI enclosure from the [SCSI enclosure] tree.

- **General**  
This function is not supported in the current version.
- **Maintenance**  
This function is not supported in the current version.
- **Update**  
This function is not supported in the current version.
- **Electronics – General**  
This function is not supported in the current version.
- **Electronics – Maintenance**  
This function is not supported in the current version.
- **SCSI Slot – General**  
This function is not supported in the current version.
- **SCSI Slot – Maintenance**  
This function is not supported in the current version.

### **Monitoring Mirror Disk**

To monitor the mirror disk components, see the [Mirror Disk] tree. To view information on [Mirror Disk] tree, select [Mirror Disk] under [ft] tree.

You can see the redundancy status of the mirrors and the device IDs of the SCSI slots into which these hard disk components are connected.

However, this function is not supported in the current version.

## Maintenance of NEC Express5800/ft series

NEC Express5800/ft series maintenance can be done in two ways; one is to use NEC ESMPRO Manager for remote maintenance and the other is to use the NEC ESMPRO Agent ft server utility on the NEC Express5800/ft series for local maintenance.

**TIPS:** To start the NEC ESMPRO Agent ft server utility installed in the NEC Express5800/ft series, select the items as follows:

```
# /opt/nec/esmpro_sa/bin/ESMftcutil
```

The maintenance functions that can be executed from NEC ESMPRO include three types, those common to all components, those specific to particular components, and general system settings.

The maintenance functions common to all components are operated in the same way basically (the operation procedure and typical examples of screen images are described below).

The table below lists the availability of maintenance functions common to all components.

Component	Start		Stop		MTBF clear		Diagnosis		FW update	
	R	L	R	L	R	L	R	L	R	L
CPU module	√	√	√	√	√	√	-	-	-	√
PCI module	√	√	√	√	√	√	-	-	-	-
PCI slot	-	-	-	-	-	-	-	-	-	-
Ethernet adapter	-	-	-	-	√	√	-	-	-	-
SCSI adapter	-	-	-	-	-	-	-	-	-	-
SCSI enclosure	-	-	-	-	-	-	-	-	-	-
SCSI electronics	-	-	-	-	-	-	-	-	-	-
SCSI slot	-	-	-	-	-	-	-	-	-	-

R: Remote. Executable from remote management PC by using NEC ESMPRO Manager

L: Local. Executable on local server by using ft server utility

√: Supported

-: Not supported

The table below shows the component-specific maintenance functions executable from NEC ESMPRO.

Component	Dump harvest		Dump harvest during system operation		Board switch	
	R	L	R	L	R	L
CPU module	-	-	-	-	-	-

R: Remote. Executable from remote management PC by using NEC ESMPRO Manager  
 L: Local. Executable on local server by using ft server utility  
 √: Supported  
 -: Not supported

Component	Bus reset		Change of primary SCSI bus	
	R	L	R	L
SCSI bus	-	-	-	-

R: Remote. Executable from remote management PC by using NEC ESMPRO Manager  
 L: Local. Executable on local server by using ft server utility  
 √: Supported  
 -: Not supported

The table below shows the support of the whole system setup functions.

Component	Quick dump		Auto firmware update		Auto module start	
	R	L	R	L	R	L
Whole system	-	-	-	-	-	-

R: Remote. Executable from remote management PC by using NEC ESMPRO Manager  
 L: Local. Executable on local server by using ft server utility  
 √: Supported  
 -: Not supported

The table below shows the support of the preventive disk maintenance (S.M.A.R.T.) setup function.

Component	Preventive disk maintenance (S.M.A.R.T.) setup	
	R	L
SCSI disk	-	-

R: Remote. Executable from remote management PC by using NEC ESMPRO Manager  
 L: Local. Executable on local server by using ft server utility  
 √: Supported  
 -: Not supported

### Start and Stop of Components

To start or stop a component with NEC ESMPRO Manager, use the [Maintenance] tree of the component in the [ft] tree of the Data Viewer. Open the tree of the component to be started or stopped and select the [Maintenance] tree.

To start or stop a component with the ft server utility, use the utility screen of the component.

The table below shows the common cases in which a component is to be started or stopped.

Component	Start		Stop	
	Remote	Local	Remote	Local
CPU Module	When the cause of down is reviewed and the system is restarted in module down state. Executable in any of the following module states (this can be viewed on manager screen): <ul style="list-style-type: none"> <li>• Removed</li> <li>• Broken</li> <li>• Shot</li> <li>• Firmware Update Complete</li> <li>• Diagnostics Passed</li> </ul>	When the cause of down is reviewed and the system is restarted in module down state. Executable in the following module state: <ul style="list-style-type: none"> <li>• When the status LED 1 is amber and the status LED 2 is off</li> <li>• Only the status LED illuminates amber when the module is in one of the following states:  <ul style="list-style-type: none"> <li>• Removed</li> <li>• Broken</li> <li>• Shot</li> <li>• Firmware Update Complete</li> <li>• Diagnostics Passed</li> </ul> </li> </ul>	When system is stopped forcibly due to replacement or malfunction of module. Executable in the following module state: <ul style="list-style-type: none"> <li>• Only the green LED is on and in redundant configuration state</li> </ul>	When system is stopped forcibly due to replacement or malfunction of module. Executable in the following module state: <ul style="list-style-type: none"> <li>• Only the green LED is on and in redundant configuration state</li> </ul> <p>The both green LEDs are on when the module is in the following state:</p> <ul style="list-style-type: none"> <li>• Duplex</li> </ul>
PCI Module	Same as above	Same as above	Same as above	Same as above
SCSI Slot	—	—	—	—

Remote: Executable from remote management PC by using NEC ESMPRO Manager

Local: Executable on local server by using ft server utility

—: Not supported

**IMPORTANT:** PCI modules, PCI slots and Ethernet Board have impact on each other. You need to be aware of this, for example, when you replace a PCI module. For details, see “Impact When Module Status Changes” in “Supplement”.


## Procedure in NEC ESMPRO Manager

### Start

1. Select the target component in the [ft] tree.
2. Check the current state with the “Status” display on the target component screen.
3. Click the [Bring Up] button in the [Maintenance] screen for the target component.

A certain time is required for the start.

The start result can be verified by “State” on the target component screen. The result of the start operation is reported by the NEC Express5800/ft series as an alert.

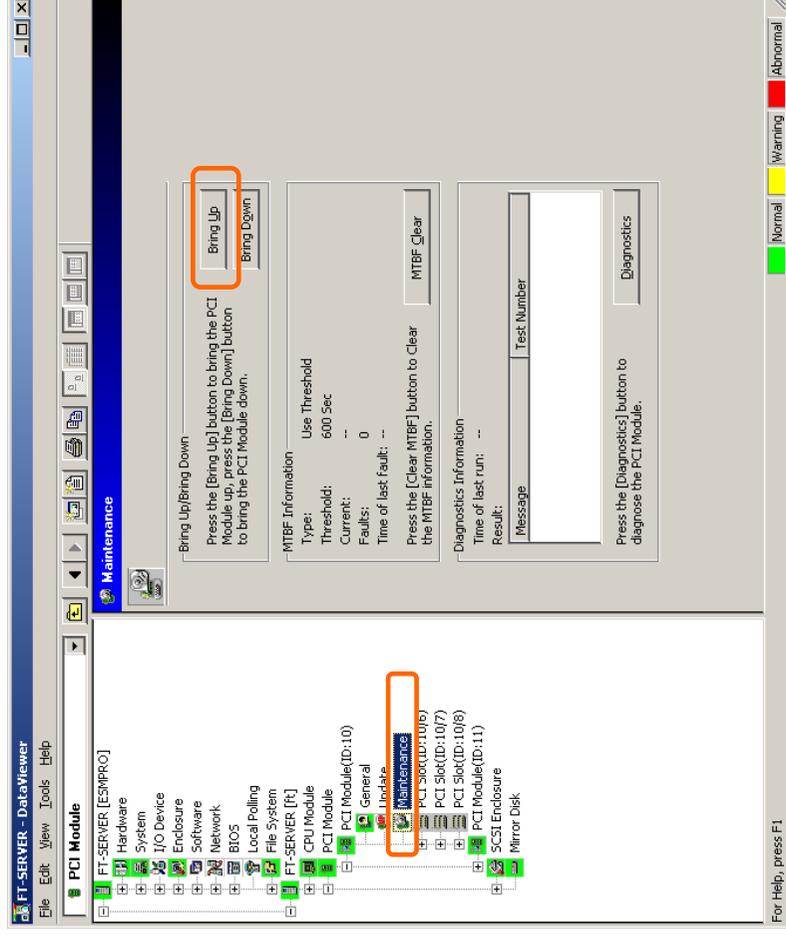

### Stop


Perform the procedure below before replacing a component.

1. Select the target component in the [ft] tree.
2. Check the current state with the “State” display on the target component screen.
3. Click the [Bring Down] button in the [Maintenance] screen for the target component.

A certain time is required for the stop.


The stop result can be verified by “State” on the target component screen. The result of the stop operation is reported by the NEC Express5800/ft series as an alert.

### Sample screen of NEC ESPRO Manager 1

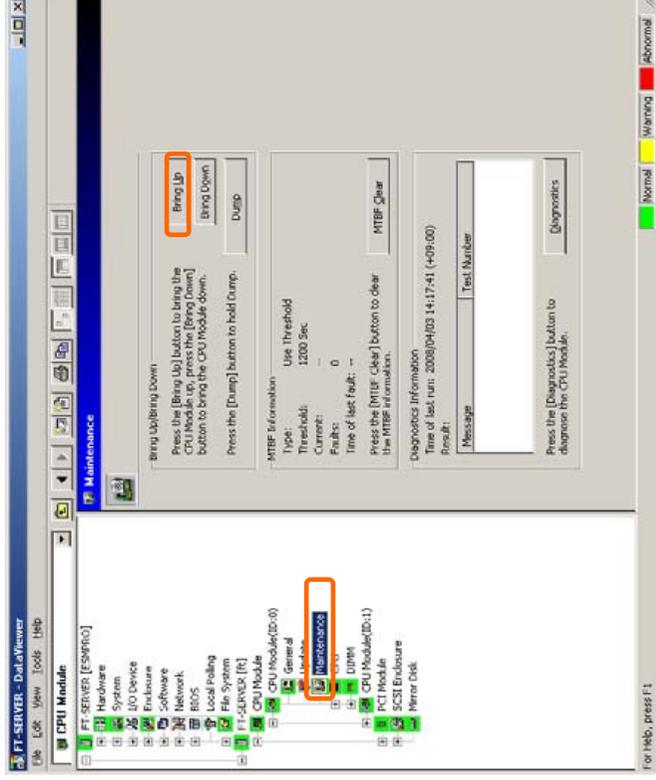

[Maintenance] screen of PCI module  
[CPU Module] – [CPU Module] - [Maintenance]

### Sample screen of NEC ESMPRO Manager 2

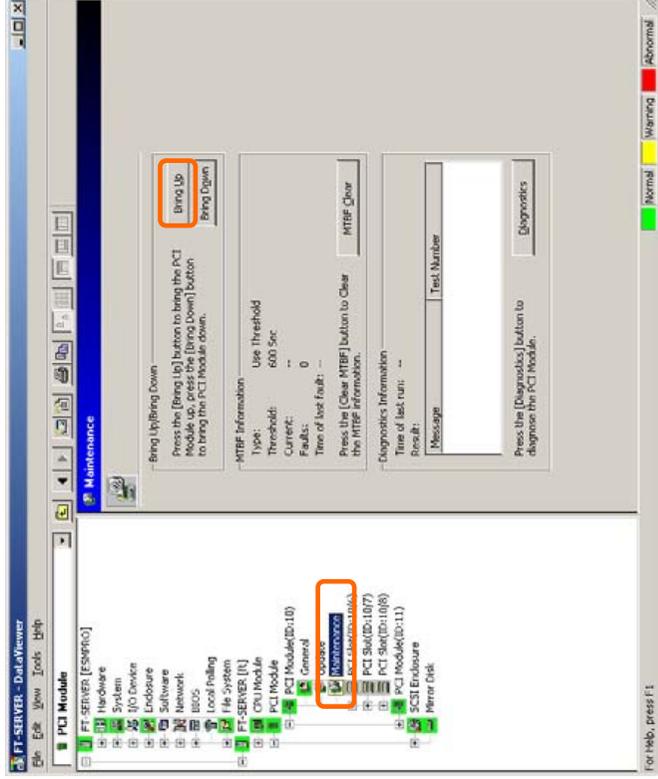

[Maintenance] screen of PCI module  
[PCI Module] - [Maintenance]

## Procedure in the ft server utility

### Start

1. Select the target component by using the ft server utility.
2. Check the current state of the target component with the LEDs.
3. Click the [Up] button of the target component.

A certain time is required for the start.

The start result can be verified by the LEDs on the target component. The result of the start operation is registered in the syslog.



### Stop

1. Stop before replacing components.
2. Select the target component by using the ft server utility.
3. Check the current state of the target component with the LEDs.
4. Click the [Down] button of the target component.

A certain time is required for the start.

The start result can be verified by the LEDs on the target component. The result of the start operation is registered in the syslog.

### Sample screen of ft server utility

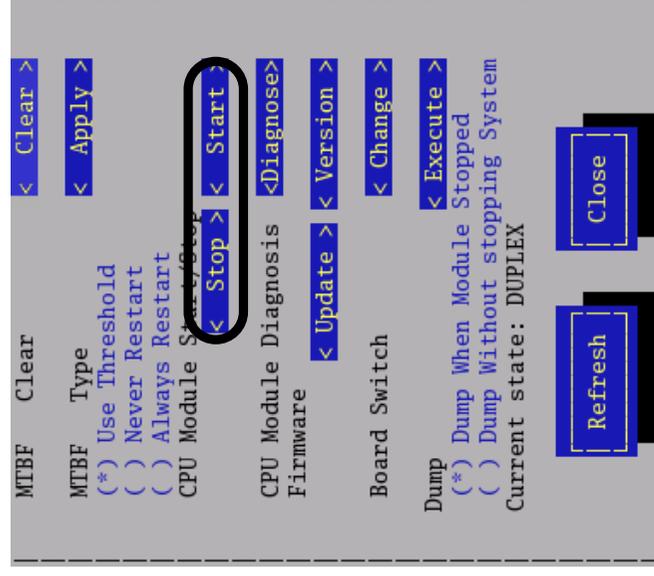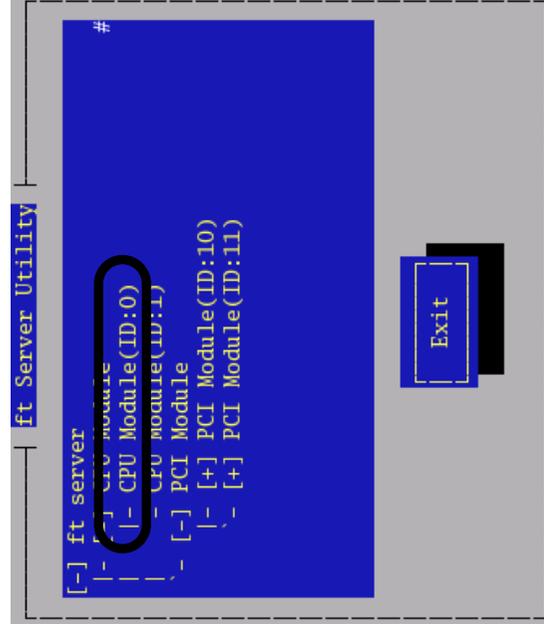

### Check and Clear of MTBF Information

The MTBF information of a component can be viewed or cleared (initialized).

NEC Express5800/ft series manages the MTBF (mean time between failure) of each component. If a fault occurs in a component, the NEC Express5800/ft series calculates the MTBF of the component again. If the calculated value is lower than the pre-defined threshold, the NEC Express5800/ft series disables the component to be used.

Contact your maintenance personnel if such a symptom as above occurs.

**IMPORTANT:** A disabled component with the MTBF lower than the threshold can be forcibly enabled by clearing the MTBF. However, contact your maintenance personnel for the forced use of such a component.

To clear the MTBF information of a component with NEC ESMPRO Manager, use the [Maintenance] tree of the component of the [ft] tree of the DataViewer. Open the tree of the component whose MTBF information is to be cleared and select the [Maintenance] tree.

To clear the MTBF information of a component with the ft server utility, use the utility screen of the component. The table below shows the potential cases in which the MTBF information of a component is to be cleared. Contact your maintenance personnel for clearing MTBF information.

Component	MTBF clear	
	Remote	Local
CPU Module	To start the module forcibly after replacing a module or if MTBF became lower than the threshold due to malfunction and disabled the module. Executable in the following module state (this can be viewed on manager screen): <ul style="list-style-type: none"> <li>Broken</li> <li>MTBF is lower than the threshold.</li> </ul> Same as above	To start the module forcibly after replacing a module or if MTBF became lower than the threshold due to malfunction and disabled the module. Executable in the following module state: <ul style="list-style-type: none"> <li>The amber LED is on and the event indicating that MTBF is lower than the threshold is registered in the event log.</li> </ul> Same as above
PCI Module	Same as above	Same as above
Ethernet Adapter	To start the module/component forcibly after replacing a module or if MTBF became lower than the threshold due to malfunction and disabled the module/component. Executable in the following module state (this can be viewed on manager screen): <ul style="list-style-type: none"> <li>Broken</li> <li>MTBF is lower than the threshold.</li> </ul> Hot-swap of PCI module also clears MTBF information	To start the module/component forcibly after replacing a module or if MTBF became lower than the threshold due to malfunction and disabled the module/component. Executable in the following module state (this can be viewed on manager screen): <ul style="list-style-type: none"> <li>The amber LED is on and the event indicating that MTBF is lower than the threshold is registered in the event log.</li> </ul> Hot-swap of PCI module also clears MTBF information
SCSI Adapter	–	–

Remote: Executable from remote management PC by using NEC ESMPRO Manager

Local: Executable on local server by using ft server utility

–: Not support

Component	MTBF clear	
	Remote	Local
SCSI Enclosure	–	–
SCSI Electronics	–	–
SCSI Slot	–	–

Remote: Executable from remote management PC by using NEC ESMPRO Manager

Local: Executable on local server by using ft server utility


–: Not support

### Procedure in NEC ESMPRO Manager

Perform the procedure below before replacement of a component.

1. Select the target component in the [ft] tree.
2. Check the current state with the “State” display on the target component screen.
3. Click the [MTBF Clear] button in the [Maintenance] screen for the target component.  
The MTBF clearing result can be verified by 0 in ‘Faults’ in [MTBF information] on the target component screen.
4. Start the component.

### Sample screen of NEC ESMPRO Manager

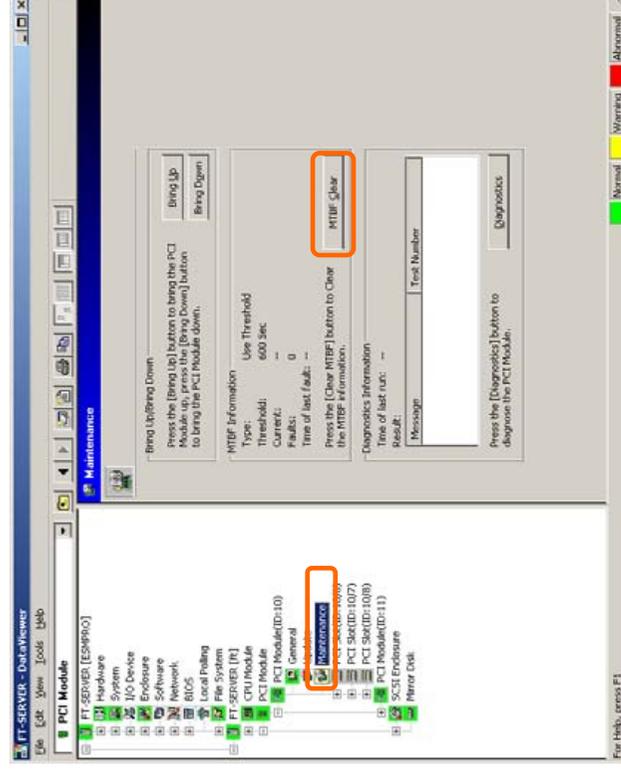



[Maintenance] screen of SCSI enclosure  
[PCI module] – [Maintenance]

### Procedure in the ft server utility

Perform the procedure below before replacement of a component.

1. Select the target component by using the ft server utility.
2. Check the current state of the target component with the LEDs and event log.
3. Click the [Clear] button in [MTBF Clear] of the target component.  
The MTBF clearing result can be verified by the LEDs on the target component. The result of the MTBF clearing operation is registered in the syslog.
4. Start the component.

### Sample screen of ft server utility

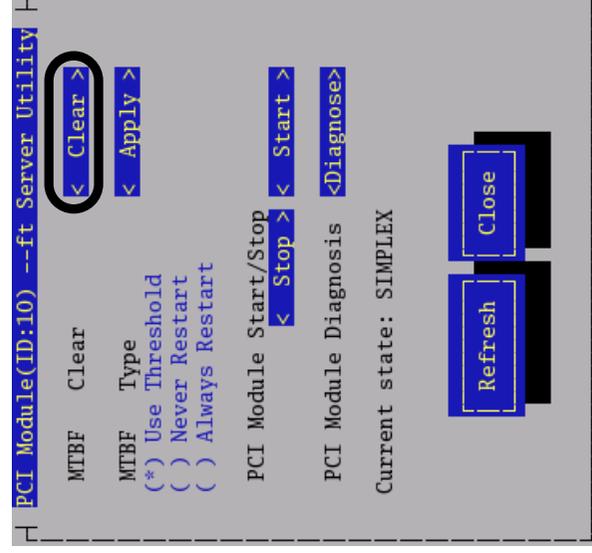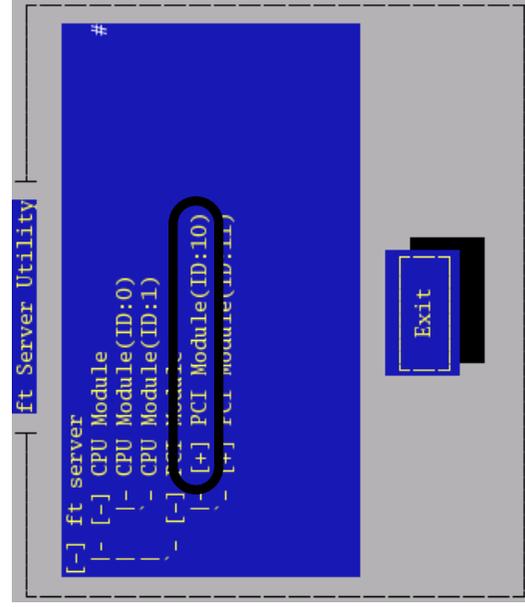

[PCI Module]

## Diagnositics

The NEC Express5800/ft series provides the self-check diagnosis function for some components. If a fault occurs in a component, the NEC Express5800/ft series can diagnose the component to detect the fault.

To diagnose a component with the NEC ESMPRO Manager, use the [Maintenance] tree of the component in the Data Viewer. Open the tree of the component to be diagnosed and select the [Maintenance] tree.

To diagnose of a component with the ft server utility, use the utility screen of the component.


This function is not supported in the current version.

### Procedure in NEC ESMPRO Manager

This function is not supported in the current version.

1. Select the target component in the [ft] tree.
2. Check the current state with the “State” display on the target component screen. If the component is operating, stop the component.
3. Click the [Diagnostics] button in the [Maintenance] screen for the target component.  
The diagnosis result can be verified by “Result” of the diagnosis on the target component screen. The result of the diagnosis is reported by the NEC Express5800/ft series as an alert.  
The result of diagnosis executed last is displayed in the [Diagnosis Information] column. In addition, if a fault is detected by the result of the diagnosis, the state of the [General] tree of the component is changed.

### Sample screen of NEC ESMPRO Manager


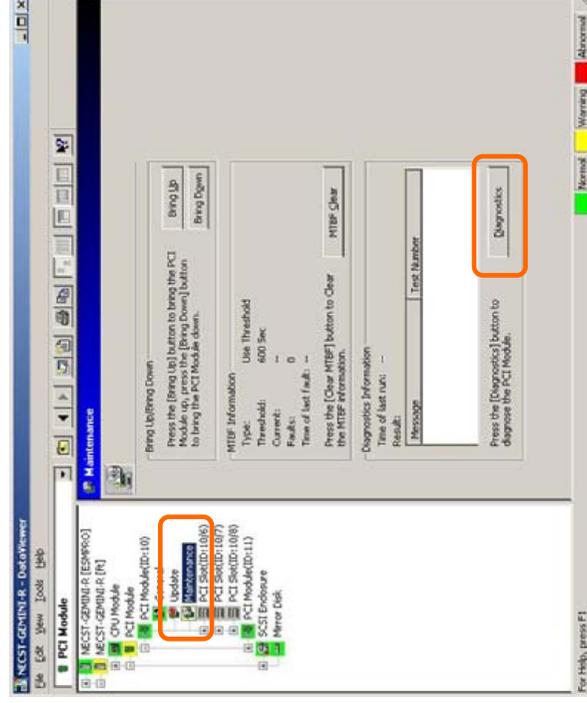


[Maintenance] screen of PCI module  
[PCI Module] – [Maintenance]

### Procedure in the ft server utility

1. Select the target component by using the ft server utility.
2. Check the current state of the target component with the LEDs. If the component is operating, stop the component.
3. Click the [Diagnostics] button in the [Diagnosis Information] on the target component. The diagnosis result can be verified by the LEDs on the target component. The result of the diagnosis is registered in the syslog.
4. Start the component.

### Sample screen of ft server utility

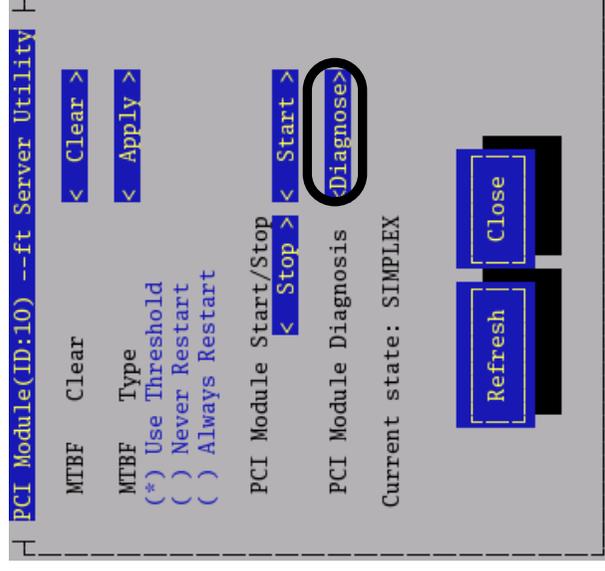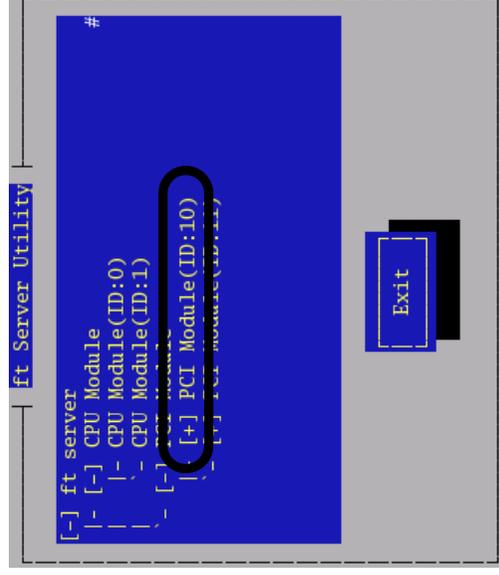

[PCI Module]

## Firmware Update

NEC Express5800/ft series can update firmware (including BIOS) if some hardware components operate in the online state (in which the system continues the operation but the component trying to update firmware or BIOS is stopped).

To update firmware with NEC ESMPRO Manager, use the [Update] tree of the component in the DataViewer. Open the tree of the component for which firmware is updated and select the [Update] tree.

To update the firmware of a component with the ft server utility, use the utility screen of the component.

To update the firmware of a component, the firmware image file of the firmware for update must previously be stored in the managed server. On the firmware update screen, specify the path to the firmware image file for update.

The table below shows the potential cases in which the firmware of a component is to be updated.

Component	Firmware update	
	Remote	Local
CPU Module	-	<p>When BIOS must be updated to new one. Executable in the following module state:</p> <ul style="list-style-type: none"> <li>• When the status LED 1 is amber and the status LED 2 is off</li> <li>• Only the status LED 1 illuminates amber when the module is in one of the following states: <ul style="list-style-type: none"> <li>• Removed</li> <li>• Broken or forced stop</li> <li>• No fault found by diagnosis (Firmware Update Complete)</li> </ul> </li> </ul> <p>To update the module under operation, bring down the module before the update.</p>

Remote: Executable from remote management PC by using NEC ESMPRO Manager

Local: Executable on local server by using ft server utility


–: Not support

## Procedure in NEC ESMPRO Manager

This function is not supported in the current version.

1. Save the image data of the update firmware in an arbitrary directory of the NEC Express5800/ft series.  
Save the image data in any way. Write down the path to the directory in which the image data is saved.
2. Select the target component in the [ft] tree.
3. Check the current state with the “State” display on the target component screen. If the component is operating, stop the component.
4. Click the [Firmware Update] button in the [Update] screen for the target component.


### Sample screen of NEC ESMPRO Manager

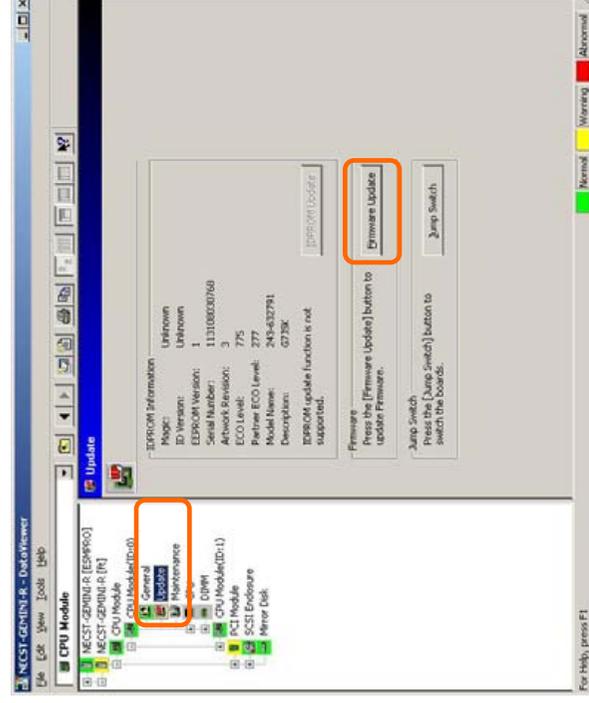


[Update] screen of CPU module  
[CPU Module] – [Update]

5. Select [Specify the file path to update], enter the directory in which the updated firmware specified in the input box in step 1 is saved, and click the [Execute] button.  
Perform the firmware update.

The update result can be verified by the state on the target component screen (indication of “Firmware update completed”). The result of the update processing is reported by the NEC Express5800/ft series as an alert.

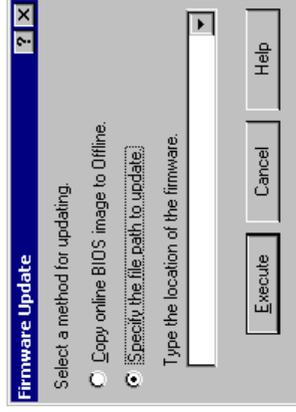

6. After the BIOS for a single CPU module is completed, click the [Jump Switch] button. The module completely updated is started and the active module is stopped.
7. Start the other module stopped.  
Starting the module causes the firmware to be updated automatically. However, if the [Enable automatic firmware update] property is invalid, update the module in the procedure as follows:
  - (1) Check the current state with the “State” display on the target component screen. If the component is operating, stop the component.
  - (2) Click the [Firmware Update] button in the [Update] screen for the target component.
  - (3) Select the update method in the [Firmware Update] dialog box and click the [Execute] button.
  - (4) Start the module.

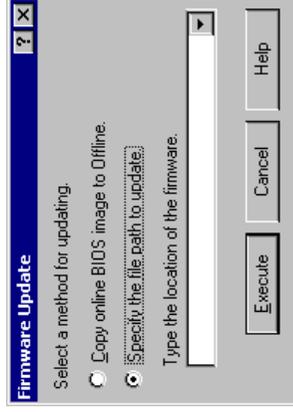

Even if you do not have the image data of firmware for update, the firmware can be copied from the other module.



By starting the module, the firmware will be updated automatically. However, when the [Enable automatic firmware update] property is disabled, follow the steps below to update the firmware:

- 1.** Start the system using the module of the firmware copy source.  
See the current status by the “Status” indication on the target component screen of the copy destination and verify that it is stopped.
- 2.** On the [Update] screen of the target component, click [Firmware update].
- 3.** When a firmware updating dialog appears, check [Copy online BIOS image to Offline] and execute it.  
Firmware is updated by copying the firmware on the online side to the offline side.
- 4.** Start the stopped module.

### Procedure in ft server utility


1. Save the image data of the update firmware in /etc/opt/ft/BIOS.ROM of the NEC Express5800/ft series.
2. Select the target component in the [ft] tree.
3. Check the current state of the target component with the LEDs. If the component is operating, stop the component.
4. Click the [Firmware...] button for the target component.

### Sample screen of ft server utility

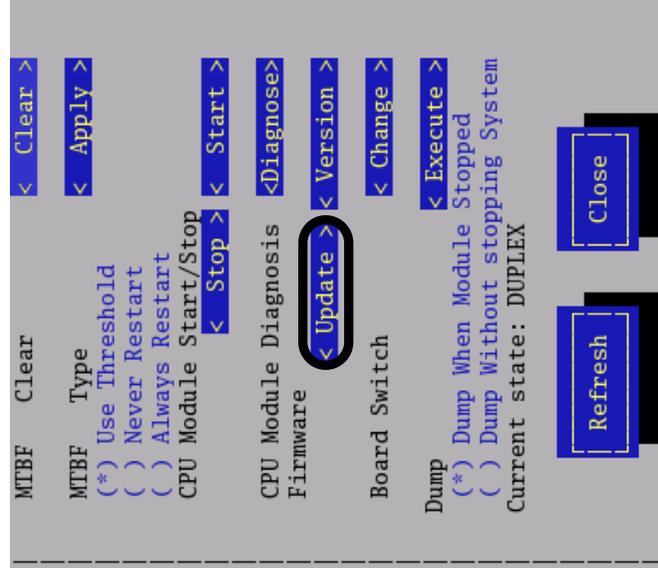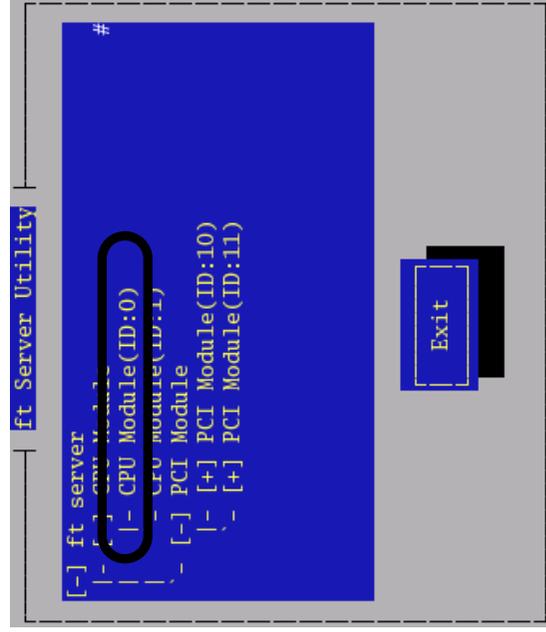

[CPU Module]

5. Select [Specify new firmware for update], and click the [Activate] button.  
File path cannot be modified by the path (/etc/opt/ft/BIOS.ROM) in procedure 1.  
Perform the firmware update.

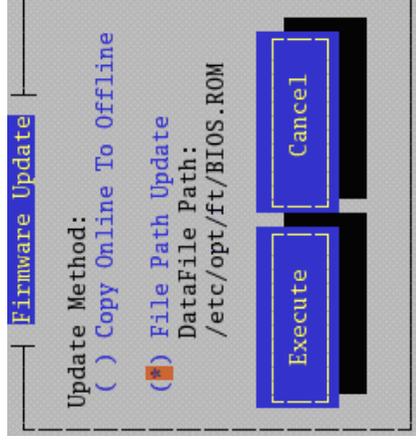


6. Check the update result with the syslog.

7. After the BIOS for a single CPU module is completed, click the [Jump Switch] button. The module completely updated is started and the module under operation is stopped. [Jump Switch] function is not supported in the current version.
8. Start the other inactive module.

Starting the module causes the firmware to be updated automatically. However, if the [Enable automatic firmware update] property is disabled, update the module in the procedure as follows:

  - (1) Check the current state with the “State” display on the target component screen. If the component is operating, stop the component.
  - (2) Click the [Firmware...] button for the target component.
  - (3) Select the update method in the [Firmware Update] dialog box and click the [Activate] button.
  - (4) Start the module.

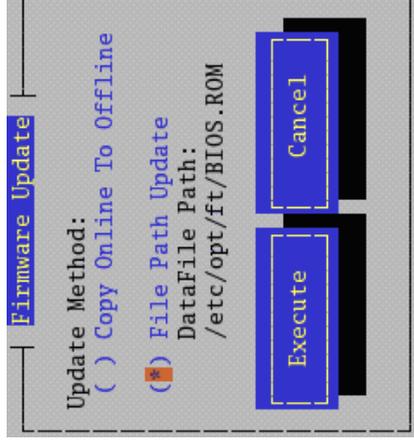

Even if you do not have the image data of firmware for update, the firmware can be copied from the other module.

By starting the module, the firmware will be updated automatically. However, when the [Enable automatic firmware update] property is disabled, follow the steps below to update the firmware:

1. Start the system using the module of the firmware copy source.

See the current status by the “Status” indication on the target component screen of the copy destination and verify that it is stopped.
2. Click the [Firmware...] button for the target component.
3. When a firmware updating dialog appears, check [Copy firmware from Online module to Offline one] and execute it.

Firmware is updated by copying the firmware on the online side to the offline side.
4. Start the stopped module.

## Dump Collection

To collect the dump file with NEC ESMPRO Manager, use [CPU Module] → [Maintenance] tree in the DataViewer.

To collect the dump with the ft server utility, use the utility screen of the component.

---

**IMPORTANT:** Acquire the dump only for the examination of a fault.

---

The dump can be collected in two ways. In each way, the dump file is stored under the directory of /var/crash/ on the server.

- Collecting dump of inactive module  
The dump is acquired from the inactive CPU module (due to the occurrence of a fault or forced stop).
- Collecting dump under system operation  
Either of the CPU modules is entered into the offline state and the dump is collected during system operation. After the acquisition, the CPU module is returned to the online state again. This can be done only in the duplex system.

However, this function is not supported in the current version.

### Procedure in NEC ESMPRO Manager

The [Dump] button of NEC ESMPRO Manager performs the function of “saving dump during system operation.”

However, this function is not supported in the current version.


1. Select [CPU Module] in the [ft] tree.
2. Check the current state with the “State” display on the target component screen.
3. Click the [Dump] button in the [Maintenance] screen for the target component.

A certain time is required for the dump saving.

The dump is stored under the directory of /var/crash/ on the managed server.

The result of the dump saving is reported by the NEC Express5800/ft series as an alert.

### Sample screen of NEC ESMPRO Manager

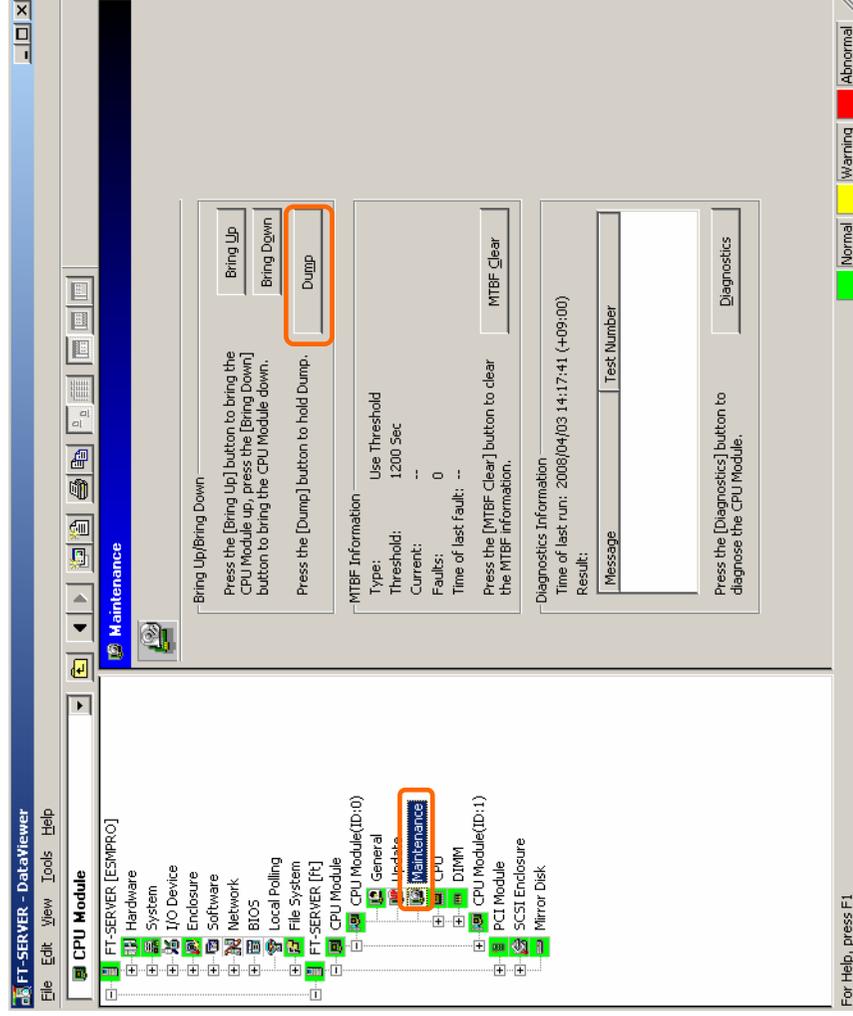

[Maintenance] screen of CPU module  
[CPU Module] – [Maintenance]

### Procedure in ft server utility

This function is not supported in the current version.



1. Select the target CPU module by using the ft server utility.
2. Check the current state of the target CPU module with the LEDs.
3. Select the dump acquisition method with [Dump] of the target CPU module and click the [Harvest] button.

A certain time is required for the dump acquisition.

The dump is stored under /var/crash/ directory on the server.

The result of the dump acquisition can be viewed in the syslog.

### Sample screen of ft server utility

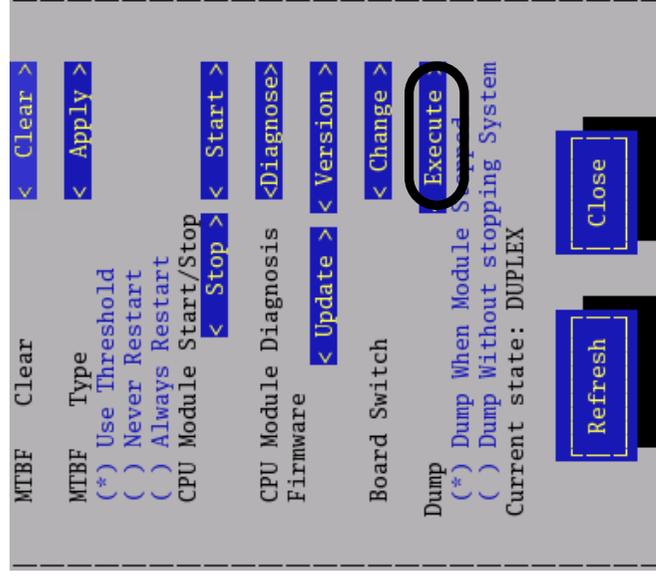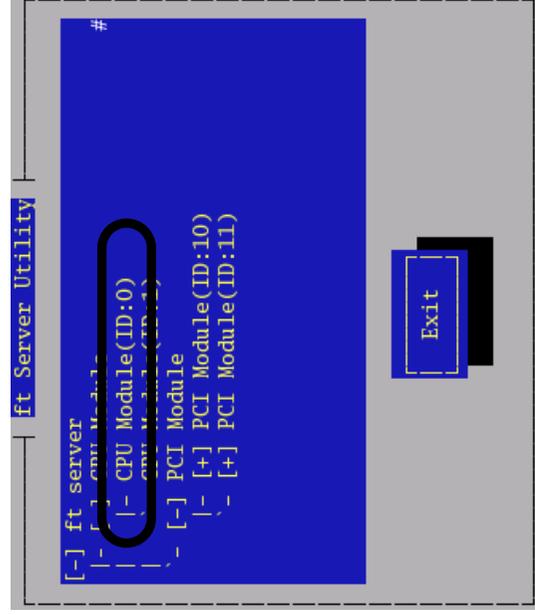

[CPU Module]


## Refresh of View based on State Change Alert Setting

A new function is supported so that NEC ESMPRO Manager window will be updated on a system state change basis (in other words, whenever necessary). This function is OFF by default. See the [Setting] below about how to turn it ON.

NEC ESMPRO Manager window is updated by one minute-interval polling by default. Therefore, there is some time-lag for NEC ESMPRO Manager to recognize changes in NEC Agent. By using this function, the time-lag can be reduced. However, it may consume a little bit more network band width since each state change will be notified to NEC ESMPRO Manager as some kind of alert.


### [Setting]

1. Select [Program] - [NEC ESMPRO Manager] from the Start menu and click [Manager Settings].

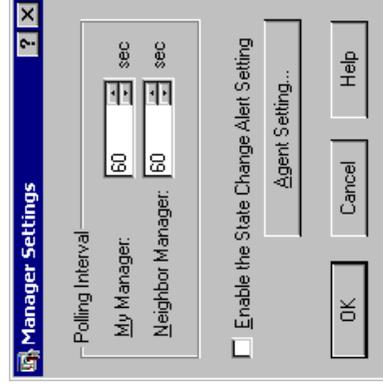

[Manager Settings] dialog box

2. Check [Enable the State Change Alert Setting].
3. Click the [Agent Setting...] button.

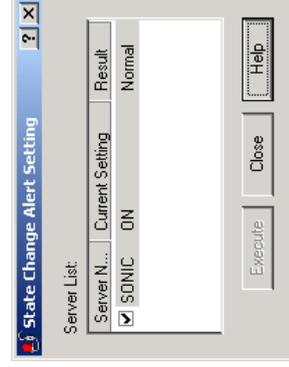

[State Change Alert Setting] dialog box

4. Check the name of servers sending the state change alert to the Manager when the Agent recognizes changes in the state.  
Click the [Execute] button for the setting change to take effect.

# Chapter 6

---

## Maintenance

This chapter describes the daily maintenance of NEC Express5800/ft series and precautions when relocating or storing the server.

## DAILY MAINTENANCE


To use your NEC Express5800/ft series in best condition, check and maintain regularly as described below. If an error is found on your NEC Express5800/ft series, consult your sales agent.

### Checking Alert


Monitor the failure occurrence by NEC ESMPRO during the system operation.

Always check whether any alert is reported to NEC ESMPRO Manager on the management PC. Check whether any alert is reported on the Operation Window, Data Viewer, or Alert Viewer of NEC ESMPRO Manager.

### Viewers of NEC ESMPRO

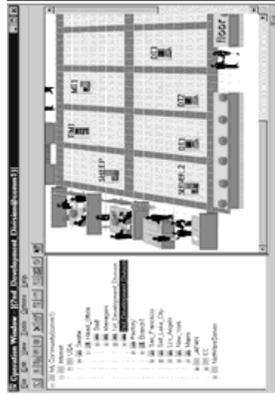

Operation Window

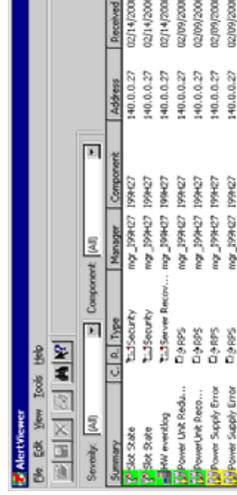

Severity	IC.B.I.	Type	Message	Component	Address	Breaked
OK	2048	Security	mg_1994C7	1994C7	140.0.0.27	021412000
OK	2048	Security	mg_1994C7	1994C7	140.0.0.27	021412000
Warning		Server Reconn...	mg_1994C7	1994C7	140.0.0.27	021412000
Warning		Power Line Reconn...	mg_1994C7	1994C7	140.0.0.27	020912000
Warning		Power Supply Error	mg_1994C7	1994C7	140.0.0.27	020912000
Warning		Power Supply Error	mg_1994C7	1994C7	140.0.0.27	020912000

Alert Viewer



Data Viewer

### Checking STATUS LEDs

Check the LED indication on the front of the NEC Express5800/ft series when the server is powered on or powered off by the shut down operation. The functions and indications of LEDs are described in Chapter 2. If any indication that shows an error, contact your sales agent.

## Cleaning

Clean the server on a regular basis to keep the server in a good shape.

 <b>WARNING</b>
<p>Observe the following instructions to use the server safely. There are risks of death or serious personal injury. See “PRECAUTIONS FOR SAFETY” in Chapter 1.</p> <ul style="list-style-type: none"><li>• Do not disassemble, repair, or alter the server.</li><li>• Do not look into the DVD-ROM drive.</li><li>• Disconnect the power plug before cleaning the server.</li></ul>

### Cleaning the NEC Express5800/ft series

For daily cleaning, wipe the external surfaces of the server with a dry soft cloth. Follow the procedure below if stains remain on the surfaces:

#### IMPORTANT:

- To avoid altering the material and color of the server, do not use volatile solvents such as thinner or benzene to clean the server.
  - The power receptacle, the cables, the connectors on the rear panel of server, and the inside of the server must be kept dry. Do not moisten them with water.
1. Make sure that the server is powered off.
  2. Unplug the power cord of the server from a power outlet.
  3. Wipe off dust from the power cord plug with a dry cloth.
  4. Soak a soft cloth in neutral detergent that is diluted with cold or warm water, and squeeze it firmly.
  5. Rub off stains on the server with the cloth prepared in Step 4.
  6. Soak a soft cloth in water, squeeze it firmly and wipe the server with it once again.
  7. Wipe the server with a dry cloth.
  8. Wipe off dust from the fan exhaust opening on the rear of the server with a dry cloth.

## Cleaning the Keyboard and Mouse

### **IMPORTANT:**


A keyboard and a mouse use USB interface. Therefore it is not necessary to power off the server when connecting or disconnecting them.

---

Disconnect the keyboard from the server while the devices in the system (the server and the peripheral devices) remain turned on. Wipe the keyboard surface with a dry cloth. Then connect the keyboard to the server.

The mouse operation depends on the degree of smoothness of the internal ball rotation. To keep the mouse ball clean, use the mouse in a place with little dust. Follow the steps below to clean the mouse regularly:

1. Disconnect the mouse from the USB port of the keyboard while the server remains powered on.
2. Turn the mouse upside down, and rotate the mouse ball cover counterclockwise to remove it. Take out the ball from the mouse.
3. Wipe the mouse ball with a dry soft cloth. If stains remain, use a soft cloth to wipe them off. Soak the soft cloth in neutral detergent that is diluted with water or warm water, and squeeze it firmly.
4. Wipe three small rollers inside the mouse with cotton swab. Use the cotton swab soaked with alcohol if stains remain.
5. Put the mouse ball back into the mouse. If the mouse or rollers are wet in steps 3 and 4, put it back after fully dried.
6. Place the mouse ball cover, and rotate it clockwise until it is locked.
7. Connect the mouse to the server .

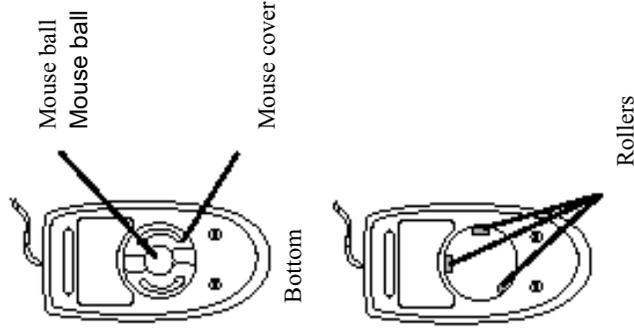

## Cleaning the Floppy Disk Drive

A read/write error may occur due to stains on the read/write head of the floppy disk drive.

Use the cleaner dedicated for floppy disk drive to clean the read/write head. It is recommended to clean the head on regular basis.

## Cleaning DVD/CD-ROM

A dusty DVD/CD-ROM or dust-accumulated tray causes the device to fail to read data correctly.

Follow the procedure below to clean the tray and DVD/CD-ROM regularly:

1. Make sure that the server is powered on.
2. Press the Eject button on the front of the DVD-ROM drive. The tray comes out.
3. Hold the DVD/CD-ROM lightly and take it out from the tray.

---

**IMPORTANT:** Do not touch the signal side of the DVD/CD-ROM with your hand.

---

4. Wipe the tray with a dry soft cloth.

---


**IMPORTANT:** Do not wipe the lens of the DVD-ROM drive. Doing so may damage the lens and may cause a malfunction of the drive.

---

5. Gently push on the tray front to close the tray.
6. Wipe the signal side of the CD/DVD-ROM with a dry soft cloth.

---

**IMPORTANT:** Wipe DVD/CD-ROMs from the center to the outside. Use only CD-ROM cleaner if necessary. Cleaning a DVD/CD-ROM with record spray/cleaner, benzene, or thinner causes damage to the DVD/CD-ROM contents. At worst, inserting the DVD/CD-ROM into the server may cause failure.

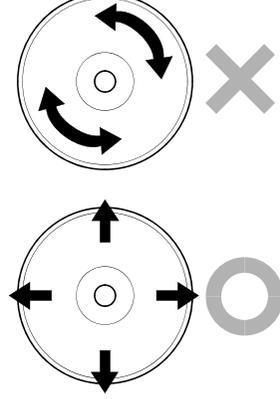

## SYSTEM DIAGNOSTICS

The System Diagnostics runs several tests on the server.

Select [Tool menu] - [Test and Diagnostics] in the NEC EXPRESSBUILDER to diagnose the system.

---

### Test Items

The following items are tested in system diagnostics.

- Memory
- CPU cache memory
- Hard disk drive used as a system

---

**IMPORTANT:** When executing the system diagnostics, make sure to remove the LAN cable. Executing the system diagnostics with the LAN cable connected, the network may be influenced.

---

**TIPS:** On checking the hard disk drive, no data is written into the disk.

---

---


### Startup and Exit of System Diagnostics

Follow the steps below to start the system diagnostics. (If the server is running, shut it down, and execute Step 1 through Step 12.)

1. Shutdown the OS, and power off the server. Then, unplug the power cord.
2. Disconnect all the LAN cables from the server.
3. Plug the power cord and power on the server.
4. Use the NEC EXPRESSBUILDER DVD to start the system.
5. Select [Tool menu].

6. Select [Test and diagnostics].  
Select [End-User Mode] and the system diagnostics starts. The diagnostics will be completed in approximately three minutes.  
When the diagnostics is completed, the screen of the display changes as shown below:

Diagnostics tool title

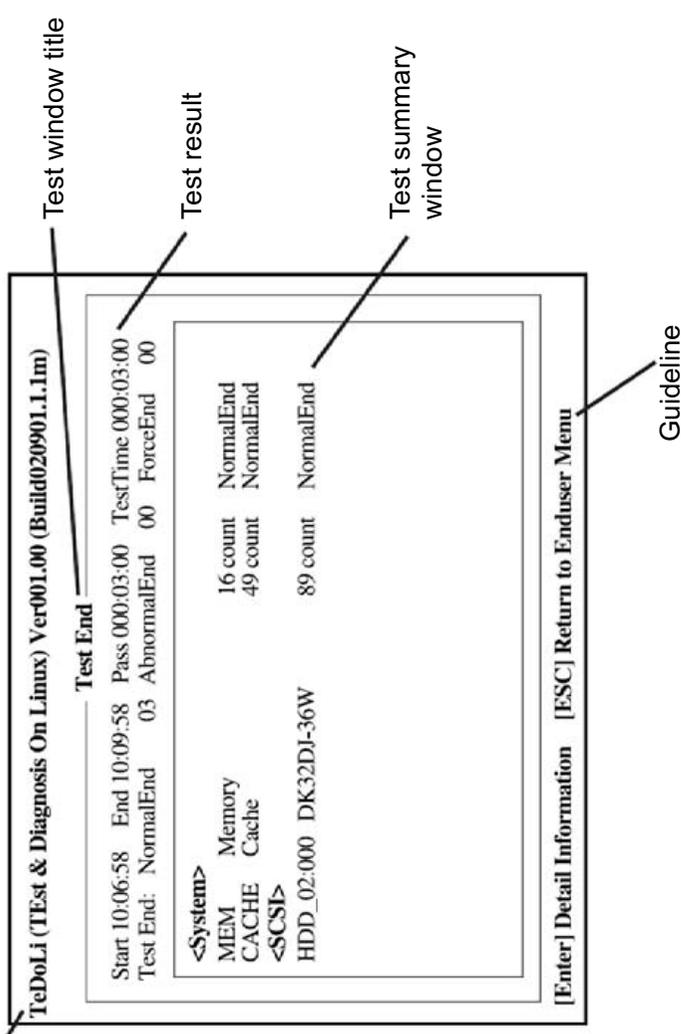

### Diagnostics tool title

Shows the name and version of the diagnostic tool.

### Test window title

Shows the progress of the diagnostics. “Test End” is displayed when the diagnostics completes.

### Test result

Shows the start, end, and elapsed time and completion status of the diagnostics.

### Guideline

Shows the details of the keys to operate window.


### Test summary window

Shows the results of each test that executed the diagnostics. Move the cursor and press the **Enter** key on the cursor line to display the details of the test.

When an error is detected by the system diagnostics, the relevant test result in the test summary window is highlighted in red, and “Abnormal End” is displayed in the result on the right side.

Move the cursor to the test that detected the error, and press the **Enter** key. Record the error message that has been output to the Detail Information screen and contact your sales agent.

7. Follow the guideline shown at the bottom of the screen, and press the **Esc** key.  
The [Enduser Menu] below is displayed.

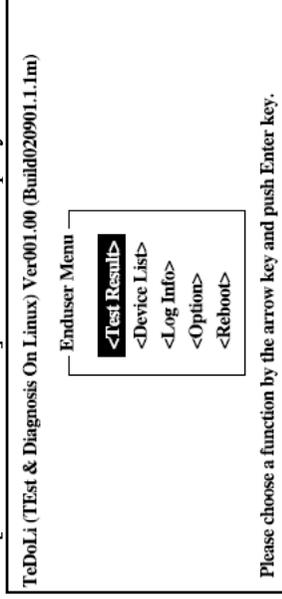

**<Test Result>**

Shows the diagnostics completion screen of the above diagnostics.

**<Device List>**

Shows a list of connected devices.

**<Log Info>**

Shows the log information of the diagnostics. It can be saved on a floppy disk. To save it on a floppy disk, insert a formatted floppy disk to the floppy disk drive, and select <Save(F)>.

**<Option>**

Optional features can be used from this menu.

**<Reboot>**

Reboots the system.

8. Select <Reboot> in the [Enduser Menu] above.  
The server restarts and the system is started from the NEC EXPRESSBUILDER.
9. Exit the NEC EXPRESSBUILDER, and remove the DVD from the DVD-ROM drive.
10. Power off the server and unplug the power cord from the receptacle.
11. Reconnect all the LAN cables that have been disconnected in Step 2 to the server.
12. Plug the power cord.

This completes the system diagnostics.

## OFF-LINE MAINTENANCE UTILITY


The Off-line Maintenance Utility is an OS-independent maintenance program. When you are unable to start the OS-dependent NEC ESPRO to troubleshoot a problem, the Off-line Maintenance Utility can be used.

---

### Starting the Off-line Maintenance Utility

The Off-line Maintenance Utility may be started in the following ways.

1. Boot peripheral devices at first, then power on the Express server.
2. Load the [EXPRESSBUILDER] DVD into the optical disc drive of the Express server.
3. After loading the DVD, reset (by pressing <Ctl> + <Alt> + <Delete> keys) or power off and on to reboot the Express server.  
Following menu appears on the DVD.

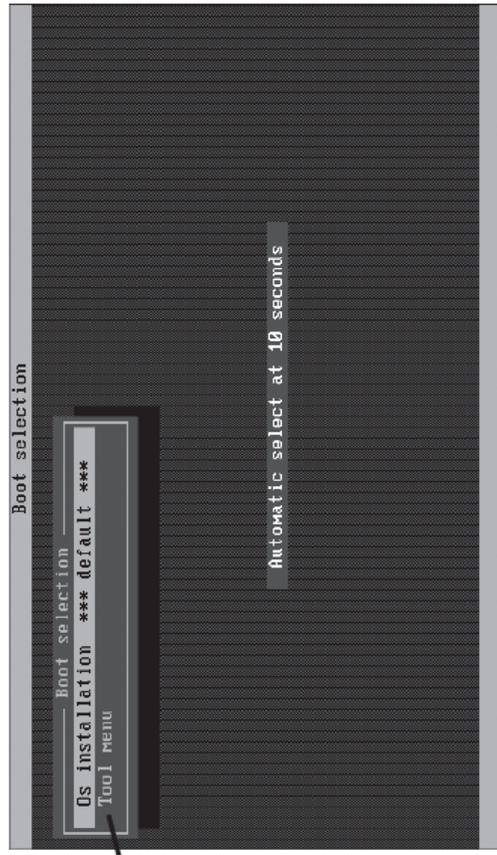

Tool menu:  
Select this to launch the  
Off-line Maintenance Utility.

---

### IMPORTANT:


Default selection is [Os installation] on the menu. When there is no operation for ten seconds after the Boot selection menu appears, [Os installation] starts automatically.

---

## 6-10 Maintenance

---

4. Select [Tool menu].  
Following Language selection menu appears.

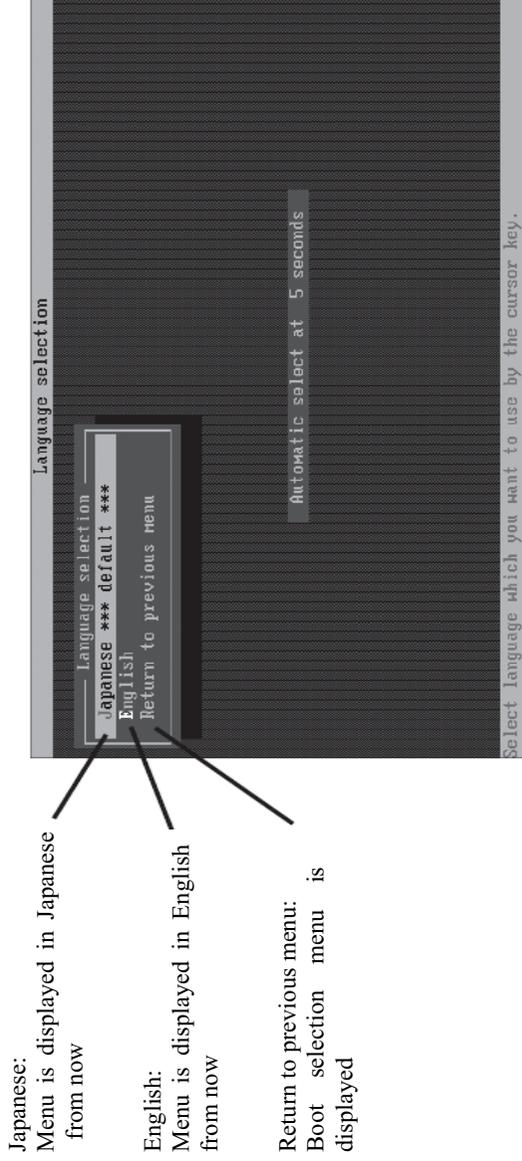


---

### IMPORTANT:

Default menu selection is [Japanese]. When there is no key operation for five second after Language menu appears, [Japanese] starts automatically.

5. Select [English]  
When [English] is selected, following tool menu appears.

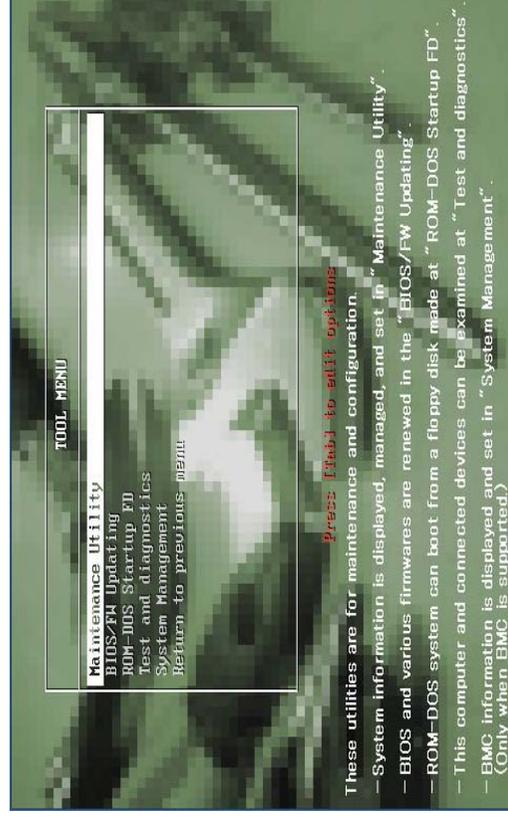

6. Select one of the tool and start.

## **Features of Off-line Maintenance Utility**

Following functions are available on Off-line Maintenance Utility.

### **■Off-line Maintenance Utility**

The Off-line Maintenance Utility is started in “Maintenance Utility.” The Off-line Maintenance Utility is an Os-independent maintenance program. When you are unable to start the Os-dependent NEC ESMPRO to troubleshoot a problem, the Off-line Maintenance Utility can be used.

---

### **IMPORTANT:**

- The Off-line Maintenance Utility is intended for use of your service representative. The NEC EXPRESBUILD DVD contains a file that describes the operation of the utility, but do not attempt to use the utility by yourself. Contact your service representative and follow their instructions.
- See the on-line help for details for the Off-line Maintenance Utility. For further information, ask your service representative.

The Off-line Maintenance Utility provides the following features.

- IPMI Information Viewer
    - Provides the functions to view the system event log (SEL), sensor data record (SDR), and field replaceable unit (FRU) and to make a backup copy of them.
    - Using this feature, you can find system errors and events to determine a maintenance part.
  - BIOS Setup Viewer
    - Provides the functions to export the current configuration data defined with the SETUP utility to a text file.
  - System Information Viewer
    - Provides the functions to view and information on the processor (CPU) and on the BIOS. You can export the information to a text file.
  - System Information Management
    - Provides the function to make a back-up copy of your data.
    - Without the backup data, the system-specific information and/or configuration may not be restored.
- Only the authorized service maintenance staff is allowed to restore the backup data.

## 6-12 Maintenance

---

- System Management  
The parameters of BMC (Baseboard management Controller) are set for remote control and alert.
- BIOS/FW Updating  
This menu allows you to update the software module such as BIOS and firmware of the server by using the update disk (3.5-inch floppy disk) that is distributed from NEC customer service representative.  
After rebooting the system, an update program is started automatically from floppy disk, and the various BIOS and firmware programs are updated.

---

### **IMPORTANT:**

Do not turn off the server while the update program is running. If the update processing is discontinued, the system becomes unable to start.

---

- ROM-DOS startup FD  
Create a support disk for starting the ROM-DOS system.
- Test and diagnostics  
Execute various tests on the server system to check if the server functions are normal and if the connection between the server and additional board is normal.  
After the Test and diagnostics is executed, a system check program assigned to each model starts.
- System Management  
The parameters of BMC (Baseboard Management Controller) are set for remote control and alert.  
This menu's function is the same as the "System Management" of the "Maintenance Utility."

## RELOCATING/STORING THE NEC Express5800/ft series

Follow the procedure below to relocate or store the server.

### CAUTION



Observe the following instructions to use the server safely. There are risks of fire, personal injury, or property damage. See “PRECAUTIONS FOR SAFETY” in Chapter 1 for details.

- Never attempt to lift the server only by yourself.
- Do not install the server in any place other than specified.
- Do not connect/disconnect any interface cable with the power cord of the server plugged to a power source.

### IMPORTANT:

- If the server needs to be relocated/stored due to a change in the floor layout to a great extent, contact the sales agent.
  - Make sure to make a backup copy of your valuable data in the hard disk, if any.
  - When moving the server with hard disks, make sure not to give a shock to the hard disks.
  - When storing the server, keep it under storing environment conditions (temperature: -10 to 55°C, humidity: 20 to 80%, non-condensing).
1. Take a floppy disk and a DVD out of the server, if any.
  2. Power off the server.
  3. Unplug the power cord of the server from a power outlet.
  4. Remove all the cables from the server.
  5. Remove all the mounted CPU/IO modules.
  6. Remove the 4U chassis and the rails from the rack cabinet.
  7. Carry 4U chassis and CPU/IO modules separately.
  8. Protect the server with the shock-absorbing materials, and pack it securely.

---

**IMPORTANT:**

Check and adjust the system clock before operating the server again after relocating or storing it.

If the server and the built-in optional devices are moved from a cold place to a warm place in a short time, condensation will occur and cause malfunctions and breakdown when these are used in such state. When you start operating these equipments again after the transportation or the storage, make sure to wait for a sufficient period of time to use them in the operating environment.

If the system clock goes out of alignment remarkably as time goes by, though the system clock adjustment is performed, contact your sales agent.

---

# Chapter 7

---

## Troubleshooting


If the product does not work properly, see this chapter before deciding that it is a breakdown.

## TO LOCATE THE ERRORS

Use NEC ESMPRO to monitor the occurrence of fault during the system operation.

Especially take note on whether any alert is reported to NEC ESMPRO Manager on the management PC. Check whether any alert is reported on the Operation Window, Data Viewer, or AlertViewer of NEC ESMPRO Manager.

**[Example]**

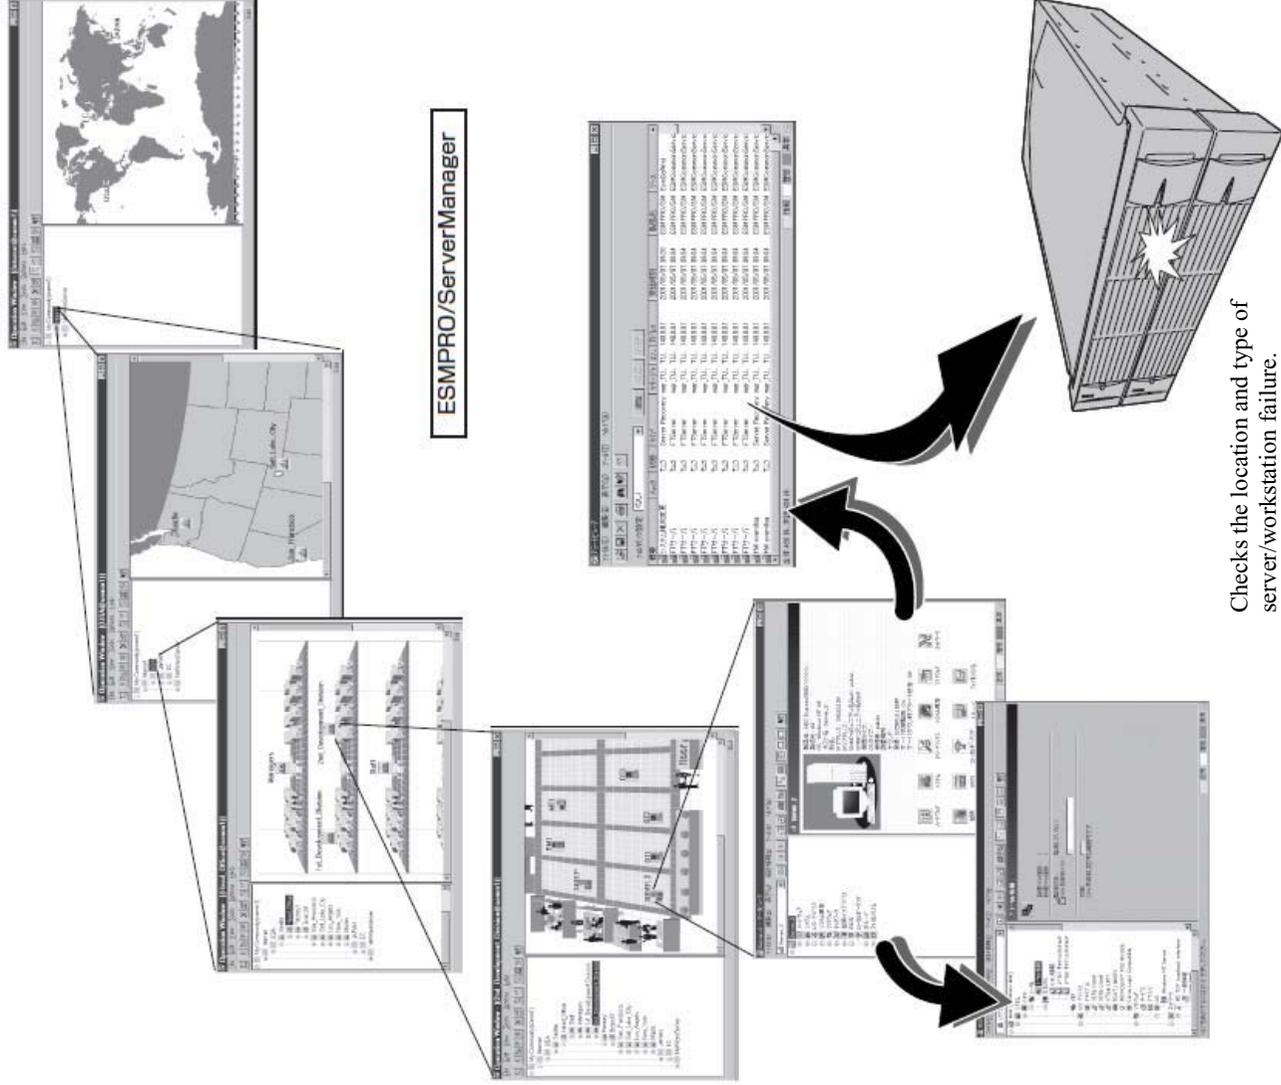

## **ERROR MESSAGES**

If the NEC Express5800/ft series enters the abnormal state, the error is posted by various means. This section explains the types of error messages.

---


### **Error Messages by LED Indication**

The LEDs on the front and rear panels of the NEC Express5800/ft series and near the handles of hard disks inform the user of the various server statuses by the colors and the patterns of going on, going off, and flashing. If trouble seems to have occurred, check the LED indication. For the LED indication and meanings, see page 2-15 “LEDs.”

This User’s Guide describes actions to be taken for watch error message. However, if replacement of modules is necessary, contact your sales agent.

## POST Error Messages

Powering on the server automatically starts the self-diagnostic program, POST (Power On Self-Test). When POST detects any error, it displays an error message and in some cases, advice as well on the display unit. Follow the table below to troubleshoot such errors.

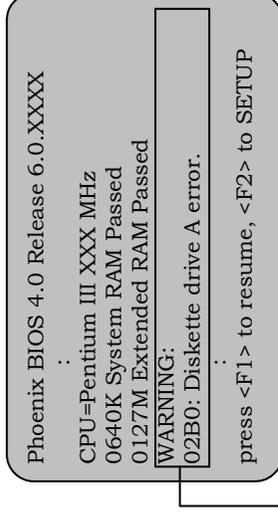

Message indicating a floppy disk drive error

### TIPS:

For error messages on optional PCI boards, refer to the manual provided with those options.

On-screen error message	Cause	Action
0200 Failure Fixed Disk	<ul style="list-style-type: none"> <li>Hard disk is faulty</li> <li>CPU/IO module is faulty.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the hard disk.</li> <li>Replace the CPU/IO module.</li> </ul>
0210 Stuck Key	Keyboard connection error	<ul style="list-style-type: none"> <li>Disconnect the keyboard and connect it back again.</li> <li>Replace the keyboard.</li> </ul>
0211 Keyboard error	Keyboard is faulty.	<ul style="list-style-type: none"> <li>Disconnect the keyboard and connect it back again.</li> <li>Replace the keyboard.</li> <li>If restarting does not help, replace the CPU/IO module.</li> </ul>
0212 Keyboard Controller Failed	Keyboard controller is faulty.	If restarting the server does not help, replace the CPU/IO module.
0213 Keyboard locked - Unlock key switch	Keyboard is locked.	Unlock the key switch.
0230 System RAM Failed at offset	DIMM is faulty.	<ul style="list-style-type: none"> <li>Replace DIMM.</li> <li>Replace the CPU/IO module.</li> </ul>
0231 Shadow RAM Failed at offset		
0232 Extended RAM Failed at address line		
0233 Memory type mixing detected	Memory of the different types is installed.	Memory of the different types is installed. Replace DIMM with appropriate one. <ul style="list-style-type: none"> <li>Replace system battery.</li> <li>Replace CPU/IO module.</li> </ul>
0250 System battery is dead -Replace and run SETUP	System battery is dead.	<ul style="list-style-type: none"> <li>Replace system battery.</li> <li>Replace CPU/IO module.</li> </ul>
0251 System CMOS checksum bad-Default configuration used	System CMOS configuration is changed.	<ul style="list-style-type: none"> <li>Reconfigure the system CMOS by using BIOS setup.</li> <li>Clear system CMOS using hardware jumper.</li> </ul>

On-screen error message	Cause	Action
0252 Password checksum bad -Password cleared	Password is cleared.	<ul style="list-style-type: none"> <li>Reconfigure by using BIOS setup.</li> <li>Clear password using hardware jumper.</li> </ul>
0260 System Timer error	System Timer is faulty.	Reconfigure by using BIOS setup. If the error cannot be solved after this, replace the CPU/IO module.
0270 Real time clock error	RTC is faulty.	
0271 Check date and time setting	Date and time are incorrectly set.	
02D0 System cache error - Cache disabled	CPU cache is faulty.	If replacing the CPU does not help, replace the CPU/IO module.
02D1 System Memory exceeds the CPU's caching limit	CPU cache is faulty.	
0613 COM A configuration change	COM A configuration is faulty.	If restarting does not help after resetting the setting to default by using BIOS setup, replace the CPU/IO module.
0614 COM A config, error - device disable	Device constructing COM A is faulty.	
0615 COM B configuration change	COM B configuration is faulty.	
0616 COM B config, error - device disable	Device constructing COM A is faulty.	
0B28 Unsupported Processor detected on Processor 1	Unsupported CPU is mounted.	Check the supported CPU and replace it. If this does not help, replace the CPU/IO module.
0B29 Unsupported Processor detected on Processor 2	Unsupported CPU is mounted.	
0B80 BMC Memory Test Failed	BMC device is faulty.	Replace the CPU/IO module.
0B81 BMC Firmware Code Area CRC check failed		
0B82 BMC core Hardware failure		
0B83 BMC IBF or OBF check failed		
0B8B BMC progress check timeout	BMC check is suspended.	Replace the CPU/IO module.
0B8C BMC command access failed	BMC command access failed.	Replace the CPU/IO module.
0B90 BMC Platform Information Area corrupted	BMC device is faulty.	Replace the CPU/IO module.
0B91 BMC update firmware corrupted		
0B92 Internal Use Area of BMC FRU corrupted	Data within SROM is faulty.	Replace the system backboard.
0B93 BMC SDR Repository empty	SDR data is faulty.	If updating SDR does not help, replace the CPU/IO module.
0B94 IPMB signal lines do not respond	SMC is faulty.	Replace the CPU/IO module or a system backboard after determining where IPMB error has occurred based on OS information.

## 7-6 Troubleshooting

On-screen error message	Cause	Action
0B95 BMC FRU device failure	NVRAM within BMC is faulty.	Replace the CPU/IO module.
0B96 BMC SDR Repository failure	SDR repository within BMC is faulty.	
0B97 BMC SEL device failure	SEL repository within BMC is faulty.	If updating FPGA does not help, replace the CPU/IO module or ft Remote Management Card (option).
0B98 BMC RAM test error	BMC RAM is faulty.	
0B99 BMC Fatal hardware error	BMC FPGA is faulty.	Replace the CPU/IO module.
0B9A BMC not responding	BMC device is faulty.	If turning AC power off and on does not help, replace the CPU/IO module or the system backboard.
0B9B Private I2C bus not responding	I2C bus is faulty.	
0B9C BMC internal exception	BMC device is faulty.	Replace the CPU/IO module.
0B9D BMC A/D timeout error		If updating SDR does not help, replace the CPU/IO module or ft Remote Management Card (option).
0B9E SDR repository corrupt	SDR data is faulty.	
0B9F SEL corrupt	SEL repository within BMC is faulty.	Replace the CPU/IO module.
0BA0 SDR/PIA mismatched. SDR, PIA must be updated.	SDR and PIA data do not match.	If updating SDR/PIA does not help, replace CPU/IO module.
0BB0 SMBIOS - SROM data read error	<ul style="list-style-type: none"> <li>I2C bus is faulty.</li> <li>SROM is faulty.</li> <li>BMC is faulty.</li> </ul>	If turning AC power off and on does not help, replace the system backboard.
0BB1 SMBIOS - SROM data checksum bad	Data within SROM is faulty.	
0BC0 POST detected startup failure of 1st Processor	CPU is faulty.	Replace the CPU.
0BC1 POST detected startup failure of 2nd Processor		Replace the DIMM Slot0 (2 DIMMs). Replace the DIMM Slot1 (2 DIMMs). Replace the DIMM Slot2 (2 DIMMs).
8100 Memory Error detected in DIMM group #1	DIMM is faulty..	
8101 Memory Error detected in DIMM group #2		
8102 Memory Error detected in DIMM group #3		Check supported DIMMs and replace them. If replacing the DIMMs does not help, replace the CPU/IO module.
8120 Unsupported DIMM detected in DIMM group #1	Unsupported DIMM is mounted.	
8121 Unsupported DIMM detected in DIMM group #2		
8122 Unsupported DIMM detected in DIMM group #3		

On-screen error message	Cause	Action
8130 Mismatch DIMM detected in DIMM group#1	DIMM group do not match.	Check supported DIMMs and Replace them. If replacing the DIMMs does not help, replace the CPU/IO module.
8131 Mismatch DIMM detected in DIMM group#2		
8132 Mismatch DIMM detected in DIMM group#3		
8150 NVRAM Cleared By Jumper	CMOS clear jumper is mounted.	Turn off the DC power and change back the jumper setting.
8151 Password Cleared By Jumper	Password clear jumper is mounted.	
8160 Mismatch Processor Speed detected on Processor 1	CPU frequency does not match.	Check supported CPUs and replace them. If replacing the CPU does not help, replace CPU/IO module.
8161 Mismatch Processor Speed detected on Processor 2		
9064 Mixed CPU Steppings detected	Different CPU steppings are found.	Check supported CPUs and replace them. If replacing the CPU does not help, replace CPU/IO module.
9002 Memory not installed.	DIMM is not implemented. DIMM is faulty.	Mount or replace the DIMM.
9003 Memory implementation error detected	Error is detected on memory implementation.	Check supported DIMMs and replace the DIMM. If replacing the DIMM does not help, replace the CPU/IO module.
9006 HW Memory Test failed.	Memory is faulty.	Replace the DIMM. If replacing it does not help, replace the CPU/IO module.
9000	A serious error occurred during a POST.	There are some preceding and specific error messages. Check the other error message.
9090-9097	A memory error has occurred, or memory is faulty.	(a) Verify that the memory is mounted properly. (b) Replace the memory. If this does not help, replace the module.

## **TROUBLE SHOOTING**

When the server fails to operate as expected, see the following to find out your problem and follow the given instruction before asking for repair.

If the server still fails to operate successfully after solving your problem, take a note of the on-screen message and contact your sales agent.

### **Problems with NEC Express5800/ft series**

#### **Fail to power on the server:**

- Is the server properly supplied with power?
  - Check if the power cord is connected to a power outlet (or UPS) that meets the power specifications for the server.
  - Check if the two pieces of the provided power cord are connected to the main unit properly.
  - Make sure to use the power cord provided with the server. Check the power cord for broken shield or bent plugs.
  - Make sure the power breaker for the connected power outlet is on.
  - If the power cord is plugged to a UPS, make sure the UPS is powered and it supplies power. See the manual that comes with the UPS for details.
- Power supply to the server may be linked with the connected UPS using the BIOS setup utility of the server.
  - <Menu to check: [Server] - [AC-LINK] - [Power On]>
  - Make sure the POWER switch on the power unit is on.
- Did you press the POWER switch?
- Press the POWER switch on the front of the NEC Express5800/ft series to turn on the power (the POWER LED lights).
- Did you install the CPU/IO module properly?
- Check if the CPU/IO module is properly installed in the server. Secure the CPU/IO module with screw located on the module removable handle.
- Check if one of the status lamp of CPU/IO module is on.
  - Make sure to take out and put in the CPU/IO module again with the power off, then power on the server again.

**POST fails to complete:**

- Is the DIMM properly installed?
  - At least one pair of DIMM(2 DIMMs) is required for operation.
- Is the memory size large?
  - The memory check may take a time if the mounted memory size is large. Wait for a while.
- Did you perform any keyboard or mouse operation immediately after you started the server?
  - If you perform any keyboard or mouse operation immediately after start-up, POST may accidentally detect a keyboard controller error and stops proceeding. In such a case, restart the server once again. Do not perform any keyboard or mouse operation until the BIOS start-up message appears when you restart the server.
- Does the server have appropriate memory boards or PCI card?
  - Operation of the server with unauthorized devices is not guaranteed.
- Are the System BIOS and Emulex BIOS of the server configured?
  - The parameter differs from the factory default. Make settings by the System BIOS setup Utility and Emulex BIOS configuration Utility. For details, see Chapter4 of User's Guide (Setup).

**Fail to access to external devices:**

- Are cables properly connected?
  - Make sure that the interface cables and power cord are properly connected. Also make sure that the cables are connected in the correct order.
- Is that device compliant with NEC Express5800/ft series?
  - Operation of the server with unauthorized devices is not guaranteed.
- Is the power-on order correct?
  - When the server has any external devices connected, power on the external devices first, and then the server.
- Did you install drivers for connected optional devices?
  - Some optional devices require specific device drivers. Refer to the manual that comes with the device to install its driver.
  - Make correct settings by the System BIOS setup Utility and Emulex BIOS configuration Utility. For details, see Chapter4 of User's Guide (Setup).

**CPUs not in Duplex mode:**

- Check if the memory configuration is correct.
- Check if third-party CPUs or memory (DIMM) are used.

### **The keyboard or mouse fails to operate:**

- Is the cable properly connected?
  - Make sure that the cable is connected to the correct connector on the rear of the server.
- Are the keyboard and mouse are compliant with NEC Express5800/ft series?
  - Operation of the server with unauthorized devices is not guaranteed.
- Is the operation mode correct?
  - USB device is connected to CPU/IO module on the primary side through HW switch. You need to be careful when using the device because the device is not for the duplex
  - Before installing ft control software: USB devices are available.
  - After installing ft control software: USB devices are available only when the following item is selected on Grub menu at starting the ESX Server. In other cases, the devices are unavailable.
  - Grub menu
  - Service Console only (troubleshooting mode) (USB enabled)

### **Screen freezes, keyboard and mouse don't work:**

- If the amount of memory becomes larger, it takes time to copy the memory in duplex mode and the system stops working temporarily during the copying, but it is not system trouble.

### **Fail to access (read or write) to the floppy disk:**

- Is the operation mode correct?
  - USB devices are connected to the CPU/IO module of the primary side through the HW switch. But you need to be careful on the operation since the devices are not for the duplex.
  - Before installing ft control software: USB devices are available.
  - After installing ft control software: USB devices are available only when the following item is selected on Grub menu at starting the ESX Server. In other cases, the devices are unavailable.
  - [Grub menu]
  - Service Console only (troubleshooting mode) (USB enabled)
- Is the floppy disk properly set in the drive?
  - Insert the disk into the floppy disk drive till the drive clicks.

- Is the floppy disk write-protected?
- Place the write-protect switch on the floppy disk to the "Write-enabled" position.
- Is the floppy disk formatted?
- Use a formatted floppy disk or format the floppy disk in the floppy disk drive. Refer to the manual that comes with the OS for formatting a floppy disk.
- Is the medium mounted?
- If a failover takes place with a medium mounted, the medium is forcibly unmounted, in which case remounting of the medium is necessary.

(An error such as Buffer I/O error may be reported in installing a CPU/IO module or at a failover. This error is a specification of the device and will not affect the operation.) The device name of the floppy disk drive may change (for example, from sdc to sdb), which is again a specification of the device and will not affect the operation. If the device name has changed, use a new device name for mounting.

#### Fail to access to the optical disk:

- Is the CD-ROM properly set in the DVD-ROM drive tray?
  - The tray has a holder for the optical disk. Make sure that the optical disk is placed properly on the holder.
- Isn't the CPU/IO module isolated (i.e. off-line status)?
  - The DVD-ROM drive of an isolate PCI module cannot be used. If you try to mount the DVD-ROM drive of an separated module, the OS displays the following error message.  
`mount: /dev/hda is not a valid block device`

If the CPU/IO module is isolated (i.e. off-line status) while the PRIMARY (active) DVD-ROM drive is mounted, it becomes impossible to access the DVD-ROM drive even if duplication is restored. In this case, make sure to access the SECONDARY (stand-by) DVD-ROM drive while the other CPU/IO module is in SECONDARY state. Note that if you access the DVD-ROM drive of the other CPU/IO module while it is in PRIMARY (active) state and then the CPU/IO module is isolated (i.e. off-line status), it becomes impossible to access the DVD-ROM drive even if duplication is restored. (Reboot of the system is required for recovery.)
- Is the optical disk applicable to the server?
  - The optical disk for Macintosh is not available for use.

#### Fail to access the storage:

- Is the storage applicable to the server?

- Operation of any device that is not authorized by NEC is not guaranteed.
- Is the storage properly installed?
- Make sure to check the storage is completely connected.

### **Fail to start the OS:**

- Is a floppy disk in the floppy disk drive?
- Take out the floppy disk and restart the server.
- Is the NEC EXPRESSBUILDER DVD in the optical disk drive?
- Take out the NEC EXPRESSBUILDER DVD and restart the server.

**The server is not found on the network:**

- Is the LAN cable connected?
- Make sure to connect the LAN cable to the network port on the rear of the server. Also make sure to use the LAN cable that conforms to the network interface standard.
- Have the protocol and services already setup?
- Install the distinctive network driver for the server. Make sure that the protocol, such as TCP/IP, and services are properly specified.
- Is the transfer speed correct?
- The built-in LAN controller mounted as standard on this server can be used in network with the transfer speed of 1000Mbps, 100Mbps or 10Mbps. You can change the transfer speed or configure the setting from OS. However, do not use the “Auto Detect” function. Fix the setting of the transfer rate to the same with that of the connected hub. Also, check if the duplex mode is the same with that of the connected hub.

**Machine repeats rebooting at startup:**

- Isn't the OS boot monitoring function enabled for reset?
- When you are using the NEC Express5800/ft series, the OS boot monitoring function must be disabled in the following cases. For information on disabling the OS boot monitoring, see “Step 4 Invalidate OS Boot Monitoring function” in *User's Guide (Setup)*.
  - When executing the maintenance such as system update.:
  - When any daemon or drive does not work correctly due to a failure or error:
  - \* For the device configuration with large memory or disk volume, it is recommended to change the default BIOS setup 10 minutes to an appropriate value.

**Memory dump (debug information) cannot be collected when a failure occurs:**

- Do you press the DUMP switch correctly?
  - Hold down the DUMP switch for 4 to 8 seconds if you would like to collect memory dump by pressing the switch. If you press DUMP switch less than 4 seconds or more than 8 seconds, you will not be able to collect memory dump.

**A CPU/IO module cannot be integrated:**

- When reinstallation is done due to a failure in a component, the reinstallation may stop with the below message recorded in a log file. If this occurs, MTBF of the

component does not reach the threshold and the reinstallation cannot be performed as it is determined that repair is needed. Typically, device replacement is required. Contact your maintenance service engineer. If the integration needs to be done with the current devices, you can forcibly reinstall the currently used device through consultation with the maintenance service engineer.

```
kernel: EVLOG: ERROR - x is now STATE_BROKEN /  
REASON_BELOW_MTBF  
(x is a device number)
```

### **Nothing appears on the screen**

→ At the startup, the screen is connected to the CPU/IO module of the primary side through the HW switch. When it is disconnected from the CPU/IO module because the module cause a failure, the screen black out without switching to another CPU/IO module.

---

### **About syslog**

A log indicating the insmod command (driver load) failed is recorded in syslog

→ The following log may be recorded, but the contents of such log do not affect the system.

```
insmod: a module named adp94xx already exists <27>  
insmod: insmod  
/lib/modules/2.4.21-47.0.1.ELvmnix/updates/lsh-ft/extra/adp94xx.o  
failed  
  
insmod:  
/lib/modules/2.4.21-47.0.1.ELvmnix/kernel/drivers/char/i810_rng.o:  
insmod i810_rng failed  
  
insmod:  
/lib/modules/2.4.21-47.0.1.ELvmnix/kernel/drivers/usb/host/uhci.o:  
insmod  
/lib/modules/2.4.21-47.0.1.ELvmnix/kernel/drivers/usb/host/uhci.o failed  
  
insmod:  
/lib/modules/2.4.21-47.0.1.ELvmnix/kernel/drivers/usb/host/ehci-hcd.o:  
insmod ehci-hcd failed
```

## **Problems with NEC EXPRESSBUILDER**

When the server is not booted from the NEC EXPRESSBUILDER DVD, check the following:

- Did you set the NEC EXPRESSBUILDER DVD during POST and restart the server?
- If you set the NEC EXPRESSBUILDER DVD during POST but do not restart the server, an error message will appear or the OS will boot.
- Is BIOS configuration correct?
  - The boot device order may be specified with the BIOS setup utility of the server. Use the BIOS setup utility to change the boot device order to boot the system from the optical disk drive first.
  - <Menu to check: [Boot]>

When an error occurs while the NEC EXPRESSBUILDER is in progress, the following message appears. After this message appears, record the error code and contact to the maintenance service company.

<b>Message</b>	<b>Cause and Remedy</b>
This machine is not supported.	This EXPRESSBUILDER version cannot be used for this server. Execute the NEC EXPRESSBUILDER on the compliant server.
NvRAM access error	Cannot access to the nonvolatile memory (NvRAM).
Hard disk access error	The hard disk is not connected or it is faulty. Check whether the hard disk is correctly connected.
The system-specific information does not exist on the baseboard.  Please restore the backup data or write the data by using [System Information Management] of the Off-line Maintenance Utility. Only the authorized personnel are allowed to do this operation.	This message is displayed when NEC EXPRESSBUILDER cannot find device specific information due to the replacement of a motherboard, etc. Maintenance personnel write information using offline maintenance utility.

In other cases, the error message also appears when a failure is detected while executing the Test and Diagnostics. Check the error message and contact to the maintenance service company.

## **Problems with NEC ESMPRO**

### **NEC ESMPRO Manager**

- See page 5-8 and the later in “Chapter 5 Procedures after Completion of Installation”. See also online document in NEC EXPRESSBUILDER DVD-ROM for troubleshooting and other supplementary information.

### **NEC ESMPRO Agent**

- See page 5-3 and the later in “Chapter 5 Procedures after Completion of Installation”.

## COLLECTION OF TROUBLE LOGS

If a failure occurs, you can collect information at the time of failure occurrence by the following ways.

---

### IMPORTANT:

- Collect failure information that is described later only when you are asked to do so by a maintenance service engineer of the maintenance service company.
  - You may see a message telling you the virtual memory is not sufficient in a reboot following a failure. Continue to start up the system. If you perform reset and attempt to restart again, collecting failure information fails.
- 

---

### Collection of System Information

The ESX Server system information is recorded in syslog, etc. When you collect system information in the NEC Express5800/ft series, log in as the root user and run the following command.

```
# /opt/ft/sbin/buggrabber.pl
```

The collected data is created in the following directory.

```
/home/BugPool/
```

---

### Collection of ESMPRO Agent

When you collect NEC ESMPRO Agent log in the NEC Express5800/ft series, log in as the root user and run the following command.

```
# cd /opt/nec/esmpro_sa/tools/  
# ./collect.sh
```

The collected data is created in the following file.

```
/opt/nec/esmpro_sa/tools/collectsa.tgz
```

## Collection of the Memory Dump

If a failure occurs, the memory data should be dumped to acquire the required information.

---

### IMPORTANT:

- Collect memory dump through consultation with a maintenance service engineer of your maintenance service company. Collecting memory dump while the system is running successfully can result in a problem in system operation.
  - You may see a message telling you the virtual memory is not sufficient in a reboot following a failure. Continue to start up the system. If you perform reset and attempt to restart again, dumping data may fail.
  - Press the DUMP switch for four to eight second on the primary CPU/IO module, with POWER LED blinking,. Use a clip whose tip is bent to press the DUMP switch of the CPU/IO module 1. .
  - CPU modules must be duplexed when collecting memory dump. Note that you cannot perform dump collection if only one CPU module is running. For checking CPU module duplication, see “Evaluate Start and Stop of CPU Modules” on page 3-6.
- 

## Preparing for Memory Dump

Memory dumping with the DUMP switch may disable the server to restart. In such a case, it is required to shut down the server forcibly.

## Saving Dump Files


Press the DUMP (NMI) switch on the primary CPU/IO module to save the dump file when an error occurs. Insert something sharp-pointed like a pen into the switch hole to press the DUMP switch.

Pressing the DUMP switch saves the dump file in /var/crash/. (Memory dumping may not be available when the CPU stalls.)

---

**IMPORTANT:** Do not use a toothpick or plastic stick that is easy to break.

---

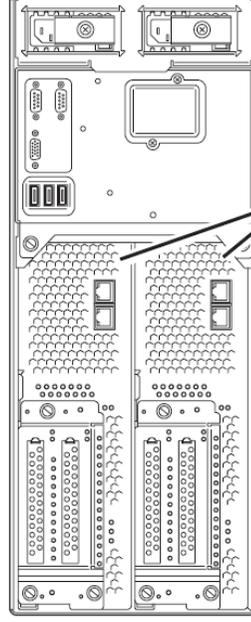

DUMP (NMI) switch

# Chapter 8

---

## System Upgrade

This chapter describes the procedures to add options and replace the failed components.

---

### **IMPORTANT:**

- Optional devices described in this chapter should not be installed or removed by the user. NEC does not assume any liability for damage to optional devices or the server or malfunctions of the server resulted from installation by the user.
  - Be sure to use only optional devices and cables designated by NEC. Repair of the server due to malfunctions, failures, or damage resulted from installing undesignated devices or cables will be charged.
-

## SAFETY PRECAUTIONS

Observe the following notes to install or remove optional devices safely and properly.

 <b>WARNING</b>
<p>Observe the following instructions to use the server safely. There are risks of death or serious personal injury. See “PRECAUTIONS FOR SAFETY” in Chapter 1 for details.</p> <ul style="list-style-type: none"><li>• Do not disassemble, repair, or alter the server.</li><li>• Do not look into the DVD-ROM drive.</li><li>• Do not remove the lithium battery.</li><li>• Disconnect the power plug before working with the server.</li></ul>

 <b>CAUTION</b>
<p>Observe the following instructions to use the server safely. There are risks of fire, personal injury, or property damage. See “PRECAUTIONS FOR SAFETY” in Chapter 1 for details.</p> <ul style="list-style-type: none"><li>• Do not install or remove components by a single person.</li><li>• Do not install the server leaving the cover removed.</li><li>• Make sure to complete component installation.</li><li>• Do not pinch your finger(s).</li><li>• High temperature</li></ul>

## ANTI-STATIC MEASURES

The server contains electronic components sensitive to static electricity. Avoid failures caused by static electricity when installing or removing any optional devices.

- Wearing wrist straps (arm belts or anti-static gloves).

Wear wrist straps around your wrists. If no wrist strap is available, touch an unpainted metal part of the cabinet before touching a component to discharge static electricity from your body.

Touch the metal part regularly when working with components to discharge static electricity.

- Selecting a suitable workspace.
  - Work the server on the anti-static or concrete floor.
  - When you work with the server on a carpet where static electricity is likely to be generated, make sure take anti-static measures beforehand.

- Using a worktable.

Place the server on an anti-static mat to work with it.

- Clothes

- Do not wear a wool or synthetic clothes to work with the server.
- Wear anti-static shoes to work with the server.
- Take off any metal accessories you wear (such as ring, bracelet, or wristwatch) before working with the server.

- Handling of components

- Keep any component in an anti-static bag until you actually install it to the server.
- Hold a component by its edge to avoid touching any terminals or parts.
- To store or carry any component, place it in an anti-static bag.

## PRE-UPGRADE VERIFICATION

If you add on optional devices onto this equipment, some devices may require a specific ft server software version (s).

If the optional device asks for a specific version number (s), refer to the following procedure before adding on the devices.

- 1.** Confirm the required ft server control software's version by referring to the sever-accessory User's Guide, check the NEC website, or contact your sales representative.
- 2.** Verify the version of the ft control software on your system.
- 3.** After confirming the version as the available one for the device, add the device onto the server.

For more information on how to verify the working ft server utilities, refer to the separate User's Guide (setup) "Confirming of the ft Server Control Software Version" (page 5-10).

## PREPARING YOUR SYSTEM FOR UPGRADE

Note the following, when installing or replacing devices, to improve the performance of NEC Express5800/ft series.

- With the NEC Express5800/ft series, devices can be replaced during the continuous operation. Take extreme care for electric shock and damage to the component due to short-circuit.
- Optional devices cannot be installed or removed during continuous operation. After you shutdown from VMware, check that the server is powered off, disconnect all power cords and interface cables from the server before installing or removing the optional devices.
- To remove the CPU/IO module during the continuous operation, disable the intended module (place the module off-line) by using the ftServer Utility of the NEC ESMPRO Agent or the NEC ESMPRO Manager from the management PC on the network. After a new module is installed to the server, enable the module using the ftServer Utility or the NEC ESMPRO Manager.

---

### TIPS:

The system is defaulted to automatically boot the module, once installed. For more information, see Chapter 5.

---

- Make sure to provide the same hardware configuration on both CPU/IO modules.
- Use the same slots and sockets on both groups.
- Do not install those devices having different specifications, performance, or features.
- Before removing the set screws from the CPU/IO modules, place the desired module off-line using the ftServer Utility or the NEC ESMPRO Manager.

## CPU/IO MODULE

To replace devices such as CPU (processor, DIMM (memory) or PCI card, you need to remove the CPU/IO module.

---

### **IMPORTANT:**

- Ask your sales agent to replace the CPU/IO module and components of the CPU/IO module.
  - Make sure to read “ANTI-STATIC MEASURES” and “PREPARING YOUR SYSTEM FOR UPGRADE.”
  - To install or remove CPU or DIMM, first power off the server before removing the CPU/IO module.
  - Removing the module under operation may cause unexpected trouble. Use the management software (e.g., fServer Utility or NEC ESMPRO Manager) to identify the module to be removed so that the module is removed when it is stopped, without fail. Then remove the relevant module after verifying the Status LED on the CPU/IO module. See Chapter 2 “LEDs” for details of the Status LED.
- 

### **Precautions**

When replacing both CPU/IO modules, replace one module and wait until dual configuration is established to replace the other module. If you replace the both modules simultaneously, establishing dual CPU/IO module configuration may fail and result in interruption of the whole system.


## Removing CPU/IO Module

Follow the procedure below to remove the CPU/IO module.

1. Stop the CPU/IO module you want to remove.

To this end, use the ftServer Utility of the NEC ESPRO Agent installed to your server or the Data Viewer of the NEC ESPRO Manager.

For the detailed procedure, see “NEC ESPRO Agent and Manager” – “Maintenance of NEC Express5800/ft series” in Chapter 5.

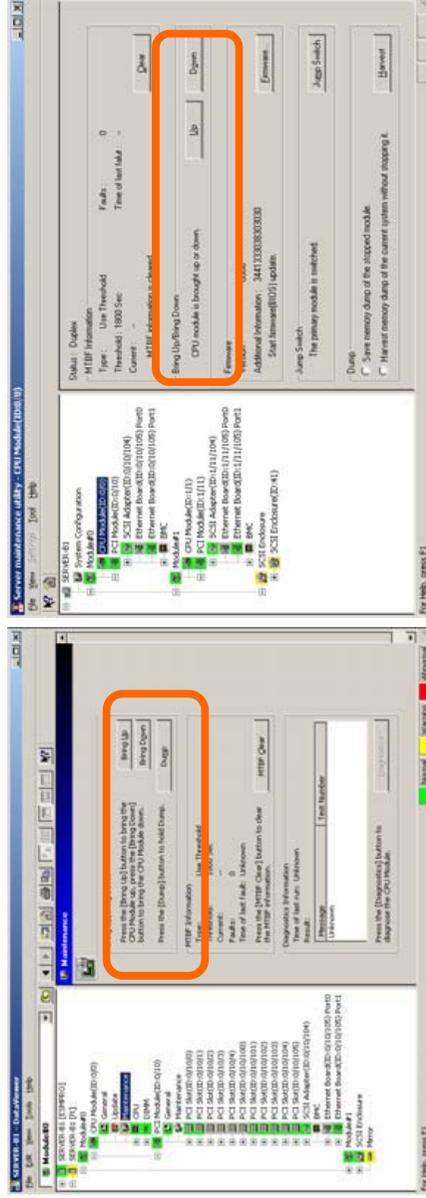

NEC ESPRO Manager  
Select [ft] - [CPU Module] - [CPU Module (to be removed)] - [Maintenance] - [Bring Up/Bring Down] - [Bring Down].

ftServer Utility  
Select [FTServer] - [CPU Module] - [CPU Module (to be removed)] - [Bring Up/Bring Down] - [Down].

Repeat the operation mentioned above for the PCI module and confirm that the status of the CPU/IO module and the PCI module are “Removed.”

### TIPS:


When removing CPU/IO modules 0, select [Bring Down] for CPU module (ID:0) and PCI module (ID:1:0)

2. Remove the front bezel

3. Hold the stopper, and disconnect the power cable of the module to be removed. The stopper will return to the vertical position when you release it.

**CHECK:**

Leave your hands and make sure that the stopper returned to the vertical position. If you disconnect the cable and the stopper does not go back to this position, you cannot pull out the CPU/IO module in the next step.

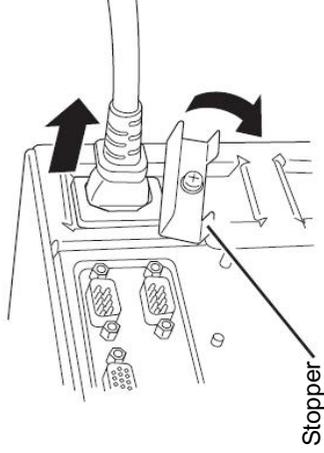


4. Loosen the two black screws securing the CPU/IO module on the left and the right front side, and then press down the handle.

**IMPORTANT:**

Before you pull out a CPU/IO module, check the rear of the server to make sure that cables for connecting to peripheral equipment or network are disconnected. If any cables are connected, keep a record of where the cables are connected and disconnect them from the module to pull out.

**TIPS:**


If you cannot disconnect the LAN cable easily, disconnect while pressing the latch with a slotted screwdriver.

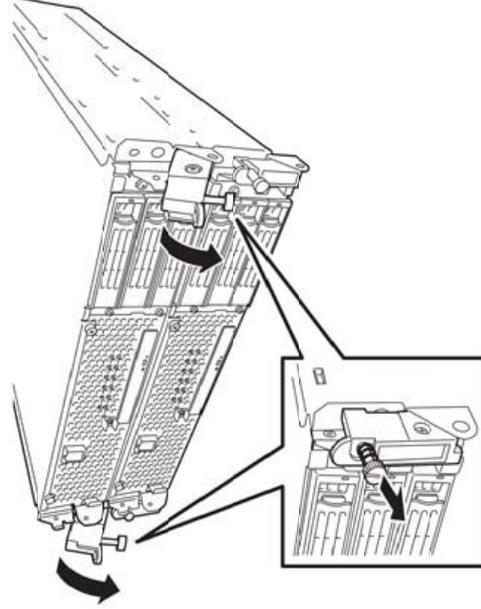


5. Hold the black levers of the CPU/IO module and pull it out. Pull it off until it is locked and stopped.

**IMPORTANT:**

- Do not hold part other than the handle to pull the module.
- Handle the CPU/IO module carefully. Do not drop the module or bump it against parts in the device when you remove it.

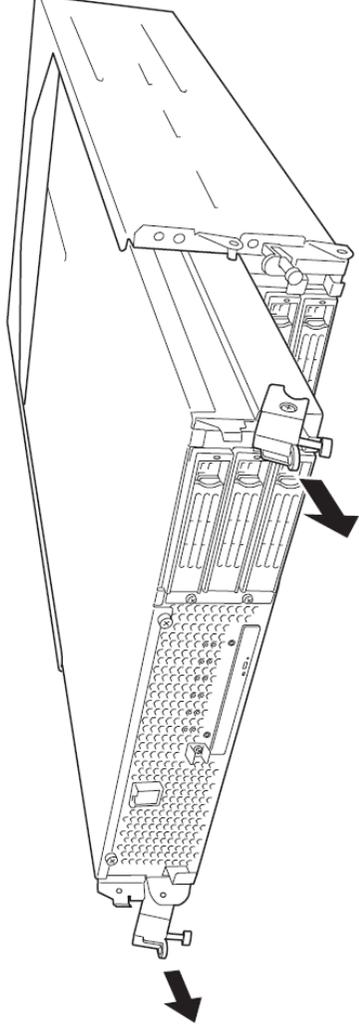

6. The CPU/IO module is locked on the way and cannot be pulled out. Lower the lock on the side of CPU/IO module and unlock, and then pull it out.

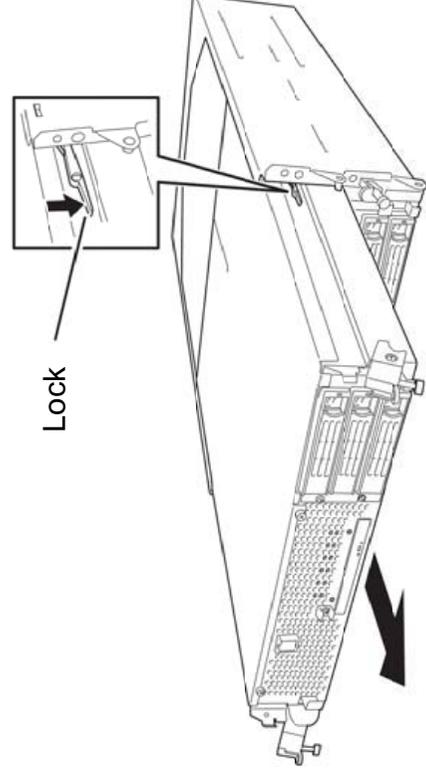

7. Pull out the CPU/IO module gently and carefully place it on a flat and sturdy table. Avoid the dusty or humid place.

This allows you to access the devices inside of the CPU/IO module. For more information on how to handle these devices, see the related sections.

## Installing CPU/IO Module


Follow the procedure below to install the CPU/IO module:

### **IMPORTANT:**


Make sure to read “ANTI-STATIC MEASURES” (page 8-3) and “PREPARING YOUR SYSTEM FOR UPGRADE” (page 8-5).

Insert the black lever slowly and fasten the screws tightly. Be careful not to cause a shock to the device at this time.

1. Firmly hold the CPU/IO module with both hands and insert it into the rack.  
Hold the CPU/IO module and face the back of the rack to the back panel connector. Then fit the guides of the module and chassis, and insert the CPU/IO module slowly.

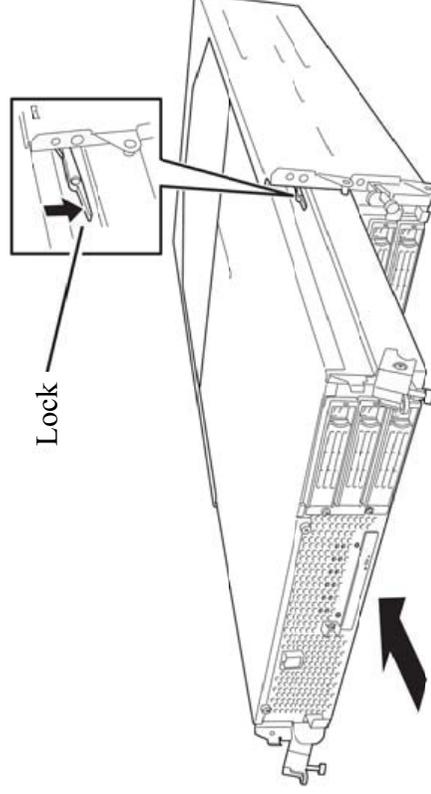

2. Push up the black levers placed on the front left and right sides of the CPU/IO module, and fasten them with screws.

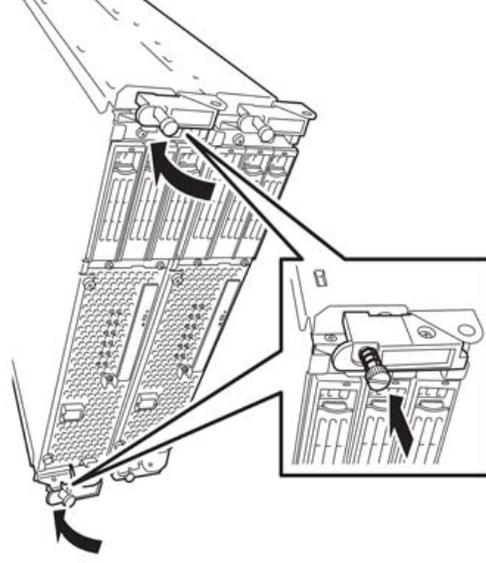

---

**IMPORTANT:**

- Secure the handle with the screws. If it is not secured by the screws, the operation of the CPU/IO module will be unstable.
  - In some system statuses or settings, auto start up or integration does not take place when the module is connected. In such a case, check the status by using the ftServer Utility or NEC ESMPRO Manager data viewer, and then start up the CPU/IO modules.
- 

3. Connect the cables for connecting the peripheral devices and network.
4. Hold the stopper with your hand and insert the cable of the installed module.
5. The installed CPU/IO module will be automatically started.

---

**IMPORTANT:**

- When replacing Fibre channel controller installed in the server
    - configure the setting by iStorage Manager after replacing
    - configure the setting of the Fibre Channel controller by restarting from the replacing side of the CPU/IO module. The setting refers to Chapter 4 of User's Guide (Setup).If the setting is not configured, VMware may not start up because iStorage is not found.
-

## DIMM

The DIMM (dual inline memory module) is installed to the DIMM socket in the CPU/IO module on the NEC Express5800/ft series.

The CPU/IO module board is equipped with six sockets. DIMMs should be installed in a set of 2 DIMMs, starting from the lowest socket number.


---

### TIPS:

- You can add memory up to 12 GB .  
In the error messages and logs in POST NEC ESMPRO, or Off-line Maintenance Utility, the DIMM connector may be described as “group.” The number next to “group” corresponds to the slot number shown in the figure on the next page.
- 

### IMPORTANT:

- The DIMM is extremely sensitive to static electricity. Make sure to touch the metal frame of the server to discharge static electricity from your body before handling the DIMM. Do not touch the DIMM end terminals or onboard parts with a bare hand or place the DIMM directly on the desk. For more information on static electricity, see “ANTI-STATIC MEASURES.”
  - Make sure to use the DIMM authorized by NEC. Installing a third-party DIMM may cause a failure of the DIMM as well as the server. Repair of the server due to failures or damage resulted from installing such unauthorized products will be charged.
  - Before adding or removing DIMMs, first power off the server and then detach the CPU/IO module.
  - Make sure to read “ANTI-STATIC MEASURES” and “PREPARING YOUR SYSTEM FOR UPGRADE” before installing/removing DIMM.
- 

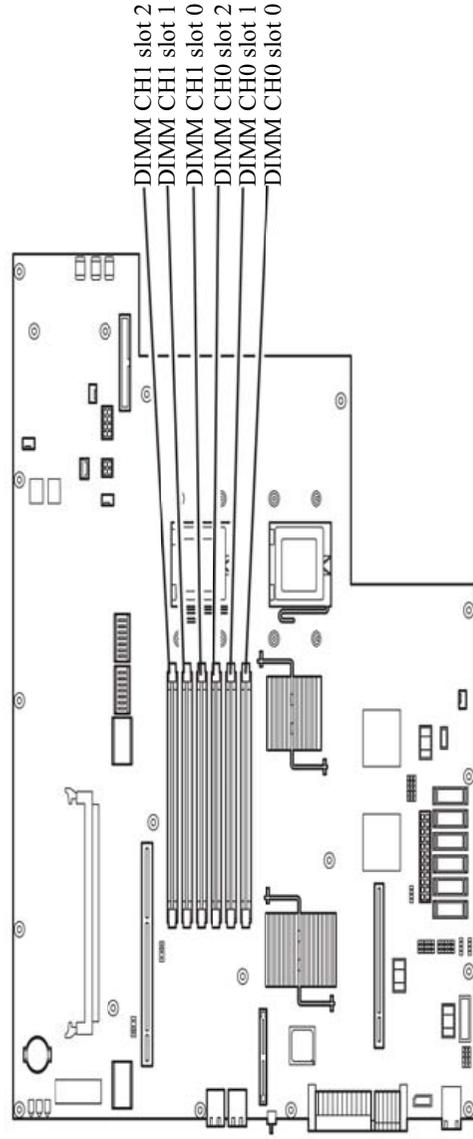

Motherboard of the CPU/IO module

## **Precautions**


Note the following to install or replace DIMM.

- The DIMMs with the same slot number are linked between the CH1 and CH0.. When a DIMM is added to one CH, another identical DIMM should be installed to the slot with the same number in another CH. This rule is applied also to the case of removal.
- The linked DIMMs between CHs should be of the same product with the same performance.
- DIMMs should be installed in sockets from the lowest slot number to the highest slot number.
- To install DIMM, install the product with the same N code to the same CHs and slots of the CPU/IO modules 0 and 1.


## Installing DIMM

Follow the procedure below to install the DIMM.

1. Shut down the OS.  
The server turns off automatically.
2. Disconnect the power cords from the outlets.
3. Remove the CPU/IO module referring to page 8-7.
4. Remove the screw, and remove the top cover of the CPU/IO module.

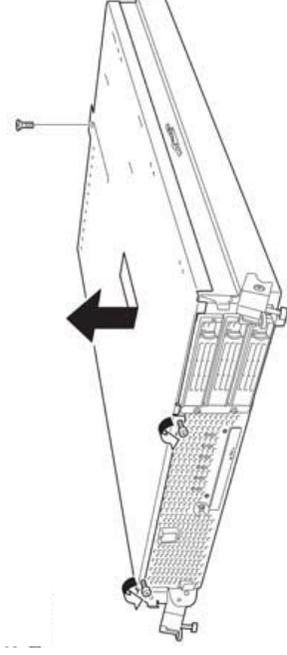

5. Remove the memory duct.

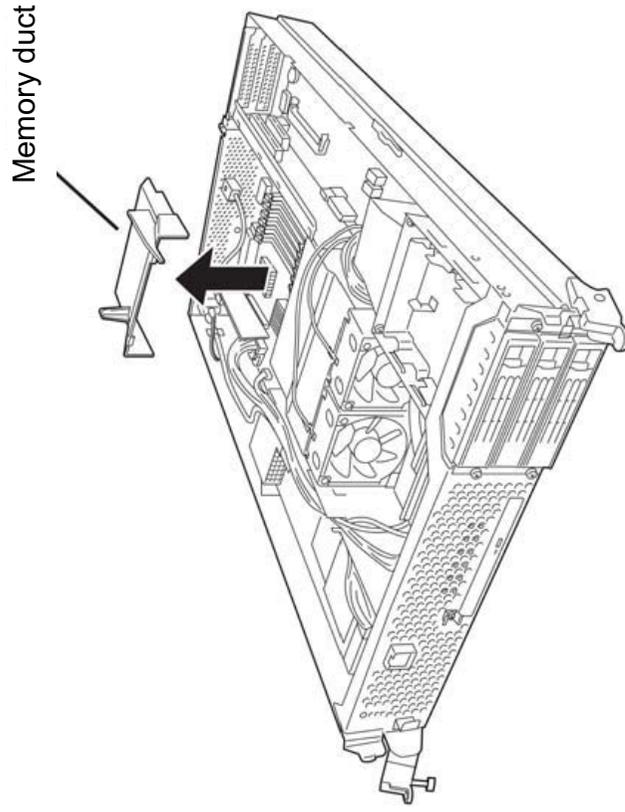

6. Check to be sure in which socket you are mounting the DIMM

7. Remove the DIMM connector cover from the socket in which the DIMM is installed. A DIMM connector cover is installed to the open socket. When the levers on both ends of the connector are opened, the DIMM connector cover is unlocked and you can remove the cover.

---

**IMPORTANT:**

Keep the removed DIMM connector cover.

---

8. Insert a DIMM into the DIMM socket vertically.

---




**TIPS:**

Pay attention to the orientation of the DIMM. The end terminal of the DIMM has a notch to prevent misinsertion.

---

After the DIMM is completely inserted into the socket, the levers are automatically closed.

9. Attach the memory duct
10. Place the top cover of the CPU/IO module and secure it with the screws.

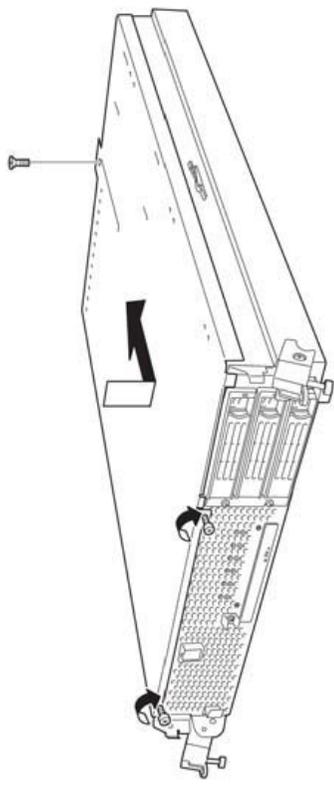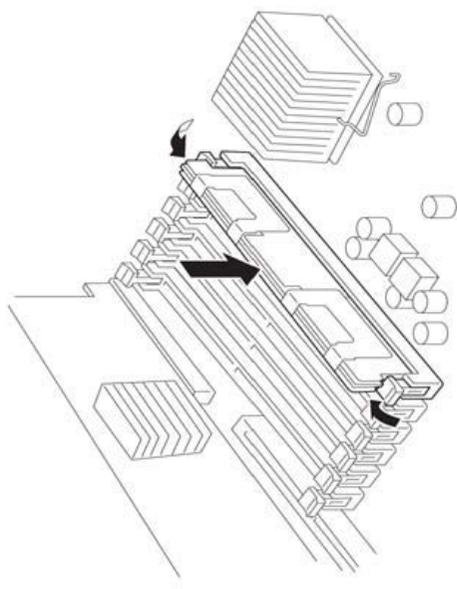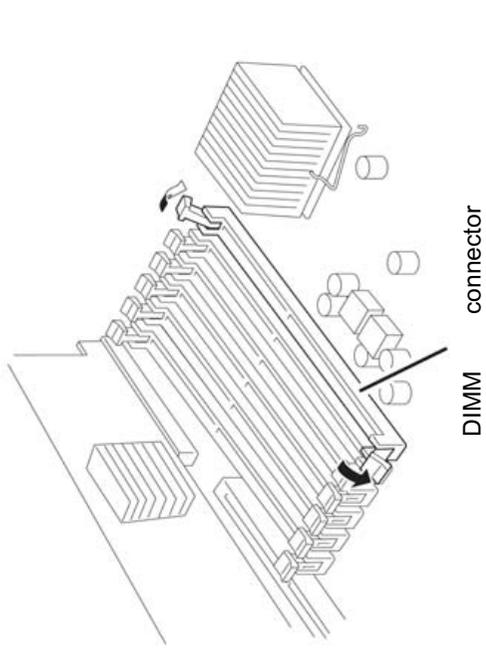

11. Refer to page 8-100 and install the CPU/IO module.
12. Connect the power cords.
13. Press the POWER switch to power on the server.

- 14.** Verify that POST displays no error message.  
If POST displays an error message, write it down and see the POST error message list on page 7-4..

## **Removing DIMM**

Follow the procedure below to remove the DIMM.


---

### **IMPORTANT:**


This server works only when there are at least two DIMMs installed.

---


- 1.** Shutdown OS.  
The system turns off automatically.
- 2.** Disconnect the power cords from the outlets.
- 3.** Remove the CPU/IO module referring to page 8-7.
- 4.** Remove the screws and the top cover of the CPU/IO module.

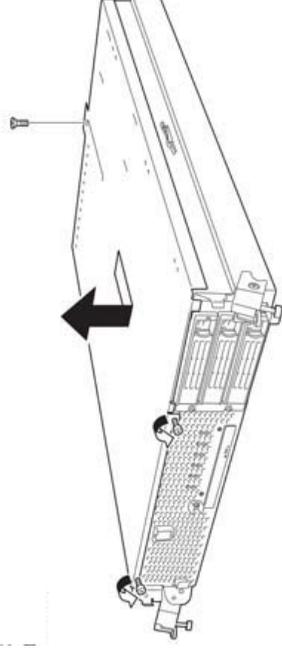


- 5.** Remove the memory duct.

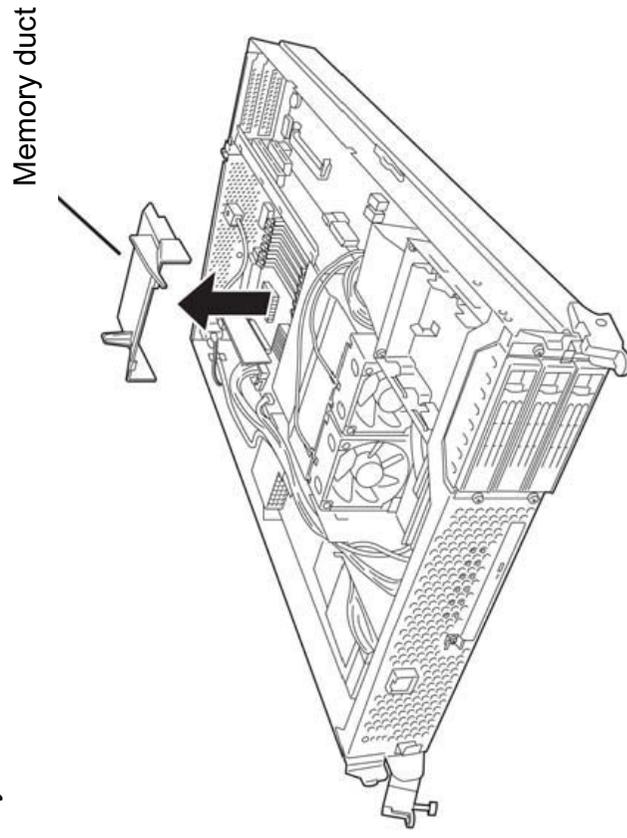

6. Release the levers attached on both sides of the socket of the DIMM to be removed. It will be unlocked and the DIMM can be removed.

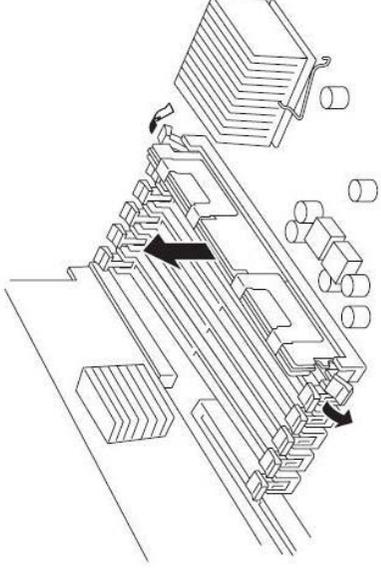


7. Attach the memory duct.
8. Attach the top cover of the CPU/IO module and secure it with screws.

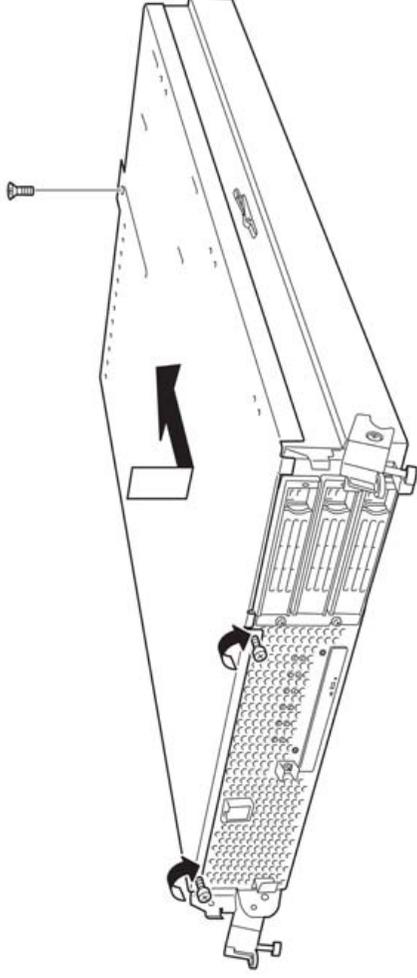

9. Refer to page 8-100 and install the CPU/IO module.
10. Connect the power cords.
11. Press the POWER switch to power on the server.
12. Verify that POST displays no error message.  
If POST displays an error message, write it down and see the POST error message list on page 7-4.

## Replacing DIMM

Follow the procedure below to replace a failed DIMM.

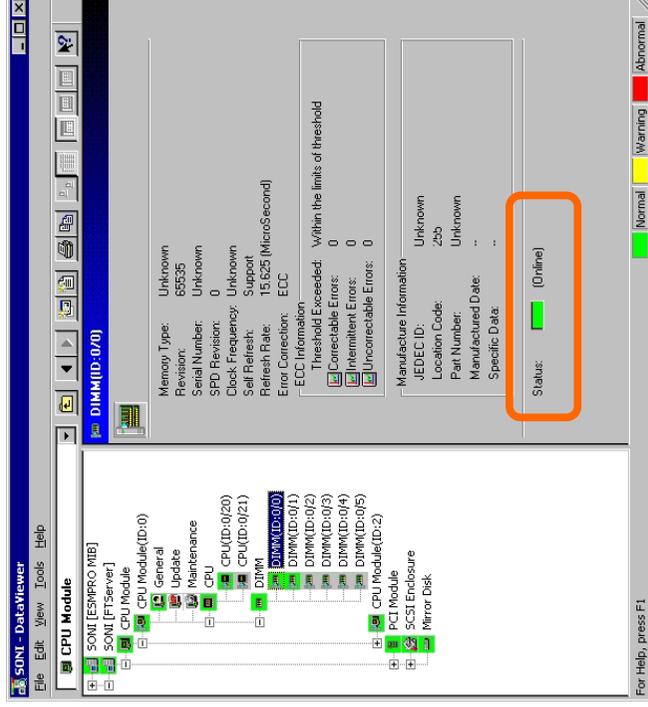


1. Identify the failed DIMM using the Data Viewer of NEC ESMPRO Manager.
2. Remove the CPU/IO module referring to page 8-77.
3. Replace the DIMM.
4. Install the CPU/IO module referring to page 8-10.
5. Start up the CPU/IO module using NEC ESMPRO Manager or ftServer Utility.

## PROCESSOR (CPU)

In addition to the standard CPU (Quad-Core Intel® Xeon™ Processor), you can operate the system by adding one CPU.

### IMPORTANT:


- The CPU is extremely sensitive to static electricity. Make sure to touch the metal frame of the server to discharge static electricity from your body before handling the CPU. Do not touch the CPU terminals or onboard parts with a bare hand or place the CPU directly on the desk. For more information on static electricity, see “ANTI-STATIC MEASURES.”
- Do not use the system before checking to see it works correctly.
- Make sure to use the CPU specified by NEC. Installing a third-party CPU may cause a failure of the CPU as well as the server. Repairing the server due to failures or damage resulting from these products will be charged even if it is under guarantee.
- Before adding or removing a CPU, power off the server and then remove the CPU/IO module.

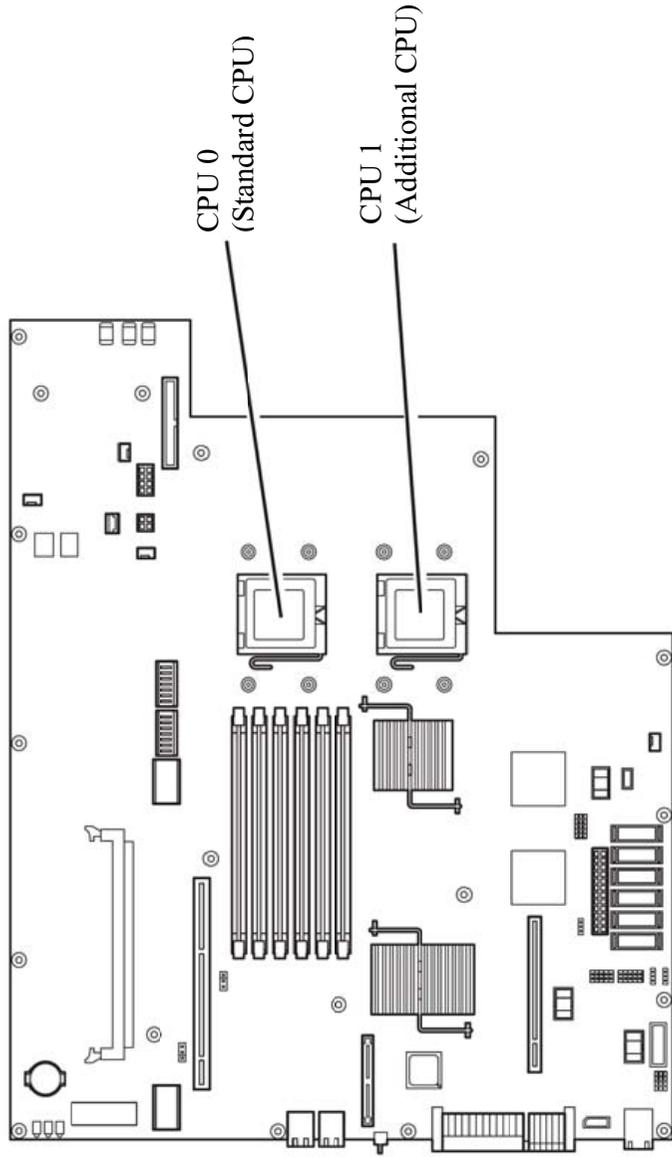

## **Installing CPU**

Follow the steps below to install a CPU (model with air-cooling kit).

- 1.** Shut down the OS.  
The server is automatically powered off.
- 2.** Unplug the power cords.
- 3.** Remove the CPU/IO module referring to page 8-7.
- 4.** Remove the cable connected to the CPU duct cover.
- 5.** Remove the CPU duct cover.

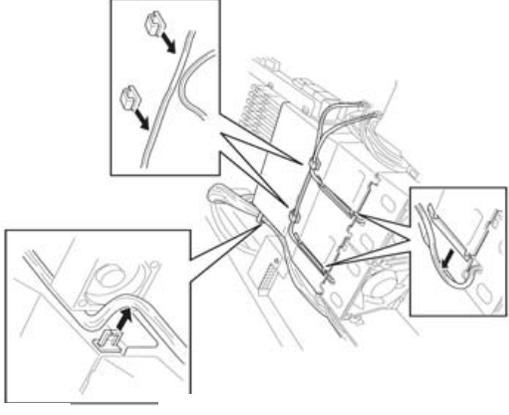


---


### **IMPORTANT:**

Remove the cable without adding pressure to the bases of the fan cable.

---

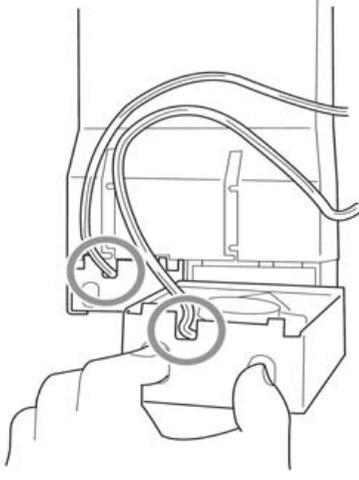

- 6.** Check to be sure of the location of the CPU socket.

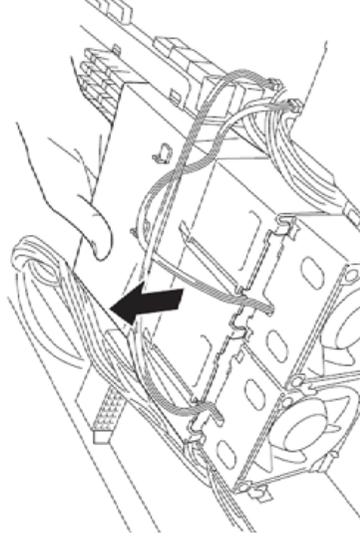


**7.** Detach the socket cover on the CPU socket.

**8.** Lift the socket lever.

**IMPORTANT:**

Keep the socket cover.

---

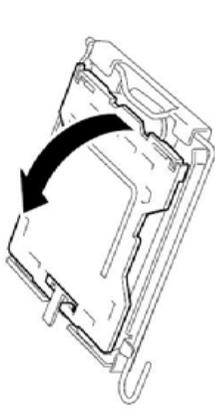


**9.** Lift the CPU socket holder.


**IMPORTANT:**

Open the lever fully. It can be opened 120° or more.

---

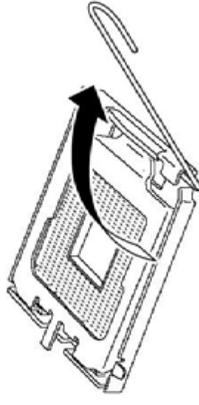

**10.** Place the CPU on the socket carefully.

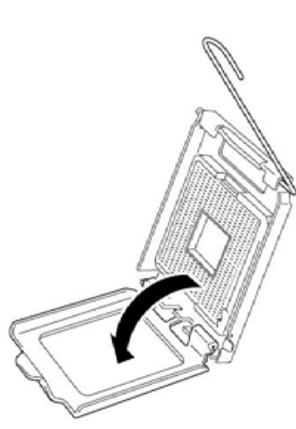


**11.** After pressing the CPU softly against the socket, place the CPU socket holder back to its original place.


**TIPS:**

Pay attention to the orientation of the CPU. The CPU and socket have pin marks to prevent misinsertion. Check the pin marks of the CPU and the socket and insert the CPU correctly.


---

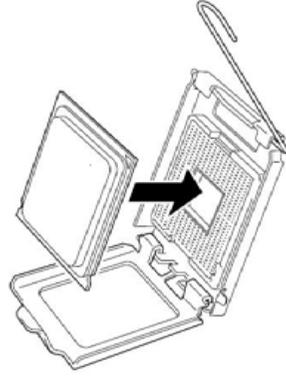


**12.** Press the CPU softly to the socket and return the CPU socket holder.

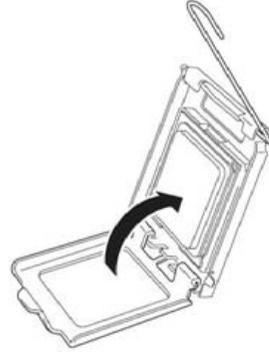

**13.** Return the socket lever back to its original place.

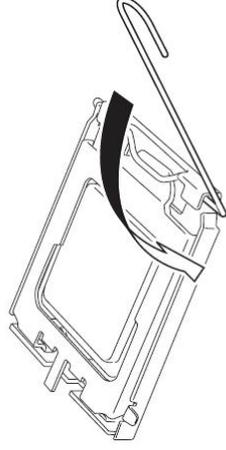

**14.** Place the heat sink on the CPU and secure it with 4 screws. Loosely fasten the screws in the cross-coupling way, and then fasten them tightly.

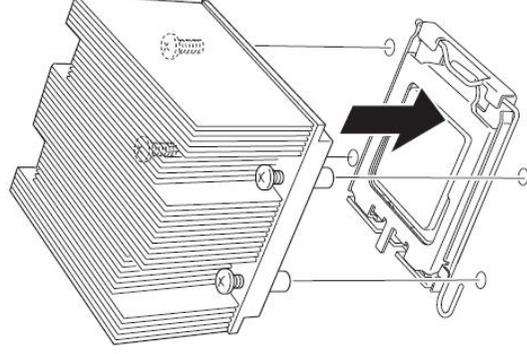


---

**IMPORTANT:**

Place the heat sink so that its corners will not bump against the parts on the motherboard.

---

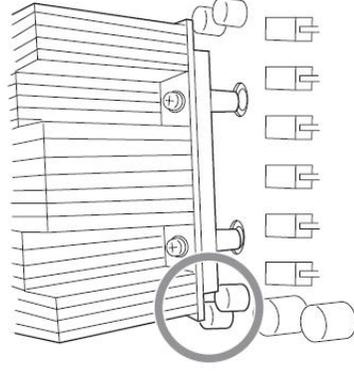

**15.** Check that the heat sink is attached to the mother board horizontally.

---

**IMPORTANT**

- If the heat sink is tilted, remove the heat sink and then attach it again.  
If the heat sink is not attached horizontally, it may be caused by the following.
- The CPU is not attached correctly.
- Screws are not secured tightly enough.
- Do not move around the heat sink fastened.

**16.** Connect the duct cover.

**17.** Fasten the cable to the duct cover.

**18.** Refer to page 8-100 and attach install the CPU/IO module.

**19.** Connect the power cord.

**20.** Turn on the power by pressing the POWER switch.

**21.** Verify that POST displays no error message. If an error message is displayed, write it down and check it in the error message list on page 7-4.

---

**Removing CPU**

Removal of a heat sink and CPU is the reverse procedure of installation.

## PCI BOARD

Up to three PCI boards can be installed to the CPU/IO module.


### **IMPORTANT:**

- The PCI board is extremely sensitive to static electricity. Make sure to touch the metal frame of the server to discharge static electricity from your body before handling the PCI board. Do not touch the PCI board terminals or onboard parts by a bare hand or place the PCI board directly on the desk. For more information on static electricity, see “ANTI-STATIC MEASURES” on page 8-3.
- Make sure to read “ANTI-STATIC MEASURES” and “PREPARING YOUR SYSTEM FOR UPGRADE.”

Note the following to install or replace PCI board.

- To make a dual PCI board configuration, install the same type of board (i.e., having the same specifications and performance) to the same slot for each group.

When a PCI board is installed to one group, another identical PCI board should be installed to the same slot in another group. This rule is applied to the case of removal.

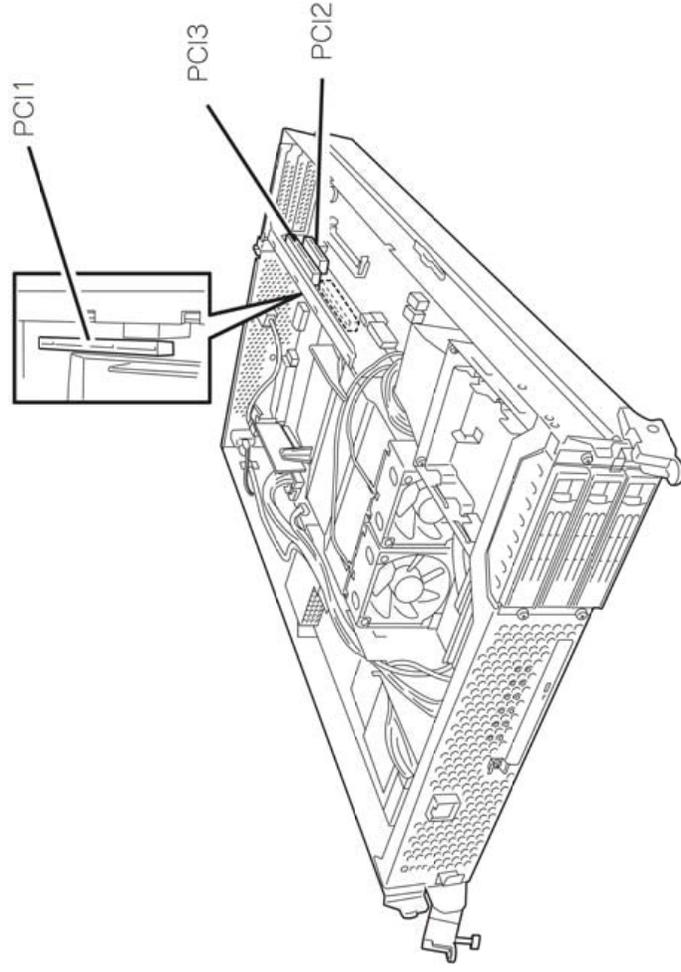

List of option PCI boards and installable slots:

N-code	Product name		PCI-1	Remarks	
		PCT slot performance	PCI-X 133MHz/64b		
		Slot size	Low Profile		
		PCI board type	3.3V		
		Mountable board size	MD2		
N8804-002	1000BASE-T 1ch board set		○	Mount exactly the same board into the same slot on each CPU/IO module 0, 1.	
N8804-003	1000BASE-SX 1ch board set		○		

## **Installing PCI Board**

Follow the procedure below to install the board to be connected to the PCI board slot.

### **TIPS:**


To install the PCI board, make sure the shape of the board connector matches with the shape of the PCI board slot connector.

- 1.** Remove the CPU/IO module referring to the page 8-7.


The following steps explain how to install a PCI board on the PCI board slot (PCI-X slot 2, PCI-X slot 3) of the riser card.

Go to step 10 to install a PCI board on the PCI board slot (PCI-X slot 1).

- 2.** Loosen the fixed screw on the bracket cover that corresponds to another PCI slot that is hidden behind the riser card, and remove the bracket cover.

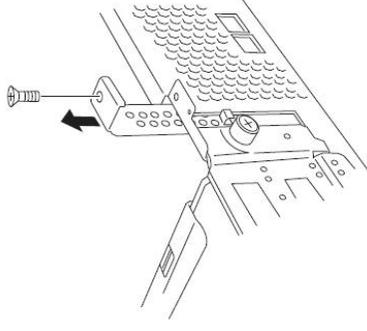

- 3.** Install the optional PCI board to another PCI slot hidden behind the riser card.

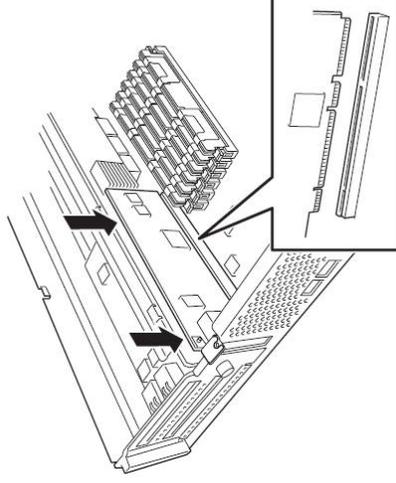

- 4.** Secure the PCI board with a fixed screw.

## **Removing PCI Board**

To remove PCI board card, follow the reverse procedure of the installation and install the expansion slot cover.

## **Replacing PCI Board**

Follow the procedure below to replace the failed PCI board.

- 1.** Check the failed board from the event log.
- 2.** Remove the CPU/IO module referring to the page 8-7.
- 3.** Remove the PCI bracket, then remove the PCI board.
- 4.** Replace the board and fasten it.
- 5.** Install the CPU/IO module referring to the page 8-10.
- 6.** Connect the network cable and cables for PCI boards.
- 7.** The installed CPU/IO module will start automatically.
- 8.** Confirm that the PCI board is correctly recognized by POST and OS.

## **Setup of Optional PCI Board**

### **IMPORTANT:**

- To enable the fault-tolerant feature of the optional device, the identical PCI boards must be installed to the slots with the same number in CPU/IO module 0 and CPU/IO module 1.
- The BIOS settings need to be modified when mounting some optional PCI boards. To change the BIOS settings, start the BIOS setup utility to change the [OS Boot Monitoring] configuration in [Server] – [Monitoring Configuration]. See page 4-25 for more details.
- For the supported connecting devices, contact your sales agent.

### **N8804-002 1000BASE-T 1ch board set**

### **N8804-003 1000BASE-SX 1ch board set**

### **IMPORTANT:**

For LAN cable's connector, use a RJ-45 connector which conforms to IEC8877 standard. If any other connector is used, it may become difficult to remove easily.

- List of slots to install optional PCI boards  
Refer to “List of option PCI boards and installable slots” on page 8-26.
- Driver installation procedure  
You do not need to install a driver since the driver for N8804-002, N8804-003 boards is included in the Os.  
After attaching the boards, configure duplication settings with reference to “DUAL LAN CONFIGURATION” in pages 3-2.

(This page is intentionally left blank.)

# Appendix A

## Specifications

Item	NEC Express5800/320Fd-LR	NEC Express5800/320Fd-MR
	N8800-128F	N8800-129F
Factory-set model	Install model	
CPU	Type	Quad-Core Intel® Xeon® Processor 2.00GHz
	Quad-Core Intel® Xeon® Processor 3.00GHz	
	Clock/second cache	1333MHz/6MB x 2
Standard	Up to 1 processors (the number of processors installed per module)	
Maximum	Up to 2 processors (the number of processors installed per module)	
Chipset	Intel Blackford + ESB2M	
Memory	Standard	2GB (1GB x 2*) * the number of memory per module
	Maximum	12GB (The standard DIMM must be replaced.)
	Expansion unit	2 DIMMs
Memory module	DDR II SDRAM DIMM (Fully Buffered)	
Error check	ECC	
Graphics (VRAM)	ATI ES1000	
Auxiliary input device	Floppy disk (option)	3.5 inch drive x 1 (USB)
	DVD-ROM (standard)	DVD Combo (Load type: tray. Speed: x6)
	Hard disk (standard)	None
Hard disk (maximum)	None	
	None	
ExtensionFile bay (3.5 inch)	None	
Additional slot	PCI-X 133MHz, 64bit, Low Profile x1, PCI-X 133MHz, 64bit Full Height, Full Length x1, (Fibre Channel board is implemented standard.) 1 slot (Low profile : PCI-X 133MHz, 64 bit), 1 slot (Full height, full length : PCI-X 100MHz, 64 bit), 1 slot (PCI-Express x4 lane x8)	
LAN interface	1000BASE-T/100BASE-TX/10BASE-T (2 ports)	
External interface	USB	4-pin connector (3 ports) Keyboard occupies 1one port.
	Network	RJ-45 (2 ports)
	Display	MINI D-sub 5-pin (1 port)

## A-2 Specifications

<b>Item</b>	<b>NEC Express5800/320Fd-LR</b>	<b>NEC Express5800/320Fd-MR</b>
	<b>N8800-128F</b>	<b>N8800-129F</b>
Cabinet design	Rack-mount type	
External dimensions	483 (w) × 178 (h) × 762 (d) mm	
Weight	47.5 kg (Max. 53.5kg)	
Power supply	100-127 / 200-240 VAC ±10%, 50/60 Hz ±1 Hz	
Power consumption	1202VA / 1200W	
Environmental requirements	In operation	Temperature -10 to 35°C Humidity 20 to 80% RH (non-condensing)
	In storage	Temperature -10 to 55°C Humidity 20 to 80% RH (non-condensing)
Bundled OS	Vmware ESX Server	
Supported OS	VMware ESX Server	
Standard enclosure	Power code, EXPRESSBUILDERTM(DVD), Package list, User's Guide(this codument), User's Guide(Setup), Guarantee card, Customer registration card, NEC ESMFPRO Agent	

# Appendix B

## I/O Port Addresses

The factory-set I/O port addresses for the server are assigned as follows:

Address	Chip in Use
0x00000000 - 0x000000CF7	Direct memory access controller
0x00000010 - 0x0000001F	Motherboard resources
0x00000020 - 0x00000021	Programmable interrupt controller
0x00000024 - 0x00000025	Motherboard resources
0x00000028 - 0x000000029	Motherboard resources
0x0000002C - 0x0000002D	Motherboard resources
0x0000002E - 0x0000002F	Motherboard resources
0x00000030 - 0x00000037	Motherboard resources
0x00000038 - 0x00000039	Motherboard resources
0x0000003C - 0x00000003D	Motherboard resources
0x00000040 - 0x000000043	System timer
0x00000050 - 0x000000053	Motherboard resources
0x00000060 - 0x000000060	Motherboard resources
0x00000061 - 0x000000061	System speaker
0x00000062 - 0x000000063	Motherboard resources
0x00000064 - 0x000000064	Motherboard resources
0x00000066 - 0x000000067	Motherboard resources
0x00000070 - 0x000000073	System CMOS/real time clock
0x00000074 - 0x000000077	Motherboard resources
0x00000080 - 0x000000080	Motherboard resources
0x00000081 - 0x00000008F	Direct memory access controller
0x00000090 - 0x00000009F	Motherboard resources
0x000000A0 - 0x0000000A1	Programmable interrupt controller
0x000000A4 - 0x0000000A5	Motherboard resources
0x000000A8 - 0x0000000A9	Motherboard resources
0x000000AC - 0x0000000AD	Motherboard resources
0x000000B0 - 0x0000000B5	Motherboard resources
0x000000B8 - 0x0000000B9	Motherboard resources
0x000000BC - 0x0000000BD	Motherboard resources
0x000000C0 - 0x0000000DF	Direct memory access controller
0x000000E0 - 0x0000000E3	Motherboard resources
0x000000E4 - 0x0000000E6	Stratus BMC Device
0x000000E7 - 0x0000000EF	Motherboard resources
0x00000120 - 0x000000120	Stratus Virtual ATI Video
0x00000274 - 0x000000277	ISAPNP Read Data Port
0x00000279 - 0x000000279	ISAPNP Read Data Port
0x000002F8 - 0x0000002FF	Communications Port (COM2)
0x000003B0 - 0x0000003BB	PCI standard PCI-to-PCI bridge
0x000003B0 - 0x0000003BB	Stratus Fault Tolerant North PCI to PCI Bridge
0x000003B0 - 0x0000003BB	Stratus Fault Tolerant East/West PCI to PCI Bridge

## B-2 I/O Port Addresses

Address	Chip in Use
0x000003B0 - 0x000003BB	Stratus Fault Tolerant Core
0x000003B0 - 0x000003BB	Intel(R) 82801 PCI Bridge - 244E
0x000003B0 - 0x000003BB	Stratus Virtual ATI Video
0x000003C0 - 0x000003DF	PCI standard PCI-to-PCI bridge
0x000003C0 - 0x000003DF	Stratus Fault Tolerant North PCI to PCI Bridge
0x000003C0 - 0x000003DF	Stratus Fault Tolerant East/West PCI to PCI Bridge
0x000003C0 - 0x000003DF	Stratus Fault Tolerant Core
0x000003C0 - 0x000003DF	Intel(R) 82801 PCI Bridge - 244E
0x000003C0 - 0x000003DF	Stratus Virtual ATI Video
0x0000040B - 0x0000040B	Direct memory access controller
0x000004D0 - 0x000004D1	Programmable interrupt controller
0x000004D6 - 0x000004D6	Direct memory access controller
0x00000500 - 0x0000057F	Motherboard resources
0x00000580 - 0x0000059F	Motherboard resources
0x000005A0 - 0x000005BF	Motherboard resources
0x00000A79 - 0x00000A79	iSAPNP Read Data Port
0x00000C00 - 0x00000C01	Programmable interrupt controller
0x00000CA2 - 0x00000CA2	Stratus BMC Device
0x00000CA3 - 0x00000CA3	Stratus BMC Device
0x00000CA4 - 0x00000CA7	Stratus BMC Device



**N8800-128F, EXP320J**  
**NEC Express5800/320Fd-LR**  
**N8800-129F, EXP320K**  
**NEC Express5800/320Fd-MR**  
**User's Guide**



\*856-127506-111-AR\*

1st Edition  
8-2008  
856-127506-111-A